

### English

This guide is intended to guide you through the basic functions of this unit. For details, please refer to the Operation manual stored on the CD-ROM. Furthermore, manuals are available on the website.

<http://www.pioneer.eu>

: Press or click (for the thumb pad of the remote control)  
 : Press and hold  
 : Rotate  
 : Push or move (for the thumb pad of the remote control) in the direction of the arrow

### Basic operation

**Power on**

**Power off**

**Select a source**

Source can be selected in the following order:  
**Tuner** (tuner) – **DVD** (built-in DVD player) – **USB** (USB storage device) – **AUX 1** (front AUX) – **AUX 2** (rear RCA)

**Volume adjust**

### Tuner operation

**Store the strongest broadcast frequencies**

- Display the main menu
- Select **FUNCTION**
- Display the function menu
- Select **BSM**
- Turn **BSM** on

**Select a preset channel**

Select a channel

Select a band

Select a preset frequency

### CD and USB operation

**Select a song from list (V.OUT:OFF)**

- Display the list
- Select a song

Play a selected song (If a folder is selected, see lower tier.)

Play all songs in a selected folder

Return to higher tier

Select a folder

Select a track

Display the text information

### DVD operation

Select a chapter

Stop playback

Select a title

Return to the top menu during DVD playback

Display the DVD menu during DVD playback

Select a menu on the DVD menu


Confirm a menu on the DVD menu

Switch between playback and pause

Go to the next chapter

Return to the previous chapter

### What's what

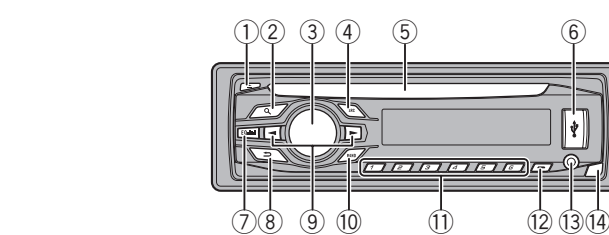

- |                               |                                       |
|-------------------------------|---------------------------------------|
| ① ▲ (eject)                   | ⑩ BAND                                |
| ② 🔍 (list)                    | ⑪ 1/▲ to 6/↔                          |
| ③ <b>MULTI-CONTROL (M.C.)</b> | • 1/▲                                 |
| ④ <b>SRC/OFF</b>              | • 2/▼                                 |
| ⑤ Disc loading slot           | • 3/S.Rtrv                            |
| ⑥ USB port                    | • 4/PAUSE                             |
| ⑦ EQ (EQ)                     | • 5/⏏                                 |
| ⑧ ⏪ (Back/display)            | • 6/↔                                 |
| ⑨ ⏩                           | ⑫ PTY                                 |
|                               | ⑬ AUX input jack (3.5 mm stereo jack) |
|                               | ⑭ Detach button                       |