


This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to Operation Manual.

## Basic hardware buttons



- ① **▲ button**  
Press to display the touch panel keys for ejecting the media.
- ② **HOME button**  
Press to display the "Top Menu" screen.
- ③ **Multi-control (Volume knob/G)/MUTE**  
Rotate to adjust the AV (Audio and Video) source volume.  
Press briefly to hear the current route guidance.  
Press and hold to mute the AV source.
- ④ **MODE button**  
Press to switch between the map screen and the AV operation screen.
- ⑤ **TRK (◀/▶) button**

## Screen switching overview

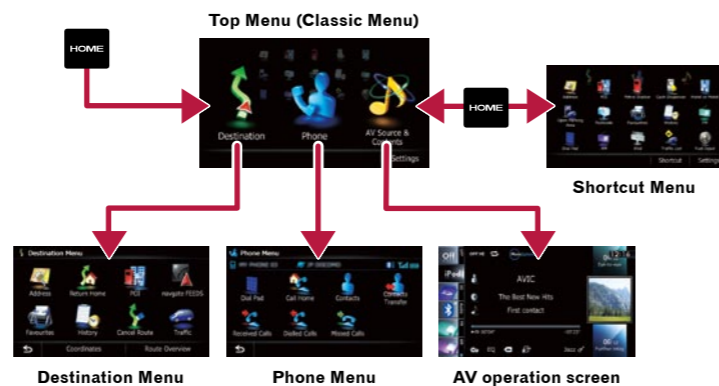


## Basic items on the map



- |  |   |
|--|---|
| ① Name of the street to be used (or next guidance point) | ⑤ Current position                                  |
| ② Current time   | ⑥ Street name that your vehicle is travelling along |
| ③ Estimated time of arrival (default)                    | ⑦ Eco-Meter   |
| ④ Current route  | ⑧ Map control                                       |
|  | ⑨ Next direction of travel                          |

## Destination Menu


Touch **Destination** on the "Top Menu" screen.

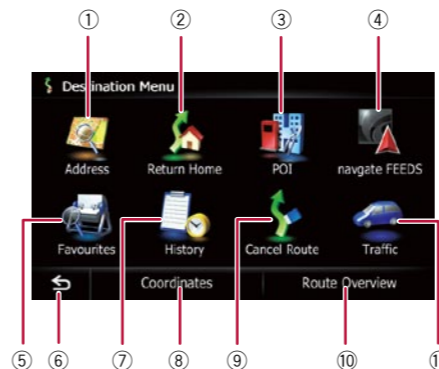

- |   |   |
|---|---|
| ① Searches for a location by address  | ⑥ Returns to the previous screen          |
| ② Calculates the route to your home   | ⑦ Selects a previously routed destination |
| ③ Searches for a place such as stores, restaurants, and other facilities (Points Of Interest – POI) in the database | ⑧ Searches for a location by coordinates  |
| ④ Searches for POIs by using the data on the microSD card   | ⑨ Cancels your current route guidance     |
| ⑤ Stores and selects your favourite locations   | ⑩ Displays the current route information  |
|   | ⑪ Displays traffic information            |


## Searching for your destination by address

- 1 Display the "Destination Menu" screen and touch **Address**.

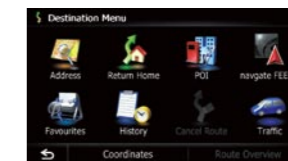


- 2 Select the country you desire.

- 3 Input the information that you want to set as the destination.

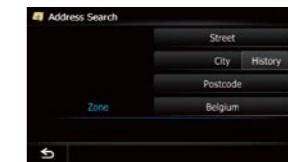

Touch one of the options. After narrowing down your destination, the Location confirmation screen will appear.

- 4 Touch **OK**.

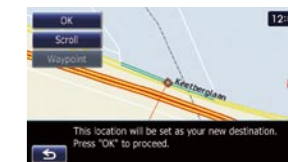

After searching for the destination, the Route confirmation screen appears.

- 5 Touch **OK**.



The navigation system gives you route guidance both visually and by voice.

## Setting route guidance volume

- 1 Touch the keys in the following order on the “**Top Menu**” screen.  
**Settings** → **System Settings** → **Volume**

- 2 Touch **+** or **-** to change the volume of the route guidance.




## Inserting and ejecting a microSD card

For details about playable files, refer to Operation Manual.


### Inserting a microSD card

- 1 Insert your microSD card into the SD card slot until it clicks.

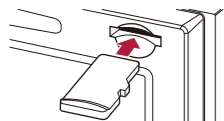


### Ejecting a microSD card

- 1 Press the **▲** button.
- 2 Touch **Eject SD**.
- 3 Press the middle of the microSD card gently until it clicks.
- 4 Pull the microSD card out straight.

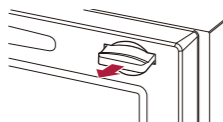

## Using the radio (FM)

Scroll the screen by dragging an AV source icon up or down, and tap **FM** on the AV operation screen.

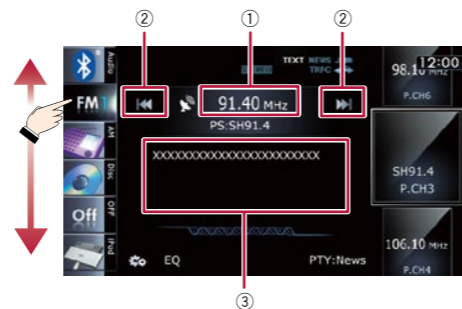


- 1 Displays the current preset frequency
- 2 Scans frequencies until a broadcast strong enough for good reception is found by touching and holding (seek tuning)
- 3 Displays the detailed radio text currently received

## Playing your Apple iPod


You can control an iPod by connecting the USB interface cable for iPod (CD-IU51V) (sold separately) to the navigation system.

- 1 Connect your iPod.

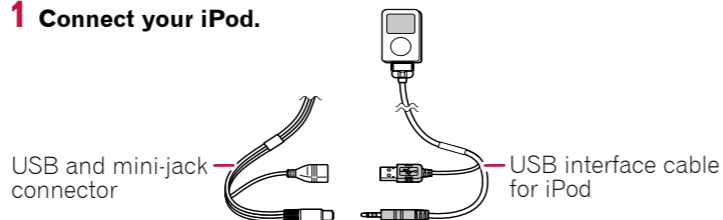


The source changes and then playback will start.

- 2 Tap or drag the key that you want to operate.

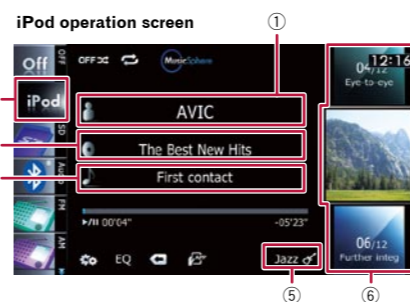


### List screen (e.g. song list)

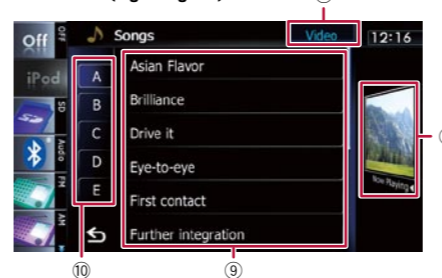

- 1 Displays the artist name list
- 2 Displays the category list
- 3 Displays the album title list
- 4 Displays the song title list
- 5 Displays the genre list
- 6 Selects the song to play by scrolling the keys up or down. To play the song, tap it
- 7 Switches the list screen between music and video
- 8 Returns to the iPod operation screen
- 9 Starts playback by tapping an item to select
- 10 Selects a song by scrolling the character tab up or down. Tap the tab of the character for the song title that you want to display

## Pairing your phone

- 1 Activate the Bluetooth® function on your phone.
- 2 Touch the keys in the following order on the “**Top Menu**” screen.  
**Settings** → **Bluetooth Settings**
- 3 Touch **Bluetooth On/Off** to select **On**.

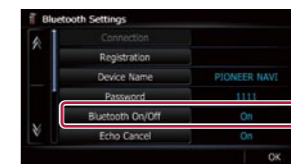

- 4 Touch **Registration** on the “**Bluetooth Settings**” screen.

The system searches for and lists nearby devices.

- 5 Touch your phone on the list.




- 6 Enter the PIN code from your phone. (The default code is 1111.)

When pairing succeeds, a message will appear.


## Transferring the phone book

- 1 Connect the mobile phone.
- 2 Touch **Contacts Transfer** on the “**Phone Menu**” screen.
- 3 Check that the following screen is displayed, and operate your mobile phone to transfer the phone book entries.

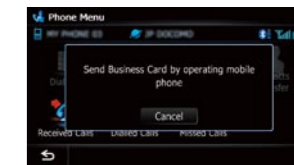

When data transfer is finished, a message asking whether you want to transfer more data appears.

- 4 Touch **No**.

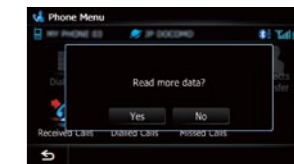

The transferred data is imported to the navigation system.