

AVIC-HD1BT

Quick Start Guide

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the Operation Manual and Hardware Manual provided with the product.

Hardware buttons



(1) OPEN CLOSE button

Press to access the disc loading slot. Press and hold to set up the tilt of the LCD panel.

(2) V button

Press to enter the PICTURE ADJUSTMENT mode.

(3) VOL (▼/▲) button

You can adjust the volume of Audio source.

(4) AV button

Press to switch the screen to the audio operation screen. If you press the AV button again, the audio source switches.

(5) MENU button

Press to display a navigation menu. Press and hold to display "Phone Menu".

(6) MAP button

Press to view the navigation map screen or press to switch view mode.

(7) TRK (◀/▶) button

Pressing this button when the built-in DVD drive source is selected skips a track or a chapter. Press and hold to fast forward/fast reverse a track or a chapter.

(8) P.LIST (▼/▲) button

Switches preset channels during the Radio operation.

(9) TA/NEWS button

Press to turn traffic announcements function on or off. Press and hold to turn NEWS function on or off.

Switching the screen




AV screen

Navigation map

Search function overview

This navigation system has multiple methods for entering your destination.

Press the **MENU** button to display the navigation menu.

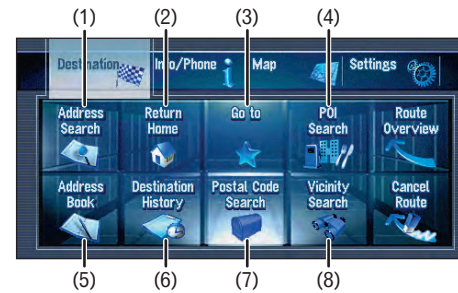

- (1) Search by address
- (2) Calculate a route to the home address
- (3) Calculate a route to your favorite destination
- (4) Search for POIs in the database
- (5) Select a registered destination from the address book
- (6) Select a previously routed destination
- (7) Search destination by postal code
- (8) Search for POIs in your vicinity

Search result list for POI search




Sorts the POIs in the order of distance.

POI (Points of Interests) are restaurants, hotels, petrol stations and other categories in your navigation system.

Searching your destination by address

1 Press the **MENU** button and then touch "Address Search".

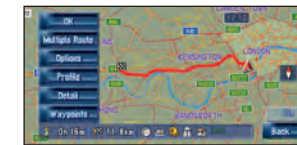

2 Touch **UK** and then select country.


3 Input the street name.



4 Select the street name from list.

After some steps for narrowing down your destination, house number input screen will appear.

5 Input the house number and touch "OK".

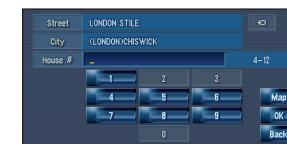


The route calculation carried out and the route confirmation screen appears.

If you want to get another recommended route, by "Multiple route" and choose the best one.


6 Touch "OK" to decide your route, and then the navigation starts.

7 Begin driving in accordance with navigation guidance.

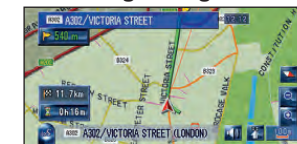

This navigation systems gives you route guidance both visually and by voice.

Basic operation on the map screen

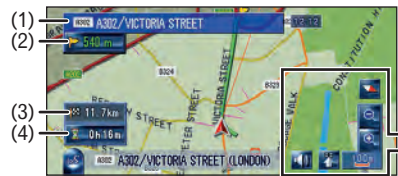

Mute the navigation voice
Touch

Short-cut Menu
Touch

Zoom in or zoom out
Touch or

Scrolling the map

Touch where you would like to scroll to on the map screen.

- (1) Next street
- (2) Distance to the next guidance point
- (3) Distance to your destination
- (4) Estimated time of arrival (in default)

Setting the guidance and phone volume

Press or touch in the following order.
 button → **Settings** tab → **Volume**



Traffic information on the map

Traffic conditions can be overlaid on the map when the traffic information transmitted by FM radio service through the Radio Data System (RDS-TMC).



(1) Traffic event

- Stationary traffic
- Slow and queuing traffic
- Closed/blocked roads
- Other event (e.g., accident)

Changing the AV source

1 Touch the source icon.




2 Touch the desired AV source.



- (1) You can switch the AV source for rear display in the following order.
“MIRROR” (Same as front) – **“DVD”** (DVD drive) – **“AV”** (AV input)

Operation of Music Library


First, play the CD you want to record. The CD will automatically record into the built-in hard disk drive (in default). The recording is performed 4 times faster than playing the CD. After the recording, you can enjoy playing the music library.

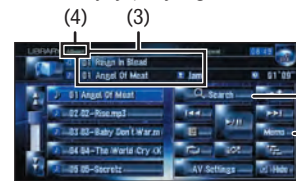

- (1) Search a song by album, artist, genre or your favourite playlist.
- (2) Touch and hold to memorize that song as “My Mix” playlist.
- (3) Information of current song
- (4) “Group” playing now.

Operation of your Apple iPod®

You can control your iPod with Dock connector via the touch screen when it is connected to this navigation system via Pioneer iPod adapter (sold separately).

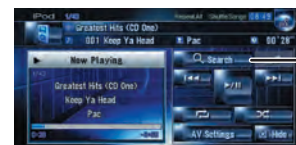

Touch to display the search categories.


Hands-free phoning

Registering your phone

- 1 Turn on the **Bluetooth** function on your mobile phone.
- 2 Press and hold button to display Phone menu.
- 3 Touch the key in the following order.
Phone settings
 → **Registration** → **Navi**
- 4 Touch the device name of your phone.
- 5 Enter the password (**“1111”** on default) on your mobile phone.

Making a phone call

Press and hold button to display Phone menu.

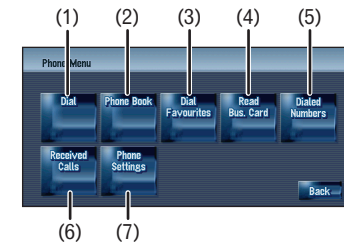

- (1) Input the number directly
- (2), (3), (5), (6) Select a contact on the list.
- (4) Use to transfer the phone book entries from your phone.
- (7) Use to modify the phone preference.

“Registration successful” will appear on the screen when the connection has completed.

When you receive an incoming call...



- (1) Accept a call
- (2) Reject a call