

System Firmware Update Instructions for AVIC-F550BT

REMARKS:

- ✓ If you have any difficulty carrying out these instructions, please contact Pioneer Customer Support. Once upgraded to this version, it is not possible to downgrade to a lower version.
- ✓ Please download and print these instructions before downloading and installing the firmware update. It is important that you complete all steps correctly and in the order described below.
- ✓ Never turn your unit off or eject the Micro SD memory card the firmware is being updated.
- ✓ You can only update the firmware when the vehicle is stopped and the parking brake is engaged.
- ✓ **Do NOT use the default Micro SD memory card provided with your unit as this card contains the map data. (After this card is formatted, it is not possible anymore to use it for navigation, even when the data is copied again on the card)**

A. Downloading the Firmware Update Files

1. Download the firmware file "**AVIC-F550BT_FW_Ver_127.zip**" to a folder on your computer.
2. Double click the ZIP file to open it.
3. Extract and save the file "**MCU.BIN**" to a folder on your computer.

B. Updating the firmware on your Unit

IMPORTANT


- ✓ Please DO NOT perform this firmware update if the model number of your Pioneer Navigation unit is anything other than AVIC-F550BT
- ✓ Ensure that the update file ("MCU.BIN") is located within the root (top) folder of your Micro SD memory card. There should be no other files within the SD memory card.
- ✓ While your unit is being updated, DO NOT turn off the system's power and DO NOT touch the unit's touch panel as this may result in severe damage to your unit.
- ✓ DO NOT remove the SD memory card during the firmware update.

PROCEDURE:

1. Connect a blank (formatted in FAT32) microSD memory card to your computer, locate the correct update file ("MCU.BIN") and copy it onto the Root (top) folder of the microSD memory card.
2. Confirm that the file name and file size are correct on the microSD memory card. To check the file size in Microsoft Windows, select the file, press the right mouse button, and select "Properties". If the file name and size do not match the ones listed below, perform the previous steps again. (**MCU.BIN - 128 KB (131.072 bytes)**)

3. Insert the MicroSD memory card into the MicroSD card slot of your AVIC-F550BT
4. Switch on your Navigation unit by switching on the ignition of your car.



5. Press the HOME button to display the Top menu screen.
6. Press the "Destination" icon.

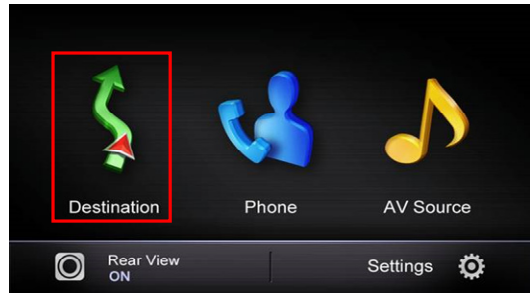

7. Touch the right arrow




8. Press the right arrow on the Caution screen to start the update. The update takes approximately 60 seconds.

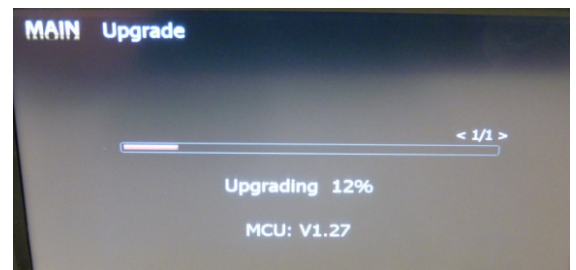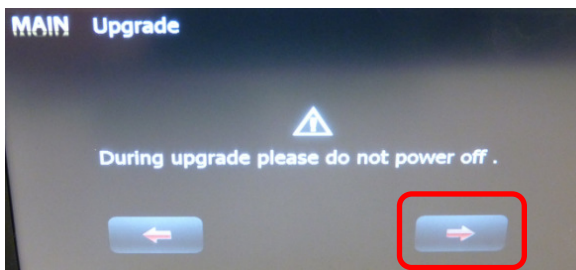

9. The product will reboot automatically after the update and the following screen will be displayed

10. Remove the microSD card from the product

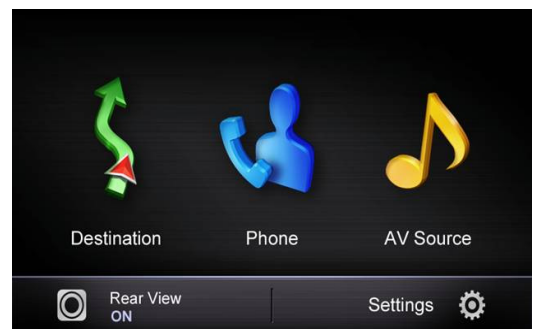

Contact Information

Pioneer Customer Support Center

<http://www.pioneer.eu>

Copyright(c) 2014 Pioneer Corporation