

***Pioneer***

---

**Operation Manual**

DVD RDS AV RECEIVER

**AVH-X8600BT**

---

***English***

## Thank you for buying this Pioneer product.

Please read through these instructions so you will know how to operate your model properly. *After you have finished reading the instructions, keep this document in a safe place for future reference.*



### Important

The screens shown in the examples may differ from actual screens, which may be changed without notice for performance and function improvements.

## 01 Precaution

- Important safety information 8
- Handbrake interlock 9
  - To ensure safe driving 9
- When using a display connected to VOUT 10
- To avoid battery exhaustion 10
- Rear view camera 10
- Handling the SD card slot 10
- Handling the USB connector 10
- In case of trouble 11
- Visit our website 11
- About this product 11
- Protecting the LCD panel and screen 11
- Notes on internal memory 11
  - Before removing the vehicle battery 11
  - Data subject to erasure 11
  - Resetting the microprocessor 11
- About this manual 12

## 02 Basic operation

- Checking part names and functions 13
- Remote control 13
- Protecting your product against theft 13
  - Removing the front panel 14
  - Attaching the front panel 14
- Notes on using the LCD panel 14
- Adjusting the LCD panel angle 15
- Inserting/ejecting/connecting media 15
  - Inserting and ejecting a disc 15

- Inserting and ejecting an SD memory card 15
- Connecting and disconnecting an iPod 16
- Plugging and unplugging a USB storage device 16

### Startup and termination 16

On first-time startup 16

Regular startup 17

Turning off the display 17

How to use the screens 18

- Switching screens using the touch panel keys 18
- Switching screens using the hardware buttons 19

Supported AV source 19

Displaying the AV operation screen 20

- Selecting a front source on the AV source selection screen 20
- Selecting a front source on the source list 20
- Selecting a rear source 21

Turning off the AV source 21

Changing the display order of source icons 21

Changing the display order of source keys 21

Using the touch panel 21

- Using the common touch panel keys 22
- Operating list screens 22
- Operating the time bar 22
- Operating the on-screen keyboard 22

## 03 Registering and connecting a Bluetooth device

Preparing communication devices 23

Registering your Bluetooth devices 23

- Searching for nearby Bluetooth devices 23

- Pairing from your Bluetooth devices **24**
- Connecting to a Bluetooth device automatically **24**
- Deleting a registered device **25**
- Connecting a registered Bluetooth device manually **25**
- Switching visibility **26**
- Entering the PIN code for Bluetooth wireless connection **26**
- Displaying the Bluetooth device address **26**
- Clearing the Bluetooth memory **26**
- Updating Bluetooth software **27**
- Displaying the Bluetooth software version **27**

## **04 Using hands-free phoning**

- Displaying the phone menu **28**
  - Touch panel keys **28**
  - Reading the screen **28**
- Making a phone call **29**
  - Direct dialling **29**
  - Calling a number in the phone book **29**
  - Dialling from the history **30**
  - Using the preset dial lists **31**
- Receiving a phone call **31**
  - Answering an incoming call **32**
- Minimising the dial confirmation screen **32**
- Changing the phone settings **32**
  - Answering a call automatically **32**
  - Switching the ring tone **32**
  - Inverting names in the phone book **33**
  - Setting the private mode **33**
  - Adjusting the other party's listening volume **33**
- Using the voice recognition function (for iPhone) **33**
- Notes for hands-free phoning **34**

## **05 iPod / iPhone or smartphone setup operation**

- The basic flow of iPod / iPhone or smartphone setup **36**
- Setting the device connection method **36**
- iPod compatibility **36**
- Android™ device compatibility **37**
- MirrorLink device compatibility **37**
- Information on the connections and functions for each device **38**

## **06 Using the radio**

- Using the touch panel keys **40**
- Reading the screen **40**
- Starting procedure **41**
- Selecting a band **41**
- Manual tuning **41**
- Seek tuning **41**
- Selecting a preset channel from the preset channel list **42**
- Storing broadcast frequencies **42**
- Storing the strongest broadcast frequencies **42**
- Tuning into strong frequencies **42**
- Receiving traffic announcements **43**
- Using news programme interruption **44**
- Tuning into alternative frequencies **44**
- Limiting stations to regional programming **45**
- Switching Auto PI seek **45**
  - Activating the Auto PI seek for preset stations **45**
- Switching the sound quality of the FM tuner **45**
- Storing song information to an iPod (iTunes Tagging) **46**
- Operating with the hardware buttons **46**

## **07 Playing a disc**

- Using the touch panel keys (for audio) **47**

- Using the touch panel keys (for video) **47**
- Reading the screen (for audio) **48**
- Reading the screen (for video) **49**
- Starting procedure **49**
- Selecting files from the file name list **50**
- Playing tracks in random order **50**
- Setting a repeat play range **50**
- Switching the media file type **50**
- Searching for the part you want to play **51**
- Operating the DVD menu **51**
- Switching the subtitle language **51**
- Switching the audio language **52**
- Frame-by-frame playback **52**
- Slow motion playback **52**
- Returning to a specified scene **52**
- Resuming playback (Bookmark) **52**
- Operating the DVD menu using touch panel keys **52**
- Switching the multi-angle DVD display **53**
- Selecting the audio output **53**
- Operating with the hardware buttons **53**

## **08** Playing compressed audio files

- Using the touch panel keys **54**
- Reading the screen **55**
- Starting procedure (for Disc) **56**
- Starting procedure (for USB/SD) **56**
- Switching the browse mode **56**
- Selecting files from the file name list **57**
- Selecting a file from the list related to the song currently playing (link search) **57**
- Playing files in random order **57**
- Setting a repeat play range **57**
- Switching the media file type **58**
- Operating with the hardware buttons **58**

## **09** Playing compressed video files

- Using the touch panel keys **59**
- Reading the screen **60**
- Starting procedure (for Disc) **60**

- Starting procedure (for USB/SD) **60**
- Selecting files from the file name list **60**
- Setting a repeat play range **61**
- Frame-by-frame playback **61**
- Slow motion playback **61**
- Switching the media file type **61**
- Operating with the hardware buttons **61**

## **10** Playing compressed still image files

- Using the touch panel keys **62**
- Reading the screen **62**
- Starting procedure **62**
- Selecting files from the file name list **63**
- Playing files in random order **63**
- Setting a repeat play range **63**
- Switching the media file type **63**
- Setting the slideshow interval **63**
- Operating with the hardware buttons **64**

## **11** Using an iPod

- Using the touch panel keys (for audio) **65**
- Using the touch panel keys (for video) **65**
- Reading the screen (for audio) **66**
- Reading the screen (for video) **66**
- Starting procedure **67**
- Setting the shuffle play **67**
- Setting a repeat play range **67**
- Selecting song or video sources from the playlist screen **68**
- Using this product's iPod function from your iPod **69**
- Changing the speed of audiobook playback **69**
- Displaying lists related to the song currently playing (link search) **69**
- Operating with the hardware buttons **69**
- Playing back music from a music app other than iPod music, as the iPod source **70**
  - Using the touch panel keys **70**
  - Reading the screen **70**

## **12 Using your iPhone or smartphone applications**

- Using AppRadio Mode **71**
  - Using the touch panel keys (App control side bar) **71**
  - Starting procedure **72**
  - Using the keyboard **73**
  - Adjusting the image size (For smartphone users) **74**
  - Displaying the image of your application (iPhone with 30-pin connector) **74**
  - Displaying the image of your application (iPhone with Lightning connector) **75**
  - Displaying the image of your application (smartphone) **75**
- Using MirrorLink **76**
  - Using the touch panel keys (App control side bar) **76**
  - Starting procedure **76**
- Using the audio mix function **77**

## **13 Using Aha Radio**

- Using the touch panel keys **78**
- Reading the screen **79**
- Starting procedure **79**
  - For iPhone with a 30-pin connector users **79**
  - For iPhone with a Lightning connector users **80**
  - For smartphone users **80**
- Operating with the hardware buttons **80**

## **14 Using a Bluetooth audio player**

- Using the touch panel keys **81**
- Reading the screen **82**
- Starting procedure **82**
- Selecting files from the file name list **83**
- Playing files in random order **83**

- Setting a repeat play range **83**
- Operating with the hardware buttons **83**

## **15 Using an HDMI source**

- Using the touch panel keys **84**
- Reading the screen **84**
- Starting procedure **84**

## **16 Using an AUX source**

- Using the touch panel keys **85**
- Reading the screen **85**
- Starting procedure **85**
- Setting the video signal **86**
- Switching the operation screen **86**

## **17 Using AV input**

- Using the touch panel keys **87**
- Reading the screen **87**
- Starting procedure **87**
- Setting the video signal **88**

## **18 Using MIXTRAX**

- MIXTRAX operation **89**
- Touch panel keys **89**
- Selecting an item to play songs **89**
- Selecting songs not to be played **90**
- Specifying the playback portion **90**
- Setting the flash pattern **90**

## **19 System settings**

- Setting the FM tuning step **91**
- Activating the Bluetooth audio source **91**
- Setting the ever scroll **91**
- Setting AV input **91**
- Setting the rear view camera **92**
  - Setting rear view camera activation **92**
  - Setting the polarity of the rear view camera **93**
- Setting the camera for Camera View mode **93**

- Displaying the parking assist guidelines **93**
- Setting guidelines on the rear view image **94**
- Setting the safe mode **95**
- Turning off the demo screen **95**
- Selecting the system language **95**
- Reversing the climate control status display **96**
- Setting the keyboard language with the application for iPhone **96**
- Setting the beep sound **96**
- Adjusting the response positions of the touch panel (touch panel calibration) **97**
- Adjusting the picture **97**
- Displaying the firmware version **98**
- Updating firmware **98**
- Checking the connections of leads **99**

## **20 Audio adjustments**

- Using fader/balance adjustment **100**
- Using balance adjustment **100**
- Switching sound muting/attenuation **101**
- Adjusting source levels **101**
- Adjusting the filter **103**
  - Adjusting the front and rear speaker output **103**
  - Using the subwoofer output **103**
- Selecting the listening position **104**
- Adjusting the speaker output levels finely **104**
- Adjusting the time alignment **105**
- Using the equaliser **106**
  - Recalling equaliser curves **106**
  - Customising the equaliser curves **107**
  - Using the auto-adjusted equaliser **107**
- Adjusting the equaliser curve automatically (Auto EQ) **108**
  - Before operating the Auto EQ function **108**
  - Performing Auto EQ **109**

## **21 Theme menu**

- Setting the illumination colour **111**
  - Selecting the colour from the preset colours **111**
  - Creating a user-defined colour **111**
- Selecting the background display **112**
  - Changing to the background display image stored on the external device (USB/SD) **112**
- Selecting the theme colour **113**
- Selecting the clock image **113**
- Changing the preinstalled splash screen **113**
  - Changing to the splash screen stored on the external device (USB/SD) **114**
- Replicating the settings **114**
  - Exporting "Theme" settings **114**
  - Importing "Theme" settings **114**

## **22 Setting up the video player**

- Setting the top-priority languages **116**
  - Setting the subtitle language **116**
  - Setting the audio language **116**
  - Setting the menu language **116**
- Setting the angle icon display **117**
- Setting the aspect ratio **117**
- Setting parental lock **118**
  - Setting the code number and level **118**
- Displaying your DivX VOD registration code **119**
- Displaying your DivX VOD deregistration code **119**
- Automatic playback of DVDs **119**
- Setting the video signal for the rear view camera **120**
- Setting the video output format **120**
- Language code chart for DVDs **121**

- 23 Favourite menu**
  - Selecting a shortcut **122**
  - Removing a shortcut **122**
- 24 Displaying the operation status of vehicle equipment**
  - Displaying obstacle detection information **123**
  - Displaying the operating status of the climate control panel **123**
- 25 Common operations**
  - Setting the time and date **125**
  - Storing song information to an iPod (iTunes Tagging) **125**
  - Setting the "Sound Retriever" function **126**
  - Changing the wide screen mode **126**
- 26 Other functions**
  - Selecting the video for the rear display **128**
  - Setting the anti-theft function **128**
    - Setting the password **128**
    - Entering the password **129**
    - Deleting the password **129**
    - Forgotten password **130**
  - Restoring this product to the default settings **130**
    - Restoring the default settings **130**
- Appendix**
  - Troubleshooting **131**
  - Error messages **133**
  - Handling and care of discs **137**
    - Built-in drive and care **137**
    - Ambient conditions for playing a disc **137**
  - Playable discs **138**
    - DVD-Video and CD **138**
    - AVCHD recorded discs **138**
    - Playing DualDisc **138**
      - Dolby Digital **138**
  - Detailed information for playable media **138**
    - Compatibility **138**
    - Media compatibility chart **142**
  - Bluetooth **146**
  - SDHC **146**
  - WMA/WMV **146**
  - DivX **146**
  - AAC **147**
  - Android™ **147**
  - MirrorLink **147**
  - Detailed information regarding connected iPod devices **147**
    - iPod and iPhone **147**
    - Lightning **147**
    - App Store **147**
    - iOS **148**
    - iTunes **148**
  - Using app-based connected content **148**
    - Aha Radio **148**
  - HDMI **148**
  - MHL **148**
  - Notice regarding video viewing **149**
  - Notice regarding DVD-Video viewing **149**
  - Notice regarding MP3 file usage **149**
  - Using the LCD screen correctly **149**
    - Handling the LCD screen **149**
    - Liquid crystal display (LCD) screen **149**
    - Maintaining the LCD screen **149**
    - LED (light-emitting diode) backlight **150**
  - Specifications **151**

Certain country and government laws may prohibit or restrict the placement and use of this product in your vehicle. Please comply with all applicable laws and regulations regarding the use, installation and operation of this product.



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.

### CAUTION

This product is a Class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.

**CLASS 1 LASER PRODUCT**

**CAUTION—CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.**

## Important safety information

### WARNING

- Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards.
- Do not allow this product to come into contact with liquids. Electrical shock could result. Also, damage to the product, smoke, and overheating could result from contact with liquids.
- If liquid or foreign matter should get inside this product, park your vehicle in a safe place, turn the ignition switch off (ACC OFF) immediately and consult your dealer or the nearest authorised Pioneer Service Station. Do not use this product in this condition because doing so may result in a fire, electric shock, or other failure.


## Precaution

- If you notice smoke, a strange noise or odour from this product, or any other abnormal signs on the LCD screen, turn off the power immediately and consult your dealer or the nearest authorised Pioneer Service Station. Using this product in this condition may result in permanent damage to the system.
- Do not disassemble or modify this product, as there are high-voltage components inside which may cause an electric shock. Be sure to consult your dealer or the nearest authorised Pioneer Service Station for internal inspection, adjustments or repairs.

Before using this product, be sure to read and fully understand the following safety information:

- Do not operate this product, any applications, or the rear view camera option (if purchased) if doing so will divert your attention in any way from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating this product or reading the display, park your vehicle in a safe location and apply the handbrake before making the necessary adjustments.
- Never set the volume of this product so high that you cannot hear outside traffic and emergency vehicles.
- To promote safety, certain functions are disabled unless the vehicle is stopped and/or the handbrake is applied.
- Keep this manual handy as a reference for operating procedures and safety information.
- Do not install this product where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags or hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.
- Please remember to fasten your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries

can be considerably more severe if your seat belt is not properly buckled.

- Never use headphones while driving. 

## Handbrake interlock

Certain functions (such as viewing of video image and certain touch panel key operations) offered by this product could be dangerous (possibly resulting in serious injury or death) and/or unlawful if used while driving. To prevent such functions from being used while the vehicle is in motion, there is an interlock system that senses when the handbrake is set and when the vehicle is moving. If you attempt to use the functions described above while driving, they will become disabled until you stop the vehicle in a safe place, and apply the handbrake. Please keep the brake pedal pushed down before releasing the handbrake.


## To ensure safe driving



### WARNING

- **LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE HANDBRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE.**
- **Do not take any steps to tamper with or disable the handbrake interlock system which is in place for your protection. Tampering with or disabling the handbrake interlock system could result in serious injury or death.**
- To avoid the risk of damage and injury and the potential violation of applicable laws, this product is not for use with a video image that is visible to the driver.


- In some countries the viewing of video image on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed.

If you attempt to watch video image while driving, the warning "**Viewing of front seat video source while driving is strictly prohibited.**" will appear on the screen. To watch video image on this display, stop the vehicle in a safe place and apply the handbrake. Please keep the brake pedal pushed down before releasing the handbrake. 

## When using a display connected to V OUT

The video output terminal (**V OUT**) is for connection of a display to enable passengers in the rear seats to watch video images.


### WARNING

NEVER install the rear display in a location that enables the driver to watch video images while driving. 

## To avoid battery exhaustion

Be sure to run the vehicle engine while using this product. Using this product without running the engine can drain the battery.

### WARNING

Do not install this product in a vehicle that does not have an ACC wire or circuitry available. 


## Rear view camera

With an optional rear view camera, you are able to use this product as an aid to keep an eye on trailers, or backing into a tight parking spot.

### WARNING


- SCREEN IMAGE MAY APPEAR REVERSED.
- USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.

### CAUTION

The rear view mode is to use this product as an aid to keep an eye on the trailers, or while backing up. Do not use this function for entertainment purposes. 


## Handling the SD card slot

### CAUTION

- Keep the SD memory card out of the reach of small children to prevent them from accidentally swallowing it.
- To prevent data loss and damage to the storage device, never remove it from this product while data is being transferred.
- If data loss or corruption occurs on the storage device for any reason, it is usually not possible to recover the data. Pioneer accepts no liability for damages, costs or expenses arising from data loss or corruption.
- Never insert or eject an SD memory card while driving. 

## Handling the USB connector

### CAUTION

- To prevent data loss and damage to the storage device, never remove it from this product while data is being transferred.
- Pioneer cannot guarantee compatibility with all USB mass storage devices and assumes no responsibility for any loss of data on media players, iPhone, smartphone, or other devices while using this product. 

## Precaution

### In case of trouble

Should this product fail to operate properly, contact your dealer or nearest authorised Pioneer Service Station.

### Visit our website

Visit us at the following site:

<http://www.pioneer.eu>

- Register your product. We will keep the details of your purchase on file to help you refer to this information in the event of an insurance claim such as loss or theft.
- We offer the latest information about PIONEER CORPORATION on our website.
- Pioneer regularly provides software updates to further improve its products. Please check the support section of the Pioneer website for all available software updates.

### About this product

- This product does not work correctly in areas other than Europe. The RDS (Radio Data System) function operates only in areas with FM stations broadcasting RDS signals. The RDS-TMC service can also be used in the area where there is a station that broadcasts the RDS-TMC signal.
- The Pioneer CarStereo-Pass is for use only in Germany.

### Protecting the LCD panel and screen

- Do not expose the LCD screen to direct sunlight when this product is not used. This may result in LCD screen malfunction due to the resulting high temperatures.
- When using a mobile phone, keep the aerial of the mobile phone away from the LCD screen to prevent disruption of the video in the form of spots, coloured stripes, etc.

- To protect the LCD screen from damage, be sure to touch the touch panel keys only with your finger and do so gently.

### Notes on internal memory Before removing the vehicle battery

If the battery is disconnected or discharged, the memory will be erased and must be reprogrammed.

- Some of the settings and recorded contents will not be reset.

### Data subject to erasure

The information is erased by disconnecting the yellow lead from the battery (or removing the battery itself).

- Some of the settings and recorded contents will not be reset.

### Resetting the microprocessor

#### CAUTION

Pressing the **RESET** button resets settings and recorded contents to the factory settings.

- Do not perform this operation when a device is connected to this product.
- Some of the settings and recorded contents will not be reset.


The microprocessor must be reset under the following conditions:

- Prior to using this product for the first time after installation.
- If this product fails to operate properly.
- If there appears to be problems with the operation of the system.
- If your vehicle position is shown on the map with a significant positioning error.

#### 1 Turn the ignition switch OFF.

## 2 Press the RESET button with a pen tip or other pointed implement.

Settings and recorded contents are reset to the factory settings.

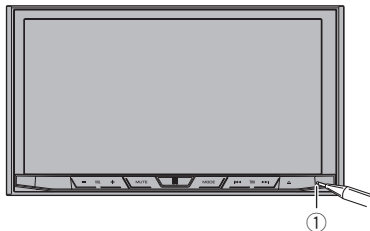

① RESET button ■


## About this manual

This manual uses diagrams of actual screens to describe operations. However, the screens on some units may not match those shown in this manual depending on the model used. ■


## Basic operation

### Checking part names and functions

This chapter gives information about the names of the parts and the main features using the buttons.

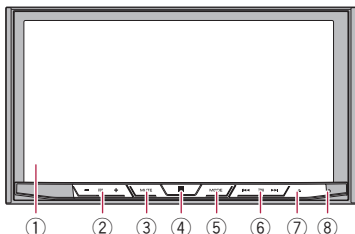

① ② ③ ④ ⑤ ⑥ ⑦ ⑧

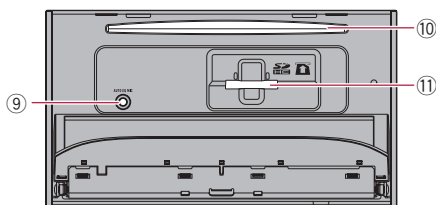

⑨ ⑩ ⑪

- ① **LCD screen**
- ② **VOL (+/-) button**  
Press to adjust the AV (Audio and Video) source volume.
- ③ **MUTE button**  
Press to mute. Press again to unmute.
- ④ **HOME button**
  - Press to display the Top menu screen.  
➡ For details of the operations, refer to *How to use the screens* on page 18.
  - Press and hold the **HOME** button to activate the voice recognition function.  
➡ For details, refer to *Using the voice recognition function (for iPhone)* on page 33.
- ⑤ **MODE button**
  - Press to switch between the Application screen and the AV operation screen.  
☐ If the display cannot switch from the AV operation screen to the Application screen when the **MODE** button is pressed, the display will turn off.

- ➡ For details of the operations, refer to *How to use the screens* on page 18.
- Press and hold to turn the display off.  
➡ For details, refer to *Turning off the display* on page 17.

- ⑥ **TRK button**  
Press to perform manual seek tuning, fast forward, reverse and track search controls.
- ⑦ **▲ button**
- ⑧ **RESET button**  
➡ For details of the operations, refer to *Resetting the microprocessor* on page 11.
- ⑨ **Auto EQ microphone input jack**  
Use to connect a microphone for acoustical measurement (sold separately).
- ⑩ **Disc-loading slot**  
Insert a disc to play.  
➡ For details, refer to *Inserting and ejecting a disc* on page 15.
- ⑪ **SD card slot**  
➡ For details, refer to *Inserting and ejecting an SD memory card* on page 15. ☐

### Remote control

The remote control CD-R33 is sold separately. For details concerning operations, see the remote control manual. ☐

### Protecting your product against theft

#### ⚠ CAUTION


- Do not attempt to detach the front panel while DISC/SD is in the eject position.
- Do not attempt to detach the front panel while data is being written to USB/SD. Doing so may cause the data to become corrupted.
- After the front panel has been detached, the attaching plate will move back to its original position automatically. Be careful not to let hands or other objects get caught behind the monitor as it is moving back.

- Please make sure that the front panel is in its original position while the vehicle is in motion. It is dangerous to drive with the front panel sticking out.
- Do not place beverages or other objects on top of the front panel while it is fully open.

### Important

- Handle the front panel with care when removing or attaching it.
- Avoid subjecting the front panel to excessive shock.
- Keep the front panel out of direct sunlight and high temperatures.
- If removed, replace the front panel on the unit before starting up your vehicle.


## Removing the front panel

- 1 Press the  button.
- 2 Touch the following key.



The front panel automatically slides toward you.

- 3 Slide the dial at the bottom of the front panel to the right, and lift up the front panel while pushing down on the dial.

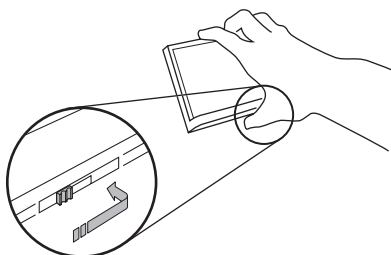


- 4 Put the front panel into the provided protective case for safe keeping.


## Attaching the front panel

- 1 Slide the front panel into the top of the unit and push it into place.

Slide the inserter on the front panel into the insertion slot on top of the unit and push it into place.

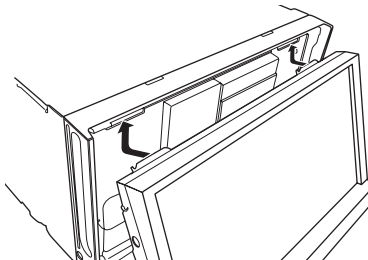

- 2 Push on the bottom of the front panel until it clicks into place.

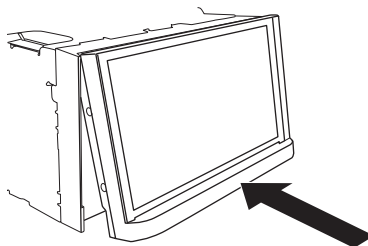

## Notes on using the LCD panel


### WARNING

- Keep hands and fingers clear of this product when opening, closing, or adjusting the LCD panel. Be especially cautious of children's hands and fingers.
- Do not use with the LCD panel left open. If the LCD panel is left open, it may result in injury in the event of an accident.


### CAUTION

- Do not open or close the LCD panel by force. This may cause a malfunction.

## Basic operation

- Do not operate this product until the LCD panel has completely opened or closed. If this product is operated while the LCD panel is opening or closing, the LCD panel may stop at that angle for safety.
- Do not place a glass or can on the open LCD panel. Doing so may break this product. 

### Adjusting the LCD panel angle

- 1 Press the  button.
- 2 Touch the following keys to adjust the angle of the LCD panel.



Laying the panel down.




Returning the panel to the upright position.

- 3 Touch the following key.





Returns to the previous screen.

- The adjusted angle of the LCD panel will be memorised and the LCD panel will automatically return to that angle the next time the LCD panel is opened or closed. 

### Inserting/ejecting/connecting media


#### CAUTION

- Do not insert anything other than a disc into the disc-loading slot.
- Do not insert anything other than SD memory cards into the SD card slot.
- Ejecting an SD memory card during data transfer can damage the SD memory card. Be sure to eject the SD memory card by the procedure described in this manual.
- Do not press the  button when an SD memory card is not fully inserted. Doing so may damage the card.

- Do not press the  button before an SD memory card has been completely removed. Doing so may damage the card.

### Inserting and ejecting a disc

#### Inserting a disc


- 1 Press the  button.
- 2 Touch the following key.



Opens the LCD panel.


- 3 Insert a disc into the disc-loading slot. The disc is loaded, and the LCD panel closes.

#### Ejecting a disc

- 1 Press the  button.
- 2 Touch the following key.




The LCD panel opens, and the disc is ejected.

- 3 Remove the disc, and press the  button. The LCD panel closes.

### Inserting and ejecting an SD memory card

- This system is not compatible with the Multi Media Card (MMC).
- Compatibility with all SD memory cards is not guaranteed.
- This product may not achieve optimum performance with some SD memory cards.

#### Inserting an SD memory card


- 1 Press the  button.
- 2 Touch the following key.



Opens the LCD panel.

### 3 Insert an SD memory card into the SD card slot.

Insert it with the label surface face-up and press the card until it clicks and completely locks.

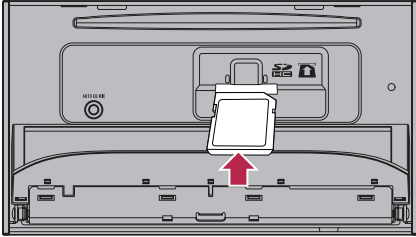

### 4 Press the ▲ button.

The LCD panel closes.

## Ejecting an SD memory card

- 1 Press the ▲ button.
- 2 Touch the following key.



Opens the LCD panel.

### 3 Press the middle of the SD memory card gently until it clicks.

### 4 Pull the SD memory card out straight.

### 5 Press the ▲ button.

The LCD panel closes.

## Connecting and disconnecting an iPod

### Connecting your iPod

- For details of the connections, refer to the Installation Manual.

### Disconnecting your iPod


- Pull out the cables after confirming that no data is being accessed.

## Plugging and unplugging a USB storage device

- ❑ This product may not achieve optimum performance with some USB storage devices.
- ❑ Connection via a USB hub is not possible.
- ❑ A USB cable is required for connection.

### Plugging in a USB storage device

- 1 Pull out the plug from the USB port of the USB cable.
- 2 Plug a USB storage device into the USB cable.

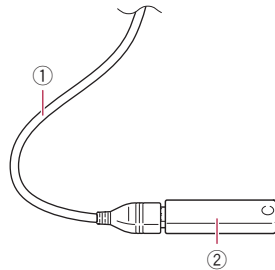

- ① USB cable
- ② USB storage device

### Unplugging a USB storage device

- Pull out the USB storage device after checking that no data is being accessed. ❑

## Startup and termination

### 1 Start the engine to boot up the system.

After a short pause, the splash screen comes on for a few seconds.

### 2 Turn off the vehicle engine to terminate the system.

This product is also turned off. ❑

## On first-time startup

When you use this product for the first time, select the language that you want to use.

## Basic operation

### 1 Start the engine to boot up the system.

After a short pause, the splash screen comes on for a few seconds.

The “**Select Program Language**” screen appears.

### 2 Touch the language that you want to use on screen.

### 3 Touch the following key.



Displays the “**Smartphone Setup**” screen.


### 4 Touch the item you want to set.

- For details, refer to *Information on the connections and functions for each device* on page 38.

### 5 Touch the following key.




Displays the Top menu screen.

- If you touch , the display returns to the previous screen. .

## Regular startup

### ● Start the engine to boot up the system.

After a short pause, the splash screen comes on for a few seconds.


- The screen shown will differ depending on the previous conditions.
- If the anti-theft function is activated, you must enter your password. .

## Turning off the display

You can turn off the display at night or when the screen is too bright.


### ● Press and hold the MODE button.

The display turns off.

- If you touch the screen when the display is off, it reverts to the original screen. .


# How to use the screens

## Switching screens using the touch panel keys

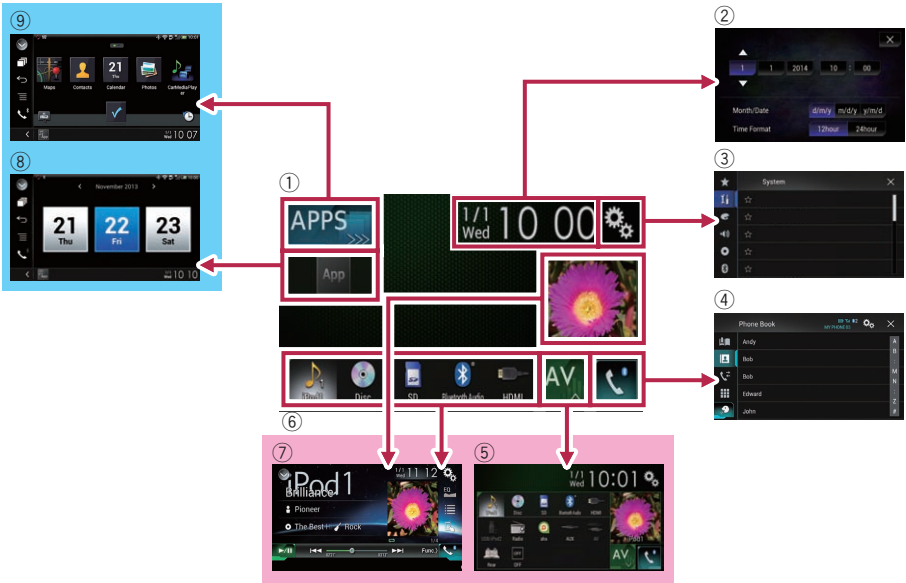

## Basic operation

### Switching screens using the hardware buttons

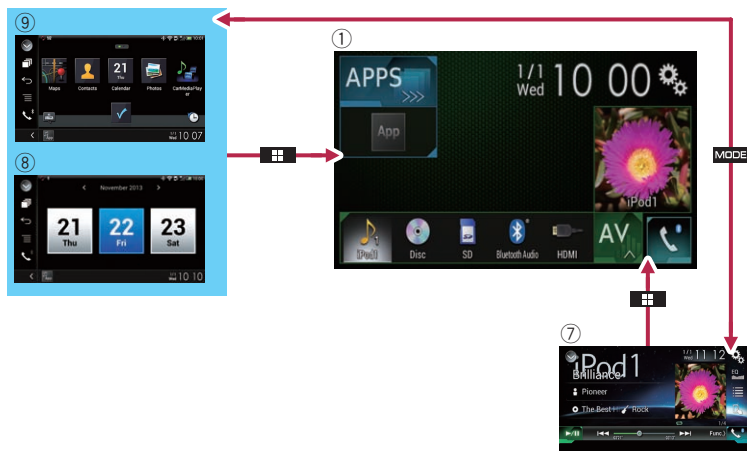

#### ① Top menu screen

This is the starting menu to access the desired screens and operate the various functions.

- If you press the **HOME** button, the Top menu screen is displayed.

#### ② Time and date setting screen

You can set the time and date settings.

#### ③ Setting menu screen

You can customise the system and audio settings, etc.

#### ④ Phone menu screen

You can access the screen that is related to hands-free phoning.

#### ⑤ AV source selection screen

You can select the AV source.

#### ⑥ Favourite source icons

You can display the icons of frequently used sources by dragging the icons to the display area.

- ➡ For details of the operation, refer to *Changing the display order of source icons* on page 21.

#### ⑦ AV operation screen

You can customise the settings for each source.

#### ⑧ Application operation screen

You can control the iPhone or smartphone applications directly on this product.

- If applications are not available, the Application operation screen will not be displayed.

#### ⑨ Application menu screen

This product can switch to the application menu, on which you can display and operate the application for an iPhone or a smartphone on the screen.

- If application menus are not available, the Application menu screen will not be displayed. □


### Supported AV source

You can play or use the following sources with this product.

- Radio (FM, MW/LW)
- CD
- ROM (compressed audio files)
- DVD-Video
- USB
- SD

The following sources can be played back or used by connecting an auxiliary device.

- iPod

- Aha Radio
- Bluetooth audio
- AV input (AV)
- AUX
- HDMI 


## Displaying the AV operation screen

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the AV operation key.



### ① AV operation key

The AV operation screen appears.

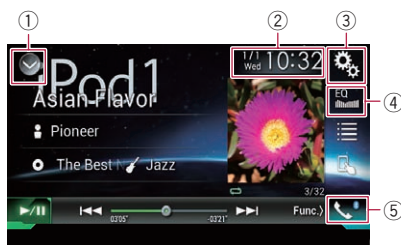

- ① **Displays the source list.**
  - ➔ For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Displays the Time and date setting screen.**
  - ➔ For details, refer to *Setting the time and date* on page 125.
- ③ **Displays the Setting menu screen.**
- ④ **Recalls equaliser curves.**
  - ➔ For details, refer to *Using the equaliser* on page 106.
- ⑤ **Displays the Phone menu screen.**
  - ➔ For details, refer to *Displaying the phone menu* on page 28.

## Selecting a front source on the AV source selection screen

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following key.



Displays the AV source selection screen.

- 3 Touch the source icon you want to select.

The AV operation screen of the selected source appears.

## Selecting a front source on the source list

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the AV operation key.



### ① AV operation key

The AV operation screen appears.

- 3 Touch the following key.



Displays the source list.


- 4 Touch the source key you want to select.

The AV operation screen of the selected source appears.

## Basic operation

### Selecting a rear source

You can select a source output to the rear display.

- For details of the operations, refer to *Selecting the video for the rear display* on page 128. 

### Turning off the AV source

Turn off the AV source to stop playing or receiving the AV source.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following key.



Displays the AV source selection screen.

- 3 Touch [OFF].

The AV source is turned off. 

### Changing the display order of source icons


You can change the display order of source icons on the AV source selection screen.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following key.



Displays the AV source selection screen.

- 3 Touch and hold a source icon, and drag the icon to the desired position.

- If the source icon is moved, the order of the source list is also changed. 

### Changing the display order of source keys

You can change the display order of source keys on the source list.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the AV operation key.



- ① AV operation key

The AV operation screen appears.

- 3 Touch the following key.



Displays the source list.


- 4 Touch [Open].

The source keys can be moved.

- 5 Drag the source key to the desired position.

- 6 Touch [Close].

Returns to the previous screen.


- If the source key is moved, the source icons displayed on the Top menu screen and the AV source screen are also moved. 

### Using the touch panel

You can operate this product by touching the marks and items (touch panel keys) displayed on the screen directly with your fingers.


- To protect the LCD screen from damage, be sure to touch the touch panel keys only with your finger and do so gently.

## Using the common touch panel keys

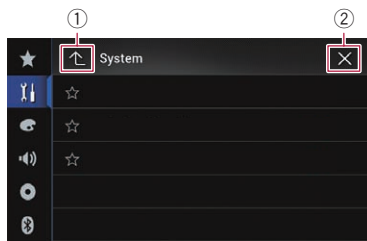


- ① Returns to the previous screen.
- ② Closes the screen.

## Operating list screens

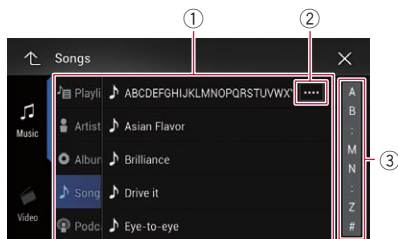


- ① Touching an item on the list allows you to narrow down the options and proceed to the next operation.
- ② Appears when all characters are not displayed on the display area. If you touch the key, the rest of the characters are scrolled for display.
- ③ Appears when items cannot be displayed on a single page only. Drag the scrubber bar to view any hidden items. Also, you can drag the list to view any hidden items.

## Operating the time bar

 

- ① You can change the playback point by dragging the key.
  - Playback time corresponding to the position of the key is displayed while dragging the key.

## Operating the on-screen keyboard

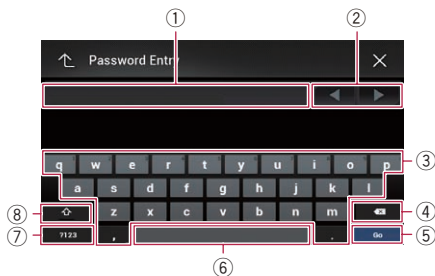

- ① Displays the characters that are entered. If there is no text in the box, an informative guide with text appears.
- ② Allows you to move the cursor to the right or left for a number of characters equivalent to the number of touches.
- ③ Touching the keys enters the characters in the text box.
- ④ Deletes the input text one letter at a time, beginning at the end of the text. Continuing to touch the key deletes all of the text.
- ⑤ Confirms the entry and allows you to proceed to the next step.
- ⑥ You can leave spaces. A space equivalent to the number of touches is inserted.
- ⑦ Switches between alphabet and numbers/symbols.
- ⑧ You can switch between capital and lower case letters. ▣

## Registering and connecting a Bluetooth device

If your devices feature Bluetooth® technology, this product can be connected to your devices wirelessly. This section describes how to set up a Bluetooth connection.

For details about connectivity with the devices featuring Bluetooth wireless technology, refer to the information on our website.

### Preparing communication devices

This product has a built-in function that enables using devices featuring Bluetooth wireless technology.

➔ For details, refer to *Notes for hands-free phoning* on page 34.

You can register and use devices that feature the following profiles with this product.

- HFP (Hands-Free Profile)
  - A2DP (Advanced Audio Distribution Profile)
  - SPP (Serial Port Profile)
- When this product is turned off, the Bluetooth connection is also disconnected. When the system restarts, the system automatically attempts to reconnect the previously-connected device. Even when the connection is severed for some reason, the system automatically reconnects the specified device (except when the connection is severed due to device operation).

### Registering your Bluetooth devices

You need to register your devices featuring Bluetooth wireless technology when you connect it to this product for the first time. A total of three devices can be registered. Two registration methods are available:

- Searching for nearby Bluetooth devices
  - Pairing from your Bluetooth devices
- If three devices are already paired, “**Memory Full**” is displayed and pairing cannot

be performed. In such cases, delete a paired device first.

➔ For details, refer to *Deleting a registered device* on page 25.

### Searching for nearby Bluetooth devices

The system searches for available Bluetooth devices near this product, displays them in a list, and registers them for connection.

- When the device is already connected, this function is inactive.

#### 1 Activate the Bluetooth wireless technology on your devices.

- For some Bluetooth devices, no specific action is necessary to activate Bluetooth wireless technology. For details, refer to the instruction manual of your devices.

#### 2 Press the HOME button to display the Top menu screen.

#### 3 Touch the following keys in the following order.



The “Bluetooth” screen appears.

#### 4 Touch [Connection].

#### 5 Touch the following key.



Starts searching.

The system searches for Bluetooth devices waiting for a connection and displays them in the list if a device is found.

- Up to 30 devices will be listed in the order that the devices are found.

## 6 Wait until your Bluetooth device appears in the list.

- ❑ If you cannot find the Bluetooth device that you want to connect, check that the device is waiting for a Bluetooth wireless technology connection.

## 7 Touch the Bluetooth device name you want to register.

While connecting, "Pairing... Please wait." is displayed. If the connection is established, "Paired." is displayed.

- ❑ If your device supports SSP (Secure Simple Pairing), a six-digit number appears on the display of this product. Touch **[Yes]** to pairing the device.
- ❑ If the connection fails, "Error" is displayed. In such cases, try again from the beginning.
- ❑ The PIN code is set to "0000" as the default, but can be changed.
  - ➔ For details, refer to *Entering the PIN code for Bluetooth wireless connection* on page 26.
- ❑ Once the connection is established, the device name is displayed. Touch the device name to disconnect.

After the device is successfully registered, a Bluetooth connection is established from the system.

The profile icons in the registered device list screen are displayed and illuminated as follows.



Illuminates when your mobile device is successfully connected with the HFP (Hands-Free Profile).



Illuminates when your audio device is successfully connected with the A2DP (Advanced Audio Distribution Profile)/AVRCP (Audio/Video Remote Control Profile).



Illuminates when the Bluetooth connection is established with the SPP (Serial Port Profile).

- ❑ After pairing, the phone book registered in the device may be automatically transmitted to this product.

- If you touch the following key, you can switch the display between the device names and Bluetooth device addresses.



Switches between the device names and Bluetooth device addresses.

## Pairing from your Bluetooth devices

You can register a Bluetooth device by setting this product to standby mode and requesting a connection from the Bluetooth device.

- ❑ Before registration, make sure that "Visibility" in the "Bluetooth" menu is set to "On".
- ➔ For details, refer to *Switching visibility* on page 26.

### 1 Activate the Bluetooth wireless technology on your devices.

- ❑ For some Bluetooth devices, no specific action is necessary to activate Bluetooth wireless technology. For details, refer to the instruction manual of your devices.

### 2 Use the Bluetooth setting in the device to pair this product with the device.

- ❑ If a PIN code input is required, enter a PIN code. (The default PIN code is "0000".) When the device is successfully registered, the connection settings are made from the device.
- ❑ If registration fails, repeat the procedure from the beginning.

## Connecting to a Bluetooth device automatically

If this function is set to on, a connection between your Bluetooth device and this product will take place automatically as soon as the two devices are less than a few metres apart. Initially, this function is set to on.

- ❑ If this function is set to on, a connection with the last connected Bluetooth device will be established automatically when the ignition switch is turned on.

## Registering and connecting a Bluetooth device

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The “Bluetooth” screen appears.

- 3 Touch [Auto Connect] repeatedly until the desired setting appears.

- **On** (default):  
Turns the automatic connection on.
- **Off**:  
Turns the automatic connection off.

If your Bluetooth device is ready for a Bluetooth wireless connection, a connection to this product will automatically be established.

If connection fails, “Auto connection failed. Retry?” appears.

Touch [Yes] to reconnect.

- To turn automatic connection off, touch [Auto Connect] again.

- Once the connection is established for the first time, the connection with the device will be established automatically when the ignition switch is turned on from the next time.

### Deleting a registered device

When you have already registered three Bluetooth devices and you want to add another one, you must first delete one of the registered devices.

- If a registered phone is deleted, all the phone book entries and call history lists that correspond to the phone will be also cleared.

### CAUTION

Never turn this product off while the paired Bluetooth device is being deleted.

- 1 Press the HOME button to display the Top menu screen.

- 2 Touch the following keys in the following order.



The “Bluetooth” screen appears.

- 3 Touch [Connection].
- 4 Touch the following key.



Deletes a paired device.

A message prompting you to delete a registered device appears.

- 5 Touch [Yes].  
The device is deleted.

## Connecting a registered Bluetooth device manually

Connect the Bluetooth device manually in the following cases:

- Two or more Bluetooth devices are registered, and you want to manually select the device to be used.
- You want to reconnect a disconnected Bluetooth device.
- Connection cannot be established automatically for some reason.

If you wish to start the connection manually, carry out the following procedure.

- 1 **Activate the Bluetooth wireless technology on your devices.**

- For some Bluetooth devices, no specific action is necessary to activate Bluetooth wireless technology. For details, refer to the instruction manual of your devices.

- 2 **Press the HOME button to display the Top menu screen.**

## Registering and connecting a Bluetooth device

3 Touch the following keys in the following order.



The “Bluetooth” screen appears.

4 Touch [Connection].

5 Touch the name of the device that you want to connect.

### Switching visibility

This function sets whether or not to make this product visible to the other device. Initially, this function is set to on.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “Bluetooth” screen appears.

3 Touch [Visibility] repeatedly until the desired setting appears.

- **On** (default):  
Turns the visibility on.
- **Off**:  
Turns the visibility off.

### Entering the PIN code for Bluetooth wireless connection

To connect your Bluetooth device to this product via Bluetooth wireless technology, you need to enter a PIN code on your Bluetooth device to verify the connection. The default code is “0000”, but you can change it with this function.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “Bluetooth” screen appears.

3 Touch [PIN Code Input].

The “PIN Code” screen appears.

4 Touch [0] to [9] to input pin code (up to 8 digits).

5 Touch the following key.



Stores the PIN code in this product.



### Displaying the Bluetooth device address

This product can display its Bluetooth device address.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “Bluetooth” screen appears.

3 Touch [Device Information].

The Bluetooth device address is displayed.

### Clearing the Bluetooth memory

- This setting is available only when you stop your vehicle in a safe place and apply the handbrake.

## Registering and connecting a Bluetooth device

### **!** CAUTION

Never turn this product off while the Bluetooth memory is being cleared.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The “Bluetooth” screen appears.

- 3 Touch [Bluetooth Memory Clear].
- 4 Touch [Clear].
- 5 Touch [OK].

The Bluetooth memory is cleared.

- If you do not want to clear the memory, touch [Cancel].

## Updating Bluetooth software

This function is used to update this product with the latest Bluetooth software. For details on Bluetooth software and updating, refer to our website.

- The source is turned off and the Bluetooth connection is disconnected before the process starts.
- This setting is available only when you stop your vehicle in a safe place and apply the handbrake.

### **!** CAUTION

Never turn this product off and never disconnect the phone while the software is being updated.

- 1 Press the HOME button to display the Top menu screen.

- 2 Touch the following keys in the following order.



The “Bluetooth” screen appears.

- 3 Touch [BT Software Update].
  - 4 Touch [Start].
- The data transfer screen is displayed.
- Follow the on-screen instructions to finish updating the Bluetooth software.

## Displaying the Bluetooth software version

If this product fails to operate properly, you may need to consult your dealer for repair. In such cases, you may be asked to specify the software version. Perform the following procedure to check the version on this unit.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The “Bluetooth” screen appears.

- 3 Touch [Bluetooth Version Information].
- The version of this product’s Bluetooth module appears.

## ⚠ CAUTION

For your safety, avoid talking on the phone as much as possible while driving.

If your mobile phone features Bluetooth technology, this product can be connected to your mobile phone wirelessly. Using this hands-free function, you can operate this product to make or receive phone calls. This section describes how to set up a Bluetooth connection and how to operate a mobile phone featuring Bluetooth technology on this product.

For details about connectivity with the devices featuring Bluetooth wireless technology, refer to the information on our website.

## Displaying the phone menu

Use the Phone icon if you wish to connect a mobile phone to this product for utilisation.

➡ For details, refer to Chapter 3.

☐ The Phone icon is displayed on the following screens.

- Top menu screen
- AV operation screen
- On the App control side bar on the **AppRadio Mode** and **MirrorLink** screens


### ● Touch the following key.



Displays the Phone menu screen.


☐ The “**Phone Book**” screen appears when using this function for the first time. The screen of the last-used function appears from the next time.

## Touch panel keys

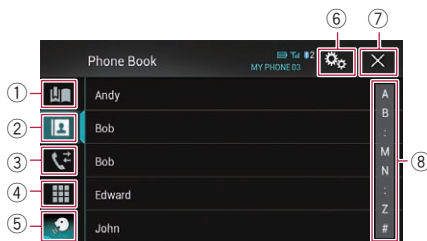

- ① Displays the preset dial screen.
- ② Switches to the phone book list.
- ③ Switches to the missed, received and dialled call lists.
- ④ Switches the mode to enter the phone number directly.
- ⑤ Switches to the voice recognition function (for iPhone).
- ⑥ Displays the Setting menu screen.
- ⑦ Closes the screen.
- ⑧ Displays the alphabet search screen.

## Reading the screen

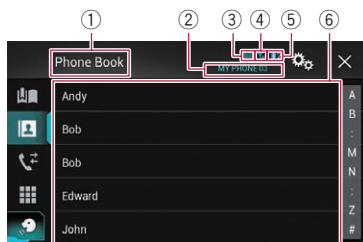

- ① Menu title
- ② Name of the connected mobile phone
- ③ Battery status of the mobile phone
- ④ Reception status of the mobile phone
- ⑤ Indicates that a Bluetooth telephone is connected.  
The device number of the connected device is displayed.
- ⑥ List display area ☐

# Using hands-free phoning

## Making a phone call


You can make a phone call in many different ways.

### Direct dialling

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "Dial" screen appears.

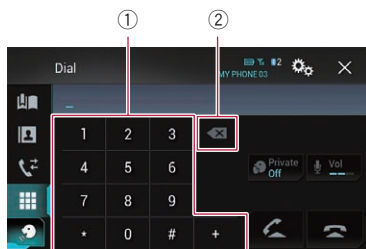

- ① Dial pad
- ② Deletes one digit. Touch and hold to delete all digits.

- 3 Touch the number keys to enter the phone number.
- 4 Touch the following key.



Makes a call.

- 5 Touch the following key.



Ends the call.

The call ends.

- You may hear a noise when you hang up the phone.

## Calling a number in the phone book


After finding the number you want to call in the phone book, you can select the entry and make the call.

- The contacts on your phone will normally be transferred to this product automatically when the phone is connected. If it is not, use your phone menu to transfer the contacts. The visibility of this product should be on when you use the "Bluetooth" menu.
  - For details, refer to *Switching visibility* on page 26.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "Phone Book" screen appears.

- 3 Touch the desired name on the list. The details screen of the phone book appears.
- 4 Touch the phone number you want to dial. The dial screen appears.
- 5 Dialling starts.
  - To cancel the call, touch 
- 6 Touch the following key.



Ends the call.

The call ends.

## Selecting a number by alphabet search mode

If a lot of numbers are registered in the phone book, you can search for the phone number by alphabet search mode.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "Phone Book" screen appears.

- 3 Touch the Initial Search Bar to display the alphabet search screen.

- 4 Touch the first letter of the entry you are looking for.

The "Phone Book" entries starting with that letter (e.g. "Ben", "Brian" and "Burt" when "B" is selected) will be displayed.

- When the system language is set to Russian, the following key appears. If you want to change the character, touch the following key repeatedly until the desired character appears.



Changes the character.

- 5 Touch the list to display the phone number list of the selected entry.

The details screen of the phone book appears.

- If several phone numbers are included in an entry, select one by touching the list.

- 6 Touch the phone number you want to dial.

The dial screen appears.

- 7 Dialling starts.

- To cancel the call, touch

- 8 Touch the following key.



Ends the call.

The call ends.

## Dialling from the history


The most recent calls made (dialled, received and missed) are stored in the call history list. You can browse the call history list and call numbers from it.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "History" screen appears.

- Depending on the type of mobile phone, some calls may not be displayed in the call history.

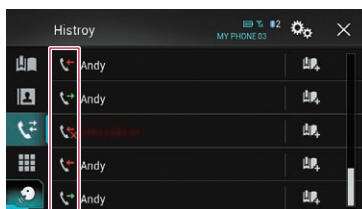

①

- ① Type of call history



Received calls.



Dialled calls.



Missed calls.

## Using hands-free phoning

### 3 Touch the desired entry on the list to make a call.

The dial screen appears.

### 4 Dialling starts.

- To cancel the call, touch 

### 5 Touch the following key.



Ends the call.

The call ends.

## Using the preset dial lists

You can dial a number from the preset dial list.

### Registering a phone number

You can easily store up to six phone numbers per device as presets.

#### 1 Press the HOME button to display the Top menu screen.

#### 2 Touch the following keys in the following order.



The "Phone Book" or "History" screen appears.

#### 3 Touch the following key.



Registers the phone number to the "Preset Dial" list.

### Dialling from the preset dial list

#### 1 Press the HOME button to display the Top menu screen.

#### 2 Touch the following keys in the following order.



The "Preset Dial" screen appears.

#### 3 Touch the desired entry on the list to make a call.

The dial screen appears.

#### 4 Dialling starts.

- To cancel the call, touch 

#### 5 Touch the following key.



Ends the call.

The call ends.

### Deleting a phone number

#### 1 Press the HOME button to display the Top menu screen.

#### 2 Touch the following keys in the following order.



The "Preset Dial" screen appears.

#### 3 Touch the following key.



Deletes the phone number.



## Receiving a phone call

You can perform hands-free answering by using this product.

## Answering an incoming call

This product informs you that it is receiving a call by displaying a message and producing a ring sound.

- ❑ You can set the system to automatically answer incoming calls. If this product is not set to automatically answer incoming calls, you will have to answer the calls manually.
  - ➔ For details, refer to *Answering a call automatically* on page 32.
- ❑ The registered name appears if the phone number of the received call is already registered in **"Phone Book"**.

### 1 Touch the following key.



Answers an incoming call.



Rejects an incoming call.

The rejected call is recorded in the missed call history list.

- ➔ For details, refer to *Dialling from the history* on page 30.

### 2 Touch the following key.



Ends the call.

The call ends. 

## Minimising the dial confirmation screen

- ❑ The dial confirmation screen cannot be minimised on the AV operation screen.
- ❑ AV sources cannot be selected even if the dial confirm screen is minimised while talking on the phone.

### 1 Touch the following key.



The dial confirmation screen is minimised.

### 2 Touch the following key.



Displays the dial confirmation screen again.



## Changing the phone settings

### Answering a call automatically

This product automatically answers incoming calls to the connected mobile phone, so you can answer calls while driving without taking your hands off the steering wheel.

When **"Auto Answer"** is set to **"On"**, an incoming call will be automatically answered in 5 seconds.

#### 1 Press the HOME button to display the Top menu screen.

#### 2 Touch the following keys in the following order.



The **"Bluetooth"** screen appears.

#### 3 Touch [Auto Answer] repeatedly until the desired setting appears.

- **Off** (default):  
Turns the automatic answering off.
- **On**:  
Turns the automatic answering on.

### Switching the ring tone

You can select whether or not to use this product's ring tone. If this function is set to on, the ring tone for this product will sound.

## Using hands-free phoning

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The “Bluetooth” screen appears.

- 3 Touch [Ring Tone] repeatedly until the desired setting appears.

- **On** (default):  
Turns the ring tone on.
- **Off**:  
Turns the ring tone off.

### Inverting names in the phone book

When your device is connected to this product, the first and last names of your contacts may be registered to the phone book in reverse order.

You can use this function to change the order back. (Inverting the names in the phone book)

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The “Bluetooth” screen appears.


- 3 Touch [Invert Name].  
The confirmation screen appears.

- 4 Touch [Yes].
  - If the inversion fails, “Invert Name Error” appears. In such cases, try again from the beginning.
  - Inverting the names of your contacts from this product does not affect the data on your Bluetooth device.

### Setting the private mode

During a conversation, you can switch to private mode (talk directly on your mobile phone).

- Touch the following keys to turn private mode on or off.

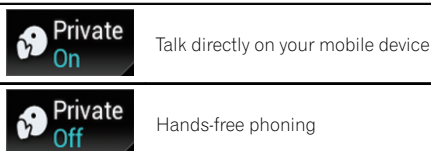

### Adjusting the other party's listening volume

To maintain good sound quality, this product can adjust the other party's listening volume. If the volume is not loud enough for the other party, use this function.

- Touch the following key.



Switches between the three volume levels.

- This function can be performed even while talking on the phone.
- Settings can be stored for each device.

### Using the voice recognition function (for iPhone)

You can use the voice recognition function of iPhone.

- When an iPhone running iOS 6.1 or higher is used, Siri Eyes Free Mode is available with this product.

- 1 Press the HOME button to display the Top menu screen.

## Using hands-free phoning

### 2 Touch the following keys to start voice control.



The voice recognition function launches and the voice control screen appears.

You can use the voice recognition function in the same way as using it on the iPhone.

- You can also launch the voice recognition function by pressing and holding the **HOME** button.



Indicates that this product is on standby for your voice commands.



Cancels the voice recognition function.



## Notes for hands-free phoning

### General notes

- Connection to all mobile phones featuring Bluetooth wireless technology is not guaranteed.
- The line-of-sight distance between this product and your mobile phone must be 10 metres or less when sending and receiving voice and data via Bluetooth technology. However, the actual transmission distance may be shorter than the estimated distance, depending on the usage environment.
- With some mobile phones, the ring sound may not be output from the speakers.
- If private mode is selected on the mobile phone, hands-free phoning may be disabled.

### Registration and connection

- Mobile phone operations vary depending on the type of mobile phone. Refer to the instruction manual that came with your mobile phone for detailed instructions.

- With mobile phones, phone book transfer may not work even though your phone is paired with this product. In that case, disconnect your phone, and then perform pairing again from your phone to this product.

### Making and receiving calls

- You may hear a noise in the following situations:
  - When you answer the phone using the button on the phone.
  - When the person on the other end of the line hangs up the phone.
- If the person on the other end of the line cannot hear the conversation due to an echo, decrease the volume level for hands-free phoning. This may reduce the echo.
- With some mobile phones, even if you press the accept button on the mobile phone when a call comes in, hands-free phoning may not be performed.
- The registered name appears if the phone number of the received call is already registered in the phone book. When one phone number is registered under different names, only the phone number is displayed.
- If the phone number of the received call is not registered in the phone book, the phone number of the received call appears.

### The received call and the dialled number histories

- You cannot make a call to the entry of an unknown user (no phone number) in the received call history.
- If calls are made by operating your mobile phone, no history data will be recorded in this product.

### Phone book transfers

- If there are more than 800 phone book entries on your mobile phone, not all entries may download completely.
- With some mobile phones, it may not be possible to transfer all items in the phone book at one time. In this case, transfer items one by one from your mobile phone.

## Using hands-free phoning

- Depending on the mobile phone, this product may not display the phone book correctly. (Some characters may be garbled, or the order of first and last names may be reversed.)
- If the phone book in the mobile phone contains image data, the phone book may not be transferred correctly. (Image data cannot be transferred from the mobile phone.)
- Depending on the mobile phone, phone book transfer may not be available.

When using an iPod / iPhone or a smartphone with this product, configure the settings of this product according to the device to be connected.

This section described the settings required for each device.

## The basic flow of iPod / iPhone or smartphone setup

- ① Select the method for connecting your device.
  - For details, refer to *Setting the device connection method* on page 36.
- ② Connect your device to this product.
  - For details of the connections, refer to the Installation Manual.
- ③ If necessary, connect your device to this product via Bluetooth connection.
  - For details of the Bluetooth connection, refer to Chapter 3.



## Setting the device connection method

If you want to use the application for iPhone or smartphone on this product, you must select the method for connecting your device. Settings are required according to the connected device.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The “**System**” screen appears.

**3 Touch [Input/Output settings].**

**4 Touch [Smartphone Setup].**

The “**Smartphone Setup**” screen appears.

**5 Touch the following settings.**

- **Device:** Select the device to be connected.
- **Connection:** Select the connection method.
  - Configure the settings correctly according to the device to be connected and the connection method to be used.
    - For details, refer to *Information on the connections and functions for each device* on page 38.
  - If you change the setting, the confirmation screen appears. Touch **[OK]**.  
The setting will change after the following processes are automatically executed.
    - The source is turned off.
    - **AppRadio Mode** and **MirrorLink** mode are exited.
    - The smartphone connection (USB and Bluetooth) is disconnected.
 To cancel, touch **[Cancel]**.

## iPod compatibility

This product supports only the following iPod models and iPod software versions. Others may not work correctly.

Made for

- iPhone 5c: iOS 7.0.3
- iPhone 5s: iOS 7.0.3
- iPhone 5: iOS 7.0.3
- iPhone 4s: iOS 7.0.3
- iPhone 4: iOS 7.0.3
- iPhone 3GS: iOS 6.0.1
- iPod touch (5th generation): iOS 6.0.1
- iPod touch (4th generation): iOS 6.0.1
- iPod touch (3rd generation): iOS 5.1.1
- iPod touch (2nd generation): iOS 4.2.1
- iPod classic 160GB (2009): Ver. 2.0.4
- iPod classic 160GB (2008): Ver. 2.0.1
- iPod classic 80GB: Ver. 1.1.2
- iPod nano (7th generation)
- iPod nano (6th generation): Ver. 1.2
- iPod nano (5th generation): Ver. 1.0.2
- iPod nano (4th generation): Ver. 1.0.4
- iPod nano (3rd generation): Ver. 1.1.3

## iPod / iPhone or smartphone setup operation

- ❑ You can connect and control an iPod compatible with this product by using separately sold connector cables.
- ❑ Operation methods may vary depending on the iPod model and the software version of the iPod.
- ❑ Depending on the software version of the iPod, it may not be compatible with this product.  
For details about iPod compatibility with this product, refer to the information on our website.

This manual applies to the following iPod models.

### iPod with 30-pin connector


- iPhone 4s
- iPhone 4
- iPhone 3GS
- iPod touch 4th generation
- iPod touch 3rd generation
- iPod touch 2nd generation
- iPod classic 160GB
- iPod classic 80GB
- iPod nano 6th generation
- iPod nano 5th generation
- iPod nano 4th generation
- iPod nano 3rd generation

### iPod with Lightning connector

- iPhone 5c
- iPhone 5s
- iPhone 5
- iPod touch 5th generation
- iPod nano 7th generation

## Android™ device compatibility

- ❑ Operation methods may vary depending on the Android device and the software version of the Android OS.
- ❑ Depending on the version of the Android OS, it may not be compatible with this product.
- ❑ Compatibility with all Android devices is not guaranteed.

For details about Android device compatibility with this product, refer to the information on our website. 

## MirrorLink device compatibility

- ❑ This product is compatible with **MirrorLink** version 1.0.
- ❑ Compatibility with all **MirrorLink** devices is not guaranteed.

For details about **MirrorLink** device compatibility with this product, refer to the information on our website. 

## Information on the connections and functions for each device

The settings and cables required for connecting each device, and the available sources are as follows.

iPod / iPhone with a 30-pin connector				
Required cable (sold separately)		Cable connection is not required.	CD-IU201V	CD-IU201S
Smartphone Setup	Device	iPhone/iPod	iPhone/iPod	iPhone/iPod
	Connection	Wireless via BT	USB	USB
Bluetooth connection		Bluetooth connection is required for using <b>aha</b> .	—	—
Connection requirement		—	Connect to USB port 1 for using <b>aha</b> .	Connect to USB port 1 for using <b>AppRadio Mode</b> .
Available source	iPod (audio)	—	✓	✓
	iPod (video)	—	✓	✓
	aha	✓	✓	✓
	AppRadio Mode	—	—	✓

iPod / iPhone with a Lightning connector				
Required cable (sold separately)		Cable connection is not required.	CD-IU52	<ul style="list-style-type: none"> <li>• CD-IH202</li> <li>• CD-IU52</li> <li>• Lightning Digital AV Adapter</li> </ul>
Smartphone Setup	Device	iPhone/iPod	iPhone/iPod	iPhone/iPod
	Connection	Wireless via BT	USB	Digital AV adapter
Bluetooth connection		Bluetooth connection is required for using <b>aha</b> .	Bluetooth connection is required for using <b>aha</b> .	Bluetooth connection is required.
Connection requirement		—	—	Connect to USB port 1 for using <b>AppRadio Mode</b> .
Available source	iPod (audio)	—	✓	—
	iPod (video)	—	—	—
	aha	✓	✓	✓
	AppRadio Mode	—	—	✓

# iPod / iPhone or smartphone setup operation

## iPod / iPhone with a Lightning connector

Remarks	—	—	<b>iPod</b> is not available. Please use the <b>CarMediaPlayer</b> to play music or videos in <b>AppRadio Mode</b> . (*1)
---------	---	---	--

(\*1) Install the **CarMediaPlayer** app on your iPod or iPhone.

- ➡ For details about the **CarMediaPlayer**, refer to the information on our website.
- ➡ Refer to the **CarMediaPlayer** manual for more information.


## Android, MirrorLink device

Required cable (sold separately)		Cable connection is not required.	CD-AH200	CD-MU200
Smartphone Setup	Device	Others	Others	Others
	Connection	Wireless via BT	HDMI	USB
Bluetooth connection		Bluetooth connection is required for using <b>aha</b> .	Bluetooth connection is required.	Bluetooth connection is required for using <b>aha</b> .
Connection requirement		—	Connect to USB port 2.	Connect to USB port 2.
Available source	<b>aha</b>	✓	✓	✓
	<b>AppRadio Mode</b>	—	✓	—
	<b>MirrorLink</b>	—	—	✓



You can listen to the radio using this product. This section describes operations for the radio.

## Using the touch panel keys

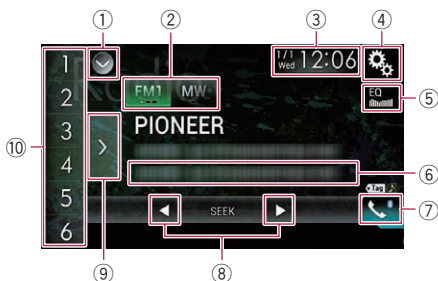

- ① **Displays the source list.**
  - ➔ For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Selects a band.**
  - ➔ For details, refer to *Selecting a band* on page 41.
- ③ **Displays the Time and date setting screen.**
  - ➔ For details, refer to *Setting the time and date* on page 125.
- ④ **Displays the Setting menu screen.**
- ⑤ **Recalls equaliser curves.**
  - ➔ For details, refer to *Using the equaliser* on page 106.
- ⑥ **Stores song information to an iPod.**
  - ➔ For details, refer to *Storing song information to an iPod (iTunes Tagging)* on page 125.
- ⑦ **Displays the Phone menu screen.**
  - ➔ For details, refer to *Displaying the phone menu* on page 28.
- ⑧ **Performs manual tuning or seek tuning.**
  - ➔ For details, refer to *Manual tuning* on page 41.
  - ➔ For details, refer to *Seek tuning* on page 41.
- ⑨ **Displays the preset channels.**


➔ For details, refer to *Selecting a preset channel from the preset channel list* on page 42.

- ⑩ **Recalls the preset channel stored to a key from memory with a single touch of the key.**

**Stores the current broadcast frequency to a key for later recall by continuing to touch the key.**

➔ For details, refer to *Storing broadcast frequencies* on page 42.

## Reading the screen

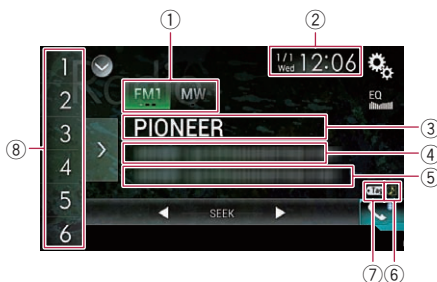



- ① **Band indicator**  
Shows the tuned band: FM1, FM2, FM3 or MW/LW.
- ② **Current time and date**
- ③ **Programme service name indicator**  
Shows the programme service name (station name) of the current station.  
 When "MW/LW" is selected, the frequency will be displayed instead.
- ④ **Radio text display area**  
Displays the radio text currently being received.  
 When "MW/LW" is selected, nothing is displayed.
- ⑤ **Song information**  
Shows the title of the current song and/or the artist name for the current song (when available).  
 When "MW/LW" is selected, nothing is displayed.
- ⑥ **iTunes® tagging song status indicator**

## Using the radio

Shows the status of the song information stored in this product.



- The icon is displayed on all operation screens of AV sources.

Indicator	Meaning
	Appears when the song information tag is stored in this product.
	Appears when the song information tag is being transferred to an iPod.

### ⑦ iTunes® tagging indicator

Indicates songs that are capable of iTunes tagging.

- The icon is displayed on all operation screens of AV sources.

Indicator	Meaning
	Appears when this product receives an iTunes song tag that can be stored and then downloaded to an iPod for later purchase.
	Flashes when this product is storing song tag information.

### ⑧ Preset number indicator

- Highlights the selected preset item.

## Starting procedure

### 1 Display the AV source selection screen.

- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 20.

### 2 Touch [Radio] on the AV source selection screen.



The "Radio" screen appears.

### 3 Use the touch panel keys on the screen to control the radio.

- ➔ For details, refer to *Using the touch panel keys* on page 40.

## Selecting a band



- Touch the following key repeatedly until the desired band appears.

	Switches between the following FM bands: FM1, FM2 and FM3.
	Switches between the following MW/LW bands: MW and LW.

- This function is convenient for preparing different preset lists for each band.

## Manual tuning



- Touch the following keys to tune manually.

	Moves down one step at a time.
	Moves up one step at a time.

- This function is convenient for preparing different preset lists for each band.

## Seek tuning

- Touch and hold one of the following keys for about one second and then release.


	Scans frequencies until it finds a broadcast strong enough for good reception. You can cancel seek tuning by touching either key briefly.
	If you keep holding either key, you can skip broadcasting frequencies. Seek tuning will start when you release the key.

## Selecting a preset channel from the preset channel list

Once you have stored broadcast channels, you can easily recall preset channels from memory with a single touch of a key.

➔ For details, refer to *Storing broadcast frequencies* on page 42.

### 1 Touch the preset channel list display key.

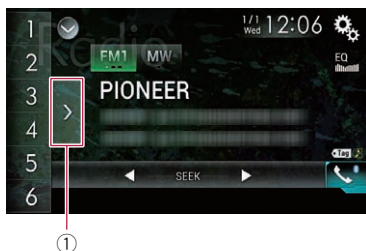

① Preset channel list display key

### 2 Touch the item on the list ("1" to "6") to switch to a channel registered as a preset channel.

- ❑ If you touch the preset channel list display key while the preset channel list is displayed, the list disappears and the preset tuning keys are displayed.

## Storing broadcast frequencies

With a touch of any of the preset tuning keys ("1" to "6"), you can easily store up to six broadcast channels for later recall (also with the touch of a key).

### 1 Select a frequency that you want to store in memory.

### 2 Touch and hold a preset tuning key [1] to [6].

The selected radio station is stored in memory. The next time you touch the same preset tuning key "1" to "6", the service component is recalled from memory.

- ❑ Up to 18 FM stations, six for each of the three FM bands, as well as six MW/LW stations, can be stored in memory.

## Storing the strongest broadcast frequencies

BSM (best stations memory) function automatically stores the six strongest broadcast frequencies under the preset tuning keys "1" to "6" and, once stored there, you can tune into them with the touch of a key.

- ❑ Storing broadcast frequencies with BSM may replace broadcast frequencies you have already saved.
- ❑ Previously stored broadcast frequencies may remain stored if the number of strong broadcast frequencies stored has not reached the limit.

### 1 Touch the preset channel list display key.

The preset channel list appears.

### 2 Touch [BSM] to begin a search.

A message appears. While the message is displayed, the six strongest broadcast frequencies will be stored under the preset tuning keys "1" to "6" in order of their signal strength. When this is complete, the message disappears.

- If you touch [**Cancel**], the storage process is cancelled.

## Tuning into strong frequencies

- ❑ This setting is available only when "Radio" is selected as the source.

Local seek tuning allows you to only tune into those radio stations with sufficiently strong signals for good reception.

### 1 Press the HOME button to display the Top menu screen.

## Using the radio

### 2 Touch the following keys in the following order.



The “**System**” screen appears.

### 3 Touch [AV Source Settings].

### 4 Touch [Radio settings].

### 5 Touch [Local].

The pop-up menu appears.

### 6 Touch the item you want to set.

#### FM

- **Off** (default):  
Turns the seek tuning setting off.
- **Level1:**  
Sets the level of sensitivity for FM to level 1.
- **Level2:**  
Sets the level of sensitivity for FM to level 2.
- **Level3:**  
Sets the level of sensitivity for FM to level 3.
- **Level4:**  
Sets the level of sensitivity for FM to level 4.

#### MW/LW

- **Off** (default):  
Turns the seek tuning setting off.
- **Level1:**  
Sets the level of sensitivity for MW/LW to level 1.
- **Level2:**  
Sets the level of sensitivity for MW/LW to level 2.
- The FM “**Level4**” (MW/LW “**Level2**”) setting allows reception of only stations with the strongest signals, while lower settings allow reception of those with weaker signals.

## Receiving traffic announcements

- This function can only be used on the FM band.

TA (traffic announcement standby) lets you receive traffic announcements automatically, no matter what source you are listening to. TA can be activated for both a TP station (a station that broadcasts traffic information) or another enhanced network’s TP station (a station carrying information that cross-references TP stations).

### 1 Press the HOME button to display the Top menu screen.

### 2 Touch the following keys in the following order.



The “**System**” screen appears.

### 3 Touch [AV Source Settings].

### 4 Touch [Radio settings].

### 5 Touch [TA Interrupt] repeatedly until the desired setting appears.

- **Off** (default):  
Does not receive traffic announcements automatically.
- **On:**  
Receives traffic announcements automatically.

### 6 Tune into a TP station or another enhanced network’s TP station.

### 7 Use the VOL (+/-) button to adjust the TA volume when a traffic announcement begins.

The newly set volume is stored in memory and recalled for subsequent traffic announcements.

- You can cancel the news programme by changing the source.
- The system switches back to the original source following traffic announcement reception.

- ❑ Only TP stations and other enhanced networks' TP stations are tuned in during seek tuning or BSM when the TA function is on.

## Using news programme interruption

- ❑ This function can only be used on the FM band.

When a news programme is broadcast from a PTY code news station, this product can switch from any station to the news broadcast station. When the news programme ends, reception of the previous programme resumes.

- 1 Press the HOME button to display the Top menu screen.**
- 2 Touch the following keys in the following order.**



The “System” screen appears.

- 3 Touch [AV Source Settings].**
- 4 Touch [Radio settings].**
- 5 Touch [News Interrupt] repeatedly until the desired setting appears.**
  - **Off** (default):  
Deactivates the news programme interruption function.
  - **On:**  
Activates the news programme interruption function.
- ❑ You can cancel the news programme by changing the source.

## Tuning into alternative frequencies

- ❑ This function can only be used on the FM band.

If you are listening to a broadcast and the reception becomes weak or there are other problems, this product will automatically search for a different station in the same network that is broadcasting a stronger signal.

- 1 Press the HOME button to display the Top menu screen.**
- 2 Touch the following keys in the following order.**



The “System” screen appears.

- 3 Touch [AV Source Settings].**
- 4 Touch [Radio settings].**
- 5 Touch [Alternative FREQ] repeatedly until the desired setting appears.**
  - **On** (default):  
Turns the alternative frequencies function on.
  - **Off:**  
Turns the alternative frequencies function off.
- ❑ Only RDS stations are tuned in during seek tuning or BSM when AF is on.
- ❑ When you recall a preset station, the tuner may update the preset station with a new frequency from the station's AF list. No preset number appears on the display if the RDS data for the station received differs from that for the originally stored station.
- ❑ Sound may be temporarily interrupted by another programme during an AF frequency search.
- ❑ AF can be turned on or off independently for each FM band.

## Using the radio

### Limiting stations to regional programming

- This function can only be used on the FM band.

When AF (alternative frequency) is used to automatically retune frequencies, the regional function limits the selection to stations broadcasting regional programmes.

- 1 Press the **HOME** button to display the **Top menu screen**.
- 2 Touch the following keys in the following order.



The “**System**” screen appears.

- 3 Touch [**AV Source Settings**].
- 4 Touch [**Radio settings**].
- 5 Touch [**Regional**] repeatedly until the desired setting appears.
  - **On** (default):  
Turns the regional function on.
  - **Off**:  
Turns the regional function off.
- Regional programming and regional networks are organised differently depending on the country (i.e. they may change according to the time, country or broadcast area).
- The preset number on the display may disappear if the tuner tunes into a regional station that differs from the originally set station.
- The regional function can be turned on or off independently for each FM band.

### Switching Auto PI seek

If this product fails to find a suitable alternative frequency, or if you are listening to a

broadcast and the reception becomes weak, this product will automatically search for a different station with the same programming.

### Activating the Auto PI seek for preset stations

This product can automatically search for a different station with the same programming, even during preset recall.

- “**Auto PI**” can be set only when the source is selected to “**OFF**”.

- 1 Press the **HOME** button to display the **Top menu screen**.
- 2 Touch the following keys in the following order.



The “**System**” screen appears.

- 3 Touch [**AV Source Settings**].
- 4 Touch [**Radio settings**].
- 5 Touch [**Auto PI**] repeatedly until the desired setting appears.
  - **Off** (default):  
Deactivates the Auto PI seek function.
  - **On**:  
Activates the Auto PI seek function.

### Switching the sound quality of the FM tuner

- This function can only be used on the FM band.

You can select the sound quality from the three settings according to the circumstances of use.

- 1 Press the **HOME** button to display the **Top menu screen**.

2 Touch the following keys in the following order.



The “**System**” screen appears.

3 Touch [AV Source Settings].

4 Touch [Radio settings].

5 Touch [Tuner Sound].

The pop-up menu appears.

6 Touch the item you want to set.

- **Standard** (default):  
Switches to the standard settings.
- **Stable**:  
Switches to settings that prioritise noise prevention.
- **Hi-Fi**:  
Switches to the settings that give priority to the sound quality.

## Storing song information to an iPod (iTunes Tagging)

For details, refer to *Storing song information to an iPod (iTunes Tagging)* on page 125.

## Operating with the hardware buttons

### Press the TRK button

You can move the preset channels up or down.

### Press and hold the TRK button

You can perform seek tuning.

## Playing a disc

You can play a normal music CD, Video-CD or DVD-Video using the built-in drive of this product. This section describes these operations.


### **!** CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, you must stop in a safe place and apply the handbrake.


## Using the touch panel keys (for audio)

Example: CD

Playback screen (page 1)

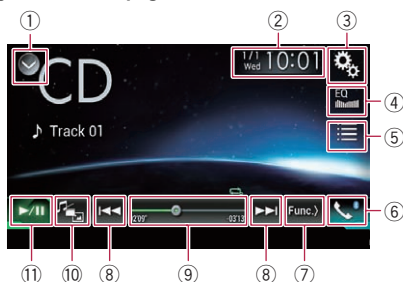


Playback screen (page 2)

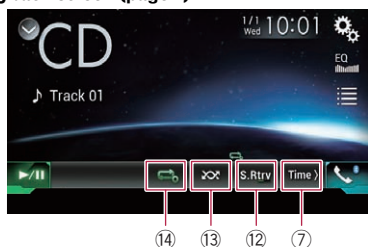

## Using the touch panel keys (for video)

Example: DVD

Playback screen (page 1)

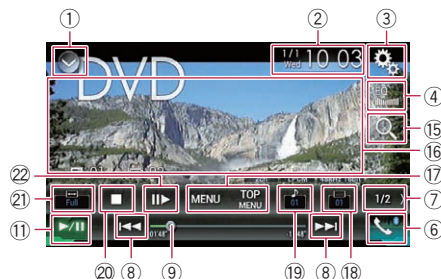

Playback screen (page 2)




- ① **Displays the source list.**  
➔ For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Displays the Time and date setting screen.**  
➔ For details, refer to *Setting the time and date* on page 125.
- ③ **Displays the Setting menu screen.**
- ④ **Recalls equaliser curves.**  
➔ For details, refer to *Using the equaliser* on page 106.
- ⑤ **Selects a track from the list.**  
➔ For details, refer to *Selecting files from the file name list* on page 50.
- ⑥ **Displays the Phone menu screen.**  
➔ For details, refer to *Displaying the phone menu* on page 28.
- ⑦ **Switches to the next or previous page of touch panel keys.**
- ⑧ **Skips files forward or backward.**

- 9 **Changes the playback point by dragging the key.**  
 ➔ For details, refer to *Operating the time bar* on page 22.
- 10 **Switches the media file type.**  
 ➔ For details, refer to *Switching the media file type* on page 50.
- 11 **Switches between playback and pause.**
- 12 **Uses “Sound Retriever” function.**  
 ➔ For details, refer to *Setting the “Sound Retriever” function* on page 126.
- 13 **Plays files in random order.**  
 ➔ For details, refer to *Playing tracks in random order* on page 50.
- 14 **Sets a repeat play range.**  
 ➔ For details, refer to *Setting a repeat play range* on page 50.
- 15 **Searches for the part you want to play.**  
 ➔ For details, refer to *Searching for the part you want to play* on page 51.
- 16 **Hides the touch panel keys.**  
 Touching this area hides the touch panel keys.  
 Touch anywhere on the LCD screen to display the touch panel keys again.
- 17 **Displays the DVD menu.**  
 ➔ For details, refer to *Operating the DVD menu* on page 51.
- 18 **Switches the subtitle language.**  
 ➔ For details, refer to *Switching the subtitle language* on page 51.
- 19 **Switches the audio language.**  
 ➔ For details, refer to *Switching the audio language* on page 52.
- 20 **Stops playback.**
- 21 **Changes the wide screen mode.**  
 ➔ For details, refer to *Changing the wide screen mode* on page 126.
- 22 **Moves ahead one frame (frame-by-frame playback) or slows down playback speed (slow-motion playback).**  
 ➔ For details, refer to *Frame-by-frame playback* on page 52.  
 ➔ For details, refer to *Slow motion playback* on page 52.
- 23 **Performs an operation (such as resuming) that is stored on the disc.**  
 ➔ For details, refer to *Returning to a specified scene* on page 52.
- 24 **Resumes playback (Bookmark).**  
 ➔ For details, refer to *Resuming playback (Bookmark)* on page 52.
- 25 **Displays the DVD menu keypad.**  
 ➔ For details, refer to *Operating the DVD menu using touch panel keys* on page 52.
- 26 **Changes the viewing angle (Multi-angle).**  
 ➔ For details, refer to *Switching the multi-angle DVD display* on page 53.
- 27 **Selects the audio output.**  
 ➔ For details, refer to *Selecting the audio output* on page 53.

## Reading the screen (for audio)


### Example: CD

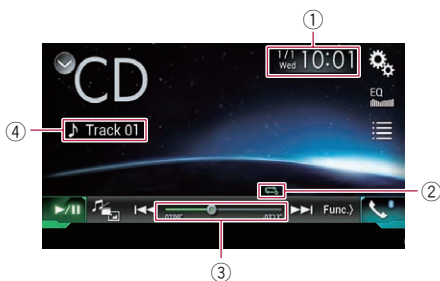

# Playing a disc

## Reading the screen (for video)

Example: DVD

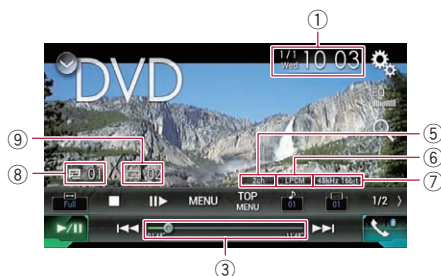

Example: Video CD



- ① **Current time and date**
- ② **Playback condition indicator**  
Indicates the current playback condition.

### Playing tracks in random order

Indicator	Meaning
	Does not play tracks in random order.
	Plays all tracks in the current disc in random order.

### Setting a repeat play range

Indicator	Meaning
	Repeats just the current track.
	Repeats the current disc.

- ③ **Play time indicator**

Shows the elapsed playing time within the current file.

- ④ **Track number indicator**  
Shows the number of the track currently playing (when available).
- ⑤ **Audio channel indicator**  
Shows the current audio channel type, such as "Mch" (Multi-channel).
- ⑥ **Digital sound format indicator**  
Shows which digital sound format (surround sound format) has been selected.
- ⑦ **Sampling frequency indicator**  
Shows the sampling frequency currently playing.
- ⑧ **Title number indicator**  
Shows the title number currently playing.
- ⑨ **Chapter number indicator**  
Shows the chapter number currently playing.
- ⑩ **PBC ON indicator**  
Indicates that a disc with PBC On is being played.

## Starting procedure

### 1 Display the AV source selection screen.

- For details of the operations, refer to *Displaying the AV operation screen* on page 20.

### 2 Insert the disc you want to play into the disc-loading slot.

The source changes and then playback will start.

- For details, refer to *Inserting and ejecting a disc* on page 15.
- ☐ If the disc is already set, touch **[Disc]** on the source list or on the AV source selection screen.
  - For details, refer to *Selecting a front source on the source list* on page 20.
  - For details, refer to *Selecting a front source on the AV source selection screen* on page 20.

### 3 Use the touch panel keys on the screen to control the disc.

- For details, refer to *Using the touch panel keys (for audio)* on page 47.
- For details, refer to *Using the touch panel keys (for video)* on page 47.

## Selecting files from the file name list

You can select tracks to play back using the track title list which is a list of the tracks recorded on a disc.

### 1 Touch the following key.



Displays a list of the tracks recorded on the disc.

### 2 Touch a track on the list to play back.




## Playing tracks in random order

All tracks on the disc can be played at random by only touching a single key.

### ● Touch the following key repeatedly until the desired setting appears.



Turns random play on or off.

-  (default):  
Does not play tracks in random order.
- :  
Plays all tracks in the current repeat play range in random order.
  - If you turn random play on when the repeat play range is set to the current track, the repeat play range changes to the whole of the current disc automatically. 

## Setting a repeat play range

The repeat play range can be changed by only touching a single key.

### ● Touch the following key repeatedly until the desired setting appears.




Changes the repeat play range.





### Audio

-  (default):

Repeats the current disc.

- :  
Repeats just the current track.
- If you turn random play on when the repeat play range is set to the whole of the current disc, the repeat play range changes to the current track automatically.
- If you turn random play on when the repeat play range is set to the current track, the repeat play range changes to the whole of the current disc automatically.
- When random play is turned on, you can change the repeat play range from the whole of the current disc to the current track.

### Video

-  (default):  
Repeats all files.
- :  
Repeats just the current chapter.
- :  
Repeats just the current title. 

## Switching the media file type


When playing a digital media containing a mixture of various media file types you can switch between media file types to play.

### 1 Touch the following key.



Displays the pop-up menu for selecting a media file type to play on the disc.

### 2 Touch the item you want to set.

- **Music:**  
Switches the media file type to music (compressed audio).
- **Video:**  
Switches the media file type to video.
- **CD-DA:**  
Switches the media file type to CD (audio data (CD-DA)). 

## Playing a disc

### Searching for the part you want to play

You can use the search function to find the part you want to play.

- ❑ For DVD-Videos, you can select **Title** (title), **Chapter** (chapter) or **10Key** (numeric keypad).
- ❑ For Video-CDs, you can select **Track** (track) or **10Key** (numeric keypad). **10Key** (numeric keypad) is available for Video-CDs featuring PBC (playback control) only.
- ❑ Chapter search and time search are not available when disc playback has been stopped.

#### 1 Touch the following key.



Displays the screen for direct number search.

#### 2 Touch [Title] (title), [Chapter] (chapter) or [10Key] (numeric keypad).

#### 3 Touch [0] to [9] to input the desired number.

- ❑ To cancel an input number, touch [Clear]. To cancel the input numbers, touch and hold [Clear].

#### 4 Touch the following key.



Registers the numbers and starts playback.



#### 2 Touch the following key.



Displays the touch panel keys to operate the DVD menu.



#### 3 Touch the desired menu item.

### Switching the subtitle language

You can switch the subtitle language while a disc is playing when the disc has multilingual data (multi-subtitle).

#### ● Touch the following key repeatedly until the desired setting appears.



Changes the subtitle language. You can also switch between subtitle languages using the "DVD/DivX Setup" menu.

- ➔ For details, refer to *Setting the top-priority languages* on page 116.



### Operating the DVD menu

You can operate the DVD menu by touching the menu item on the screen directly.

- ❑ This function may not work properly with some DVD disc content. In that case, use touch panel keys to operate the DVD menu.

#### 1 Touch the screen to display the touch panel keys.

## Switching the audio language

You can switch the audio language while a disc is playing when the disc has multilingual data (multi-audio).

- **Touch the following key repeatedly until the desired setting appears.**



Changes the audio language. You can also switch between audio languages using the “**DVD/DivX Setup**” menu.  
 ☞ For details, refer to *Setting the top-priority languages* on page 116.




## Frame-by-frame playback

This lets you move ahead one frame at a time during pause.

- **Touch [II▶] during pause.**

Each time you touch [II▶], you move ahead one frame.

- ☐ To return to normal playback, touch [▶/II].
- ☐ With some discs, images may be unclear during frame-by-frame playback. 

## Slow motion playback

This lets you slow down the playback speed.

- 1 **Touch and hold [II▶] until an arrow icon is displayed during playback.**


The arrow icon is displayed, and forward slow motion playback begins.

- ☐ To return to normal playback, touch [▶/II].

- 2 **Touch [II▶] to adjust playback speed during slow motion playback.**

Each time you touch [II▶] it changes the speed in four steps in the following order:

**1/16 → 1/8 → 1/4 → 1/2**

- ☐ There is no sound during slow motion playback.
- ☐ With some discs, images may be unclear during slow motion playback.
- ☐ Reversed slow motion playback is not possible. 

## Returning to a specified scene

When using a disc that has a point recorded that indicates where to return to, the disc returns to the specified point and begins playback from there.

This function cannot be used if a specified scene has not been preprogrammed on the disc.

- ☐ This function is available for DVD-Video and Video-CDs featuring PBC (playback control) only.

- **Touch the following key.**



**Return**

Returns to the specified point and begins playback from there.

- ☐ The specified point differs depending on the disc. 


## Resuming playback (Bookmark)

The Bookmark function lets you resume playback from a selected scene the next time the disc is loaded.

- **Touch the following key.**



Bookmarks one point for each of up to five discs.

- ☐ If you try to memorise another point for the same disc, the older bookmark will be overwritten by the newer one.
- ☐ To clear the bookmark on a disc, touch and hold this key.
- ☐ The oldest bookmark is replaced by the new one. 

## Operating the DVD menu using touch panel keys

If items on the DVD menu appear, the touch panel keys may overlay them. If so, select an item using those touch panel keys.

## Playing a disc

### 1 Touch the following keys to select the desired menu item.



Selects the left menu item.




Selects the right menu item.



Selects the upper menu item.





Selects the lower menu item.

- If the touch panel keys for DVD menu selection disappear, touch anywhere on the screen, and then touch . The touch panel keys are displayed again.

### 2 Touch the following key.



Starts playback from the selected menu item.

- The way to display the menu differs depending on the disc.
- If you touch , the touch panel keys disappear and the  icon is displayed. You can select a menu item by touching it.

## Switching the multi-angle DVD display

With DVDs featuring multi-angle recordings (scenes shot from multiple angles), you can switch among viewing angles during playback.

### ● Touch the following key repeatedly until the desired setting appears.



Switches between viewing angles. During the playback of a scene shot from multiple angles, the angle icon is displayed. Turn the angle icon display on or off using the “DVD/DivX Setup” menu.

- ➔ For details, refer to *Setting the angle icon display* on page 117.

## Selecting the audio output

When playing DVDs recorded with LPCM audio, you can switch the audio output.

### ● Touch the following key repeatedly until the desired setting appears.



Changes the audio output setting.

- **L+R:** Left and right
- **Left:** Left
- **Right:** Right
- **Mix:** Mixing left and right
- This function is not available when disc playback has been stopped.
- The appearance of this key changes according to the current setting.

## Operating with the hardware buttons

### Press the TRK button

You can skip tracks or chapters forward or backward.

### Press and hold the TRK button

You can perform fast reverse or fast forward.


You can play compressed audio files stored in a disc or an external device (USB, SD) using the built-in drive of this product. This section describes how.

➤ For details, refer to *Media compatibility chart* on page 142.


## Using the touch panel keys

### Example: SD

#### Playback screen (page 1)

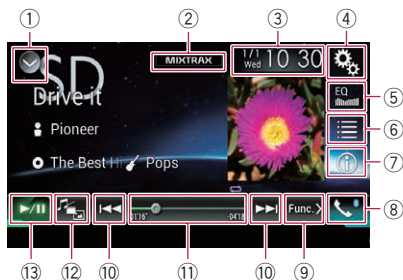

#### Playback screen (page 2)

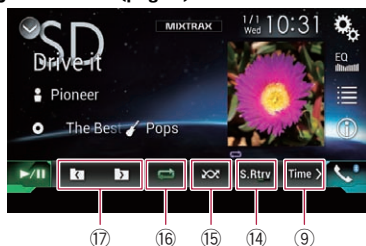


- ① **Displays the source list.**  
➤ For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Displays the MIXTRAX screen.**  
➤ For details, refer to Chapter 18.
- ③ **Displays the Time and date setting screen.**  
➤ For details, refer to *Setting the time and date* on page 125.
- ④ **Displays the Setting menu screen.**
- ⑤ **Recalls equaliser curves.**  
➤ For details, refer to *Using the equaliser* on page 106.
- ⑥ **Selects a file from the list.**

- For details, refer to *Selecting files from the file name list* on page 57.
- Displays a list related to the song currently playing (link search).**
- For details, refer to *Selecting a file from the list related to the song currently playing (link search)* on page 57.
- ⑦ **Switches the text display between tag information and file/folder information.**  
➤ For details, refer to *Reading the screen* on page 55.  
➤ For details, refer to *Switching the browse mode* on page 56.
- ⑧ **Displays the Phone menu screen.**  
➤ For details, refer to *Displaying the phone menu* on page 28.
- ⑨ **Switches to the next or previous page of touch panel keys.**
- ⑩ **Skips files forward or backward.**
- ⑪ **Changes the playback point by dragging the key.**  
➤ For details, refer to *Operating the time bar* on page 22.
- ⑫ **Switches the media file type.**  
➤ For details, refer to *Switching the media file type* on page 58.
- ⑬ **Switches between playback and pause.**
- ⑭ **Uses “Sound Retriever” function.**  
➤ For details, refer to *Setting the “Sound Retriever” function* on page 126.
- ⑮ **Plays files in random order.**  
➤ For details, refer to *Playing files in random order* on page 57.
- ⑯ **Sets a repeat play range.**  
➤ For details, refer to *Setting a repeat play range* on page 57.
- ⑰ **Selects the previous folder or the next folder.** ◻

# Playing compressed audio files

## Reading the screen

Example: SD

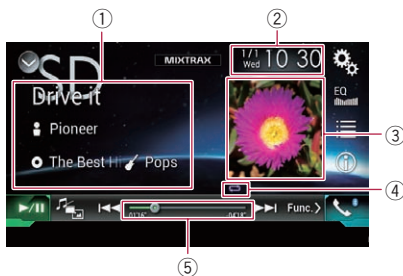

### ① Current file information

#### Music Browse mode

- **Song title**/ **File name**  
Shows the title of the song currently playing (when available). If the title of a song is not available, the file name appears.
- **Artist name**  
Shows the artist name for the song currently playing (when available). "No Name" is displayed if there is no corresponding information.
- **Album title**/ **Folder name**  
Shows the title of the album of the current file (when available). If the title of the album is not available, the folder name appears.
- **Genre**  
Shows the genre of the current file (when available). "No Genre" is displayed if there is no corresponding information.
- Nothing is displayed if the song currently playing is in a format which does not support these functions.

#### Folder Browse mode

- **File name**  
Shows the name of the file currently playing.
- **Folder name**  
Shows the name of the folder containing the file currently playing.

### ② Current time and date

### ③ Album artwork

Album art of the current song is displayed if it is available.

### ④ Playback condition indicator

Indicates the current playback condition.

#### Playing files in random order

Indicator	Meaning
	Does not play files in random order.
	Plays all files within the repeat range in random order.

#### Setting a repeat play range (for Disc)

Indicator	Meaning
	Repeats just the current file.
	Repeats just the current folder.
	Repeats all compressed audio files.

#### Setting a repeat play range (for Music Browse mode)

Indicator	Meaning
	Repeats just the current file.
	Repeats all compressed audio files.

#### Setting a repeat play range (for Folder Browse mode)

Indicator	Meaning
	Repeats just the current file.
	Repeats just the current folder.
	Repeats all compressed audio files.

### ⑤ Play time indicator

Shows the elapsed playing time within the current file.

## Starting procedure (for Disc)

### 1 Display the AV source selection screen.

- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 20.

### 2 Insert the disc you want to play into the disc-loading slot.

The source changes and then playback will start.

- ➔ For details, refer to *Inserting and ejecting a disc* on page 15.
- ☐ If the disc is already set, touch **[Disc]** on the source list or on the AV source selection screen.
  - ➔ For details, refer to *Selecting a front source on the source list* on page 20.
  - ➔ For details, refer to *Selecting a front source on the AV source selection screen* on page 20.

### 3 Use the touch panel keys on the screen to control the disc.

- ➔ For details, refer to *Using the touch panel keys* on page 54. 

## Starting procedure (for USB/SD)

### 1 Display the AV source selection screen.

- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 20.


### 2 Insert the SD memory card into the SD card slot or plug the USB storage device into the USB connector.

- ➔ For details, refer to *Plugging in a USB storage device* on page 16.
- ➔ For details, refer to *Inserting and ejecting an SD memory card* on page 15.

### 3 Touch **[USB]** or **[SD]** on the AV source selection screen.

The image is displayed on the screen.

### 4 Use the touch panel keys on the screen to control the external storage device (USB, SD).

- ➔ For details, refer to *Using the touch panel keys* on page 54.
- ☐ Playback is performed in order of folder numbers. Folders are skipped if they contain no playable files. If there are no playable files in folder 01 (root folder), playback starts from folder 02. 

## Switching the browse mode

This product supports two types of browse modes: Folder Browse mode and Music Browse mode.

- ☐ The browse modes are available only for the external storage device (USB, SD).

### Music Browse mode

Displays a song title, artist name, album name and genre in the current file information display area on the AV operation screen. Select when you want to play music files narrowed down by a category of song title, artist name, album name or genre.

If connecting an external device (USB, SD), this product accesses the database of music files with tag information and switches to the Music Browse mode automatically.

### Folder Browse mode

Displays a folder name and file name in the current file information display area on the AV operation screen. Select when you want to search for music files in the list screen or folders on the list screen.

- ☐ You can switch between the browse modes for file search by touching the tabs on the list screen.

### ● Touch the following key repeatedly until the desired setting appears.



Switches the display between Music Browse mode and Folder Browse mode.



## Playing compressed audio files

### Selecting files from the file name list

You can find files or folders to play back using the file name or folder name list which is a list of the files or folders stored on a disc or in the external storage device (USB, SD).

#### 1 Touch the following key.



Displays the list of the files or folders stored on a disc or in the external storage device (USB, SD).

#### 2 Touch a file on the list to play back.

- Files are played back in file number order.
- Touching a folder on the list shows its contents. You can play a file on the list by touching it.

### Selecting a file from the list related to the song currently playing (link search)

You can select files to play back using the file list which is a list of the files recorded in the external storage device (USB, SD).

- This function is available for the external storage device (USB, SD) only.

#### 1 Display the Music Browse mode.

- ➔ For details, refer to *Switching the browse mode* on page 56.

#### 2 Touch the following key.



Displays the list of the files or folders stored in the external storage device (USB, SD).

#### 3 Touch the desired category to display the file list.

The list screen appears.

#### 4 Touch the item that you want to refine.

Refine the item until the desired song title or file name is displayed on the list.

- Touching **[All]** on the list includes all options in the current list. For example, if you touch **[All]** after touching **[Artists]**, you can proceed to the next screen with all artists in the list selected.
- After you select **"Artists"**, **"Albums"** or **"Genres"**, go on to touch one of the lists to start playing the first song in the selected list and display the next options.

#### 5 Touch the desired song title or file name to play back.

### Playing files in random order

All files on the disc or in the external storage device (USB, SD) can be played at random by only touching a single key.

- Touch the following key repeatedly until the desired setting appears.



Turns random play on or off.

- (default): Does not play files in random order.
- : Plays all audio files in the current repeat play range in random order.
  - If you turn random play on when the repeat play range is set to the current file, the repeat play range changes to the whole of the current disc or external storage device (USB, SD) automatically.

### Setting a repeat play range



The repeat play range can be changed by only touching a single key.

- Touch the following key repeatedly until the desired setting appears.







Changes the repeat play range.


**Music Browse mode**

-  (default): Repeats all files.
- : Repeats just the current file.

**Folder Browse mode**

-  (default): Repeats all files.
- : Repeats the current folder.
- : Repeats just the current file. 

**Press and hold the TRK button**

You can perform fast reverse or fast forward. 


**Switching the media file type**

When playing a digital media containing a mixture of various media file types you can switch between media file types to play.

**1 Touch the following key.**

Displays the pop-up menu for selecting a media file type to play on the disc or in the external storage device (USB, SD).

**2 Touch the item you want to set.**

- **Music:** Switches the media file type to music (compressed audio).
- **Video:** Switches the media file type to video.
- **CD-DA:** Switches the media file type to CD (audio data (CD-DA)).
- **Photo:** Switches the media file type to still image (JPEG data). 

**Operating with the hardware buttons****Press the TRK button**

You can skip files forward or backward.

## Playing compressed video files

You can play compressed video files stored on a disc or in an external device (USB, SD) using the built-in drive of this product. This section describes how.


➤ For details, refer to *Media compatibility chart* on page 142.

### CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, you must stop in a safe place and apply the handbrake.

## Using the touch panel keys

Example: Disc

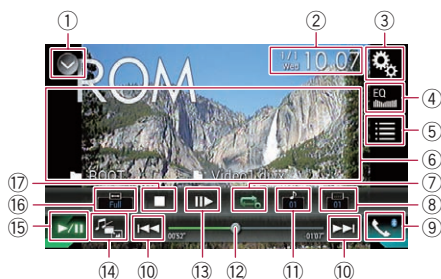

- ① **Displays the source list.**
  - For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Displays the Time and date setting screen.**
  - For details, refer to *Setting the time and date* on page 125.
- ③ **Displays the Setting menu screen.**
- ④ **Recalls equaliser curves.**
  - For details, refer to *Using the equaliser* on page 106.
- ⑤ **Selects a file from the list.**
  - For details, refer to *Selecting files from the file name list* on page 60.
- ⑥ **Hides the touch panel keys.**
  - Touching this area hides the touch panel keys.
  - ☐ Touch anywhere on the LCD screen to display the touch panel keys again.
- ⑦ **Sets a repeat play range.**
  - For details, refer to *Setting a repeat play range* on page 61.
- ⑧ **Switches the subtitle language.**
  - With DivX featuring multi-subtitle recordings, you can switch between subtitle languages during playback.
- ⑨ **Displays the Phone menu screen.**
  - For details, refer to *Displaying the phone menu* on page 28.
- ⑩ **Skips files forward or backward.**
- ⑪ **Switches the audio language.**
  - With DivX files that provide audio playback in different languages and different audio systems (Dolby Digital, DTS, etc.), you can switch between languages or audio systems during playback.
- ⑫ **Changes the playback point by dragging the key.**
  - For details, refer to *Operating the time bar* on page 22.
- ⑬ **Moves ahead one frame (frame-by-frame playback) or slows down playback speed (slow-motion playback).**
  - For details, refer to *Frame-by-frame playback* on page 61.
  - For details, refer to *Slow motion playback* on page 61.
- ⑭ **Switches the media file type.**
  - For details, refer to *Switching the media file type* on page 61.
- ⑮ **Switches between playback and pause.**
- ⑯ **Changes the wide screen mode.**
  - For details, refer to *Changing the wide screen mode* on page 126.
- ⑰ **Stops playback.** ☐

## Reading the screen

Example: Disc



### 1 Current time and date

### 2 Play time indicator


Shows the elapsed playing time within the current file.

### 3 Current file information

#### • File name

Shows the name of the file currently playing.

#### • Folder name

Shows the name of the folder containing the file currently playing. 

## Starting procedure (for Disc)

### 1 Display the AV source selection screen.

- For details of the operations, refer to *Displaying the AV operation screen* on page 20.

### 2 Insert the disc you want to play into the disc-loading slot.

The source changes and then playback will start.

- For details, refer to *Inserting and ejecting a disc* on page 15.
- ❑ If the disc is already set, touch **[Disc]** on the source list or on the AV source selection screen.
  - For details, refer to *Selecting a front source on the source list* on page 20.
  - For details, refer to *Selecting a front source on the AV source selection screen* on page 20.

### 3 Use the touch panel keys on the screen to control the disc.

- For details, refer to *Using the touch panel keys* on page 59. 

## Starting procedure (for USB/SD)

### 1 Display the AV source selection screen.

- For details of the operations, refer to *Displaying the AV operation screen* on page 20.


### 2 Insert the SD memory card into the SD card slot or plug the USB storage device into the USB connector.

- For details, refer to *Plugging in a USB storage device* on page 16.
- For details, refer to *Inserting and ejecting an SD memory card* on page 15.

### 3 Touch **[USB]** or **[SD]** on the AV source selection screen.

The image is displayed on the screen.

### 4 Use the touch panel keys on the screen to control the external storage device (USB, SD).

- For details, refer to *Using the touch panel keys* on page 59.
- ❑ Playback is performed in order of folder numbers. Folders are skipped if they contain no playable files. If there are no playable files in folder 01 (root folder), playback starts from folder 02. 

## Selecting files from the file name list

You can select files to view using the file name list which is a list of the files stored on a disc or in the external storage device (USB, SD).


### 1 Touch the following key.



Displays the list of the files or folders stored on a disc or in the external storage device (USB, SD).

## Playing compressed video files

### 2 Touch a file on the list to play back.

- ❑ Files are played back in file number order and folders are skipped if they contain no files. (If folder 01 (root folder) contains no files, playback commences with folder 02.)
- ❑ Touching a folder on the list shows its contents. You can play a file on the list by touching it.
- Touch the playback sign of the thumbnail to preview the file. 






## Setting a repeat play range

The repeat play range can be changed by only touching a single key.

### ● Touch the following key repeatedly until the desired setting appears.



Changes the repeat play range.


-  or  (default):  
Repeats all files.
- :  
Repeats just the current folder.
- :  
Repeats just the current file. 

## Frame-by-frame playback

This lets you move ahead one frame at a time during pause.

### ● Touch [II▶] during pause.

Each time you touch [II▶], you move ahead one frame.

- ❑ To return to normal playback, touch [▶/II].
- ❑ With some discs and external storage devices (USB, SD), images may be unclear during frame-by-frame playback. 

## Slow motion playback


This lets you slow down the playback speed.

### 1 Touch and hold [II▶] until an arrow icon is displayed during playback.

The arrow icon is displayed, and forward slow motion playback begins.

- ❑ To return to normal playback, touch [▶/II].

### 2 Touch [II▶] to adjust playback speed during slow motion playback.

- ❑ There is no sound during slow motion playback.
- ❑ With some discs and external storage devices (USB, SD), images may be unclear during slow motion playback.
- ❑ Reversed slow motion playback is not possible. 

## Switching the media file type


When playing a digital media containing a mixture of various media file types you can switch between media file types to play.

### 1 Touch the following key.



Displays the pop-up menu for selecting a media file type to play on the disc or in the external storage device (USB, SD).

### 2 Touch the item you want to set.


- **Music:**  
Switches the media file type to music (compressed audio).
- **Video:**  
Switches the media file type to video.
- **Photo:**  
Switches the media file type to still image (JPEG data).
- **CD-DA:**  
Switches the media file type to CD (audio data (CD-DA)). 

## Operating with the hardware buttons

### Press the TRK button

You can skip files forward or backward.


### Press and hold the TRK button

You can perform fast reverse or fast forward. 

You can view still images stored in an external device (USB, SD) using the built-in drive of this product. This section describes how.

➔ For details, refer to *Media compatibility chart* on page 142.


## Using the touch panel keys

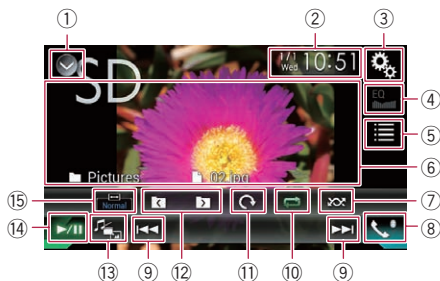

- ① **Displays the source list.**  
➔ For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Displays the Time and date setting screen.**  
➔ For details, refer to *Setting the time and date* on page 125.
- ③ **Displays the Setting menu screen.**
- ④ **Recalls equaliser curves.**  
➔ For details, refer to *Using the equaliser* on page 106.
- ⑤ **Selects a file from the list.**  
➔ For details, refer to *Selecting files from the file name list* on page 63.
- ⑥ **Hides the touch panel keys.**  
Touching this area hides the touch panel keys.  
 Touch anywhere on the LCD screen to display the touch panel keys again.
- ⑦ **Plays files in random order.**  
➔ For details, refer to *Playing files in random order* on page 63.
- ⑧ **Displays the Phone menu screen.**  
➔ For details, refer to *Displaying the phone menu* on page 28.
- ⑨ **Skips files forward or backward.**
- ⑩ **Sets a repeat play range.**  
➔ For details, refer to *Setting a repeat play range* on page 63.
- ⑪ **Rotates the displayed picture 90° clockwise.**

- ⑫ **Selects the previous folder or the next folder.**
- ⑬ **Switches the media file type.**  
➔ For details, refer to *Switching the media file type* on page 63.
- ⑭ **Switches between playback and pause.**
- ⑮ **Changes the wide screen mode.**  
➔ For details, refer to *Changing the wide screen mode* on page 126.

## Reading the screen

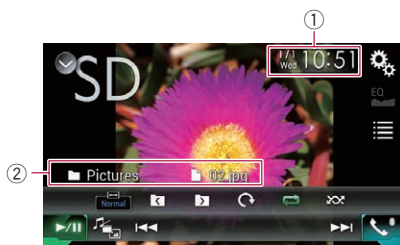

- ① **Current time and date**
- ② **Current file information**
  - **File name**  
Shows the name of the file currently playing.
  - **Folder name**  
Shows the name of the folder containing the file currently playing.

## Starting procedure

- 1 **Display the AV source selection screen.**  
➔ For details of the operations, refer to *Displaying the AV operation screen* on page 20.
- 2 **Insert the SD memory card into the SD card slot or plug the USB storage device into the USB connector.**  
➔ For details, refer to *Plugging in a USB storage device* on page 16.  
➔ For details, refer to *Inserting and ejecting an SD memory card* on page 15.  
 Playback is performed in order of folder numbers. Folders are skipped if they contain no playable files. If there are no playable files in folder 01 (root folder), playback starts from folder 02.

## Playing compressed still image files

### 3 Touch [USB] or [SD] on the AV source selection screen.

The image is displayed on the screen.

### 4 Use the touch panel keys on the screen to control the external storage device (USB, SD).

- ➔ For details, refer to *Using the touch panel keys* on page 62.

## Selecting files from the file name list

You can select files to view using the file name list which is a list of the files stored in the external storage device (USB, SD).

### 1 Touch the following key.



Displays the list of the files stored in the external storage device (USB, SD).

### 2 Touch a file on the list to play back.

- Files are played back in file number order and folders are skipped if they contain no files. (If folder 01 (root folder) contains no files, playback commences with folder 02.)
- Touching a folder on the list shows its contents. You can play a file on the list by touching it.

## Playing files in random order

All files in the external storage device (USB, SD) can be played at random by only touching a single key.

### ● Touch the following key repeatedly until the desired setting appears.



Turns random play on or off.

- (default): Does not play files in random order.
- : Plays all files in the current repeat play range in random order.

- If you turn random play on when the repeat play range is set to the current file, the repeat play range changes to the whole of the current external storage device (USB, SD) automatically.

## Setting a repeat play range

The repeat play range can be changed by only touching a single key.

### ● Touch the following key repeatedly until the desired setting appears.



Changes the repeat play range.

- (default): Repeats all files.
- : Repeats the current folder.

## Switching the media file type

When playing a digital media containing a mixture of various media file types you can switch between media file types to play.

### 1 Touch the following key.



Displays the pop-up menu for selecting a media file type to play in the external storage device (USB, SD).

### 2 Touch the item you want to set.

- **Music:** Switches the media file type to music (compressed audio).
- **Video:** Switches the media file type to video.
- **Photo:** Switches the media file type to still image (JPEG data).

## Setting the slideshow interval

JPEG files can be viewed as a slideshow on this product. In this setting, the interval between each image can be set.

- ❑ This setting is available during playback of the JPEG files.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The “**Video Setup**” screen appears.

**3 Touch [Time Per Photo Slide].**

The pop-up menu appears.

**4 Touch the item you want to set.**

- **10sec** (default):  
JPEG images switch at intervals of 10 seconds.
- **5sec**:  
JPEG images switch at intervals of 5 seconds.
- **15sec**:  
JPEG images switch at intervals of 15 seconds.
- **Manual**:  
JPEG images can be switched manually. ❑

## Operating with the hardware buttons

### Press the TRK button

You can skip files forward or backward.

### Press and hold the TRK button

You can search 10 JPEG files at a time.

- ❑ If the number of files in the folder (from the file currently being played to the first or last file) is fewer than 10, the first or last file in the folder is automatically played.
- ❑ If the file currently being played is the first or last file in the folder, the search is not performed. ❑

## Using an iPod

### For iPod with a 30-pin connector users

- Depending on your iPod, there may not be any output unless you use a USB interface cable for iPod / iPhone (CD-IU201S/CD-IU201V) (sold separately). Be sure to use a USB interface cable for iPod / iPhone (CD-IU201S/CD-IU201V) (sold separately) to connect your iPod.

iPod audio and/or video sources are enabled if either of the cables is connected.

- For details of the connections, refer to the Installation Manual.

### For iPod / iPhone with a Lightning connector users

- To use iPod audio source, you must connect your iPod to this product using a USB interface cable for iPod / iPhone (CD-IU52) (sold separately).

However, functions related to iPod video files and **AppRadio Mode** are not available.

- iPod audio and/or video sources are not available when an iPod with a Lightning connector is connected to this product with a interface cable (CD-IH202) (sold separately).

- For details of the connections, refer to the Installation Manual.

When you want to play audio and/or video files on your iPod with a Lightning connector, first install **CarMediaPlayer** on your iPod with a Lightning connector and then launch **CarMediaPlayer** while in **AppRadio Mode**.

For details about the **CarMediaPlayer**, refer to the information on our website.

### **CAUTION**


For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, you must stop in a safe place and apply the handbrake.

## Using the touch panel keys (for audio)


### Playback screen (page 1)



### Playback screen (page 2)

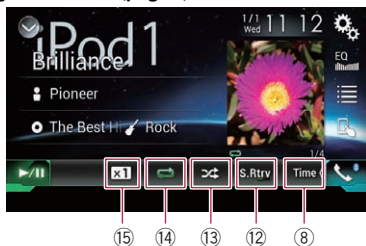


## Using the touch panel keys (for video)

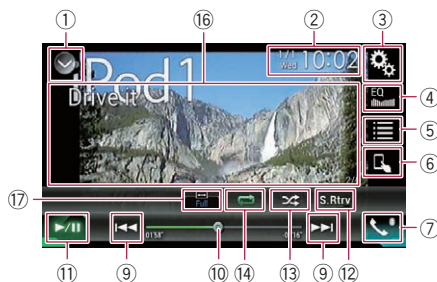

- Displays the source list.**
  - For details, refer to *Selecting a front source on the source list* on page 20.
- Displays the Time and date setting screen.**

- For details, refer to *Setting the time and date* on page 125.
- ③ **Displays the Setting menu screen.**
- ④ **Recalls equaliser curves.**
  - For details, refer to *Using the equaliser* on page 106.
- ⑤ **Selects a track from the list.**
  - For details, refer to *Selecting song or video sources from the playlist screen* on page 68.
- ⑥ **Switches the control mode to “App Mode”.**
  - For details, refer to *Using this product’s iPod function from your iPod* on page 69.
- ⑦ **Displays the Phone menu screen.**
  - For details, refer to *Displaying the phone menu* on page 28.
- ⑧ **Switches to the next or previous page of touch panel keys.**
- ⑨ **Skips files forward or backward.**
- ⑩ **Changes the playback point by dragging the key.**
  - For details, refer to *Operating the time bar* on page 22.
- ⑪ **Switches between playback and pause.**
- ⑫ **Uses “Sound Retriever” function.**
  - For details, refer to *Setting the “Sound Retriever” function* on page 126.
- ⑬ **Plays files in random order.**
  - For details, refer to *Setting the shuffle play* on page 67.
- ⑭ **Sets a repeat play range.**
  - For details, refer to *Setting a repeat play range* on page 67.
- ⑮ **Changes the audiobook speed.**
  - For details, refer to *Changing the speed of audiobook playback* on page 69.
- ⑯ **Hides the touch panel keys.**
  - Touching this area hides the touch panel keys.
  - Touch anywhere on the LCD screen to display the touch panel keys again.
- ⑰ **Changes the wide screen mode.**
  - For details, refer to *Changing the wide screen mode* on page 126.

## Reading the screen (for audio)

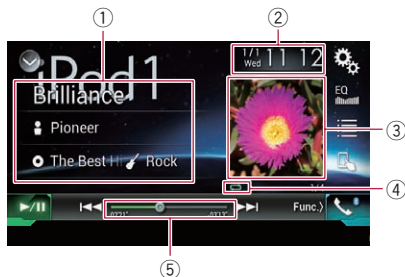

## Reading the screen (for video)



- ① **Current track information**
- **Song title**  
Shows the title of the song currently playing (when available). “No Title” is displayed if there is no corresponding information.
  - **Artist name**  
Shows the artist name for the song currently playing (when available). “No Name” is displayed if there is no corresponding information.
  - **Album title**  
Shows the title of the album of the current file (when available). “No Title” is displayed if there is no corresponding information.
  - **Genre**  
Shows the genre of the current file (when available). “No Genre” is displayed if there is no corresponding information.

## Using an iPod

### ② Current time and date



### ③ Album artwork

Album art of the current song is displayed if it is available.



### ④ Playback condition indicator

Indicates the current playback condition.


#### Setting the shuffle play

Indicator	Meaning
	Plays back songs or videos in random order within the selected list.
	Selects an album randomly, and then plays back all songs in that album in order.

#### Setting a repeat play range

Indicator	Meaning
	Repeats all songs or videos in the selected list.
	Repeats just the current song or video.

### ⑤ Play time indicator

Shows the elapsed playing time within the current file. 

## Starting procedure

When connecting an iPod to this product, you must select the method for connecting your device. Settings are required according to the connected device.

➔ For details, refer to Chapter 5.

### 1 Display the AV source selection screen.

➔ For details of the operations, refer to *Displaying the AV operation screen* on page 20.


### 2 Connect your iPod.

The source changes and then playback will start.

- If the iPod is already connected, touch **[iPod]** on the AV source selection screen.
- If connecting an iPhone or iPod touch, quit applications before connecting.

### 3 Touch **[iPod]** on the AV source selection screen.

### 4 Use the touch panel keys on the screen to control your iPod.

- ➔ For details, refer to *Using the touch panel keys (for audio)* on page 65.
- ➔ For details, refer to *Using the touch panel keys (for video)* on page 65.
- The video image of the iPod may have noise if the rear display outputs the video image. When noise is produced in the video image of the iPod, turn off the output setting of the rear display.
  - ➔ For details of the operations, refer to *Selecting the video for the rear display* on page 128. 




## Setting the shuffle play

This function shuffles songs, albums or videos and plays them in random order.

- Touch the following key repeatedly until the desired setting appears.



Turns random play on or off.

-  Plays back songs or videos in random order within the selected list.
-  Selects an album randomly, and then plays back all songs in that album in order. 




## Setting a repeat play range

The repeat play range can be changed by only touching a single key.

- Touch the following key repeatedly until the desired setting appears.



Changes the repeat play range.

-  Repeats all songs or videos in the selected list.
-  Repeats just the current song or video. 

## Selecting song or video sources from the playlist screen

You can search for the song or video you want to play from the playlist screen.

### 1 Touch the following key.



Displays the list of the category.

The "ROOT" screen appears.

### 2 Touch the following keys to switch the music or video category list.



Switches to the music category list.



Switches to the video category list.

### 3 Touch the category you want to search for.

Category lists (for music):

- Playlists
- Artists
- Albums
- Songs
- Podcasts
- Genres
- Composers
- Audiobooks

Category lists (for video):

- Video Playlists
- Movies
- Music Videos
- TV Shows
- Video Podcasts

- Category items that do not correspond to the connected iPod are not displayed.

### 4 Touch the Initial Search Bar to display the alphabet search screen.

- The Initial Search Bar is not displayed in the top category list or the song list.

### 5 Touch the first letter of the title of the song or video you are looking for.

While searching, touch panel key operation is not available.

- To refine the search with a different letter, touch [**Cancel**].

### 6 Touch the title of the list that you want to play.

Repeat this operation until you find the desired song or video.

### 7 Start playback of the selected list.

- Depending on the generation or version of the iPod, some functions may not be available.
- You can play playlists created with the **MusicSphere** application. The application is available on our website.
- Playlists that you created with the **MusicSphere** application are displayed in abbreviated form.

## Using an iPod

### Using this product's iPod function from your iPod


You can control this product's iPod function from the connected iPod if the control mode is set to **"App Mode"**. The application screen of the iPod can be displayed on this product, and the music files and video files in the iPod can be played back with this product.

- While this function is in use, the iPod will not turn off even if the ignition key is turned off. Operate the iPod to turn off the power.

#### 1 Touch the following key.



Switches the control mode.

- The control mode switches to **"App Mode"**. The icon changes to .

#### 2 Operate the connected iPod to select a video or song and play.

- The following functions are still accessible from this product even if the control mode is set to **"App Mode"**. However, the operation will depend on your applications.
  - Playing/pausing
  - Fast forwarding/reversing
  - Tracking up/down
  - Moving up/down to a chapter

#### 3 Touch the following key.







Switches the control mode, to control iPod functions from this product.



#### • Touch the following key.




Changes the playback speed.

-  (default):  
Plays back in normal speed.
- :  
Plays back faster than normal speed.
- :  
Plays back slower than normal speed. 

### Displaying lists related to the song currently playing (link search)

1 Touch the artwork to open a list of the names of songs on the album currently playing.

2 Touch the name of the song you want to play to start playing that song.

- If part of the recorded information is not displayed, a scroll key appears on the right side of list. Touch the scroll key to scroll. 


### Operating with the hardware buttons

#### Press the TRK button

You can skip songs or videos forward or backward.

When a song or video with chapters is played, you can skip a chapter forward or backward.

#### Press and hold the TRK button

You can perform fast reverse or fast forward. 

### Changing the speed of audiobook playback

The playback speed can be changed while playing an audiobook.

## Playing back music from a music app other than iPod music, as the iPod source


The app name and the song information are also displayed.


### Using the touch panel keys



- ① **Displays the source list.**  
 ➤ For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Displays the Time and date setting screen.**  
 ➤ For details, refer to *Setting the time and date* on page 125.
- ③ **Displays the Setting menu screen.**
- ④ **Recalls equaliser curves.**  
 ➤ For details, refer to *Using the equaliser* on page 106.
- ⑤ **Selects a track from the list.**  
 ➤ For details, refer to *Selecting song or video sources from the playlist screen* on page 68.
- ⑥ **Switches the control mode to “App Mode”.**  
 ➤ For details, refer to *Using this product’s iPod function from your iPod* on page 69.
- ⑦ **Displays the Phone menu screen.**  
 ➤ For details, refer to *Displaying the phone menu* on page 28.
- ⑧ **Skips files forward or backward.**
- ⑨ **Switches between playback and pause.**

### Reading the screen

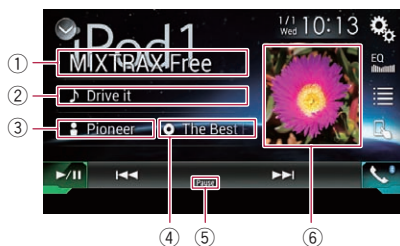

- ① **App name**  
Shows the App name of the currently playing.
- ② **Song title**  
Shows the title of the song currently playing (when available). “No Title” is displayed if there is no corresponding information.
- ③ **Artist name**  
Shows the artist name for the song currently playing (when available). “No Name” is displayed if there is no corresponding information.
- ④ **Album title**  
Shows the title of the album of the current file (when available). “No Title” is displayed if there is no corresponding information.
- ⑤ **Pause indicator**
- ⑥ **Album artwork**  
Album art of the current song is displayed if it is available. 

## Using your iPhone or smartphone applications

### **! WARNING**

**Certain uses of an iPhone or a smartphone may not be legal while driving in your jurisdiction, so you must be aware of and obey any such restrictions.**

**If in doubt as to a particular function, only perform it while the car is parked.**

**No feature should be used unless it is safe to do so under the driving conditions you are experiencing.**

## Using AppRadio Mode

You can control applications for an iPhone or a smartphone directly from the screen (**AppRadio Mode**).

In **AppRadio Mode**, you can operate applications with finger gestures such as tapping, dragging, scrolling or flicking on the screen of this product.

- In this chapter, iPhone and iPod touch will be referred to as "iPhone".
- The compatible finger gestures vary depending on the application for an iPhone or a smartphone.
- When an application not compatible with **AppRadio Mode** is started, depending on the application, you can see an image of the application on the screen of this product. However, you will not be able to operate the application.


To use **AppRadio Mode**, install the **AppRadio app** on the iPhone or smartphone beforehand to enable launching of the application on this product. For details about the **AppRadio app**, visit the following site:

<http://www.pioneer.eu/AppRadioMode>

- Be sure to read *Using app-based connected content* before you perform this operation.
  - ➔ For details, refer to *Using app-based connected content* on page 148.

- Pioneer is not liable for any issues that may arise from incorrect or flawed app-based content.
- The content and functionality of the supported applications are the responsibility of the App providers.
- In **AppRadio Mode**, functionality through the product is limited while driving, with available functions determined by the App providers.
- Availability of **AppRadio Mode** functionality is determined by the App provider, and not determined by Pioneer.
- **AppRadio Mode** allows access to applications other than those listed (subject to limitations while driving), but the extent to which content can be used is determined by the App providers.

## Using the touch panel keys (App control side bar)

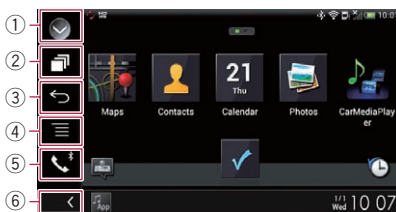

- ① **Displays the source list.**
  - ➔ For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Displays the launcher application screen.**
- ③ **Displays the previous screen.**
  - When you use the iPhone, this key is not appears.
- ④ **Displays the menu screen.**
  - When you use the iPhone, this key is not appears.
- ⑤ **Displays the Phone menu screen.**
  - ➔ For details, refer to *Displaying the phone menu* on page 28.
- ⑥ **Displays the current source.**

- ❑ In **AppRadio Mode**, App control side bar will appear.
- ❑ If you press the **HOME** button twice, the App control side bar will disappear. Press the **HOME** button twice again, and the App control side bar will appear.

## Starting procedure

When connecting an iPhone or smartphone to this product, you must select the method for connecting your device. Settings are required according to the connected device.

➡ For details, refer to Chapter 5.

The procedure varies depending on the type of device.

### For iPhone with a 30-pin connector users

#### 1 Connect your iPhone.

- ➡ For details of the connections, refer to the Installation Manual.

#### 2 Press the HOME button to display the Top menu screen.

#### 3 Touch [APPS].

A message, which notifies you that your iPhone can launch the application, appears on the screen.

A message, which asks you whether you want to launch your application, appears on your iPhone.

#### 4 Use your iPhone to launch the application.

The **AppRadio app** is launched.

#### 5 Touch [OK] on the screen of this product.

The **AppRadio Mode** screen (Application menu screen) appears.

- ❑ If you connect your device while an **AppRadio Mode**-compatible application is already running, the application operation screen will appear on this product.

#### 6 Touch the desired application icon.

The desired application is launched, and the application operation screen appears.

#### 7 Operate the application.

#### 8 Press the HOME button to go back to the Top menu screen.

### For iPhone with a Lightning connector users

#### 1 Register your iPhone and connect it to this product via Bluetooth wireless technology.

- ❑ The registered device must be selected as the priority device.
- ➡ For details, refer to *Registering your Bluetooth devices* on page 23.

#### 2 Unlock your iPhone.

#### 3 Connect your iPhone.

- ❑ The cable connection method varies depending on your device.
- ➡ For details of the connections, refer to the Installation Manual.

#### 4 Press the HOME button to display the Top menu screen.

#### 5 Touch [APPS].

The **AppRadio app** is launched, and the **AppRadio Mode** screen (Application menu screen) appears.

- ❑ If you connect your device while an **AppRadio Mode**-compatible application is already running, the application operation screen will appear on this product.

#### 6 Touch the desired application icon.

The desired application is launched, and the application operation screen appears.

#### 7 Operate the application.

#### 8 Press the HOME button to go back to the Top menu screen.

## Using your iPhone or smartphone applications

### For smartphone users

#### 1 Register your smartphone and connect it to this product via Bluetooth wireless technology.

- ❑ The registered device must be selected as the priority device.
  - ➔ For details, refer to *Registering your Bluetooth devices* on page 23.

#### 2 Unlock your smartphone.

#### 3 Connect your smartphone to this product via the separately sold App Connectivity Kit (CD-AH200).

- ❑ The cable connection method varies depending on your device.
  - ➔ For details of the connections, refer to the Installation Manual.

#### 4 Press the HOME button to display the Top menu screen.

#### 5 Touch [APPS].

The **AppRadio app** is launched, and the **AppRadio Mode** screen (Application menu screen) appears.

- ❑ If you connect your device while an **AppRadio Mode**-compatible application is already running, the application operation screen will appear on this product.

#### 6 Touch the desired application icon.

The desired application is launched, and the application operation screen appears.

#### 7 Operate the application.

#### 8 Press the HOME button to go back to the Top menu screen.

### Using the keyboard

#### CAUTION

For your safety, the keyboard functionality is only available when the vehicle is stopped and the handbrake is engaged.

- ❑ This function is only available in **AppRadio Mode** on the iPhone.

When you tap the text input area of an application for iPhone, a keyboard will be displayed on the screen. You can input the desired text directly from this product.

- ❑ The language preference for the keyboard of this product should be same as the setting on your iPhone.

If the settings for this product and the iPhone are different, you may be unable to enter characters properly.

#### 1 Set the keyboard language.


- ➔ For details of the operations, refer to *Setting the keyboard language with the application for iPhone* on page 96.

#### 2 Start up the AppRadio Mode.


- ➔ For details, refer to *Starting procedure* on page 72.

#### 3 Touch the text input area on the application operation screen.

A keyboard for entering text appears.

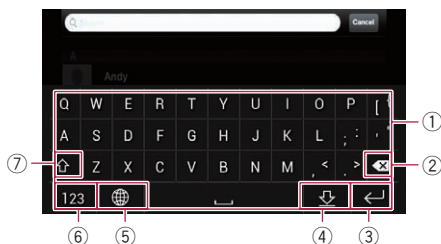

- ① Enters the characters.
- ② Deletes the entered text one letter at a time, beginning at the end of the text.
- ③ Confirms the entry and allows you to proceed to the next step.
- ④ Hides the keyboard and the text can now be entered using the keyboard of the iPhone.
- ⑤ Changes the iPhone keyboard layout.

- ❑ The iPhone keyboard layouts that can be selected by tapping  depends on the setting for Hardware Keyboard Layout set on your iPhone.

- ⑥ Switches to a keyboard offering numeric characters and symbols.
- ⑦ Converts the case of the keyboard characters.

## Adjusting the image size (For smartphone users)

Black dots may appear on the screen when using **AppRadio Mode** with an Android device connected to this product.

### CAUTION

This setting is available only when you stop your vehicle in a safe place and apply the handbrake.

- This function can be set under the following conditions:
  - When an Android device is connected to this product using the CD-AH200 (sold separately), and when **AppRadio Mode** is available after a Bluetooth connection using SPP (Serial Port Profile) has been established.
- If this setting has not been set, the setting screen automatically appears in the following cases:
  - When entering **AppRadio Mode** after a Bluetooth connection using SPP (Serial Port Profile) has been established.
  - When a Bluetooth connection using SPP (Serial Port Profile) has been established in **AppRadio Mode**.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The “**System**” screen appears.

**3 Touch [Input/Output settings].**

**4 Touch [AppRadio Video Adjustment].**

The confirmation screen appears.

**5 Touch [OK].**

**6 Touch the following keys to adjust the line to fit smartphone image size.**



Moves the line to the left.



Moves the line to the right.



Moves the line upward.



Moves the line downward.

**7 Touch [Preview].**

- Confirm that the whole image fills the screen.

**8 Touch [OK].**

- If you want to adjust the setting again from the beginning, touch [**Reset**].

## Displaying the image of your application (iPhone with 30-pin connector)

You can set an image of an application for iPhone, which is not compatible with **AppRadio Mode**, to be shown on the screen.

- Depending on the type of application, you may not be able to see the image on the screen.
- You can only control the application on the connected device.
- When you touch the display in this function, “Don't Touch” mark appears on the upper right corner of the screen.

**1 Connect your iPhone.**

- ➔ For details of the connections, refer to the Installation Manual.

## Using your iPhone or smartphone applications

**2 Press the HOME button to display the Top menu screen.**

**3 Touch [APPS].**

A message, which notifies you that your iPhone can launch the application, appears on the screen.

A message, which asks you whether you want to launch your application, appears on your iPhone.

**4 Use your iPhone to refuse to launch the application.**

**5 Touch [OK] on the screen of this product.**

The black screen appears.

**6 Launch an application on your iPhone.**

An image of the application appears on the screen.

**7 Press the HOME button to return to the Top menu screen.**

### Displaying the image of your application (iPhone with Lightning connector)

You can set an image of an application for smartphone, which is not compatible with **AppRadio Mode**, to be shown on the screen.

- Depending on the type of application, you may not be able to see the image on the screen.
- When you use this function, do not connect other devices via Bluetooth wireless technology. Be sure to disconnect your Bluetooth device before using this function.
- You can only control the application on the connected device.
- When you touch the display in this function, "Don't Touch" mark appears on the upper right corner of the screen.

**1 Connect your iPhone.**

- The cable connection method varies depending on your device.
- For details of the connections, refer to the Installation Manual.

**2 Press the HOME button to display the Top menu screen.**

**3 Touch [APPS].**

The image in your iPhone appears on the screen.

**4 Launch an application on your iPhone.**

An image of the application appears on the screen.

**5 Press the HOME button to return to the Top menu screen.**

### Displaying the image of your application (smartphone)

You can set an image of an application for smartphone, which is not compatible with **AppRadio Mode**, to be shown on the screen.

- Compatibility with all smartphones is not guaranteed.
- When you use this function, do not connect other devices via Bluetooth wireless technology. Be sure to disconnect your Bluetooth device before using this function.
- You can only control the application on the connected device.
- When you touch the display in this function, "Don't Touch" mark appears on the upper right corner of the screen.

**1 Connect your smartphone to this product via the separately sold App Connectivity Kit (CD-AH200).**

- The cable connection method varies depending on your device.
- For details of the connections, refer to the Installation Manual.

## Using your iPhone or smartphone applications

**2 Press the HOME button to display the Top menu screen.**

**3 Touch [APPS].**

The image in your smartphone appears on the screen.

**4 Launch an application on your smartphone.**

An image of the application appears on the screen.

**5 Press the HOME button to return to the Top menu screen.** 

Depending on the type of **MirrorLink** device, this key is not appears.

**④ Displays the menu screen.**

Depending on the type of **MirrorLink** device, this key is not appears.

**⑤ Displays the Phone menu screen.**

➔ For details, refer to *Displaying the phone menu* on page 28.

**⑥ Displays the current source.**

In **MirrorLink** mode, App control side bar will appear.


If you press the **HOME** button twice, the App control side bar will disappear. Press the **HOME** button twice again, and the App control side bar will appear.

## Using MirrorLink

When you connect a **MirrorLink** device with compatible applications installed, you can control the applications for the mobile device directly from this product (**MirrorLink** mode). You can view and operate the compatible applications via the display with multi-touch gestures like tapping, dragging, scrolling, and flicking.

Multi-touch gestures may be disabled depending on the **MirrorLink** device model that is connected.

## Using the touch panel keys (App control side bar)

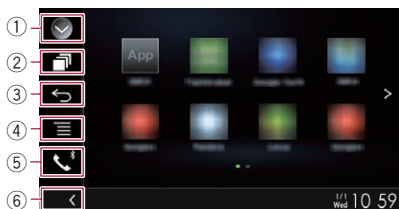

**① Displays the source list.**

➔ For details, refer to *Selecting a front source on the source list* on page 20.

**② Displays the launcher application screen.**

**③ Displays the previous screen.**

## Starting procedure

When connecting a **MirrorLink** device to this product, you must select the method for connecting your device. Settings are required according to the connected device.

➔ For details, refer to Chapter 5.

**1 Unlock your MirrorLink device.**

**2 Connect your MirrorLink device to this product via the separately sold USB interface cable for use with MirrorLink devices (CD-MU200).**

The cable connection method varies depending on your device.

➔ For details of the connections, refer to the Installation Manual.

**3 Press the HOME button to display the Top menu screen.**

**4 Touch [APPS].**

If the launcher application is installed in the **MirrorLink** device, the application launches. If not, the Application menu screen will appear.

**5 Touch the desired application icon.**

The desired application is launched, and the application operation screen appears.

## Using your iPhone or smartphone applications

- ❑ Some applications may not launch depending on the state of the connected device. If it does not launch, launch the application according to the application startup message.

### 6 Operate the application.

### 7 Press the HOME button to go back to the Top menu screen.


## Using the audio mix function

You can output audio mixing AV source and an application for iPhone or smartphone when the **AppRadio Mode** or **MirrorLink** mode is used.


### 1 Start up the AppRadio Mode or MirrorLink mode.

### 2 Press the VOL (+/-) button.

The audio mix menu will be displayed on the screen.

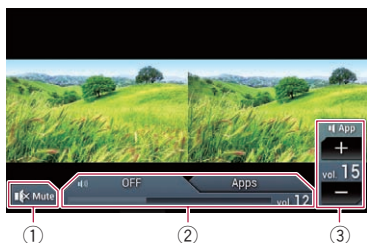

- ① Touch to mute. Touch again to unmute.
- ② Sets whether to switch the sound mix function on or off.
  - Left tab: The audio mix function is enabled (mix on). The App volume is displayed. If you touch the App volume, the volume keys will be displayed.
  - Right tab: The audio mix function is disabled (mix off).
- ③ Adjusts the application audio volume. Each touch of [+ ] or [- ] increases or decreases the volume level.

- ❑ The AV operation screen and the Application screen can be switched by pressing the **MODE** button.
- ❑ The right tab is not displayed on the AV operation screen.
- ❑ You cannot adjust the volume of the main sound on the screen. Press the **VOL (+/-)** button to adjust the volume of the main sound.
- ❑ The audio mix menu is displayed for four seconds. If the screen disappears, press the **VOL (+/-)** button again. The screen reappears. 

## ⚠ WARNING

**Certain uses of an iPhone or a smartphone may not be legal while driving in your jurisdiction, so you must be aware of and obey any such restrictions.**

**If in doubt as to a particular function, only perform it while the car is parked.**

**No feature should be used unless it is safe to do so under the driving conditions you are experiencing.**

When you connect an iPhone or a smartphone with the Aha Radio installed, you can control, view, and/or listen to Aha Radio content from this product.

- ❑ In this chapter, iPhone and iPod touch will be referred to as "iPhone".
- ❑ For details concerning operations, refer to the Help and Tips section within the Aha Radio application.
- ❑ Aha Radio stations may require initial setup or sign in before the station can be accessed.
- ❑ Be sure to read *Using app-based connected content* before you perform this operation.
  - ➔ For details, refer to *Using app-based connected content* on page 148.

### Notes:

- Certain functionality of the Aha Radio service may not be available when accessing the service through this product, including, but not limited to, creating new Aha stations, deleting Aha stations, recording 'shouts' by voice, adjusting Aha Radio App settings, logging into Facebook, creating a Facebook account, logging into Twitter, or creating a Twitter account.
- Aha Radio is a service not affiliated with Pioneer. More information is available at <http://www.aharadio.com/>.
- A specific version of the Aha Radio application must be installed on your iPhone or smartphone to enjoy Aha Radio content on this product.

Because the application for the iPhone or smartphone is not provided by Pioneer, the re-

quired version of the application may not yet be available at the time of purchase of this product.

Availability, version and update information can be found at

<http://www.pioneer.eu/aharadio>











## Using the touch panel keys



- ① **Displays the source list.**
  - ➔ For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Displays the Time and date setting screen.**
  - ➔ For details, refer to *Setting the time and date* on page 125.
- ③ **Displays the Setting menu screen.**
- ④ **Recalls equaliser curves.**
  - ➔ For details, refer to *Using the equaliser* on page 106.
- ⑤ **Selects an Aha Radio station from the list.**


Touching this key displays the list of the available Aha Radio stations. Touch the desired Aha Radio station to change Aha Radio sources.
- ⑥ **Displays the Phone menu screen.**
  - ➔ For details, refer to *Displaying the phone menu* on page 28.
- ⑦ **Performs additional functions of each station or content currently playing.**
  - ❑ The icons displayed vary depending on each station or content.

# Using Aha Radio

Indicator	Meaning
	Touching the key discloses the current car location through Aha Radio.
	Touching the key retweets the selected tweets with your Twitter account.
	Touching the key performs fast reverse of the current content for 30 seconds.
	Touching the key "dislikes" the current content. <input type="checkbox"/> Depending on the content, touching  or  cancels "dislikes".
	Touching the key "likes" the current content. <input type="checkbox"/> Depending on the content, touching  or  cancels "likes".
	Touching the key lets you make a call to a phone number registered in the current content using the hands-free function.

- ⑧ Switches between playback and pause.

## Reading the screen

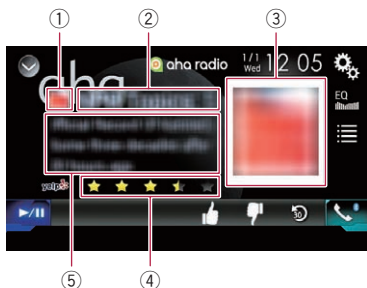

- ① **Station mark**  
 ② **Station name**  
 Shows the name of the Aha Radio station to which this product is currently tuned.  
 ③ **Content image**

Displays an image of the current content if one is available.

- ④ **Rating information**  
 Shows the rated value of the current content displayed (only when and where applicable).
- ⑤ **Current station information**  
 Shows which source has been selected. Shows information on the content currently being played.  
 "-----" is displayed if there is no corresponding information.

## Starting procedure

When connecting an iPhone or smartphone to this product, you must select the method for connecting your device. Settings are required according to the connected device.

- ➔ For details, refer to Chapter 5.

## For iPhone with a 30-pin connector users

- 1 **Unlock your iPhone.**
- 2 **Connect your iPhone.**
  - Connect via USB or Bluetooth.
    - ➔ For details of the Bluetooth connection, refer to *Registering your Bluetooth devices* on page 23.
- 3 **Display the AV source selection screen.**
  - ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 20.
- 4 **Touch [aha] on the AV source selection screen.**
- 5 **Use the touch panel keys on the screen to control Aha Radio.**
  - ➔ For details, refer to *Using the touch panel keys* on page 78.

## For iPhone with a Lightning connector users

### 1 Unlock your iPhone.

### 2 Connect your iPhone.

- ❑ Connect via USB, Bluetooth, or HDMI and Bluetooth.
  - ➔ For details of the Bluetooth connection, refer to *Registering your Bluetooth devices* on page 23.
- ❑ The cable connection method varies depending on your device.
  - ➔ For details of the connections, refer to the Installation Manual.

### 3 Display the AV source selection screen.

- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 20.

### 4 Touch [aha] on the AV source selection screen.

When you touch [aha], this product will start establishing a Bluetooth connection. After the connection is successfully established, the touch panel key on the “aha radio” screen is activated.

### 5 Use the touch panel keys on the screen to control Aha Radio.

- ➔ For details, refer to *Using the touch panel keys* on page 78.

## For smartphone users

### 1 Unlock your smartphone.

### 2 Connect your smartphone.

- ❑ Connect via USB, Bluetooth, or HDMI and Bluetooth.
  - ➔ For details of the Bluetooth connection, refer to *Registering your Bluetooth devices* on page 23.
- ❑ The cable connection method varies depending on your device.
  - ➔ For details of the connections, refer to the Installation Manual.


### 3 Display the AV source selection screen.

- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 20.

### 4 Touch [aha] on the AV source selection screen.


When you touch [aha], this product will start establishing a Bluetooth connection. After the connection is successfully established, the touch panel key on the “aha radio” screen is activated.

### 5 Use the touch panel keys on the screen to control Aha Radio.

- ➔ For details, refer to *Using the touch panel keys* on page 78. 

## Operating with the hardware buttons

### Press the TRK button

You can skip contents forward or backward. 

## Using a Bluetooth audio player

You can control a Bluetooth audio player.


- ❑ Before using the Bluetooth audio player, you must register and connect the device to this product.
  - ➔ For details, refer to *Registering your Bluetooth devices* on page 23.
- ❑ Operations may vary depending on the Bluetooth audio player.
- ❑ Depending on the Bluetooth audio player connected to this product, the available operations with this product may be limited to the following two levels:
  - A2DP (Advanced Audio Distribution Profile): Only playing back songs on your audio player is possible.
  - A2DP and AVRCP (Audio/Video Remote Control Profile): Playing back, pausing, selecting songs, etc., are possible.
- ❑ Since a number of Bluetooth audio players are available on the market, operations with your Bluetooth audio player using this product vary considerably in range. Please refer to the instruction manual that came with your Bluetooth audio player as well as this manual while operating your player on this product.
- ❑ While you are listening to songs on your Bluetooth audio player, please refrain from operating your mobile phone as much as possible. If you try operating your mobile phone, the signal may cause noise for song playback.
- ❑ Even if you switch to another source while listening to a song on your Bluetooth audio player, song playback may continue.
- ❑ Depending on the Bluetooth audio player you connected to this product, operations on this product to control the player may differ from those explained in this manual.
- ❑ When you are talking on a mobile phone connected to this product via Bluetooth wireless technology, song playback from your Bluetooth audio player connected to this product may be paused.

## Using the touch panel keys

### Playback screen (page 1)



### Playback screen (page 2)

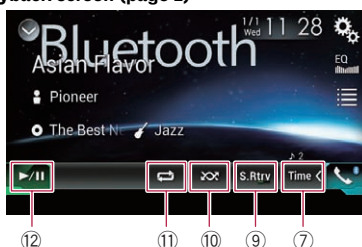


- ① **Displays the source list.**
  - ➔ For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Displays the Time and date setting screen.**
  - ➔ For details, refer to *Setting the time and date* on page 125.
- ③ **Displays the Setting menu screen.**
- ④ **Recalls equaliser curves.**
  - ➔ For details, refer to *Using the equaliser* on page 106.
- ⑤ **Selects a file from the list.**
  - ➔ For details, refer to *Selecting files from the file name list* on page 83.
- ⑥ **Displays the Phone menu screen.**
  - ➔ For details, refer to *Displaying the phone menu* on page 28.
- ⑦ **Switches to the next or previous page of touch panel keys.**
- ⑧ **Skips files forward or backward.**
- ⑨ **Uses “Sound Retriever” function.**
  - ➔ For details, refer to *Setting the “Sound Retriever” function* on page 126.

- ⑩ **Plays files in random order.**
  - For details, refer to *Playing files in random order* on page 83.
- ⑪ **Sets a repeat play range.**
  - For details, refer to *Setting a repeat play range* on page 83.
- ⑫ **Switches between playback and pause.**

- In the following cases, file information will only be displayed after a file starts or resumes playing:
  - You connect a Bluetooth audio player compatible with AVRCP1.3, and operate the player to start playing.
  - You select another file when playback is paused.

## Reading the screen

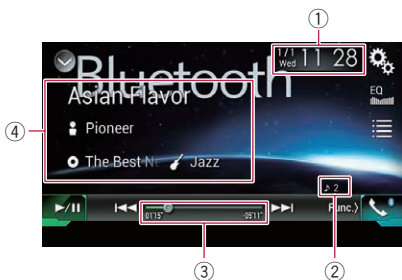

- ① **Current time and date**
- ② **File number indicator**
  - Shows the file number currently playing (when available).
- ③ **Play time indicator**
  - Shows the elapsed playing time within the current file (when available).
- ④ **Current file information**
  - If the connected Bluetooth audio player features AVRCP 1.3, the following file information will be displayed.
    - **Track title**  
Shows the title of the track currently playing (when available).
    - **Artist name**  
Shows the name of the artist for the track currently playing (when available).
    - **Album title**  
Shows the title of the album of the current file (when available).
    - **Genre**  
Shows the genre of the current file (when available).

## Starting procedure

### 1 Pull out the connecting cable for using AppRadio Mode.

- You cannot use Bluetooth audio player when the connecting cable for using **AppRadio Mode** is connected.

### 2 Press the HOME button to display the Top menu screen.

### 3 Touch the following keys in the following order.



The “**System**” screen appears.

### 4 Touch [AV Source Settings].

### 5 Confirm that “Bluetooth Audio” is turned on.

- The default setting is “**On**”.

### 6 Display the AV source selection screen.

- For details of the operations, refer to *Displaying the AV operation screen* on page 20.

### 7 Touch [Bluetooth Audio] on the AV source selection screen.

The “**Bluetooth Audio**” screen appears.

### 8 Use the touch panel keys on the screen to control the Bluetooth audio player.

- For details, refer to *Using the touch panel keys* on page 81.

## Using a Bluetooth audio player

### Selecting files from the file name list

The file name list lets you see the list of track titles for the Bluetooth audio player and lets you select one of them to play back.

- ❑ This function is only available when the connected Bluetooth audio player supports AVRCP 1.4.

#### 1 Touch the following key.



Displays the file name list.

#### 2 Touch a file on the list to play back.

- ❑ Touching a folder on the list shows its contents. You can play a file on the list by touching it. ❑

### Playing files in random order

All of the files within the repeat play range can be played at random by only touching a single key.

- ❑ This function is only available when the connected Bluetooth audio player supports AVRCP 1.3.

#### ● Touch the following key repeatedly until the desired setting appears.



Turns random play on or off.



### Setting a repeat play range

The repeat play range can be changed by only touching a single key.

- ❑ This function is only available when the connected Bluetooth audio player supports AVRCP 1.3.

#### ● Touch the following key repeatedly until the desired setting appears.



Changes the repeat play range between the current file and all audio files in the Bluetooth audio player.



### Operating with the hardware buttons

#### Press the TRK button

You can skip files forward or backward.

#### Press and hold the TRK button

You can perform fast reverse or fast forward. ❑

## Using an HDMI source


You can display the video image output by the device connected to this product. This section describes operations for an HDMI source.

- ❑ A High Speed HDMI® Cable (sold separately) is required for connection.
  - ➔ For details of the connection method, refer to the Installation Manual.

### ⚠ CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, you must stop in a safe place and apply the handbrake.

## Using the touch panel keys

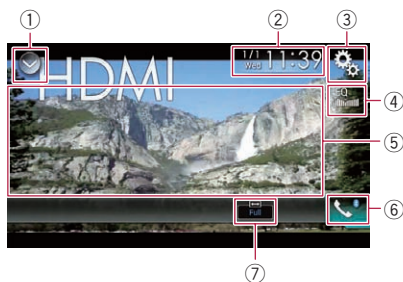

- ① **Displays the source list.**
  - ➔ For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Displays the Time and date setting screen.**
  - ➔ For details, refer to *Setting the time and date* on page 125.
- ③ **Displays the Setting menu screen.**
- ④ **Recalls equaliser curves.**
  - ➔ For details, refer to *Using the equaliser* on page 106.
- ⑤ **Hides the touch panel keys.**
  - Touching this area hides the touch panel keys.
    - ❑ Touch anywhere on the LCD screen to display the touch panel keys again.
- ⑥ **Displays the Phone menu screen.**
  - ➔ For details, refer to *Displaying the phone menu* on page 28.

- ⑦ **Changes the wide screen mode.**
  - ➔ For details, refer to *Changing the wide screen mode* on page 126. ❑

## Reading the screen



- ① **Current time and date** ❑

## Starting procedure

- 1 **Display the AV source selection screen.**
  - ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 20.
- 2 **Touch [HDMI] on the AV source selection screen.**

The image is displayed on the screen.
- 3 **Use the touch panel keys on the screen to control the external unit.**
  - ➔ For details, refer to *Using the touch panel keys* on page 84. ❑

## Using an AUX source


You can display the video image output by the device connected to this product. This section describes operations for an AUX source.

- ❑ A Mini-jack AV cable (CD-RM10) (sold separately) is required for connection.
  - ➔ For details of the connection method, refer to the Installation Manual.

### CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, you must stop in a safe place and apply the handbrake.

## Using the touch panel keys

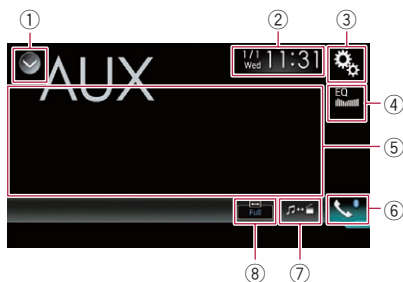

- ① **Displays the source list.**
  - ➔ For details, refer to *Selecting a front source on the source list* on page 20.
- ② **Displays the Time and date setting screen.**
  - ➔ For details, refer to *Setting the time and date* on page 125.
- ③ **Displays the Setting menu screen.**
- ④ **Recalls equaliser curves.**
  - ➔ For details, refer to *Using the equaliser* on page 106.
- ⑤ **Hides the touch panel keys.**
  - Touching this area hides the touch panel keys.
    - ❑ Touch anywhere on the LCD screen to display the touch panel keys again.
- ⑥ **Displays the Phone menu screen.**
  - ➔ For details, refer to *Displaying the phone menu* on page 28.

- ⑦ **Switches the operation screen.**
  - ➔ For details, refer to *Switching the operation screen* on page 86.
- ⑧ **Changes the wide screen mode.**
  - ➔ For details, refer to *Changing the wide screen mode* on page 126.

## Reading the screen



- ① **Current time and date**

## Starting procedure

You can display the video image output by the device connected to video input.

- 1 **Press the HOME button to display the Top menu screen.**
- 2 **Touch the following keys in the following order.**



The "System" screen appears.

- 3 **Touch [Input/Output settings].**
- 4 **Confirm that "AUX Input" is turned on.**
  - ❑ The default setting is "On".
- 5 **Display the AV source selection screen.**
  - ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 20.

## 6 Touch [AUX] on the AV source selection screen.

The image is displayed on the screen.

## 7 Use the touch panel keys on the screen to control the external unit.

- ➔ For details, refer to *Using the touch panel keys* on page 85.

## Setting the video signal

When you connect this product to an AUX equipment, select the suitable video signal setting.

- You can operate this function only for the video signal input into the AUX input.

### 1 Press the HOME button to display the Top menu screen.

### 2 Touch the following keys in the following order.



The “**Video Setup**” screen appears.

### 3 Touch [Video Signal Setting].

### 4 Touch [AUX].

The pop-up menu appears.

### 5 Touch the item you want to set.

- **Auto** (default):  
Adjusts the video signal setting automatically.
- **PAL**:  
Sets the video signal to PAL.
- **NTSC**:  
Sets the video signal to NTSC.
- **PAL-M**:  
Sets the video signal to PAL-M.
- **PAL-N**:  
Sets the video signal to PAL-N.
- **SECAM**:  
Sets the video signal to SECAM.

## Switching the operation screen

You can switch between the screen to operate music files and that to operate video files.

- This touch panel key is only available when there are both audio and video files on the auxiliary equipment.

### ● Touch the following key.



Switches between the screen to operate video files and that to operate music files.



## Using AV input


You can display the video image output by the device connected to this product.

- For details of the connection method, refer to the Installation Manual.

### CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, you must stop in a safe place and apply the handbrake.

## Using the touch panel keys

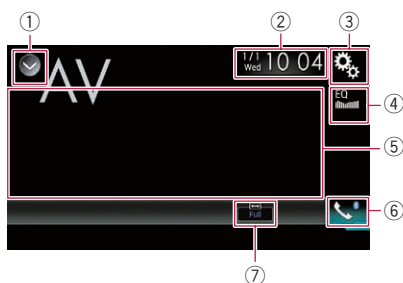

- Displays the source list.**
  - For details, refer to *Selecting a front source on the source list* on page 20.
- Displays the Time and date setting screen.**
  - For details, refer to *Setting the time and date* on page 125.
- Displays the Setting menu screen.**
- Recalls equaliser curves.**
  - For details, refer to *Using the equaliser* on page 106.
- Hides the touch panel keys.**
  - Touching this area hides the touch panel keys.
  - ☐ Touch anywhere on the LCD screen to display the touch panel keys again.
- Displays the Phone menu screen.**
  - For details, refer to *Displaying the phone menu* on page 28.
- Changes the wide screen mode.**
  - For details, refer to *Changing the wide screen mode* on page 126. ☐

## Reading the screen



- Current time and date** ☐

## Starting procedure

You can display the video image output by the device connected to video input.

- Press the HOME button to display the Top menu screen.**
- Touch the following keys in the following order.**



The “System” screen appears.

- Touch [Input/Output settings].**
- Touch [AV Input] repeatedly, set to “On”.**
- Display the AV source selection screen.**
  - For details of the operations, refer to *Displaying the AV operation screen* on page 20.
- Touch [AV] on the AV source selection screen.**
  - The image is displayed on the screen.
- Use the touch panel keys on the screen to control the external unit.**
  - For details, refer to *Using the touch panel keys* on page 87. ☐

## Setting the video signal

When you connect this product to an AV equipment, select the suitable video signal setting.

- ❑ You can operate this function only for the video signal input into the AV input.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The “**Video Setup**” screen appears.

**3 Touch [Video Signal Setting].**

**4 Touch [AV].**

The pop-up menu appears.

**5 Touch the item you want to set.**

- **Auto** (default):  
Adjusts the video signal setting automatically.
- **PAL**:  
Sets the video signal to PAL.
- **NTSC**:  
Sets the video signal to NTSC.
- **PAL-M**:  
Sets the video signal to PAL-M.
- **PAL-N**:  
Sets the video signal to PAL-N.
- **SECAM**:  
Sets the video signal to SECAM.

## Using MIXTRAX


MIXTRAX is original technology for creating non-stop mixes of selections from your audio library, complete with DJ effects that make them sound as if a DJ is right there with you playing the music.

### MIXTRAX operation


You can enjoy your music files by installing the MIXTRAX software to your computer and using the software to transfer the files to external storage device (USB, SD).

The MIXTRAX software can be downloaded from the website below.


<http://www.mixtraxnet.com>

For details on how to use the MIXTRAX software, refer to the online manual. 

### Touch panel keys

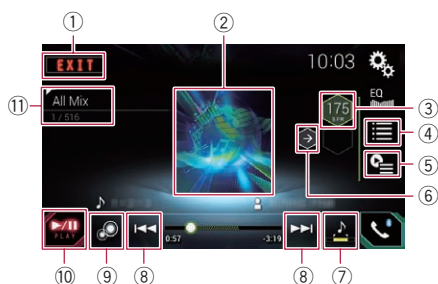

- ① Exits the MIXTRAX screen.
- ② Displays the LinkGate screen.  
Touch the desired item. Songs related to the selected item are played.
- ③ Specifies the BPM.  
The original BPM is not displayed during playback.
- ④ Displays the item selection screen.  
➔ For details of the operations, refer to *Selecting an item to play songs* on page 89.
- ⑤ Displays the playback list screen.  
➔ For details of the operations, refer to *Selecting songs not to be played* on page 90.

- ⑥ Sets to the original BPM (Beats Per Minute).
- ⑦ Specifies the playback portion.  
➔ For details of the operations, refer to *Specifying the playback portion* on page 90.
- ⑧ Touch to select a track.  
Touch and hold to fast forward or rewind.
- ⑨ Turns on or off the MIXTRAX original visual display.
- ⑩ Pauses and starts playback.
- ⑪ Displays the item selected on the LinkGate screen or item selection screen. 

### Selecting an item to play songs

You can specify an item to play songs related to it.

#### 1 Touch the following key.



Displays the item selection screen.

#### 2 Touch the following keys to select the item.



Displays the MIX pattern list.




Displays the tag list.



Displays the file list.

#### 3 Select an item in the list.

Songs related to the selected item are played. 

## Selecting songs not to be played

You can select items or songs not to be played.

### 1 Touch the following key.



Displays the playback list screen.

### 2 Touch the following key.



Displays the "Playback not allowed" screen.

### 3 Touch [Songs], [Artists] or [Albums].

### 4 Touch the box on the left of the item or song that you do not want to play.

An icon is displayed. Items displayed with the icon will not be played.

- If you touch [Unselect All], all the selections are cancelled.
- If you touch [Select All], all the items are selected.

## Specifying the playback portion

You can specify the playback portion.

### ● Touch the following key repeatedly until the desired setting appears.



Changes the playback portion.

- (default):  
Plays back a middle portion.
- :  
Plays back a long portion.
- :  
Plays back a short portion.

- The most suitable sound effect is automatically applied when switching to the next song.

## Setting the flash pattern

The flashing colour changes with the changes in the sound and bass levels.

### 1 Press the HOME button to display the Top menu screen.

### 2 Touch the following keys in the following order.



The "System" screen appears.

### 3 Touch [MIXTRAX Settings].

### 4 Touch [Flash Pattern] repeatedly until the desired setting appears.

- **Sound1** (default) to **Sound6**:  
The flash pattern changes according to the sound level. Select a desired mode.
- **L-Pass1** to **L-Pass6**:  
The flash pattern changes according to the bass level. Select a desired mode.
- **Random1**:  
The flash pattern changes randomly according to the sound level mode and low pass mode.
- **Random2**:  
The flash pattern changes randomly according to the sound level mode.
- **Random3**:  
The flash pattern changes randomly according to the low pass mode.
- **Off**:  
The flash pattern does not flash.

## System settings

### Setting the FM tuning step

Depending on the region, the tuning step can be changed. The FM tuning step can be switched between 100 kHz and 50 kHz.

- ☐ This setting is available when the selected source is "OFF".

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "System" screen appears.

- 3 Touch [AV Source Settings].
- 4 Touch [Radio settings].
- 5 Touch [FM Step] repeatedly until the desired setting appears.
  - 100kHz (default):  
Switches to 100 kHz.
  - 50kHz:  
Switches to 50 kHz. ☐

### Activating the Bluetooth audio source

You need to activate the Bluetooth audio source in order to use a Bluetooth audio player.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "System" screen appears.

- 3 Touch [AV Source Settings].
- 4 Touch [Bluetooth Audio] repeatedly until the desired setting appears.
  - On (default):  
Activates the Bluetooth audio source.
  - Off:  
Deactivates the Bluetooth audio source. ☐

### Setting the ever scroll

When "Ever Scroll" is set to "On", recorded text information scrolls continuously in the display. Set to "Off" if you prefer the information to scroll just once.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "System" screen appears.

- 3 Touch [Ever Scroll] repeatedly until the desired setting appears.
  - Off (default):  
Turns the ever scroll setting off.
  - On:  
Turns the ever scroll setting on. ☐

### Setting AV input

You can use external video equipment such as portable players connected to this product with this setting.

- 1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “System” screen appears.

3 Touch [Input/Output settings].

4 Touch [AV Input] repeatedly until the desired setting appears.

- **Off** (default):  
Deactivates the AV source.
- **On**:  
Displays the video image output by the connected external device.

## Setting the rear view camera

The following two functions are available. A separately sold rear view camera (e.g. ND-BC6) is required for utilising the rear view camera function. (For details, consult your dealer.)

### Rear view camera

This product features a function that automatically switches to the full-screen image of the rear view camera installed on your vehicle. When the gearstick is in the REVERSE (R) position, the screen automatically switches to full-screen rear view camera image.

- If the gearstick is aligned to the REVERSE (R) position immediately after the system of this product is started up, only the camera image will be displayed and the parking assist guidelines and the message, “**The video may appear reversed**” will not be displayed. The parking assist guidelines and the message will be displayed on the camera image after a little while. Be sure to check the conditions around the vehicle even before the guidelines and the message are displayed.

### Camera for Camera View mode

**Camera View** can be displayed at all times (e.g. when monitoring an attached trailer, etc.). Please note that with this setting, the camera image is not resized to fit, and that a portion of what is seen by the camera is not viewable.

### CAUTION

Pioneer recommends the use of a camera which outputs mirror reversed images, otherwise the screen image may appear reversed.

- Immediately verify whether the display changes to a rear view camera image when the gearstick is moved to REVERSE (R) from another position.
- When the screen changes to full-screen rear view camera image during normal driving, switch to the opposite setting in “**Camera Polarity**”.

## Setting rear view camera activation

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “System” screen appears.

3 Touch [Camera settings].

4 Touch [Back Camera Input] repeatedly until the desired setting appears.

- **Off** (default):  
Turns the back camera input setting off.
- **On**:  
Turns the back camera input setting on.

## System settings

### Setting the polarity of the rear view camera

- ❑ This function is available when “**Back Camera Input**” is “**On**”.
- ➔ For details, refer to *Setting rear view camera activation* on page 92.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The “**System**” screen appears.

- 3 Touch [**Camera settings**].
- 4 Touch [**Camera Polarity**] repeatedly until the desired setting appears.

- **Battery** (default):  
When the polarity of the connected lead is positive while the gearstick is in the REVERSE (R) position.
- **Ground**:  
When the polarity of the connected lead is negative while the gearstick is in the REVERSE (R) position.

When the gearstick is moved to the REVERSE (R) position after setting the rear view camera, the rear view image appears.

### Setting the camera for Camera View mode

To display **Camera View** at all times, “**Camera View**” needs to be set to “**On**”.

- ❑ To set the rear view camera for **Camera View** mode, “**Back Camera Input**” needs to be set to “**On**”.
- ➔ For details, refer to *Setting rear view camera activation* on page 92.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The “**System**” screen appears.

- 3 Touch [**Camera settings**].
  - 4 Touch [**Camera View**] repeatedly until the desired setting appears.
    - **Off** (default):  
Turns the camera view setting off.
    - **On**:  
Turns the camera view setting on.
- If no operations are performed for seven seconds after the AV operation screen is displayed, the camera view will appear automatically.
- ❑ If you touch the screen while the camera view is displayed, the displayed image will turn off temporarily.

### Displaying the parking assist guidelines

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.




The “**System**” screen appears.

- 3 Touch [**Camera settings**].
- 4 Touch [**Parking assist guide**] repeatedly until the desired setting appears.
  - **Off** (default):  
Hides the guidelines.

- **On:**

Displays the guidelines.

When the gearstick is moved to the REVERSE (R) position after setting the rear view camera, the rear view image appears.

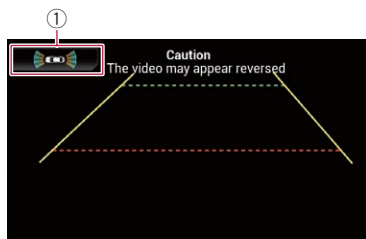

- ① Switches the display to the "Parking Assist" screen.
- ☐ If you press and hold the **MUTE** button, the rear view image disappears. ☐


## Setting guidelines on the rear view image

### ⚠ CAUTION

- When adjusting the guidelines, be sure to park the vehicle in a safe place and apply the handbrake.
- Before getting out of the car to place the markings, be sure to turn the ignition switch off (ACC OFF).
- The range projected by the rear view camera is limited. Also, the vehicle width and distance guidelines displayed on the rear view camera image may differ from the actual vehicle width and distance. (The guidelines are straight lines.)
- The image quality may deteriorate depending on the usage environment, such as at night or in dark surroundings.

#### 1 Park your vehicle in a safe place and apply the handbrake.

- 2 Using packing tape or similar, place markings approximately 25 cm from each side of the vehicle, and approximately 50 cm and 2 m from the rear bumper.

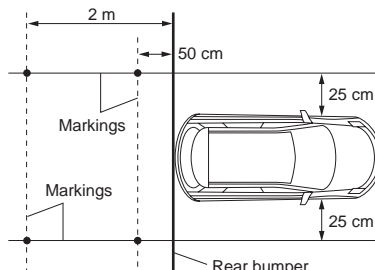

- 3 Press the HOME button to display the Top menu screen.

- 4 Touch the following keys in the following order.



The "System" screen appears.

- 5 Touch [Camera settings].
- 6 Touch [Parking assist guide adjust].
- 7 Set the guidelines by dragging the four points.
- 8 Touch the following keys to adjust the position of the point if necessary.



Moves the point to the left.



Moves the point to the right.



Moves the point upward.



Moves the point downward.

## System settings



Extends the line to the left and right from the current centre point of the distance guideline. The adjustment points on the lateral coordinates at both ends will also move.



Shortens the line from the left and right to the current centre point of the distance guideline. The adjustment points on the lateral coordinates at both ends will also move.

### Default

Resets the settings of the distance and vehicle width guidelines and adjustment points to the default.

- When a point is moved, the distance from the initial value is displayed at the bottom of the screen. □

## Setting the safe mode

For safety reasons, you can limit the functions that are available while your vehicle is in motion.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The “System” screen appears.

**3 Touch [Safe Mode] repeatedly until the desired setting appears.**

- **On** (default):  
Activates the safe mode function.
- **Off**:  
Deactivates the safe mode function. □

## Turning off the demo screen

If the demo screen appears, perform the following procedure to turn off the demo screen.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The “System” screen appears.

**3 Touch [Demo Mode] repeatedly until the desired setting appears.**

- **Off** (default):  
Hides the demo screen.
- **On**:  
Displays the demo screen.
- You can also turn off the demo screen by pressing and holding the **MUTE** button. □

## Selecting the system language

The system language can be selected.

- The language can be changed for the following:
  - The “**Audio**” screen
  - The “**System**” screen
  - The “**Video Setup**” screen
  - The “**Bluetooth**” screen
  - Language for messages

Some operations on this product are prohibited from use while driving or require careful attention when operated. In such cases, a caution message will appear on the display. You can change the language for caution messages with this setting.
- If the embedded language and the selected language setting are not the same, text information may not display properly.
- Some characters may not be displayed properly.

**1 Press the HOME button to display the Top menu screen.**

2 Touch the following keys in the following order.



The “System” screen appears.

3 Touch [System Language].

The pop-up menu appears.

4 Touch the desired language.

After the language is selected, the previous screen returns.

## Reversing the climate control status display

If the left/right display of the climate control status screen does not match that of the vehicle, the display can be reversed.

- To configure this setting, the optional Vehicle Bus adapter must be connected.
- ➔ For details of the operations, refer to *Displaying the operating status of the climate control panel* on page 123.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “System” screen appears.

3 Touch [Climate Reverse] repeatedly until the desired setting appears.

- **Off** (default):  
Does not reverse the climate control status display.
- **On**:  
Reverses the climate control status display.

## Setting the keyboard language with the application for iPhone

You can use the keyboard in **AppRadio Mode** by setting the language of the keyboard for iPhone.

- This function is only available in **AppRadio Mode** on the iPhone.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “System” screen appears.

3 Touch [Keyboard].

The pop-up menu appears.

4 Touch the desired language.

After the language is selected, the previous screen returns.

## Setting the beep sound

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “System” screen appears.

3 Touch [Beep Tone] repeatedly until the desired setting appears.

- **On** (default):  
Sounds a beep.
- **Off**:  
Does not sound a beep.

## System settings

### Adjusting the response positions of the touch panel (touch panel calibration)

If you feel that the touch panel keys on the screen deviate from the actual positions that respond to your touch, adjust the response positions of the touch panel screen.

- ❑ This setting is available only when you stop your vehicle in a safe place and apply the handbrake.
- ❑ Do not use sharp pointed tools such as a ballpoint or mechanical pen, which could damage the screen.
- ❑ Do not turn off the engine while saving the adjusted position data.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The “**System**” screen appears.

**3 Touch [Touch panel calibration].**

The touch panel adjustment screen appears.

**4 Touch two corners of the screen along the arrows, and then touch the centres of two + marks at the same time twice.**

**5 Press the HOME button.**

The adjustment results are saved.

**6 Press the HOME button once again.**

Proceed to 16-point adjustment.

- If you press and hold the **HOME** button, the adjustment is cancelled.

**7 Gently touch the centre of the + mark displayed on the screen.**

The target indicates the order.

After you touch all marks, the adjusted position data is saved.

- If you press the **HOME** button, the previous adjustment position returns.
- If you press and hold the **HOME** button, the adjustment is cancelled.

**8 Press and hold the HOME button.**

The adjustment results are saved.

### Adjusting the picture

You can adjust the picture for each source and rear view camera.

#### **CAUTION**

For safety reasons, you cannot use some of these functions while your vehicle is in motion. To enable these functions, you must stop in a safe place and apply the handbrake. Refer to Important Information for the User (a separate manual).

**1 Display the screen you wish to adjust.**

**2 Press the HOME button to display the Top menu screen.**

**3 Touch the following keys in the following order.**



The “**System**” screen appears.

**4 Touch [Picture Adjustment].**

**5 Touch any of the following keys to select the function to be adjusted.**

Picture adjustment items are displayed.

- **Brightness:**  
Adjusts the black intensity.
- **Contrast:**  
Adjusts the contrast.
- **Color:**  
Adjusts the colour saturation.
- **Hue:**

Adjusts the tone of colour (which colour is emphasised, red or green).

- **Dimmer:**

Adjusts the brightness of the display.

- **Temperature:**

Adjusts the colour temperature, resulting in a better white balance.

- You can adjust **Hue** only when the colour system is set to NTSC.

- If you touch **[Rear View]**, the mode changes to the selected camera mode. By touching **[Source]**, **[Navi]** or **[Apps]**, you can return to the selected mode.

## 6 Touch the following keys to adjust the selected item.



Decreases the level of the selected item.



Increases the level of the selected item.



Selects the adjustable previous item.



Selects the adjustable next item.

Each time you touch the key, the level of the selected item increases or decreases.

- **"Brightness"**, **"Contrast"**, **"Color"** and **"Hue"** can be adjusted from **"-24"** to **"+24"**.
- **"Dimmer"** can be adjusted from **"+1"** to **"+48"**.
- **"Temperature"** can be adjusted from **"+3"** to **"-3"**.
- The adjustments of **"Brightness"** and **"Contrast"** are stored separately when your vehicle's headlights are off (daytime) and when your vehicle's headlights are on (nighttime). These are switched automatically depending on whether the vehicle's headlights are on or off.
- The adjustment of **"Dimmer"** is stored separately when your vehicle's headlights are off (daytime) and when your vehicle's headlights are on (nighttime). **"Dimmer"** is

switched automatically only when the value of nighttime is lower than that of daytime.

- The picture adjustment may not be available with some rear view cameras.
- The setting contents can be memorised separately for the following screens and video images.
  - **DVD**, **Video CD** and **Disc**
  - **AV**
  - **USB (Video)**, **USB (JPEG)** and **Mirror-Link**
  - **SD (Video)** and **SD (JPEG)**
  - **HDMI** and **AppRadio Mode (HDMI)**
  - **MIXTRAX**, images output from the external device □

## Displaying the firmware version

1 Press the **HOME** button to display the **Top menu screen**.

2 Touch the following keys in the following order.



The **"System"** screen appears.

3 Touch **[System Information]**.

4 Touch **[Firmware Information]**.

The **"Firmware Information"** screen appears. □

## Updating firmware

### ⚠ CAUTION

- The only USB port that supports the firmware update is USB port 1.
- Never turn this product off, eject the SD memory card or disconnect the USB storage device while the firmware is being updated.

## System settings

- You can only update the firmware when the vehicle is stopped and the handbrake is engaged.

### 1 Download the firmware update files.

**2 Connect a blank (formatted) SD memory card or USB storage device to your computer, and then locate the correct update file and copy it onto the SD memory card or USB storage device.**

### 3 Turn the source off.

- ➔ For details, refer to *Turning off the AV source* on page 21.

**4 Press the HOME button to display the Top menu screen.**

**5 Touch the following keys in the following order.**



The “**System**” screen appears.

**6 Touch [System Information].**

**7 Touch [Firmware Update].**

The “**Firmware Update**” screen appears.

**8 Touch [Continue] to display the data transfer mode.**

- Follow the on-screen instructions to finish updating the firmware.
- This product will reset automatically after the firmware update is completed if the update is successful.
- When the firmware update starts, the source is turned off and the Bluetooth connection is disconnected.
- If an error message appears on the screen, touch [**Continue**] to proceed and start the recovery sequence.

## Checking the connections of leads

Check that the leads are properly connected between this product and vehicle. Also check whether they are connected in the correct positions.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The “**System**” screen appears.

**3 Touch [System Information].**

**4 Touch [Connection Status].**

The “**Connection Status**” screen appears.

- **Illumination**

When the headlights or small lamps of the vehicle are on, “**ON**” is displayed. When the small lamps of the vehicle are off, “**OFF**” is displayed. (If the orange/white lead is not connected, “**OFF**” appears.)

- **Vehicle Bus**

When the optional Vehicle Bus adapter is connected, “**OK**” is displayed. If not connected, “**NOK**” is displayed.

## Using fader/balance adjustment

You can select a fader/balance setting that provides an ideal listening environment in all occupied seats.

- This function is available when "Rear Speaker" is set to "On".

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "Audio" screen appears.

- 3 Touch [Fader/Balance].  
The "Fader/Balance" screen appears.

- 4 Touch the following keys to adjust the front/rear speaker balance.



Moves towards the front.



Moves towards the rear.

Each time you touch the keys, the front/rear speaker balance moves towards the front or rear.

- "Front25" to "Rear25" is displayed as the front/rear speaker balance moves from the front to rear.
- The default setting is "F/R0 L/R0".
- Set "Front" and "Rear" to "0" when using a dual speaker system.

- 5 Touch the following keys to adjust the left/right speaker balance.



Moves towards the left.



Moves towards the right.

Each time you touch the keys, the left/right speaker balance moves towards the left or right.

- "Left25" to "Right25" is displayed as the left/right speaker balance moves from the left to right.
- The default setting is "L/R0".
- You can also set the fader/balance by dragging the point on the displayed table.

## Using balance adjustment

You can adjust the balance between right/left sound output.

- This function is available when "Rear Speaker" is set to "Off".

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "Audio" screen appears.

- 3 Touch [Balance].  
The "Fader/Balance" screen appears.

- 4 Touch the following keys to adjust the left/right speaker balance.



Moves towards the left.



Moves towards the right.

## Audio adjustments

Each time you touch the keys, the left/right speaker balance moves towards the left or right.

- ❑ "Left25" to "Right25" is displayed as the left/right speaker balance moves from the left to right.
- ❑ The default setting is "L/R0".
- ❑ You can also set the fader/balance by dragging the point on the displayed table. ❑

## Switching sound muting/attenuation

You can automatically mute or attenuate the AV source volume and the iPhone application volume when the navigation outputs the guidance voice.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The "Audio" screen appears.

**3 Touch [Mute Level].**

The pop-up menu appears.

**4 Touch the item you want to set.**

- **ATT** (default):  
The volume becomes 1/10.
- **Mute**:  
The volume becomes 0.
- **Off**:  
The volume does not change. ❑

## Adjusting source levels

**SLA** (source level adjustment) lets you adjust the volume level of each source to prevent radical changes in volume when switching between sources.

- ❑ Settings are based on the FM tuner volume level, which remains unchanged.
- ❑ This function is not available when the FM tuner is selected as the AV source.

**1 Compare the FM tuner volume level with the level of the source you want to adjust.**

**2 Press the HOME button to display the Top menu screen.**

**3 Touch the following keys in the following order.**



The "Audio" screen appears.

**4 Touch [Source Level Adjuster].**

The "Source Level Adjuster" screen appears.

**5 Touch the following keys to adjust the source volume.**



Increases the source volume.




Decreases the source volume.

- ❑ If you directly touch the area where the cursor can be moved, the **SLA** setting will be changed to the value of the touched point.
- ❑ "+4" to "-4" is displayed as the source volume is increased or decreased.
- ❑ The default setting is "0".

The following AV sources are set to the same source level adjustment volume automatically.


	Required cable (sold separately)	Smartphone Setup		AV sources
		Device	Connection	
iPod / iPhone with a 30-pin connector	CD-IU201V	iPhone/iPod	USB	USB1 iPod1 aha
	CD-IU201S	iPhone/iPod	USB	USB1 aha iPod1 AppRadio Mode
iPod / iPhone with a Lightning connector	<ul style="list-style-type: none"> <li>• CD-IH202</li> <li>• CD-IU52</li> <li>• Lightning Digital AV Adapter</li> </ul>	iPhone/iPod	Digital AV adapter	aha AppRadio Mode HDMI
Android device	CD-AH200	Others	HDMI	aha AppRadio Mode HDMI

- ❑ When a USB storage device is connected to USB port 1 or USB port 2, the source level adjustment volume is automatically set to the same level as the USB port to which the device is connected. The source level adjustment volume that is automatically set varies depending on whether the device is connected to USB port 1 or USB port 2.
- ❑ When an iPod / iPhone with a Lightning connector is connected to USB port 1 or USB port 2 using a USB interface cable for iPod / iPhone (CD-IU52) (sold separately), the source level adjustment volume is automatically set to the same level as the USB port to which the iPod / iPhone with a Lightning connector is connected. The source level adjustment volume that is automatically set varies depending on whether the iPod / iPhone with a Lightning connector is connected to USB port 1 or USB port 2.
- ❑ When a MirrorLink device is connected to USB port 2, the source level adjustment volume is automatically set to the same level as USB port 2. 

## Audio adjustments

### Adjusting the filter

The following adjustments can be made during filter adjustments. Make the appropriate adjustments for the reproduced frequency band and characteristics of the connected speaker unit.

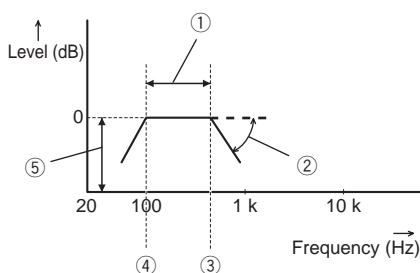

- ① Reproduced frequency band
- ② Slope adjustment
- ③ Cut-off frequency of the LPF
- ④ Cut-off frequency of the HPF
- ⑤ Level adjustment

### Adjusting the front and rear speaker output

You can set the frequency range for the sound output from the front and rear speakers.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "Audio" screen appears.

- 3 Confirm that "Rear Speaker" is set to "On".

The default setting is "On".

- 4 Touch [Cross Over].

The "Cutoff" screen appears.

- 5 Touch the following keys to select "Front" or "Rear".



Selects the adjustable previous speaker.



Selects the adjustable next speaker.

- 6 Touch [HPF] to turn on.

- 7 Drag the line graph horizontally to adjust the range of cut-off frequency from "50" Hz to "200" Hz.

The default setting is "100" Hz.

- 8 Drag the tip of the slope to adjust the range of level between "-6" dB/oct and "-18" dB/oct.

The default setting is "-12" dB/oct.

### Using the subwoofer output

This product is equipped with a subwoofer output mechanism, which can be turned on or off.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "Audio" screen appears.

- 3 Touch [Subwoofer] to set the subwoofer output "On".

The default setting is "Off".

- 4 Touch [Subwoofer].

The "Cutoff" screen appears.

## Audio adjustments

5 Touch the following keys to select “Subwoofer”.



Selects the adjustable previous speaker.



Selects the adjustable next speaker.

6 Touch [LPF] to turn on.

7 Touch the following keys to select the phase of subwoofer output.



Sets the phase of subwoofer output to normal.



Sets the phase of subwoofer output to reverse.

8 Drag the line graph horizontally to adjust the range of cut-off frequency from “50” Hz to “200” Hz.

The default setting is “100” Hz.

9 Drag the tip of the slope to adjust the range of level between “-6” dB/oct and “-18” dB/oct.

The default setting is “-18” dB/oct.

## Selecting the listening position

You can select a listening position that you want to make as the centre of sound effects.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “Audio” screen appears.

3 Touch [Listening Position].

The “Listening Position” screen appears.

4 Touch the desired position.

- **Off** (default):  
Changes the listening position setting to off.
- **Front**:  
Changes the listening position setting to front.
- **Front-L**:  
Changes the listening position setting to front left.
- **Front-R**:  
Changes the listening position setting to front right.
- **All**:  
Changes the listening position setting to all.

## Adjusting the speaker output levels finely

Fine adjustments of the speaker output level can be made by listening to audio output.

- This function is available when “**Rear Speaker**” is set to “**On**”.
- For details, refer to *Adjusting the front and rear speaker output* on page 103.
- This function is available when “**Subwoofer**” is set to “**On**”.
- For details, refer to *Using the subwoofer output* on page 103.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “Audio” screen appears.

3 Touch [Speaker Level].

The “Speaker Level” screen appears.

## Audio adjustments

### 4 Touch the following keys to select the listening position if necessary.



Selects the listening position.



- **Off:**  
Changes the listening position setting to off.
  - **Front:**  
Changes the listening position setting to front.
  - **Front-L:**  
Changes the listening position setting to front left.
  - **Front-R:**  
Changes the listening position setting to front right.
  - **All:**  
Changes the listening position setting to all.
- If you change the listening position setting, the output levels of all the speakers will change in conjunction with the setting.

### 5 Touch the following keys to adjust the speaker output level.



Decreases the speaker level.



Increases the speaker level.

- "-24" dB to "10" dB is displayed as the distance to be corrected is increased or decreased.
- **Front Left:**  
Changes the speaker level of the front left speaker.
  - **Front Right:**

Changes the speaker level of the front right speaker.

- **Rear Left:**  
Changes the speaker level of the rear left speaker.
- **Rear Right:**  
Changes the speaker level of the rear right speaker.
- **Subwoofer:**  
Changes the speaker level of the subwoofer speaker.
  - If you touch [**Apply Auto EQ**], the result of "**A-EQ&TA Measurement**" will be applied to the speaker level setting.
    - To use this function, the vehicle's acoustics must be measured in advance.

## Adjusting the time alignment

By adjusting the distance from each speaker to the listening position, time alignment is able to correct the time required for sound to reach the listening position.

- This function is available when "**Rear Speaker**" is set to "**On**".
- ➡ For details, refer to *Adjusting the front and rear speaker output* on page 103.
- This function is available when "**Subwoofer**" is set to "**On**".
- ➡ For details, refer to *Using the subwoofer output* on page 103.

### 1 Measure the distance between the head of the listener and each speaker unit.

### 2 Press the HOME button to display the Top menu screen.

### 3 Touch the following keys in the following order.



The "**Audio**" screen appears.

## Audio adjustments

### 4 Touch [Time Alignment].

The "Time Alignment" screen appears.

### 5 Touch the following keys to select the listening position if necessary.



Selects the listening position.



- **Off:**  
Changes the listening position setting to off.
  - **Front:**  
Changes the listening position setting to front.
  - **Front-L:**  
Changes the listening position setting to front left.
  - **Front-R:**  
Changes the listening position setting to front right.
  - **All:**  
Changes the listening position setting to all.
- If you change the listening position setting, the output levels of all the speakers will change in conjunction with the setting.

### 6 Touch the following keys to input the distance between the selected speaker and the listening position.



Decreases the distance between the selected speaker and the selected listening position.



Increases the distance between the selected speaker and the selected listening position.

- "0.0" cm to "500.0" cm is displayed as the distance to be corrected is increased or decreased.
- **Front Left:**

Changes the distance between the front left speaker and the selected listening position.

- **Front Right:**  
Changes the distance between the front right speaker and the selected listening position.
- **Rear Left:**  
Changes the distance between the rear left speaker and the selected listening position.
- **Rear Right:**  
Changes the distance between the rear right speaker and the selected listening position.
- **Subwoofer:**  
Changes the distance between the subwoofer speaker and the selected listening position.
  - If you touch [TA On], the time alignment is turned off mandatorily.
    - This function is available only when the listening position setting is set to "Front-L" or "Front-R".
    - If you touch [Apply Auto EQ], the result of "A-EQ&TA Measurement" will be applied to the time alignment setting.
      - To use this function, the vehicle's acoustics must be measured in advance.

## Using the equaliser

The equaliser lets you adjust equalisation to match the vehicle interior acoustic characteristics as desired.

### Recalling equaliser curves

There are seven stored equaliser curves that you can easily recall at any time. Here is a list of the equaliser curves:

#### Equaliser curve

**S.Bass** is a curve in which only low-pitched sound is boosted.

**Powerful** is a curve in which low- and high-pitched sounds are boosted.

## Audio adjustments

### Equaliser curve

**Natural** is a curve in which low- and high-pitched sounds are slightly boosted.

**Vocal** is a curve in which the midrange, which is the human vocal range, is boosted.

**Flat** is a flat curve in which nothing is boosted.

**Custom1** is an adjusted equaliser curve that you create. If you select this curve, the effect is applied to all AV sources.

**Custom2** is an adjusted equaliser curve that you create. If you select this curve, the effect is applied to all AV sources.

- The default setting is “**Powerful**”.
- When “**Flat**” is selected, no supplement or correction is made to the sound. This is useful to check the effect of the equaliser curves by switching alternatively between “**Flat**” and a set equaliser curve.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The “**Audio**” screen appears.

**3 Touch [Graphic EQ].**

The “**Graphic EQ**” screen appears.

**4 Touch the equaliser you want.**

### Customising the equaliser curves

You can adjust the currently selected equaliser curve setting as desired. Adjustments can be made with a 13-band graphic equaliser.

- If you make adjustments when a curve “**S. Bass**”, “**Powerful**”, “**Natural**”, “**Vocal**”, or “**Flat**” is selected, the equaliser curve settings will be changed to “**Custom1**” mandatorily.

- If you make adjustments when the “**Custom2**” curve is selected for example, the “**Custom2**” curve will be updated.
- “**Custom1**” and “**Custom2**” curves can be created common to all sources.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The “**Audio**” screen appears.

**3 Touch [Graphic EQ].**

The “**Graphic EQ**” screen appears.

**4 Touch one of the keys to select a curve that you want to use as the basis of customising.**

**5 Touch the frequency for which you want to adjust the level.**

- If you trail a finger across the bars of multiple equaliser bands, the equaliser curve settings will be set to the value of the touched point on each bar.

### Using the auto-adjusted equaliser

You can set the auto-adjusted equaliser to suit the vehicle’s acoustics. To use this function, the vehicle’s acoustics must be measured in advance.

➔ For details of the operations, refer to *Adjusting the equaliser curve automatically (Auto EQ)* on page 108.

- To manually adjust the equaliser curve, set “**Auto EQ&TA**” to “**Off**”.

**1 Press the HOME button to display the Top menu screen.**

2 Touch the following keys in the following order.



The “Audio” screen appears.

3 Touch [Auto EQ&TA] repeatedly until the desired setting appears.

- **Off** (default):  
Turns the Auto EQ&TA setting off.
- **On**:  
Turns the Auto EQ&TA setting on.

## Adjusting the equaliser curve automatically (Auto EQ)

By measuring the vehicle’s acoustics, the equaliser curve can be adjusted automatically to suit the vehicle interior.

### WARNING

A loud tone (noise) may be emitted from the speakers when measuring the vehicle’s acoustics. Never perform Auto EQ measurement while driving.

### CAUTION

- Thoroughly check the conditions before performing Auto EQ, as the speakers may be damaged if this is performed under the following conditions:
  - When the speakers are incorrectly connected. (For example, when a rear speaker is connected as a subwoofer output.)
  - When a speaker is connected to a power amp delivering output higher than the speaker’s maximum input power capability.
- If a microphone for acoustical measurement (sold separately) is not placed in an appropriate location, the measurement tone may become loud and measurement may take a long time, resulting in battery drainage. Be sure to

place the microphone in the specified location.

## Before operating the Auto EQ function

- Perform Auto EQ in as quiet a place as possible, with the vehicle engine and air conditioning switched off. Also, cut power to car phones or mobile phones in the vehicle, or remove them from the vehicle before performing Auto EQ. Sounds other than the measurement tone (surrounding sounds, engine sound, telephones ringing, etc.) may prevent correct measurement of the vehicle’s acoustics.
- Be sure to perform Auto EQ using the microphone for acoustical measurement (sold separately). Using another microphone may prevent measurement, or result in incorrect measurement of the vehicle’s acoustics.
- To perform Auto EQ, the front speakers must be connected.
- When this product is connected to a power amp with input level control, Auto EQ may be impossible if the power amp’s input level is set below the standard level.
- When this product is connected to a power amp with an LPF (low pass filter), turn the LPF off before performing Auto EQ. Also, set the cut-off frequency for the built-in LPF of an active subwoofer to the highest frequency.
- The distance has been calculated by a computer to provide optimum delay to ensure accurate results. Do not change this value.
  - The reflected sound within the vehicle is strong and delays occur.
  - The LPF on active subwoofers or external amps delay the lower sounds.
- If an error occurs during measurement, a message appears and measurement is cancelled. Check the following before measuring the vehicle’s acoustics.

## Audio adjustments

- Front speakers (left/right)
- Rear speakers (left/right)
- Noise
- Microphone for acoustical measurement (sold separately)
- Low battery

### Performing Auto EQ

- ❑ Auto EQ changes the audio settings as follows:
  - “Auto EQ&TA” is set to “On”.
    - ➔ For details, refer to *Using the auto-adjusted equaliser* on page 107.
  - The fader/balance settings return to the centre position.
    - ➔ For details, refer to *Using balance adjustment* on page 100.
  - The equaliser curve switches to “Flat”.
    - ➔ For details, refer to *Using the equaliser* on page 106.
  - The front and rear speakers will automatically be adjusted to a high pass filter setting.
- ❑ Previous settings for Auto EQ will be overwritten.
- ❑ Do not press the ▲ button to open or close the panel when you are using the microphone.

### CAUTION

Do not turn off the engine while the measurement is in progress.


#### 1 Stop the vehicle in a quiet place, close all the doors, windows and sun roof, and then turn the engine off.

If the engine is left running, engine noise may prevent correct Auto EQ.

- ❑ If driving restrictions are detected during measurement, measurement is cancelled.

#### 2 Fix the microphone for acoustical measurement (sold separately) in the centre of the headrest of the driver's seat, facing forward.

The Auto EQ may differ depending on where you place the microphone. If desired, place the microphone on the front passenger seat and perform Auto EQ.

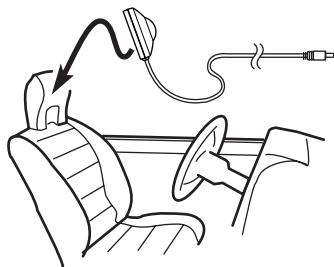

#### 3 Disconnect the iPhone or smartphone device.

#### 4 Turn on the ignition switch (ACC ON).

If the vehicle's air conditioner or heater is turned on, turn it off. Noise from the fan in the air conditioner or heater may prevent correct Auto EQ.

#### 5 Switch the AV source to “OFF”.

- ➔ For details of the operations, refer to *Displaying the AV operation screen* on page 20.

#### 6 Press the HOME button to display the Top menu screen.

#### 7 Touch the following keys in the following order.




The “Audio” screen appears.

#### 8 Touch [A-EQ&TA Measurement].

The “A-EQ&TA Measurement” screen appears.

### 9 Connect the microphone for acoustical measurement (sold separately) with this product.

Plug the microphone into the microphone input jack on this product.

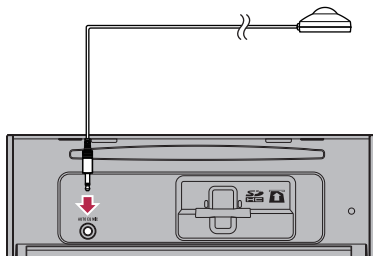

### 10 Touch [Front Left] or [Front Right] to select the current listening position.

### 11 Touch [Start].

A 10-second countdown starts.

- The Bluetooth connection is disconnected before the process starts.

### 12 Exit the vehicle and keep the doors closed until the countdown finishes.

When the countdown finishes, a measurement tone (noise) is emitted from the speakers and the Auto EQ measurement begins.

### 13 Wait until the measurement is completed.

When Auto EQ is completed, a message is displayed indicating that the measurement is completed.

- If the vehicle's acoustics cannot be measured correctly, an error message will be displayed.
- The measurement time varies depending on the type of vehicle.
- To stop the measurement, touch [Stop].

### 14 Store the microphone carefully in the glove compartment or another safe place.

If the microphone is subjected to direct sunlight for an extended period, high temperatures may cause distortion, colour change or malfunction.

## Theme menu

### Setting the illumination colour

The illumination colour can be selected from 5 different colours. Furthermore, the illumination can be switched between these 5 colours in order.

### Selecting the colour from the preset colours

You can select an illumination colour from the colour list.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**





The “Theme” screen appears.

**3 Touch [Illumination].**

- You can also change the screen for settings by touching [**Theme**], [**Background**] or [**Clock**] on this screen.

**4 Touch the colour you want.**

- **Coloured keys:**  
Selects the desired preset colour.
-  (custom):  
Displays the screen to customise the illumination colour.
  - ➡ For details, refer to *Creating a user-defined colour* on page 111.
-  (rainbow):  
Shifts gradually between the five default colours in sequence.
- You can preview the Top menu screen or the AV operation screen by touching [**Home**] or [**AV**] respectively.

### Creating a user-defined colour

You can create a user-defined colour. The created colour is stored, and you can select the colour when setting the illumination colour the next time.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The “Theme” screen appears.

**3 Touch [Illumination].**

- You can also change the screen for settings by touching [**Theme**], [**Background**] or [**Clock**] on this screen.

**4 Touch the following key.**



Displays the screen to create a user-defined colour and store it to memory.

**5 Touch the following keys.**



Adjusts the brightness and the level of red, green and blue to create a favourite colour.



- You can also adjust the colour tone by dragging the colour bar.

**6 Touch and hold [Memo] to store the customised colour in the memory.**

The customised colour is stored in the memory.  
The set colour will be recalled from the memory the next time you touch the same key.

## Selecting the background display

The background display can be selected from 8 different preset displays for the AV operation screen and 5 different preset displays for the Top menu screen. Furthermore, you can change the background display to other images imported from an external device.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The "Theme" screen appears.


 
**3 Touch [Background].**

- You can also change the screen for settings by touching [**Illumination**], [**Theme**] or [**Clock**] on this screen.

**4 Touch [Home] or [AV] to switch the screen displays.**

- The setting contents can be memorised separately for the AV operation screen and the Top menu screen.

**5 Touch the item you want to set.**

- **Preset displays:**  
Selects the desired preset background display.
-  (custom):  
Displays the background display image imported from the external device.
  - ➔ For details, refer to *Changing to the background display image stored on the external device (USB/SD)* on page 112.
-  (off):  
Hides the background display.

## Changing to the background display image stored on the external device (USB/SD)

You can change the background display image to an image imported from the external device (USB/SD).

- Background display image must be used within the following formats.
  - JPEG image files (.jpg or .jpeg)
  - Allowable data size is 10 MB or smaller
  - Allowable image size is 4 000 × 4 000 pixel or smaller

### CAUTION

Do not turn off the engine while importing an image from the external device (USB/SD).

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The "Theme" screen appears.

**3 Touch [Background].**

- You can also change the screen for settings by touching [**Illumination**], [**Theme**] or [**Clock**] on this screen.

**4 Touch the following key.**




Displays the list of the background display images stored on the external device (USB/SD).

**5 Touch the desired external device.**

**6 Touch the image to use as the background display from the list.**

The image is set as the background display.

## Theme menu

- ❑ You can delete the imported image and restore the setting for the background display to the default by touching and holding the custom key. 

### Selecting the theme colour

A theme colour can be selected from 5 different colours.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**




The “Theme” screen appears.

**3 Touch [Theme].**

- ❑ You can also change the screen for settings by touching [Illumination], [Background] or [Clock] on this screen.

**4 Touch the colour you want.**

- ❑ You can preview the Top menu screen or the AV operation screen by touching [Home] or [AV] respectively. 

### Selecting the clock image

The clock on the AV operation screen and the Top menu screen can be selected from 3 different images.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**

 



The “Theme” screen appears.

**3 Touch [Clock].**

- ❑ You can also change the screen for settings by touching [Illumination], [Theme] or [Background] on this screen.

**4 Touch the item you want to set.**

- **Preset images:**  
Selects the desired preset clock image.
-  (off):  
Hides the clock display.
- ❑ You can preview the Top menu screen or the AV operation screen by touching [Home] or [AV] respectively. 

### Changing the preinstalled splash screen

You can change the splash screen to other images preinstalled in this product.

**1 Press the HOME button to display the Top menu screen.**


**2 Touch the following keys in the following order.**



The “Theme” screen appears.

**3 Touch [Splash Screen].**

**4 Touch the item you want to set.**

- **Preset images:**  
Selects the desired preset splash screen image.
-  (custom):  
Displays the splash screen image imported from the external device.
- For details, refer to *Changing to the splash screen stored on the external device (USB/SD)* on page 114.

## Changing to the splash screen stored on the external device (USB/SD)

You can change the splash screen to other images imported from the external device (USB/SD).

### ! CAUTION

Do not turn off the engine while importing an image from the external device (USB/SD).

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The “Theme” screen appears.

- 3 Touch [Splash Screen].
- 4 Touch the following key.



Displays the list of the splash screens stored on the external device (USB/SD).

- 5 Touch the desired external device.
- 6 Touch the image to use as the splash screen from the list.

The image is set as the splash screen.

- ❑ You can delete the imported image and re-store the setting on the splash screen to the default by touching and holding the custom key. ❑

## Replicating the settings

### Exporting “Theme” settings

You can export settings you have made on the “Theme” screen to an SD memory card. These settings can be exported separately.

- ❑ This setting is available only when you stop your vehicle in a safe place and apply the handbrake.

### ! CAUTION

Do not turn off the engine while exporting the settings.

- 1 Insert an SD memory card into the SD card slot.

- ➔ For details, refer to *Inserting and ejecting an SD memory card* on page 15.

- 2 Press the HOME button to display the Top menu screen.

- 3 Touch the following keys in the following order.



The “Theme” screen appears.

- 4 Touch [Export].
- The “Settings Export” screen appears.

- 5 Touch the desired item.

- **Illumination:**  
Selects the illumination colour setting.
- **Splash Screen:**  
Selects the splash screen setting.
- **Select All:**  
Selects all settings.

- 6 Touch [Export].

Data export starts.  
After the data is exported, a completion message appears.

- ❑ The source is turned off and the Bluetooth connection is disconnected before the process starts.

### Importing “Theme” settings

The settings made on the “Theme” screen that were exported to an SD memory card can be imported.

## Theme menu

- ❑ This setting is available only when you stop your vehicle in a safe place and apply the handbrake.

### CAUTION

- Do not turn off the engine while importing the settings.
- To prevent data loss and damage to the SD memory card, never edit the data exported to the SD memory card.

#### 1 Insert the SD memory card into the SD card slot.

- ➞ For details, refer to *Inserting and ejecting an SD memory card* on page 15.

A message confirming whether to import the stored setting data appears.

#### 2 Touch [Import].

Data import starts.

When the data is successfully imported, an import complete message is displayed.

- ❑ The source is turned off and the Bluetooth connection is disconnected before the process starts. ■

## Setting the top-priority languages

You can assign the top-priority language to the top-priority subtitle, audio and menu in initial playback. If the selected language is recorded on the disc, subtitles, audio and menu are displayed or output in that language.

- ❑ This setting is available when the selected source is “Disc”, “CD”, “Video CD” or “DVD”.

## Setting the subtitle language

You can set a desired subtitle language. When available, the subtitles will be displayed in the selected language.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.




The “Video Setup” screen appears.

- 3 Touch [DVD/DivX Setup].

- 4 Touch [Subtitle Language].

The pop-up menu appears.

- 5 Touch the desired language.

When you select “Others”, a language code input screen is shown. Input the four-digit code of the desired language then touch .

- ➔ For details, refer to *Language code chart for DVDs* on page 121.

The subtitle language is set.

- ❑ If the selected language is not available, the language specified on the disc is displayed.
- ❑ You can also switch the subtitle language by touching the switch subtitle languages key during playback.
- ❑ The setting made here will not be affected even if the subtitle language is switched

during playback using the switch subtitle languages key.

## Setting the audio language

You can set the preferred audio language.

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.




The “Video Setup” screen appears.

- 3 Touch [DVD/DivX Setup].

- 4 Touch [Audio Language].

The pop-up menu appears.

- 5 Touch the desired language.

When you select “Others”, a language code input screen is shown. Input the four-digit code of the desired language then touch .

- ➔ For details, refer to *Language code chart for DVDs* on page 121.

The audio language is set.

- ❑ If the selected language is not available, the language specified on the disc is displayed.
- ❑ You can also switch the audio language by touching the switch audio languages key during playback.
- ❑ The setting made here will not be affected even if the audio language is switched during playback using the switch audio languages key.

## Setting the menu language

You can set the preferred language in which the menus recorded on a disc are displayed.

- 1 Press the HOME button to display the Top menu screen.

## Setting up the video player

2 Touch the following keys in the following order.




The “**Video Setup**” screen appears.

3 Touch [DVD/DivX Setup].

4 Touch [Menu Language].


The pop-up menu appears.

5 Touch the desired language.

When you select “**Others**”, a language code input screen is shown. Input the four-digit code of the desired language then touch .

➔ For details, refer to *Language code chart for DVDs* on page 121.

The menu language is set.

- If the selected language is not available, the language specified on the disc is displayed. .

### Setting the angle icon display

The angle icon can be set so it appears on scenes where the angle can be switched.

- This setting is available when the selected source is “**Disc**”, “**CD**”, “**Video CD**” or “**DVD**”.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.




The “**Video Setup**” screen appears.

3 Touch [DVD/DivX Setup].

4 Touch [Multi Angle] repeatedly until the desired setting appears.

- **On** (default):

Turns the multi-angle setting on.

- **Off:**  
Turns the multi-angle setting off. .

### Setting the aspect ratio

There are two kinds of displays. A wide screen display has a width-to-height ratio (TV aspect) of 16:9, while a regular display has a TV aspect of 4:3. If you use a regular rear display with a TV aspect of 4:3, you can set the aspect ratio suitable for your rear display. (We recommend use of this function only when you want to fit the aspect ratio to the rear display.)

- When using a regular display, select either “**Letter Box**” or “**Pan Scan**”. Selecting “**16:9**” may result in an unnatural image.
- If you select the TV aspect ratio, this product’s display will change to the same setting.
- This setting is available when the selected source is “**Disc**”, “**CD**”, “**Video CD**” or “**DVD**”.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “**Video Setup**” screen appears.

3 Touch [DVD/DivX Setup].


4 Touch [TV Aspect].

The pop-up menu appears.

5 Touch the item you want to set.

- **16:9** (default):  
Displays the wide screen image (16:9) as it is (initial setting).
- **Letter Box:**

Makes the image in the shape of a letterbox with black bands on the top and bottom of the screen.

 - **Pan Scan:**  
Cuts the image short on the right and left sides of the screen.
- ❑ When playing discs that do not have a pan-scan system, the disc is played back with "Letter Box" even if you select the "Pan Scan" setting. Confirm whether the disc package bears the  mark.
- ❑ The TV aspect ratio cannot be changed for some discs. For details, refer to the disc's instructions. ❑

## Setting parental lock

Some DVD-Video discs let you use parental lock to set restrictions so that children cannot watch violent or adult-oriented scenes. You can set the parental lock level in steps as desired.

- ❑ When you set a parental lock level and then play a disc featuring parental lock, code number input indications may be displayed. In this case, playback will begin when the correct code number is input.
- ❑ This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

## Setting the code number and level

When you first use this function, register your code number. If you do not register a code number, the parental lock will not operate.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The "Video Setup" screen appears.

**3 Touch [DVD/DivX Setup].**

**4 Touch [Parental].**

The "Parental" screen appears.

**5 Touch [0] to [9] to input a four-digit code number.**

**6 While the input number is displayed, touch the following key.**



Registers the code number, and you can now set the level.

**7 Touch any number between [1] to [8] to select the desired level.**

- **8:**  
Enables playback of the entire disc (initial setting).
- **7 to 2:**  
Enables playback of discs for children and non-adult oriented discs.
- **1:**  
Enables only playback of discs for children.

**8 While the input number is displayed, touch the following key.**



Sets the parental lock level.

- ❑ We recommend that you keep a record of your code number in case you forget it.
- ❑ The parental lock level is recorded on the disc. You can confirm it by looking at the disc package, the included literature or the disc itself. You cannot use parental lock with discs that do not feature a recorded parental lock level.
- ❑ With some discs, parental lock operates to skip certain scenes only, after which normal playback resumes. For details, refer to the disc's instructions. ❑

## Setting up the video player

### Displaying your DivX VOD registration code

If you want to play DivX VOD (video on demand) content on this product, you must first register this product with your DivX VOD content provider. You do this by generating a DivX VOD registration code, which you submit to your provider.

- ❑ Keep a record of the code as you will need it when you register this product to the DivX VOD provider.
- ❑ This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The "Video Setup" screen appears.

**3 Touch [DVD/DivX Setup].**

**4 Touch [DivX® VOD].**

The "DivX® VOD" screen appears.

- ❑ If a registration code has already been activated, it cannot be displayed.

**5 Touch [Registration Code].**

Your 10-digit registration code is displayed.

- ❑ Make a note of the code as you will need it when you register with a DivX VOD provider. □

### Displaying your DivX VOD deregistration code

A registration code registered with a deregistration code can be deleted.

- ❑ This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following keys in the following order.**



The "Video Setup" screen appears.

**3 Touch [DVD/DivX Setup].**

**4 Touch [DivX® VOD].**

The "DivX® VOD" screen appears.

**5 Touch [Deregistration Code].**

Your eight-digit deregistration code is displayed.

- ❑ Make a note of the code as you will need it when you deregister from a DivX VOD provider. □

### Automatic playback of DVDs

When a DVD disc with a DVD menu is inserted, this product will cancel the menu automatically and start playback from the first chapter of the first title.

- ❑ Some DVDs may not operate properly. If this function is not fully operable, turn this function off and start playback.
- ❑ This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

**1 Press the HOME button to display the Top menu screen.**

2 Touch the following keys in the following order.



The “Video Setup” screen appears.

3 Touch [DVD/DivX Setup].

4 Touch [DVD Auto Play] repeatedly until the desired setting appears.

- **Off** (default):  
Turns the DVD Auto Play setting off.
- **On**:  
Turns the DVD Auto Play setting on.

## Setting the video signal for the rear view camera

When you connect a rear view camera to this product, select the suitable video signal setting.

- You can operate this function only for the video signal input into the AV input.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “Video Setup” screen appears.

3 Touch [Video Signal Setting].

4 Touch [Camera].

The pop-up menu appears.

5 Touch the item you want to set.

- **Auto** (default):  
Adjusts the video signal setting automatically.
- **PAL**:  
Sets the video signal to PAL.

- **NTSC**:  
Sets the video signal to NTSC.
- **PAL-M**:  
Sets the video signal to PAL-M.
- **PAL-N**:  
Sets the video signal to PAL-N.
- **SECAM**:  
Sets the video signal to SECAM.

## Setting the video output format

You can switch the video output format of the rear display between NTSC and PAL.

- The video output format setting has no effect on AUX, AV, and iPod sources (when the control mode is set to iPod).
- This function is available when nothing is output to the front screen, and a source other than Disc, USB1, USB2, and SD is output to the rear display.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.



The “Video Setup” screen appears.

3 Touch [Video Output Format] repeatedly until the desired setting appears.

- **PAL** (default):  
Sets the video output format to PAL.
- **NTSC**:  
Sets the video output format to NTSC.

# Setting up the video player

## Language code chart for DVDs

Two-letter code, input code	Language	Two-letter code, input code	Language	Two-letter code, input code	Language
aa, 0101	Afar	ie, 0905	Interlingue	rn, 1814	Rundi
ab, 0102	Abkhazian	ik, 0911	Inupiaq	ro, 1815	Romanian
af, 0106	Afrikaans	in, 0914	Indonesian	ru, 1821	Russian
am, 0113	Amharic	is, 0919	Icelandic	rw, 1823	Kinyarwanda
ar, 0118	Arabic	it, 0920	Italian	sa, 1901	Sanskrit
as, 0119	Assamese	iw, 0923	Hebrew	sd, 1904	Sindhi
ay, 0125	Aymara	ja, 1001	Japanese	sg, 1907	Sango
az, 0126	Azerbaijani	ji, 1009	Yiddish	sh, 1908	Serbo-Croat
ba, 0201	Bashkir	jw, 1023	Javanese	si, 1909	Sinhala
be, 0205	Belarusian	ka, 1101	Georgian	sk, 1911	Slovak
bg, 0207	Bulgarian	kk, 1111	Kazakh	sl, 1912	Slovenian
bh, 0208	Bihari	kl, 1112	Greenlandic	sm, 1913	Samoan
bi, 0209	Bislama	km, 1113	Central Khmer	sn, 1914	Shona
bn, 0214	Bengali	kn, 1114	Kannada	so, 1915	Somali
bo, 0215	Tibetan	ko, 1115	Korean	sq, 1917	Albanian
br, 0218	Breton	ks, 1119	Kashmiri	sr, 1918	Serbian
ca, 0301	Catalan	ku, 1121	Kurdish	ss, 1919	Swati
co, 0315	Corsican	ky, 1125	Kirghiz	st, 1920	Sotho
cs, 0319	Czech	la, 1201	Latin	su, 1921	Sundanese
cy, 0325	Welsh	ln, 1214	Lingala	sv, 1922	Swedish
da, 0401	Danish	lo, 1215	Lao	sw, 1923	Swahili
de, 0405	German	lt, 1220	Lithuanian	ta, 2001	Tamil
dz, 0426	Dzongkha	lv, 1222	Latvian	te, 2005	Telugu
el, 0512	Greek	mg, 1307	Malagasy	tjg, 2007	Tajik
en, 0514	English	mi, 1309	Maori	th, 2008	Thai
eo, 0515	Esperanto	mk, 1311	Macedonian	ti, 2009	Tigrinya
es, 0519	Spanish	ml, 1312	Malayalam	tk, 2011	Turkmen
et, 0520	Estonian	mn, 1314	Mongolian	tl, 2012	Tagalog
eu, 0521	Basque	mo, 1315	Moldavian	tn, 2014	Tswana
fa, 0601	Persian	mr, 1318	Marathi	to, 2015	Tonga
fi, 0609	Finnish	ms, 1319	Malay	tr, 2018	Turkish
fj, 0610	Fijian	mt, 1320	Maltese	ts, 2019	Tsonga
fo, 0615	Faroese	my, 1325	Burmese	tt, 2020	Tatar
fr, 0618	French	na, 1401	Nauru	tw, 2023	Twi
fy, 0625	Western Frisian	ne, 1405	Nepali	uk, 2111	Ukrainian
ga, 0701	Irish	nl, 1412	Dutch	ur, 2118	Urdu
gd, 0704	Scot.Gaelic	no, 1415	Norwegian	uz, 2126	Uzbek
gl, 0712	Galician	oc, 1503	Occitan	vi, 2209	Vietnamese
gn, 0714	Guarani	om, 1513	Oromo	vo, 2215	Volapük
gu, 0721	Gujarati	or, 1518	Oriya	wo, 2315	Wolof
ha, 0801	Hausa	pa, 1601	Panjabi	xh, 2408	Xhosa
hi, 0809	Hindi	pl, 1612	Polish	yo, 2515	Yoruba
hr, 0818	Croatian	ps, 1619	Pashto	zh, 2608	Chinese
hu, 0821	Hungarian	pt, 1620	Portuguese	zu, 2621	Zulu
hy, 0825	Armenian	qu, 1721	Quechua		
ia, 0901	Interlingua	rm, 1813	Romansh		



Registering your favourite menu items in shortcuts allows you to quickly jump to the registered menu screen by a simple touch on the "Favorites" screen.

- Up to 12 menu items can be registered in the favourite menu.

## Selecting a shortcut

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "Favorites" screen appears.

- 3 Touch the star icon that you want to add to the favourite menu.

The star icon for the selected menu is filled in.

- To cancel the registration, touch the star icon in the menu column again. □

## Removing a shortcut

- 1 Press the HOME button to display the Top menu screen.
- 2 Touch the following keys in the following order.



The "Favorites" screen appears.

- 3 Touch and hold the star icon of the favourite menu you want to remove.

The selected menu is removed from the "Favorites" screen. □

## Displaying the operation status of vehicle equipment

By connecting the optional Vehicle Bus adapter, you can display the operation status of the vehicle's parking sensor function and climate control panel on the screen.

### CAUTION

- For information on installing the Vehicle Bus adapter, see the operating manual of the Vehicle Bus adapter.
- After installing the Vehicle Bus adapter, be sure to check operations.
- For details about vehicle models that are compatible with Vehicle Bus adapters, refer to the information on our website.
- Functions and displays vary depending on the vehicle model. For details of the functions available according to the model, refer to the information on our website.


## Displaying obstacle detection information

### CAUTION

This function is intended solely to assist the driver's vision. It does not detect all dangers and obstacles and is not a substitute for your attentiveness, judgement, and care while parking your vehicle.

Turn on the parking assist sensor on your vehicle, and the screen will switch to the "Parking Assist" screen.

- This function is only available for vehicles equipped with a parking sensor system.
- The "Parking Assist" screen is not displayed until the navigation screen has started.

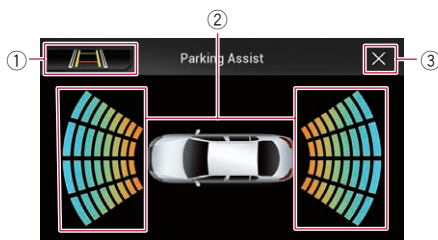


- ① Switches the display to the rear view camera image.
  - The display switches only when the rear view camera setting is set to "On" and the gearstick is in the REVERSE (R) position.
- ② Displays the position of detected obstacles.
- ③ The previous screen returns.

## Displaying the operating status of the climate control panel

When you operate the climate control panel of the vehicle, the screen switches automatically to the "A/C Control" screen.

- The settings of the climate control panel operated before this product is started are not displayed on the screen.
- Any climate control panel settings of the vehicle that are turned off are not displayed on the screen.
- If the information displayed on the screen is reversed for the left and right sides of the vehicle, change the "Climate Reverse" setting to "On".
  - ➡ For details of the operations, refer to *Reversing the climate control status display* on page 96.

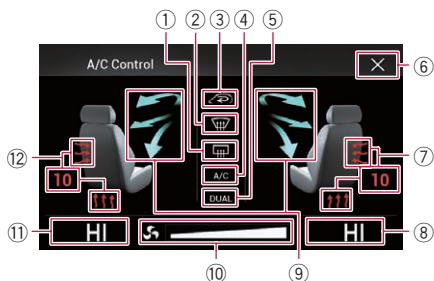

- ① Displays that the rear window heating setting is on.
- ② Displays that the front window heating setting is on.
- ③ Displays that the internal circulation mode setting is on.
- ④ Displays that the A/C setting is on.
- ⑤ Displays that the dual A/C function is on.
- ⑥ The previous screen returns.
  - ❑ If you do not operate the climate control panel for a few seconds, the previous screen is displayed automatically.
- ⑦ Displays the seat heating setting for the right seat.
- ⑧ Displays the internal temperature setting for the right seat.
- ⑨ Displays the fan direction.
- ⑩ Displays the fan speed.
- ⑪ Displays the internal temperature setting for the left seat.
- ⑫ Displays the seat heating setting for the left seat. ❑

## Setting the time and date

1 Touch the current time on the screen to display the Time and date setting screen.

2 Touch ▲ or ▼ to set the correct time and date.

On this screen, you can operate the following items.

### Month/Date

- **d/m/y** (default):  
Changes the date display format to date/month/year.
- **m/d/y**:  
Changes the date display format to month/date/year.
- **y/m/d**:  
Changes the date display format to year/month/date.

### Time Format

- **12hour** (default):  
Changes the display to 12-hour format with am/pm.
- **24hour**:  
Changes the display to 24-hour format.

## Storing song information to an iPod (iTunes Tagging)

You can store song information to the iPod when this product receives song information. The songs will appear in a playlist called "Tagged playlist" in iTunes the next time you synchronise your iPod. You can directly buy the songs via this product.

Depending on when the song information is stored, information for the previous song or the song after the current song may also be stored. Be sure to confirm the song before you purchase it.

- The iTunes Tagging function is available while digital broadcasts are being received.
- This function is available for the following iPod models:
  - iPhone 5c
  - iPhone 5s

- iPhone 5
  - iPhone 4s
  - iPhone 4
  - iPhone 3GS
  - iPhone 3G
  - iPhone
  - iPod touch 5th generation
  - iPod touch 4th generation
  - iPod touch 3rd generation
  - iPod touch 2nd generation
  - iPod touch 1st generation
  - iPod classic
  - iPod nano 6th generation
  - iPod nano 5th generation
  - iPod nano 4th generation
  - iPod nano 3rd generation
- The version of iTunes must be 7.4 or higher.

1 Press the HOME button to display the Top menu screen.

2 Touch the following keys in the following order.




The "System" screen appears.

3 Touch [AV Source Settings].

4 Touch [Tag Forwarding] repeatedly until the desired setting appears.

- **USB1** (default):  
Transfers the song information to your iPod which is connected to USB port 1.
- **USB2**:  
Transfers the song information to your iPod which is connected to USB port 2.

5 Tune into the digital broadcast station.

When the song information is received,  is displayed while the desired song is being broadcast, and the touch panel key becomes active.


- For details, refer to *iTunes® tagging indicator* on page 41.

## Common operations

- ➔ For details, refer to *Using the touch panel keys* on page 40.

### 6 Touch the touch panel key on which song information is displayed.

The information on the song on air is stored in this product.


While the information is being acquired,  is displayed.

When it is completed,  turns off and  is displayed.

- The song information for up to 50 songs can be stored in this product. Depending on when the song information is stored, information for the previous song or the song after the current song may also be stored.

### 7 Connect your iPod.

The song information is transferred to your iPod.

- If the iPod is already connected, the song information will be transferred to your iPod every time you touch the touch panel key on which song information is displayed. When the song information transfer to your iPod is completed,  disappears.
- When the song information transfer is completed, the information stored in this product will be automatically deleted.
- If you turn off this product or disconnect the iPod while transferring song information, the transfer may not successfully complete.
- While this product is storing song information, transfer to an iPod is not possible.




## Setting the "Sound Retriever" function

The "Sound Retriever" function automatically enhances compressed audio and restores rich sound.

- Touch the following key repeatedly until the desired setting appears on the AV operation screen.



Sets the "Sound Retriever" function.

-  (Mode1) (default):  
Activates the "Sound Retriever" function.
-  (Mode2):  
Activates the "Sound Retriever" function.
-  (Off):  
Deactivates the "Sound Retriever" function.
- Mode1 has a stronger effect than Mode2.

## Changing the wide screen mode

You can set the screen size for the video and JPEG images.

- The default setting is "Full", and for JPEG images is "Normal".

### 1 Touch the following key.



Displays the setting screen to select the appropriate screen ratio for the playback video.

- The appearance of this key changes according to the current setting.

### 2 Touch the desired mode.

- **Full**  
A 4:3 picture is enlarged in the horizontal direction only, enabling you to enjoy a 4:3 TV picture (normal picture) without any omissions.
  - This setting is for video only.
- **Zoom**  
A 4:3 picture is enlarged in the same proportion both vertically and horizontally; ideal for a cinema-sized (wide screen) picture.
  - This setting is for video only.
- **Normal**

## Common operations

A 4:3 picture is displayed normally, giving you no sense of disparity since its proportions are the same as those of the normal picture.

This setting is for video and JPEG images.

- **Trimming**

An image is displayed across the entire screen with the horizontal-to-vertical ratio left as is. If the horizontal-to-vertical ratio differs between the display and the image, the image may be displayed partly cut off either at the top/bottom or sides.

This setting is for JPEG images only.

You cannot operate this function while driving.

Different settings can be stored for each video source.

When a video is viewed in a wide screen mode that does not match its original aspect ratio, it may appear different.

The video image will appear coarser when viewed in "**Zoom**" mode.

## Selecting the video for the rear display

You can choose either to show the same image as the front screen or to show the selected source on the rear display.

**1 Press the HOME button to display the Top menu screen.**

**2 Touch the following key.**



Displays the AV source selection screen.

**3 Touch [Rear].**

The "Rear" screen appears.

**4 Touch the source you want to show on the rear display.**

The source you can select is as follows.

- **Mirror**  
The video on the front screen of this product is output to the rear display.  
— Not all videos or sounds can be output to the rear display.
- **Disc**  
The video and sound of DVDs are output to the rear display.  
— Compatible file types are DVD-V, Video-CD, DivX, MPEG-1, MPEG-2, and MPEG-4 only.
- **USB/iPod**  
The video and sound of the USB storage device or iPod are output to the rear display.  
— The port that supports the rear display will only be USB port 1.  
— Compatible file types are MPEG-4, H.264, WMV, MKV, and FLV only.
- **AV**  
The video and sound of **AV** are output to the rear display.  
— The video image and sound are output only when "**AV**" has both video and sound.

— The video image and sound are output only when the corresponding settings on "**AV Input**" is "**On**".

➔ For details, refer to *Setting AV input* on page 91.

- **SD**  
The video and sound of the SD memory cards are output to the rear display.  
— Compatible file types are MPEG-4, H.264, WMV, MKV, and FLV only.
  - **OFF**  
Nothing is output to the rear display.
- Touch the following key.



Closes the "Rear" screen.

- You can also select **[Rear]** on the source list.  
➔ For details, refer to *Selecting a front source on the source list* on page 20. ▣

## Setting the anti-theft function

You can set a password for this product. If the back-up lead is cut after the password is set, this product prompts for the password at the time of next boot up.

### Setting the password

**1 Press the HOME button to display the Top menu screen.**


**2 Touch the following keys in the following order.**



The "**System**" screen appears.

## Other functions

- 3 Touch Area1, followed by Area2, and then touch and hold Area3.

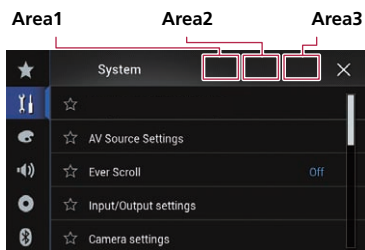

The “Anti-theft Setting Menu” screen appears.

- 4 Touch [Set Password].

The “Password Entry” screen appears.

- 5 Enter the password you want to set.

- 5 to 16 characters can be entered for a password.

- 6 Touch [Go].

The “Hint Entry” screen appears.

- 7 Enter a password hint.

- Up to 40 characters can be entered for a hint.

- 8 Touch [Go].

The “Password Confirmation” screen appears.

- If you want to change the password currently set, enter the current password and then enter the new one.

- 9 Check the password, and then touch [Go].

The “Anti-theft Setting Menu” screen appears.

### Entering the password

On the password input screen, you must enter the current password.

- 1 Enter the password.

- 2 Touch [Go].

When the correct password is entered, this product will be unlocked.

### Deleting the password

The current password and password hint can be deleted.


- 1 Press the HOME button to display the Top menu screen.

- 2 Touch the following keys in the following order.



The “System” screen appears.

- 3 Touch Area1, followed by Area2, and then touch and hold Area3.

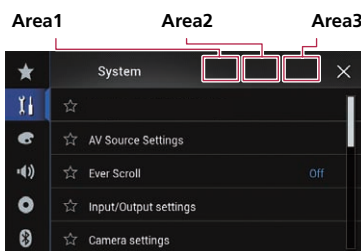

The “Anti-theft Setting Menu” screen appears.

- 4 Touch [Clear Password].

A message confirming whether to delete the password appears.

- 5 Touch [YES].

The password setting screen appears. A message confirming a password hint appears.

- 6 Touch [OK].


The “Password Entry” screen appears.

- 7 Enter the current password.

## 8 Touch [Go].

A message indicating that the security setting is cancelled appears.

## Forgotten password

Contact the nearest authorised Pioneer Service Station. 

## Restoring this product to the default settings

You can restore settings or recorded content to the default settings. Various methods are used to clear user data.

### Method 1: Remove the vehicle battery

Resets various settings registered to this product.

- The settings configured on the "Theme" screen are not reset.

### Method 2: Touch the item you want to initialise on the "Settings Restore" screen

➔ For details, refer to *Restoring the default settings* on page 130.

### Method 3: Press the RESET button

➔ For details of the operations, refer to *Resetting the microprocessor* on page 11.

## Restoring the default settings

Resets various settings registered to this product to the default settings.

- This setting is available only when you stop your vehicle in a safe place and apply the handbrake.



### CAUTION

Do not turn off the engine while restoring the settings.

## 1 Press the HOME button to display the Top menu screen.

## 2 Touch the following keys in the following order.



The "System" screen appears.

## 3 Touch [Restore Settings].

## 4 Touch the item you want to initialise.


- **All settings**
- **Audio settings**
  - This setting is available when the selected source is "OFF".
- **Video settings**
  - This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".
- **Theme settings**
- **Bluetooth settings**

A message confirming whether to initialise the settings appears.

- If you want to return settings or recorded content to the default, touch [All settings].
- Some of the settings configured on the "Theme" setting will not be reset.

## 5 Touch [Restore].

When the selected item is successfully initialised, a completion message appears.


- The source is turned off and the Bluetooth connection is disconnected before the process starts. 

# Appendix

## Troubleshooting

If you have problems operating this product, refer to this section. The most common problems are listed below, along with likely causes and solutions. If a solution to your problem cannot be found here, contact your dealer or the nearest authorised Pioneer service facility.

### Problems with the AV screen

Symptom	Cause	Action (Reference)
CD or DVD playback is not possible.	The disc is inserted upside down.	Insert the disc with the label upward.
	The disc is dirty.	Clean the disc.
	The disc is cracked or otherwise damaged.	Insert a normal, round disc.
	The files on the disc are in an irregular file format.	Check the file format.
	The disc format cannot be played back.	Replace the disc.
The screen is covered by a caution message and the video cannot be shown.	The handbrake lead is not connected or applied.	Connect the handbrake lead correctly, and apply the handbrake.
	The handbrake interlock is activated.	Park your vehicle in a safe place and apply the handbrake.
No video output from the connected equipment.	The "AV Input" setting is incorrect.	Correct the settings. (Page 91)
The audio or video skips.	This product is not firmly secured.	Secure this product firmly.
No sounds are produced. The volume level will not rise.	Cables are not connected correctly.	Connect the cables correctly.
	The system is performing still, slow motion, or frame-by-frame playback with DVD-Video.	There is no sound during still, slow motion, or frame-by-frame playback with DVD-Video.
The icon  is displayed, and operation is impossible.	The system is paused or performing fast reverse or forward during the disc playback.	For the media other than music CD (CD-DA), there is no sound on fast reverse or forward.
	The operation is not compatible with the video configuration.	This operation is not possible. (For example, the DVD playing does not feature that angle, audio system, subtitle language, etc.)
The picture stops (pauses) and this product cannot be operated.	The reading of data is impossible during disc playback.	Stop playback once, then restart.
The picture is stretched, with an incorrect aspect ratio.	The aspect setting is incorrect for the display.	Select the appropriate setting for that image. (Page 117)
A parental lock message is displayed and DVD playback is not possible.	The parental lock is on.	Turn the parental lock off or change the level. (Page 118)
The parental lock for DVD playback cannot be cancelled.	The code number is incorrect.	Input the correct code number. (Page 118)

# Appendix

Symptom	Cause	Action (Reference)
Playback is not with the audio language and subtitle language settings selected in "DVD/DivX Setup".	The DVD playing does not feature dialogue or subtitles in the language selected in "DVD/DivX Setup".	Switching to a selected language is not possible if the language selected in "DVD/DivX Setup" is not recorded on the disc. (Page 116, Page 116)
The picture is extremely unclear/distorted and dark during playback.	The disc features a signal to prohibit copying. (Some discs may have this.)	Since this product is compatible with the copy guard analogue copy protect system, the picture may suffer from horizontal stripes or other imperfections when a disc with that kind of protection signal is viewed on some displays. This is not a malfunction.
iPod cannot be operated.	The iPod is frozen.	<ul style="list-style-type: none"> <li>Reconnect the iPod with the USB interface cable for iPod / iPhone.</li> <li>Update the iPod software version.</li> </ul>
	An error has occurred.	<ul style="list-style-type: none"> <li>Reconnect the iPod with the USB interface cable for iPod / iPhone.</li> <li>Park your vehicle in a safe place, and turn off the engine. Turn the ignition key back to off (ACC OFF). Then restart the engine, and turn the power to this product back on.</li> <li>Update the iPod software version.</li> </ul>
	Cables are not connected correctly.	Connect the cables correctly.
Sound from the iPod cannot be heard.	The audio output direction may switch automatically when the Bluetooth and USB connections are used at the same time.	Use the iPod to change the audio output direction.

## Problems with the phone screen

Symptom	Cause	Action
Dialling is impossible because the touch panel keys for dialling are inactive.	Your phone is out of range for service.	Retry after re-entering the range for service.
	The connection between the mobile phone and this product cannot be established now.	Perform the connection process.

## Problems with the Application screen

Symptom	Cause	Action
A black screen is displayed.	While operating an application, the application was ended on the smartphone side.	Press the <b>HOME</b> button to display the Top menu screen.
	The smartphone OS may be awaiting screen operation.	Stop the vehicle in a safe place and check the screen on the smartphone.
The screen is displayed, but operation does not work at all.	An error has occurred.	<ul style="list-style-type: none"> <li>Park your vehicle in a safe place, and then turn off the ignition switch (ACC OFF). Subsequently, turn the ignition switch to on (ACC ON) again.</li> <li>When an Android device is connected, disconnect the Bluetooth connection from this product and then reconnect it.</li> </ul>

# Appendix

Symptom	Cause	Action
The smartphone was not charged.	Charging stopped because the temperature of the smartphone rose due to prolonged use of the smartphone during charging.	Disconnect the smartphone from the cable, and wait until the smartphone cools down.
	More battery power was consumed than was gained from charging.	This problem may be resolved by stopping any unnecessary services on the smartphone.



## Error messages

When problems occur with this product, an error message appears on the display. Refer to the table below to identify the problem, then take the suggested corrective action. If the error persists, record the error message and contact your dealer or your nearest Pioneer service centre.

### Common

Message	Cause	Action
<b>AMP Error</b>	This product fails to operate or the speaker connection is incorrect; the protective circuit is activated.	Check the speaker connection. If the message fails to disappear even after the engine is switched off/on, contact your dealer or an authorised Pioneer Service Station for assistance.
<b>Product overheat. System will be shut down automatically in 1 minute. Restart the product by ACC-Off/On may fix this problem. If this message keep showing up, it is possible that some problem occurred in the product.</b>	The temperature is too high for this product to operate.	Follow the instructions displayed on the screen. If this does not solve the problem, contact your dealer or an authorised Pioneer Station for assistance.

### Aha Radio

Message	Cause	Action
<b>Communication error occurred.</b>	iPod failure.	Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.
<b>Error-02-6X</b>	iPod failure.	Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.

### Disc

Message	Cause	Action (Reference)
<b>Error-02-XX/FF-FF</b>	The disc is dirty.	Clean the disc.
	The disc is scratched.	Replace the disc.
	The disc is loaded upside down.	Check that the disc is loaded correctly.
	There is an electrical or mechanical error.	Press the <b>RESET</b> button. (Page 11)

# Appendix

Message	Cause	Action (Reference)
<b>Different Region Disc</b>	The disc does not have the same region number as this product.	Replace the DVD with one bearing the correct region number.
<b>Unplayable Disc</b>	This type of disc cannot be played on this product.	Replace the disc with one that can be played on this product.
<b>Unplayable File</b>	This type of file cannot be played on this product.	Select a file that can be played. (Page 142, Page 151)
<b>Skipped</b>	The inserted disc contains DRM protected files.	The protected files are skipped.
<b>Protect</b>	All the files on the inserted disc are embedded with DRM.	Replace the disc.
<b>TEMP</b>	The temperature of this product is outside the normal operating range.	Wait until this product returns to a temperature within the normal operating limits.
<b>This DivX rental has expired.</b>	The inserted disc contains expired DivX VOD content.	Select a file that can be played.
<b>Video resolution not supported</b>	Files that cannot be played on this product are included in the file.	Select a file that can be played. (Page 142, Page 151)
<b>It is not possible to write it in the flash. Unable to write to flash memory.</b>	The playback history for VOD contents cannot be saved for some reason.	<ul style="list-style-type: none"> <li>• Retry.</li> <li>• If the message appears frequently, consult your dealer.</li> </ul>
<b>Your device is not authorized to play this DivX protected video.</b>	This product's DivX registration code has not been authorised by the DivX VOD contents provider.	Register this product to the DivX VOD contents provider.
<b>Video frame rate not supported</b>	DivX file's frame rate is more than 30 fps.	Select a file that can be played.
<b>Audio Format not supported</b>	This type of file is not supported on this product.	Select a file that can be played. (Page 142, Page 151)

## External storage device (USB, SD)

Message	Cause	Action (Reference)
<b>Error-02-9X/-DX</b>	Communication failed.	<ul style="list-style-type: none"> <li>• Turn the ignition switch OFF and back ON.</li> <li>• Disconnect the USB storage device.</li> <li>• Change to a different source. Then, return to the USB storage device.</li> </ul>
<b>Unplayable File</b>	This type of file cannot be played on this product. Security for the connected external storage device (USB, SD) is enabled.	Select a file that can be played. (Page 142, Page 151) Follow the external storage device (USB, SD) instructions to disable security.
<b>Skipped</b>	The connected external storage device (USB, SD) contains DRM protected files.	The protected files are skipped.
<b>Protect</b>	All the files on the connected external storage device (USB, SD) are embedded with DRM.	Replace the external storage device (USB, SD).
<b>Incompatible USB</b>	The connected USB storage device is not supported by this product.	Disconnect your device and replace it with a compatible USB storage device.

# Appendix

Message	Cause	Action (Reference)
<b>Incompatible SD</b>	The SD memory card is not supported by this product.	<ul style="list-style-type: none"> <li>Remove your device and replace it with a compatible SD memory card.</li> <li>Format the SD memory card. It is recommended that you use SD Formatter for formatting SD memory cards. (Page 139)</li> </ul>
<b>Check USB</b>	The USB connector or USB cable is short-circuited.	Check that the USB connector or USB cable is not caught in something or damaged.
	The connected USB storage device consumes more than maximum allowable current.	Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect a compliant USB storage device.
<b>Video resolution not supported</b>	Files that cannot be played on this product are included in the file.	Select a file that can be played. (Page 142, Page 151)
<b>USB1 was disconnected for device protection. Do not reinsert this USB memory into the unit. Press reset to restart USB memory. USB2 was disconnected for device protection. Do not reinsert this USB memory into the unit. Press reset to restart USB memory.</b>	The USB connector or USB cable is short-circuited.	Check that the USB connector or USB cable is not caught in something or damaged.
	The connected USB storage device consumes more than maximum allowable current.	Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect a compliant USB storage device.
	The USB interface cable for iPod / iPhone is short-circuited.	Confirm that the USB interface cable for iPod / iPhone or USB cable is not caught in something or damaged.
<b>Audio Format not supported</b>	This type of file is not supported on this product.	Select a file that can be played. (Page 142, Page 151)

## iPod

Message	Cause	Action
<b>Error-02-6X/-9X/-DX</b>	iPod failure.	Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.
<b>Error-02-67</b>	The iPod firmware version is old.	Update the iPod version.

## iTunes tagging

Message	Cause	Action
<b>Error-8D</b>	Built-in FLASH ROM encountered an error.	Turn the ignition switch to OFF and then to ON.
<b>Tag store failed.</b>	Tag information cannot be stored in this product.	Try again.
<b>Already stored.</b>	This tag information is already stored in memory.	Tag information can only be saved once for any given song. Tag information cannot be saved for the same song more than once.
<b>Memory full. Connect iPod.</b>	The tag information is successfully stored. The flash memory of this product has become full.	The tag information on this product is transferred to the iPod automatically when an iPod is connected.
<b>Memory full. Tags not stored. Connect iPod.</b>	This product's flash memory used as the temporary storage area is full.	The tag information on this product is transferred to the iPod automatically when an iPod is connected.

# Appendix

Message	Cause	Action
<b>iPod full. Tags not transferred.</b>	Memory used for tag information on the iPod is full.	Sync the iPod with iTunes and clean up the tagged playlist.
<b>Tag transfer failed. Reconnect your iPod.</b>	This product's tag information cannot transfer to the iPod.	Check the iPod and try again.

## Bluetooth

Message	Cause	Action
<b>Error-10</b>	The power failed for the Bluetooth module of this product.	Turn the ignition switch to OFF and then to ON. If the error message is still displayed after performing the above action, please contact your dealer or an authorised Pioneer Service Station.

## MirrorLink

Message	Cause	Action
<b>The application list could not be read out.</b>	Failed to load the application list.	<ul style="list-style-type: none"> <li>• Disconnect the cable from the smartphone, and then connect the smartphone again after a few seconds.</li> <li>• Turn the ignition switch to OFF and then to ON.</li> </ul> <p>If the error message is still displayed after performing the above action, reset the smartphone.</p> <p>If the error message is still displayed after performing the above action, please contact your dealer or an authorised Pioneer Service Station.</p>
<b>There is no supported application on your MirrorLink device.</b>	No supported applications can be found.	Install <b>MirrorLink</b> compliant applications to your <b>MirrorLink</b> device.
<b>Communication error occurred.</b>	There was a communication error.	<ul style="list-style-type: none"> <li>• Disconnect the cable from the smartphone, and then connect the smartphone again after a few seconds.</li> <li>• Turn the ignition switch to OFF and then to ON.</li> </ul> <p>If the error message is still displayed after performing the above action, reset the smartphone.</p> <p>If the error message is still displayed after performing the above action, please contact your dealer or an authorised Pioneer Service Station.</p>
<b>Launching the application failed.</b>	Failed to launch the application.	Try again.
<b>Failed to display the screen of your device because of irregular resolution.</b>	The image size is too large.	The size of the images transferred from the device exceeds 800 × 480.



## Appendix

### Handling and care of discs

Some basic precautions are necessary when handling your discs.

#### Built-in drive and care

- Use only conventional, fully circular discs. Do not use shaped discs.



- Do not use cracked, chipped, warped, or otherwise damaged discs as they may damage the built-in drive.
- Use 12-cm discs. Do not use 8-cm discs or an adapter for 8-cm discs.
- When using discs that can be printed on label surfaces, check the instructions and the warnings of the discs. Depending on the discs, inserting and ejecting may not be possible. Using such discs may result in damage to this equipment.
- Do not touch the recorded surface of the discs.
- Store discs in their cases when not in use.
- Avoid leaving discs in excessively hot environments including under direct sunlight.
- Do not attach labels, write on or apply chemicals to the surface of the discs.
- Do not attach commercially available labels or other materials to the discs.
  - The discs may warp making the disc unplayable.
  - The labels may come off during playback and prevent ejection of the discs, which may result in damage to the equipment.

- To clean a disc, wipe it with a soft cloth, moving outward from the centre.



- Condensation may temporarily impair the built-in drive's performance. Leave it to adjust to the warmer temperature for about one hour. Also, wipe any damp discs with a soft cloth.
- Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions and so on.
- Road shocks may interrupt disc playback.
- Read the precautions for discs before using them.

### Ambient conditions for playing a disc

- At extremely high temperatures, a temperature cutout protects this product by switching it off automatically.
- Despite our careful design of the product, small scratches that do not affect actual operation may appear on the disc surface as a result of mechanical wear, ambient conditions for use or handling of the disc. This is not a sign of the malfunction of this product. Consider it to be normal wear and tear. ■

# Appendix

## Playable discs

### DVD-Video and CD

DVD and CD discs that display the logos shown below generally can be played on this built-in DVD drive.

#### DVD-Video



#### CD



- DVD** is a trademark of DVD Format/Logo Licensing Corporation.
- It is not possible to play DVD-Audio discs. This DVD drive may not be able to play all discs bearing the marks shown above.

### AVCHD recorded discs

This unit is not compatible with discs recorded in AVCHD (Advanced Video Codec High Definition) format. Do not insert AVCHD discs. If inserted, the disc may not be ejected.

### Playing DualDisc

- DualDiscs are two-sided discs that have a recordable CD for audio on one side and a recordable DVD for video on the other.
- Playback of the DVD side is possible with this product. However, since the CD side of DualDiscs is not physically compatible with the general CD standard, it may not be possible to play the CD side with this product.
- Frequent loading and ejecting of a DualDisc may result in scratches to the disc.

- Serious scratches can lead to playback problems on this product. In some cases, a DualDisc may become stuck in the disc-loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this product.
- Please refer to the manufacturer for more detailed information about DualDiscs.

### Dolby Digital

This product will down-mix Dolby Digital signals internally and the sound will be output in stereo.

- Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



## Detailed information for playable media

### Compatibility

#### Common notes about disc compatibility

- Certain functions of this product may not be available for some discs.
- Compatibility with all discs is not guaranteed.
- It is not possible to playback DVD-ROM/ DVD-RAM discs.
- Playback of discs may become impossible with direct exposure to sunlight, high temperatures, or depending on the storage conditions in the vehicle.

## Appendix

### DVD-Video discs

- DVD-Video discs that have incompatible region numbers cannot be played on this DVD drive. The region number of the player can be found on this product's chassis.

### DVD-R/DVD-RW/DVD-R SL (Single Layer)/DVD-R DL (Dual Layer) discs

- Unfinalised discs which have been recorded with the Video format (video mode) cannot be played back.
- Discs which have been recorded with the Video Recording format (VR mode) cannot be played back.
- DVD-R DL (Dual Layer) discs which have been recorded with Layer Jump recording cannot be played back.
- For detailed information about recording mode, please contact the manufacturer of media, recorders, or writing software.

### CD-R/CD-RW discs

- Unfinalised discs cannot be played back.
- It may not be possible to playback CD-R/CD-RW discs recorded on a music CD recorder or a computer because of disc characteristics, scratches or dirt on the disc, or dirt, scratches or condensation on the lens of the built-in drive.
- Playback of discs recorded on a computer may not be possible, depending on the recording device, writing software, their settings, and other environmental factors.
- Please record with the correct format. (For details, please contact manufacturer of media, recorders, or writing software.)
- Titles and other text information recorded on a CD-R/CD-RW disc may not be displayed by this product (in the case of audio data (CD-DA)).
- Read the precautions with CD-R/CD-RW discs before using them.

### Common notes about the external storage device (USB, SD)

- Do not leave the external storage device (USB, SD) in any location with high temperatures.
- Depending on the kind of the external storage device (USB, SD) you use, this product may not recognise the storage device or files may not be played back properly.
- The text information of some audio and video files may not be correctly displayed.
- File extensions must be used properly.
- There may be a slight delay when starting playback of files on an external storage device (USB, SD) with complex folder hierarchies.
- Operations may vary depending on the kind of an external storage device (USB, SD).
- It may not be possible to play some music files from SD or USB because of file characteristics, file format, recorded application, playback environment, storage conditions, and so on.

### Notes on SD memory cards

- Some SD memory cards may not be recognised by this unit even if the SD memory cards can be recognised by a computer. Formatting the SD memory cards using a dedicated formatter may resolve the problem. SD memory cards formatted using the standard formatting function on a computer do not comply with the SD standard. Problems such as that those cards cannot be read or written could occur. It is recommended that you use a dedicated formatter to avoid such problems. All of the data stored on an SD memory card will be deleted when the card is formatted. Back up any needed data beforehand as necessary. A dedicated formatter for SD memory cards can be obtained from the following site.  
<https://www.sdcard.org/home/>  
(Valid as of June 2012)

## Appendix

### USB storage device compatibility

- For details about USB storage device compatibility with this product, refer to *Specifications* on page 151.
- Protocol: bulk
- You cannot connect a USB storage device to this product via a USB hub.
- Partitioned USB storage device is not compatible with this product.
- Firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal.
- There may be a slight delay when starting playback of audio files encoded with image data.
- Some USB storage devices connected to this product may generate noise on the radio.
- Do not connect anything other than the USB storage device.

### The sequence of audio files on USB storage device

For USB storage device, the sequence is different from that of USB storage device.

### SD memory card and SDHC memory card

- For details about SD memory card compatibility with this product, refer to *Specifications* on page 151.

### Handling guidelines and supplemental information

- This product is not compatible with the Multi Media Card (MMC).
- Copyright protected files cannot be played back.

### Notes specific to DivX files

- Only DivX files downloaded from DivX partner sites are guaranteed for proper operation. Unauthorised DivX files may not operate properly.

- DRM rental files cannot be operated until playing back is started.
- This product corresponds to a DivX file display of up to 1 590 minutes 43 seconds. Search operations beyond this time limit are prohibited.
- DivX VOD file playback requires supplying the ID code of this product to the DivX VOD provider. Regarding the ID code, refer to *Displaying your DivX VOD registration code* on page 119.
- Plays all versions of DivX video, except for DivX 7 with standard playback of DivX media files.
- For more details about DivX, visit the following site:  
<http://www.divx.com/>

### DivX subtitle files

- Srt format subtitle files with the extension ".srt" can be used.
- Only one subtitle file can be used for each DivX file. Multiple subtitle files cannot be associated.
- Subtitle files that are named with the same character string as the DivX file before the extension are associated with the DivX file. The character strings before the extension must be exactly the same. However, if there is only one DivX file and one subtitle file in a single folder, the files are associated even if the file names are not the same.
- The subtitle file must be stored in the same folder as the DivX file.
- Up to 255 subtitle files may be used. Any more subtitle files will not be recognised.
- Up to 64 characters can be used for the name of the subtitle file, including the extension. If more than 64 characters are used for the file name, the subtitle file may not be recognised.
- The character code for the subtitle file should comply with ISO-8859-1. Using characters other than ISO-8859-1 may cause the characters to be displayed incorrectly.

## Appendix

- The subtitles may not be displayed correctly if the displayed characters in the subtitle file include control code.
- For materials that use a high transfer rate, the subtitles and video may not be completely synchronised.
- If multiple subtitles are programmed to display within a very short time frame, such as 0.1 seconds, the subtitles may not be displayed at the correct time.

# Appendix

## Media compatibility chart

### General

Media	CD-R/-RW	DVD-R/-R SL/-R DL/DVD-RW	USB storage device	SD memory card
File system	<ul style="list-style-type: none"> <li>ISO9660 level 1</li> <li>ISO9660 level 2</li> <li>Romeo, Joliet</li> <li>UDF 1.02 / 1.50 / 2.00 / 2.01 / 2.50</li> </ul>	<ul style="list-style-type: none"> <li>ISO9660 level 1</li> <li>ISO9660 level 2</li> <li>Romeo, Joliet</li> <li>UDF 1.02 / 1.50 / 2.00 / 2.01 / 2.50</li> </ul>	FAT16/FAT32/NTFS	
Maximum number of folders	700		1 500	
Maximum number of files	999	3 500	15 000	
Playable file types	MP3, WMA, AAC, DivX, MPEG1, MPEG2, MPEG4		MP3, WMA, AAC, WAVE, FLAC, H.264, MPEG4, WMV, FLV, MKV	
<b>Notes:</b>				
<ul style="list-style-type: none"> <li>Maximum playback time of audio file stored in the disc: 60 h</li> <li>Maximum playback time of audio file stored on an external storage device (USB, SD): 7.5 h (450 minutes)</li> </ul>				

### MP3 compatibility

Media	CD-R/-RW	DVD-R/-R SL/-R DL/DVD-RW	USB storage device	SD memory card
File extension	.mp3			
Bit rate	8 kbps to 320 kbps (CBR), VBR			
Sampling frequency	16 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)		8 kHz to 48 kHz	
ID3 tag	ID3 tag Ver. 1.0, 1.1, 2.2, 2.3		ID3 tag Ver. 1.0, 1.1, 2.2, 2.3, 2.4	
<b>Notes:</b>				
<ul style="list-style-type: none"> <li>Ver. 2.x of ID3 tag is prioritised when both Ver. 1.x and Ver. 2.x exist.</li> <li>This product is not compatible with the following: MP3i (MP3 interactive), mp3 PRO, m3u playlist</li> </ul>				

# Appendix

## WMA compatibility

Media	CD-R/-RW	DVD-R/-R SL/-R DL/DVD-RW	USB storage device	SD memory card
File extension	.wma			
Bit rate	5 kbps to 320 kbps (CBR), VBR			
Sampling frequency	8 kHz to 48 kHz			
<b>Note:</b> This product is not compatible with the following: Windows Media™ Audio 9 Professional, Lossless, Voice				

## WAV compatibility

Media	CD-R/-RW	DVD-R/-R SL/-R DL/DVD-RW	USB storage device	SD memory card
File extension	WAV files on the CD-R/-RW, DVD-R/-RW/-R SL/-R DL cannot be played.		.wav	
Format			Linear PCM (LPCM)	
Sampling frequency			16 kHz to 48 kHz	
Quantisation bits			8 bits and 16 bits	
<b>Note:</b> The sampling frequency shown in the display may be rounded.				

## AAC compatibility

Media	CD-R/-RW	DVD-R/-R SL/-R DL/DVD-RW	USB storage device	SD memory card
File extension	.m4a			
Bit rate	8 kbps to 320 kbps (CBR)			
Sampling frequency	8 kHz to 44.1 kHz		8 kHz to 48 kHz	
<b>Note:</b> This product plays back AAC files encoded by iTunes.				

# Appendix

## DivX compatibility

Media	CD-R/-RW	DVD-R/-R SL/-R DL/DVD-RW	USB storage device	SD memory card
File extension	.avi/.divx		DivX files on the external storage device (USB, SD) cannot be played.	
Profile (DivX version)	Home Theater Ver. 3.11/Ver. 4.x/Ver. 5.x/Ver. 6.x			
Compatible audio codec	MP3, Dolby Digital			
Bit rate (MP3)	8 kbps to 320 kbps (CBR), VBR			
Sampling frequency (MP3)	16 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)			
Maximum image size	720 pixels × 576 pixels			
Maximum file size	4 GB			
<b>Notes:</b>				
<ul style="list-style-type: none"> <li>This product is not compatible with the following: DivX Ultra format, DivX files without video data, DivX files encoded with LPCM (Linear PCM) audio codec</li> <li>Depending on the file information composition, such as the number of audio streams, there may be a slight delay in the start of playback on discs.</li> <li>If a file contains more than 4 GB, playback stops before the end.</li> <li>Some special operations may be prohibited because of the composition of DivX files.</li> <li>Files with high transfer rates may not be played back correctly. The standard transfer rate is 4 Mbps for CDs and 10.08 Mbps for DVDs.</li> </ul>				

# Appendix

## Video files compatibility (USB, SD)

File extension	.avi	.mp4		.m4v	.wmv
Format	MPEG-4	MPEG-4	H.264	MPEG-4	WMV
Compatible video codec	MPEG-4	MPEG-4	H.264	MPEG-4	WMV
Compatible audio codec	Linear PCM (LPCM) MP3	AAC	AAC	AAC	WMA
Maximum resolution	400 pixels x 240 pixels				
Maximum bit rate:	Bit rate: 2.5 Mbps Frame rate: 30 fps	Bit rate: 2.5 Mbps Frame rate: 30 fps	Bit rate: 1.5 Mbps Frame rate: 30 fps	Bit rate: 2.5 Mbps Frame rate: 30 fps	Bit rate: 768 kbps Frame rate: 30 fps
Maximum file size	4 GB				
Maximum playback time	150 minutes				

### Common notes

- Files may not be played back properly depending on the environment in which the file was created or on the contents of the file.
- This product may not operate correctly, depending on the application used to encode WMA files.
- Depending on the version of Windows Media™ Player used to encode WMA files, album names and other text information may not be correctly displayed.
- There may be a slight delay when starting playback of audio files encoded with image data.
- This product is not compatible with packet write data transfer.
- This product can recognise up to 32 characters, beginning with the first character, including extension for the file and folder name. Depending on the display area, this product may try to display them with a reduced font size. However, the maximum number of the characters that you can display varies according to the width of each character, and of the display area.
- Folder selection sequence or other operations may be altered, depending on the encoding or writing software.
- Regardless of the length of blank section between the songs of original recording, compressed audio discs play with a short pause between songs.


## Appendix

### Example of a hierarchy


The following figure is an example of the tier structure in the disc. The numbers in the figure indicate the order in which folder numbers are assigned and the order to be played back.

 Folder

 File

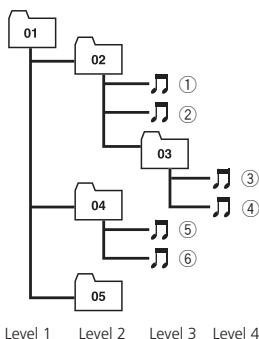


### Notes

- This product assigns folder numbers. The user cannot assign folder numbers.
- If there is a folder that does not contain any playable file, the folder itself will display in the folder list but you cannot check any files in the folder. (A blank list will appear.) Also, these folders will be skipped without displaying the folder number. 

## Bluetooth



- The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by PIONEER CORPORATION is under licence. Other trademarks and trade names are those of their respective owners. 



## SDHC



SDHC Logo is a trademark of SD-3C, LLC. 

## WMA/WMV

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

-  This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a licence from Microsoft Licensing, Inc. 

## DivX



DivX is a compressed digital video format created by the DivX video codec from DivX, LLC, a subsidiary of Rovi Corporation. This unit can play DivX video files recorded on CD-R/RW/ROM and DVD-R/RW/ROM discs. Keeping the same terminology as DVD video, individual DivX video files are called "Titles". Keep in mind that when naming files/titles on a CD-R/RW or a DVD-R/RW disc prior to burning, they will be played in written order by default.

-  DivX<sup>®</sup>, DivX Certified<sup>®</sup> and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence.

**ABOUT DIVX VIDEO:** DivX<sup>®</sup> is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified<sup>®</sup> device that plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos.

## Appendix

**ABOUT DIVX VIDEO-ON-DEMAND:** This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in *Displaying your DivX VOD registration code*. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

➔ For details, refer to *Displaying your DivX VOD registration code* on page 119. ▣

### AAC

AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG-2 and MPEG-4. Several applications can be used to encode AAC files, but file formats and extensions differ depending on the application which is used to encode. This unit plays back AAC files encoded by iTunes. ▣

### Android™

Android is a trademark of Google Inc. ▣

### MirrorLink

MirrorLink Certified™, the Design Only™ Certification Logo, MirrorLink™ and the MirrorLink™ Logo are certification marks and trademarks of the Car Connectivity Consortium LLC. Unauthorized use is strictly prohibited. ▣

### Detailed information regarding connected iPod devices

#### ⚠ CAUTION

- Pioneer accepts no responsibility for data lost from an iPod, even if that data is lost while using this product. Please back up your iPod data regularly.

- Do not leave the iPod in direct sunlight for extended amounts of time. Extended exposure to direct sunlight can result in iPod malfunction due to the resulting high temperature.
- Do not leave the iPod in any location with high temperatures.
- Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal.

For details, refer to the iPod manuals.

### iPod and iPhone



“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

### Lightning

Lightning is a trademark of Apple Inc.

### App Store

App Store is a service mark of Apple Inc.

# Appendix

## iOS

iOS is a trademark on which Cisco holds the trademark right in the US and certain other countries.

## iTunes

iTunes is a trademark of Apple Inc., registered in the U.S. and other countries. ■

## Using app-based connected content

### IMPORTANT

Requirements to access app-based connected content services using this product:

- Latest version of the Pioneer compatible connected content application(s) for the smartphone, available from the service provider, downloaded to your smartphone.
- A current account with the content service provider.
- Smartphone Data Plan.  
**Note:** if the Data Plan for your smartphone does not provide for unlimited data usage, additional charges from your carrier may apply for accessing app-based connected content via 3G, EDGE and/or LTE (4G) networks.
- Connection to the Internet via 3G, EDGE, LTE (4G) or Wi-Fi network.
- Optional Pioneer adapter cable connecting your iPhone to this product.

### Limitations:

- Access to app-based connected content will depend on the availability of cellular and/or Wi-Fi network coverage for the purpose of allowing your smartphone to connect to the Internet.
- Service availability may be geographically limited to the region. Consult the connected content service provider for additional information.
- Ability of this product to access connected content is subject to change without notice

and could be affected by any of the following: compatibility issues with future firmware versions of smartphone; compatibility issues with future versions of the connected content application(s) for the smartphone; changes to or discontinuation of the connected Content application(s) or service by its provider.

## Aha Radio

Aha, Aha Radio and the Aha and Aha Radio logos are either the trademarks or the registered trademarks of Harman International Industries, Incorporated. ■

## HDMI



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries. ■

## MHL

MHL, the MHL Logo, and Mobile High-Definition Link are trademarks or registered trademarks of MHL, LLC in the United States and other countries. ■

## Appendix

### Notice regarding video viewing

Remember that use of this system for commercial or public viewing purposes may constitute an infringement on the author's rights as protected by the Copyright Law. □

### Notice regarding DVD-Video viewing

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited. □

### Notice regarding MP3 file usage

Supply of this product only conveys a licence for private, non-commercial use and does not convey a licence nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent licence for such use is required. For details, please visit <http://www.mp3licensing.com>. □

### Using the LCD screen correctly

#### Handling the LCD screen

- When the LCD screen is subjected to direct sunlight for a long period of time, it will become very hot, resulting in possible damage to the LCD screen. When not using this product, avoid exposing it to direct sunlight as much as possible.

- The LCD screen should be used within the temperature ranges shown in *Specifications*.
- Do not use the LCD screen at temperatures higher or lower than the operating temperature range, because the LCD screen may not operate normally and could be damaged.
- The LCD screen is exposed in order to increase its visibility within the vehicle. Please do not press strongly on it as this may damage it.
- Do not push the LCD screen with excessive force as this may scratch it.
- Never touch the LCD screen with anything besides your finger when operating the touch panel functions. The LCD screen can scratch easily.

#### Liquid crystal display (LCD) screen

- If the LCD screen is near the vent of an air conditioner, make sure that air from the air conditioner is not blowing on it. Heat from the heater may break the LCD screen, and cool air from the cooler may cause moisture to form inside this product, resulting in possible damage.
- Small black dots or white dots (bright dots) may appear on the LCD screen. These are due to the characteristics of the LCD screen and do not indicate a malfunction.
- The LCD screen will be difficult to see if it is exposed to direct sunlight.
- When using a mobile phone, keep the aerial of the mobile phone away from the LCD screen to prevent disruption of the video in the form of disturbances such as spots or coloured stripes.

#### Maintaining the LCD screen


- When removing dust from or cleaning the LCD screen, first turn this product off and then wipe the screen with a soft dry cloth.

## Appendix

- When wiping the LCD screen, take care not to scratch the surface. Do not use harsh or abrasive chemical cleaners.

### **LED (light-emitting diode) backlight**

A light emitting diode is used inside the display to illuminate the LCD screen.

- At low temperatures, using the LED backlight may increase image lag and degrade the image quality because of the characteristics of the LCD screen. Image quality will improve with an increase in temperature.
- The product lifetime of the LED backlight is more than 10 000 hours. However, it may decrease if used in high temperatures.
- If the LED backlight reaches the end of its product lifetime, the screen will become dimmer and the image will no longer be visible. In that case, please consult your dealer or the nearest authorised Pioneer Service Station. 

# Appendix

## Specifications

### General

Rated power source .....	14.4 V DC (allowable voltage range: 12.0 V to 14.4 V DC)
Earthing system .....	Negative type
Maximum current consumption .....	10.0 A
Dimensions (W × H × D):	
DIN	
Chassis .....	178 mm × 100 mm × 157 mm
Nose .....	188 mm × 118 mm × 27 mm
D	
Chassis .....	178 mm × 100 mm × 165 mm
Nose .....	171 mm × 97 mm × 20 mm
Weight .....	2.2 kg

### Display

Screen size/aspect ratio .....	6.95 inch wide/16:9 (effective display area: 156.6 mm × 81.6 mm)
Pixels .....	1 152 000 (2 400 × 480)
Display method .....	TFT Active matrix driving
Colour system .....	PAL/NTSC/PAL-M/PAL-N/ SECAM compatible
Tolerable temperature range:	
Power off .....	-20°C to +80°C

### Audio

Maximum power output .....	50 W × 4 (for subwoofer: 70 W × 1 ch/ 2 Ω)
Continuous power output .....	22 W × 4 (50 Hz to 15 kHz, 5%THD, 4 Ω LOAD, Both Channels Driven)
Load impedance .....	4 Ω (4 Ω to 8 Ω [2 Ω for 1 ch] allowable)
Preout output level (max) ....	4.0 V
Equaliser (13-Band Graphic Equaliser):	
Frequency .....	50 Hz/80 Hz/125 Hz/200 Hz/ 315 Hz/500 Hz/800 Hz/ 1.25 kHz/2 kHz/3.15 kHz/ 5 kHz/8 kHz/12.5 kHz
Gain .....	± 12 dB
HPF:	
Frequency .....	50 Hz/63 Hz/80 Hz/100 Hz/ 125 Hz/160 Hz/200 Hz
Slope .....	-6 dB/oct, -12 dB/oct, - 18 dB/oct

Subwoofer:	
Frequency .....	50 Hz/63 Hz/80 Hz/100 Hz/ 125 Hz/160 Hz/200 Hz
Slope .....	-6 dB/oct, -12 dB/oct, - 18 dB/oct
Gain .....	+10 dB to -24 dB
Phase .....	Normal/Reverse
Time alignment .....	0 to 200 step (2.5 cm/step)

### DVD drive

System .....	DVD-Video, VCD, CD, MP3, WMA, AAC, DivX, JPEG, MPEG player
Usable discs .....	DVD-VIDEO, VIDEO-CD, CD, CD-R, CD-RW, DVD-R, DVD- RW, DVD-RDL
Region number .....	2
Frequency response .....	5 Hz to 44 000 Hz (with DVD, at sampling frequency 96 kHz)
Signal-to-noise ratio .....	96 dB (1 kHz) (IEC-A net- work) (RCA level)
Output level:	
Video .....	1.0 Vp-p/75 Ω (±0.2 V)
Number of channels .....	2 (stereo)
MP3 decoding format .....	MPEG-1 & 2 Audio Layer 3
WMA decoding format .....	Ver.7, 8, 9 (2 ch audio) (Windows Media Player)
AAC decoding format .....	MPEG-4 AAC (only encoded by iTunes): .m4a (Ver.11 and earlier)
DivX decoding format .....	Home Theater Ver.3.11, Ver.4.X, Ver.5.X, Ver.6.X: .avi, .divx
MPEG video decoding format .....	MPEG-1: mpg, mpeg, dat MPEG-2 PS: mpg, mpeg MPEG-4 Part2 (Visual), MS MPEG-4 Ver.3: avi

### USB

USB standard spec. ....	USB1.1, USB2.0 High Speed
Max current supply .....	1.6 A
USB Class .....	MSC (Mass Storage Class) device, iPod (AudioClass, HID Class) device
File system .....	FAT16, FAT32, NTFS
MP3 decoding format .....	MPEG-1/Layer 1, MPEG-1/ Layer 2, MPEG-1/Layer 3 MPEG-2/Layer 1, MPEG-2/ Layer 2, MPEG-2/Layer 3 MPEG-2.5/Layer 3

# Appendix

WMA decoding format .....	WMA10 Std , WMA10 Pro, WMA9 Lossless
AAC decoding format .....	MPEG-2 AAC-LC, MPEG-4 AAC-LC
WAVE signal format .....	Linear-PCM
H.264 video decoding format .....	BaseLine Profile, Main Profile, High Profile
WMV video decoding format .....	VC-1 SP/MP/AP, WMV 7/8
MPEG4 video decoding format .....	SimpleProfile, Advanced- SimpleProfile (except GMC)
JPEG decoding format .....	JPEG

## SD

Compatible physical format .....	Version 2.0
File system .....	FAT16, FAT32, NTFS
MP3 decoding format .....	MPEG-1/Layer 1, MPEG-1/ Layer 2, MPEG-1/Layer 3 MPEG-2/Layer 1, MPEG-2/ Layer 2, MPEG-2/Layer 3 MPEG-2.5/Layer 3
WMA decoding format .....	WMA10 Std , WMA10 Pro, WMA9 Lossless
AAC decoding format .....	MPEG-2 AAC-LC, MPEG-4 AAC-LC
WAVE signal format .....	Linear-PCM
H.264 video decoding format .....	BaseLine Profile, Main Profile, High Profile
WMV video decoding format .....	VC-1 SP/MP/AP, WMV 7/8
MPEG4 video decoding format .....	SimpleProfile, Advanced- SimpleProfile (except GMC)
JPEG decoding format .....	JPEG

## Bluetooth

Version .....	Bluetooth 3.0+EDR certified
Output power .....	+4 dBm Max. (Power class 2)

## FM tuner

Frequency range .....	87.5 MHz to 108.0 MHz
Usable sensitivity .....	11 dBf (0.8 $\mu$ V/75 $\Omega$ , mono, S/N: 30 dB)
Signal-to-noise ratio .....	72 dB (IEC-A network)

## MW tuner

Frequency range .....	531 kHz to 1 602 kHz (9 kHz)
Usable sensitivity .....	25 $\mu$ V (S/N: 20 dB)


Signal-to-noise ratio .....	62 dB (IEC-A network)
-----------------------------	-----------------------

 
## LW tuner

 
Frequency range .....	153 kHz to 281 kHz
Usable sensitivity .....	28 $\mu$ V (S/N: 20 dB)
Signal-to-noise ratio .....	62 dB (IEC-A network)

 


## Note

Specifications and design are subject to possible modifications without notice due to improvements. 







**<http://www.pioneer.eu>**

Visit **[www.pioneer.co.uk](http://www.pioneer.co.uk)** (or **[www.pioneer.eu](http://www.pioneer.eu)**) to register your product.

**PIONEER CORPORATION**

1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,  
Kanagawa 212-0031, JAPAN

**PIONEER EUROPE NV**

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium/Belgique  
TEL: (0) 3/570.05.11

**PIONEER ELECTRONICS (USA) INC.**

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.  
TEL: (800) 421-1404

© 2014 PIONEER CORPORATION.  
All rights reserved.