

Pioneer

AVH-X5700DAB
AVH-X3700DAB
AVH-X2700BT

DVD RDS AV RECEIVER

Operation Manual

Contents

Thank you for buying this Pioneer product. Please read through these instructions so you will know how to operate your model properly. After you have finished reading the instructions, keep this document in a safe place for future reference.

Important

The screens shown in the examples may differ from actual screens, which may be changed without notice for performance and function improvements.

Precaution	4
Important safety information	4
To ensure safe driving	4
When using a display connected to V OUT	4
To avoid battery exhaustion	5
Rear view camera	5
Handling the USB connector	5
In case of trouble	5
Visit our website	5
About this product	5
Protecting the LCD panel and screen	5
Notes on internal memory	5
About this manual	5
Basic operation	6
Checking part names and functions	6
Remote control	6
Notes on using the LCD panel	6
Adjusting the LCD panel angle	6
Inserting/ejecting/connecting media	6
On first-time startup	7
How to use the screens	8
Supported AV source	9
Displaying the AV operation screen	9
Selecting a source	9
Changing the display order of sources	9
Using the touch panel	9
Registration and connection of Bluetooth device	11
Displaying the "Bluetooth" screen	11

Registering your Bluetooth devices	11
Connecting a registered Bluetooth device manually	11
Switching visibility	11
Entering the PIN code for Bluetooth wireless connection	11
Displaying the device information	11
Clearing the Bluetooth memory	11
Updating Bluetooth software	11
Displaying the Bluetooth software version	12

Hands-free phoning	13
Displaying the Phone menu screen	13
Making a phone call	13
Receiving a phone call	13
Minimizing the dial confirmation screen	14
Changing the phone settings	14
Using the voice recognition function (for iPhone)	14
Notes for hands-free phoning	14

Setup for iPod / iPhone or smartphone	15
The basic flow of iPod / iPhone or smartphone setup	15
Setting the device connection method	15
iPod compatibility	15
Android™ device compatibility	15
MirrorLink device compatibility	15
Information on the connections and functions for each device	16

Digital Radio	17
Digital Radio tuner operations	17
Starting procedure	17
Listening to a recent broadcast (time shift)	17
Selecting a Service Component	17
Updating service list information manually	17
Displaying the "DAB settings" screen	17

Radio	19
Starting procedure	19
Storing the strongest broadcast frequencies	19
Displaying the "Radio settings" screen	19
Tuning into strong frequencies	19
Setting the FM tuning step	19
Switching the sound quality of the FM tuner	19
Setting the alternative frequency search	19

Setting the Auto PI search	20
Limiting stations to regional programming	20
Receiving traffic announcements (TA)	20
Receiving traffic announcements (TA)	20
Receiving news announcements	20

Disc	21
Starting procedure	22
Selecting files from the file name list	22
Switching the media file type	22
Searching for the part you want to play	22
Operating the DVD menu	22
Switching the subtitle/audio language	22
Operating the DVD menu using touch panel keys	22

Compressed audio files	24
Starting procedure (for Disc)	24
Starting procedure (for USB)	24
Selecting files from the file name list	25
Selecting a file by Music Browse	25
Selecting a song in the album (link search)	25
Switching the media file type	25

Compressed video files	26
Starting procedure	26
Selecting files from the file name list	26

Still image files	27
Starting procedure	27
Selecting files from the file name list	27
Switching the media file type	27
Saving the image as the wallscreen	27
Setting the slideshow interval	28

iPod	29
Connecting your iPod	29
Starting procedure	30
Selecting song or video sources from the playlist screen	30
Using this product's iPod function from your iPod	30
Selecting a song in the album (link search)	30

iPhone or smartphone applications	31
Using AppRadioMode	31

Using MirrorLink	32
Using the audio mix function	32

Pandora®	33
Pandora operations	33
Starting procedure	33
Selecting a Pandora station from the list	33
Add station	34

Bluetooth audio player	35
Starting procedure	35
Selecting files from the file name list	35

AUX source	36
Starting procedure	36
Setting the video signal	36

AV input	37
Starting procedure	37
Setting the video signal	37

MIXTRAX	38
MIXTRAX operation	38
MIXTRAX EZ operation	38
Displaying the "MIXTRAX Settings" screen	38
Setting the flash pattern	38

System settings	39
Displaying the "System" setting screen	39
Activating the Bluetooth audio source	39
Setting the ever scroll	39
Setting the beep tone	39
Setting AppRadioMode Sound	39
Setting the rear view camera	39
Setting the safe mode	39
Turning off the demo screen	39
Selecting the system language	39
Selecting the using location	40
Setting the keyboard language with the application for iPhone	40
Adjusting the response positions of the touch panel (touch panel calibration)	40
Setting the dimmer	40
Adjusting the picture	41
Displaying the firmware version	41
Updating firmware	41

Audio adjustments	42
Displaying the "Audio" setting screen	42

Contents

Using fader adjustment	42	Changing the wide screen mode	52
Using balance adjustment	42	■ Other functions.....54	
Switching sound muting/attenuation	42	Restoring this product to the default settings	54
Adjusting source levels	42	■ Appendix.....55	
Using the auto level control	42	Troubleshooting	55
Adjusting loudness.....	42	Error messages	56
Using the subwoofer output.....	42	Handling and care of discs.....	57
Adjusting the cutoff frequency value	42	Playable discs	58
Switching the rear speaker output.....	43	Detailed information for playable media	58
Boosting the bass	43	Copyright and trademark notice	61
Selecting the listening position.....	43	Bluetooth	61
Adjusting the speaker output levels finely.....	43	WMA	61
Adjusting the time alignment.....	43	DivX	61
Switching the time alignment preset.....	43	AAC	61
Using the equalizer	44	Android™	61
Adjusting the equalizer curve automatically (Auto EQ).....	44	MirrorLink.....	61
Saving the sound settings	45	Detailed information regarding connected iPod devices.....	61
Loading the sound settings	45	Using app-based connected content.....	62
■ Theme menu	46	Pandora@.....	62
Selecting the background display.....	46	Notice regarding video viewing	62
Setting the illumination color	46	Notice regarding DVD-Video viewing	62
Selecting the theme color.....	46	Notice regarding MP3 file usage	62
Selecting the clock image	46	Using the LCD screen correctly.....	62
■ Setting up the video player.....	48	Specifications.....	63
Setting the top-priority languages	48		
Setting the angle icon display.....	48		
Setting the aspect ratio	48		
Setting parental lock	49		
Displaying your DivX VOD registration code.....	49		
Displaying your DivX VOD deregistration code.....	49		
Automatic playback of DVDs	49		
Setting the video signal for the rear view camera.....	50		
■ Favorite menu	51		
Creating a shortcut	51		
Selecting a shortcut	51		
Removing a shortcut.....	51		
■ Common operations.....	52		
Setting the time and date	52		
Storing song information to an iPod (iTunes Tagging).....	52		
Setting the "Sound Retriever" function.....	52		

Precaution

Certain country and government laws may prohibit or restrict the placement and use of this product in your vehicle. Please comply with all applicable laws and regulations regarding the use, installation and operation of this product.



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.

CAUTION

This product is a Class 1 Laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.

CLASS 1 LASER PRODUCT

CAUTION—CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

Important safety information

⚠️ WARNING

- Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards.
- Do not allow this product to come into contact with liquids. Electrical shock could result. Also, damage to the product, smoke, and overheating could result from contact with liquids.
- If liquid or foreign matter should get inside this product, park your vehicle in a safe place, turn the ignition switch off (ACC OFF) immediately and consult your dealer or the nearest authorized Pioneer Service Station. Do not use this product in this condition because doing so may result in a fire, electric shock, or other failure.
- If you notice smoke, a strange noise or odor from this product, or any other abnormal signs on the LCD screen, turn off the power immediately and consult your dealer or the nearest authorized Pioneer Service Station. Using this product in this condition may result in permanent damage to the system.
- Do not disassemble or modify this product, as there are high-voltage components inside which may cause an electric shock. Be sure to consult your dealer or the nearest authorized Pioneer Service Station for internal inspection, adjustments or repairs.

Before using this product, be sure to read and fully understand the following safety information:

- Do not operate this product, any applications, or the rear view camera option (if purchased) if doing so will divert your attention in any way from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating this product or reading the display, park your vehicle in a safe location and apply the parking brake before making the necessary adjustments.
- Never set the volume of this product so high that you cannot hear outside traffic and emergency vehicles.
- To promote safety, certain functions are disabled unless the vehicle is stopped and/or the parking brake is applied.
- Keep this manual handy as a reference for operating procedures and safety information.
- Do not install this product where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air

bags or hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.

- Please remember to fasten your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled.
- Never use headphones while driving.

To ensure safe driving

⚠️ WARNING

- **LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE PARKING BRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE.**
- **Do not take any steps to tamper with or disable the parking brake interlock system which is in place for your protection. Tampering with or disabling the parking brake interlock system could result in serious injury or death.**
- **To avoid the risk of damage and injury and the potential violation of applicable laws, this product is not for use with a video image that is visible to the driver.**
- In some countries the viewing of video image on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed.

If you attempt to watch video image while driving, the warning "**Viewing of front seat video source while driving is strictly prohibited.**" will appear on the screen. To watch video image on this display, stop the vehicle in a safe place and apply the parking brake. Please keep the brake pedal pushed down before releasing the parking brake.

When using a display connected to V OUT

The video output terminal (**V OUT**) is for connection of a display to enable passengers in the rear seats to watch video images.

⚠️ WARNING

NEVER install the rear display in a location that enables the driver to watch video images while driving.

Precaution

To avoid battery exhaustion

Be sure to run the vehicle engine while using this product. Using this product without running the engine can drain the battery.

▲WARNING

Do not install this product in a vehicle that does not have an ACC wire or circuitry available.

Rear view camera

With an optional rear view camera, you are able to use this product as an aid to keep an eye on trailers, or backing into a tight parking spot.

▲WARNING

- SCREEN IMAGE MAY APPEAR REVERSED.
- USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.

▲CAUTION

The rear view mode is to use this product as an aid to keep an eye on the trailers, or while backing up. Do not use this function for entertainment purposes.

Handling the USB connector

▲CAUTION

- To prevent data loss and damage to the storage device, never remove it from this product while data is being transferred.
- Pioneer cannot guarantee compatibility with all USB mass storage devices and assumes no responsibility for any loss of data on media players, iPhone, smartphone, or other devices while using this product.

In case of trouble

Should this product fail to operate properly, contact your dealer or nearest authorized Pioneer Service Station.

Visit our website

Visit us at the following site:

<http://www.pioneer.eu>

- Register your product. We will keep the details of your purchase on file to help you refer to this information in the event of an insurance claim such as loss or theft.

- We offer the latest information about PIONEER CORPORATION on our website.
- Pioneer regularly provides software updates to further improve its products. Please check the support section of the Pioneer website for all available software updates.

About this product

- This product does not work correctly in areas other than Europe. The RDS (Radio Data System) function operates only in areas with FM stations broadcasting RDS signals. The RDS-TMC service can also be used in the area where there is a station that broadcasts the RDS-TMC signal.
- The Pioneer CarStereo-Pass is for use only in Germany.

Protecting the LCD panel and screen

- Do not expose the LCD screen to direct sunlight when this product is not used. This may result in LCD screen malfunction due to the resulting high temperatures.
- When using a cellular phone, keep the antenna of the cellular phone away from the LCD screen to prevent disruption of the video in the form of spots, colored stripes, etc.
- To protect the LCD screen from damage, be sure to touch the touch panel keys only with your finger and do so gently.

Notes on internal memory

Before removing the vehicle battery

- Some of the settings and recorded contents will not be reset.

Data subject to erasure

The information is erased by disconnecting the yellow lead from the battery (or removing the battery itself).

- Some of the settings and recorded contents will not be reset.

Resetting the microprocessor

▲CAUTION

Pressing the **RESET** button resets settings and recorded contents to the factory settings.

- Do not perform this operation when a device is connected to this product.

- Some of the settings and recorded contents will not be reset.
- The microprocessor must be reset under the following conditions:
- Prior to using this product for the first time after installation.
 - If this product fails to operate properly.
 - If there appears to be problems with the operation of the system.
 - If your vehicle position is shown on the map with a significant positioning error.

1 Turn the ignition switch OFF.





2 Press the **RESET** button with a pen tip or other pointed implement.

☞ *Checking part names and functions* on page 6
Settings and recorded contents are reset to the factory settings.

About this manual

This manual uses diagrams of actual screens to describe operations. However, the screens on some units may not match those shown in this manual depending on the model used.

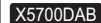
Meanings of Symbols Used in This Manual

	This indicates model name that are supported the described operations.
	This indicates to touch an appropriate soft key on the touch screen.
	This indicates to touch and hold an appropriate soft key on the touch screen.
	This indicates that there is a reference or supplementary for the key or screen.


Basic operation

Checking part names and functions


X5700DAB

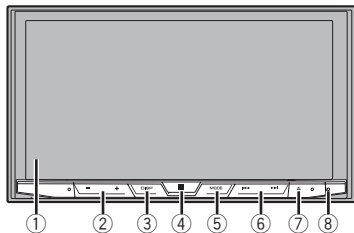

9

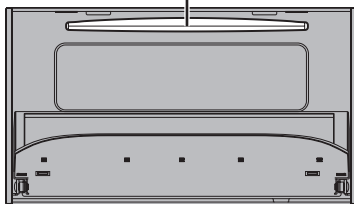

X3700DAB X2700BT

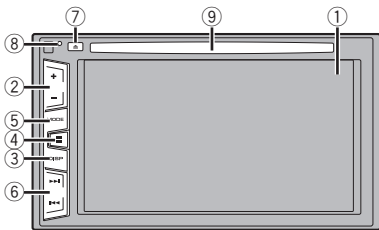

1	LCD screen	
2	Volume (+/-) button	
3	DISP button	On the AV operation screen, press to turn the display off. On the Application screen or navigation mode, press to display the side control bar. Press and hold to turn the display off. ☐ When the display is turned off, touch the screen to revert to the original screen.
4	☐ button	Press to display the top menu screen. Press and hold to activate the voice recognition function. ☞ Using the voice recognition function (for iPhone) on page 14
5	MODE button	Press to switch between the Application screen and the AV operation screen. Press and hold to switch to the camera view mode.
6	TRK (◀▶) button	Performs manual seek tuning, fast forward, reverse and track search controls.
7	▲ button	
8	RESET button	☞ Resetting the microprocessor on page 5
9	Disc-loading slot	☞ Inserting and ejecting a disc on page 6

Remote control

The remote control CD-R33 is sold separately.

☞ For details concerning operations, see the remote control manual.

Notes on using the LCD panel

▲WARNING

- Keep hands and fingers clear of this product when opening, closing, or adjusting the LCD panel. Be especially cautious of children's hands and fingers.
- Do not use with the LCD panel left open. It may result in injury in the event of an accident.

▲CAUTION

- Do not open or close the LCD panel by force. It may cause a malfunction.
- Do not operate this product until the LCD panel has

completely opened or closed. The LCD panel may stop at that angle for safety.

- Do not place a glass or can on the open LCD panel.

Adjusting the LCD panel angle

X5700DAB

- 1 Press the ▲ button.
- 2 Touch [▲] or [▼] to adjust the angle of the LCD panel.
- 3 Touch [X].

Returns to the previous screen.

Inserting/ejecting/connecting media

▲CAUTION

Do not insert anything other than a disc into the disc-loading slot.

Inserting and ejecting a disc

X5700DAB

- 1 Press the ▲ button.
- 2 Touch [▶▲] to open the LCD panel.
- 3 Insert a disc into the disc-loading slot.

Ejecting a disc

X5700DAB

- 1 Press the ▲ button.
- 2 Touch [▶▲] to open the LCD panel.
- 3 Remove the disc, and press the ▲ button.

Basic operation

Inserting a disc

X3700DAB X2700BT

- Insert a disc into the disc-loading slot.

Ejecting a disc


X3700DAB X2700BT

- Press **▲** button to eject a disc.

Plugging and unplugging a USB storage device

- This product may not achieve optimum performance with some USB storage devices.
- Connection via a USB hub is not possible.
- A USB cable is required for connection.

- 1 Pull out the plug from the USB port of the USB cable.
- 2 Plug a USB storage device into the USB cable.

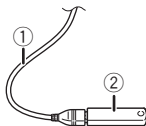

- ① USB cable
- ② USB storage device
- Check that no data is being accessed before pulling out the USB storage device.

On first-time startup

- 1 Start the engine to boot up the system.

After a short pause, the splash screen comes on for a few seconds.

The "Select Program Language" screen appears.

- From the second time on, the screen shown will differ depending on the previous conditions.

- 2 Touch the language that you want to use on screen.

- 3 Touch .

The "Setting Location" screen appears.

X2700BT

The "Speaker Mode Setting" screen appears. Skip to step 6.

- 4 Touch the item to select the using location.

- 5 Touch .

The "Speaker Mode Setting" screen appears.

- 6 Touch the speaker modes that you want to use.

- Standard Mode

4-speaker system with front and rear speakers, or a 6-speaker system with front and rear speakers and subwoofers.

- Network Mode

2-way+SW Multi amp, multi-speaker system with high speaker, mid speaker and subwoofer for reproduction of high, middle and low frequencies (bands).

⚠WARNING

Do not use the unit in standard mode when a speaker system for 3-way network mode is connected to this unit. This may cause damage to the speakers.

- 7 Touch [OK].

The "DAB ANTENNA POWER SETTING" screen appears.

X2700BT

The "Smartphone Setup" screen appears. Skip to step 10.

- 8 Touch [Yes] to use the DAB antenna power.

☞ Switching Digital Radio antenna power supply on page 18

- 9 Touch [OK].

The "Smartphone Setup" screen appears.

- 10 Touch the item you want to set.

☞ Information on the connections and functions for each device on page 16

- 11 Touch .

The top menu screen appears.

- Once the speaker mode is set, the setting cannot be changed unless this product is restored to the default settings. Restore the default settings to change the speaker mode setting.

☞ Restoring the default settings on page 54

Switching the speaker mode


- Restore the default setting.

☞ Restoring the default settings on page 54

Basic operation


How to use the screens

Application menu screen *4

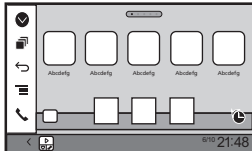

Depending on the connection method, the "smartphone setup" screen is displayed.


Application operation screen *4

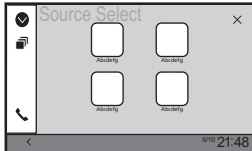

You can control the iPhone or smartphone applications directly on this product.

Recent application icons *5

Top menu screen *1 *2

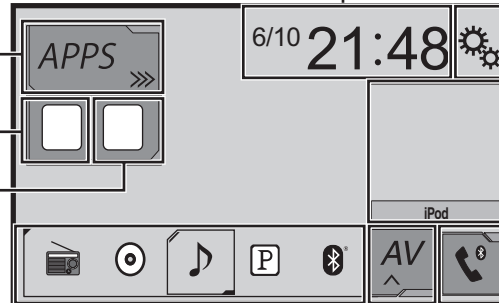


Favorite source icons *3


AV source selection screen



Time and date setting screen

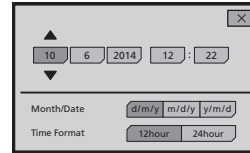


Setting menu screen

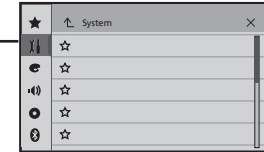


AV operation screen



Phone menu screen

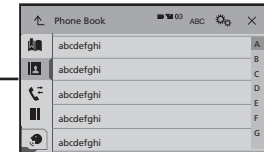

Basic operation

- *1 The top menu screen of this manual is the screen when using the **AppRadioMode**. The items displayed on the screen may vary depending on the connecting device or mode. When you connect an iPhone via Bluetooth wireless technology or a smartphone via USB cable, **Smartphone Setup** screen appears by touching [APPS].
- *2 By pressing the  button on any screen you can display the Top menu screen.
- *3 When you connect the external navigation system to this unit, the navigation mode key is displayed at the left bottom of the display.
- *4 By pressing the **MODE** button you can switch between the Application screen and the AV operation screen.
- *5 When you connect a **MirrorLink** device to this unit, the current app icon is displayed instead of recent apps and shortcut app.

Supported AV source

You can play or use the following sources with this product.

- Digital Radio (AVH-X5700DAB) (AVH-X3700DAB)
- Radio
- CD
- ROM (compressed audio files)
- DVD-Video
- USB

The following sources can be played back or used by connecting an auxiliary device.

- iPod
- Pandora® (AVH-X5700DAB) (AVH-X3700DAB)
- Bluetooth audio
- AV input (AV)
- AUX

Displaying the AV operation screen

- 1 Press .
- 2 Touch the **AV** operation key.



- ① Displays the source list.

Selecting a source

Source on the AV source selection screen

- 1 Display the “AV source selection” screen.



- 2 Touch the source icon you want to select.
 - When you select **“OFF”**, the AV source is turned off.

Source on the source list

- 1 Display the source list.
 - ↳ Displaying the AV operation screen on page 9

- 2 Touch the source key you want to select.

Changing the display order of sources

Changing the display order of source icons

- 1 Display the “AV source selection” screen.



- 2 Touch and hold a source icon, and drag the icon to the desired position.

Changing the display order of source keys

- 1 Display the source list.

↳ Displaying the AV operation screen on page 9

- 2 Touch .



- 3 Drag the source key to the desired position.

Using the touch panel


You can operate this product by touching the keys on the screen directly with your fingers.

- To protect the LCD screen from damage, be sure to touch the screen only with your finger gently.

Using the common touch panel keys

-  Returns to the previous screen.
-  Closes the screen.

Operating list screens

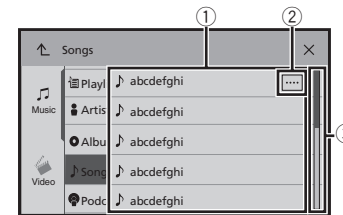


- ① Touching an item on the list allows you to narrow down the options and proceed to the next operation.
- ② Appears when all characters are not displayed on the display area.

Basic operation

If you touch the key, the rest are scrolled for display.

- ③ Appears when items cannot be displayed on a single page.
Drag the scrubber bar or the list to view any hidden items.

 Operating the time bar



- ① You can change the playback point by dragging the key.
 - ❑ Playback time corresponding to the position of the key is displayed while dragging the key.

Switching the operation panel

- **[Func.]**: Switches the operation panel of AV sources.

This key is not available on all sources.

Registration and connection of Bluetooth device

Displaying the "Bluetooth" screen

- 1 Press **⏏**.
- 2 Touch **[☰]**, and then **[0]**.
The "Bluetooth" screen appears.

Registering your Bluetooth devices

- If three devices are already paired, "Memory Full" is displayed. Delete a paired device first.
- ⇒ *Deleting a registered device* on page 11
- 1 **Activate the Bluetooth wireless technology on your devices.**

- 2 **Display the "Bluetooth" screen.**
⇒ *Displaying the "Bluetooth" screen* on page 11

- 3 **Touch [Connection].**

- 4 **Touch [Q].**

The system searches for Bluetooth devices waiting for a connection and displays them in the list if a device is found.

- 5 **Touch the Bluetooth device name you want to register.**

- If your device supports SSP (Secure Simple Pairing), a six-digit number appears on the display of this product. Touch **[Yes]** to pair the device.
 - Once the connection is established, the device name is displayed. Touch the device name to disconnect. After the device is successfully registered, a Bluetooth connection is established from the system.
 - The Bluetooth connection can be also made by detecting this product from the Bluetooth device. Before registration, make sure that "Visibility" in the "Bluetooth" menu is set to "On". For details on a Bluetooth device operations, refer to the operating instructions supplied with the Bluetooth device.
- ⇒ *Switching visibility* on page 11

Connecting to a Bluetooth device automatically

This function connects the last connected Bluetooth device to this product automatically as soon as the two devices are less than a few meters apart.

- 1 **Display the "Bluetooth" screen.**
⇒ *Displaying the "Bluetooth" screen* on page 11
- 2 **Touch [Auto Connect] to switch "On" (default) or "Off".**

Deleting a registered device

⚠CAUTION

Never turn this product off while the paired Bluetooth device is being deleted.

- 1 **Display the "Bluetooth" screen.**
⇒ *Displaying the "Bluetooth" screen* on page 11
- 2 **Touch [Connection].**
- 3 **Touch [🗑].**

Connecting a registered Bluetooth device manually

Connect the Bluetooth device manually in the following cases:

- Two or more Bluetooth devices are registered, and you want to manually select the device to be used.
- You want to reconnect a disconnected Bluetooth device.
- Connection cannot be established automatically for some reason.

- 1 **Activate the Bluetooth wireless technology on your devices.**
- 2 **Display the "Bluetooth" screen.**
⇒ *Displaying the "Bluetooth" screen* on page 11
- 3 **Touch [Connection].**
- 4 **Touch the name of the device that you want to connect.**

Switching visibility

This function sets whether or not to make this product visible to the other device.

- 1 **Display the "Bluetooth" screen.**
⇒ *Displaying the "Bluetooth" screen* on page 11
- 2 **Touch [Visibility] to switch "On" (default) or "Off".**

Entering the PIN code for Bluetooth wireless connection

To connect your Bluetooth device to this product, you need to enter a PIN code.

You can change the PIN code with this function.

- 1 **Display the "Bluetooth" screen.**
⇒ *Displaying the "Bluetooth" screen* on page 11
- 2 **Touch [PIN Code Input].**
- 3 **Touch [0] to [9] to input the pin code (up to 8 -digits).**
- 4 **Touch [🗑].**
 - The default PIN code is "0000".

Displaying the device information

- 1 **Display the "Bluetooth" screen.**
⇒ *Displaying the "Bluetooth" screen* on page 11
- 2 **Touch [Device Information].**
The device name and address of the Bluetooth device and this product are displayed.

Clearing the Bluetooth memory

- This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

⚠CAUTION

Never turn this product off while the Bluetooth memory is being cleared.

- 1 **Display the "Bluetooth" screen.**
⇒ *Displaying the "Bluetooth" screen* on page 11
- 2 **Touch [Bluetooth Memory Clear].**
- 3 **Touch [Clear].**
The confirmation screen appears.

Updating Bluetooth software

This function is used to update this product with the latest Bluetooth software. For details on Bluetooth software and updating, refer to our website.

- The source is turned off and the Bluetooth connection is disconnected before the process starts.

Registration and connection of Bluetooth device

- ❑ This setting is available only when you stop your vehicle in a safe place and apply the parking brake.
- ❑ You need to store the version up file to the USB storage device in advance.

⚠ CAUTION

Never turn this product off and never disconnect the phone while the software is being updated.

1 Connect the USB storage device stored the version up file to this unit.

↻ *Plugging and unplugging a USB storage device on page 7*

2 Display the “Bluetooth” screen.

↻ *Displaying the “Bluetooth” screen on page 11*

3 Touch [BT Software Update].

4 Touch [Start].

Follow the on-screen instructions to finish updating the Bluetooth software.

Displaying the Bluetooth software version

If this product fails to operate properly, you may need to consult your dealer for repair.

In such cases, perform the following procedure to check the software version on this unit.

1 Display the “Bluetooth” screen.

↻ *Displaying the “Bluetooth” screen on page 11*


2 Touch [Bluetooth Version Information].

The version of this product's Bluetooth module appears.

Hands-free phoning

Bluetooth telephone connected indicator

The device number of the connected device is displayed.

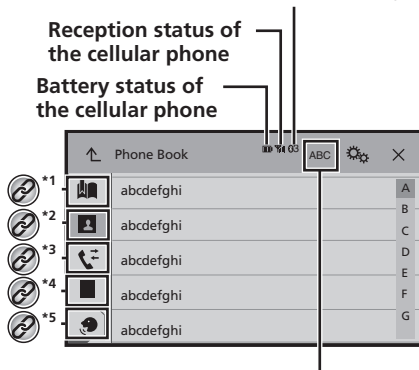

Switches the search language to English or system language.

- *1 Displays the preset dial screen.
↳ *Using the preset dial lists on page 13*
- *2 Switches to the phone book list.
↳ *Calling a number in the phone book on page 13*
- *3 Switches to the missed, received and dialed call lists.
↳ *Dialing from the history on page 13*
- *4 Switches the mode to enter the phone number directly.
↳ *Direct dialing on page 13*
- *5 Switches to the voice recognition function (for iPhone).
↳ *Using the voice recognition function (for iPhone) on page 14*

CAUTION

For your safety, avoid talking on the phone as much as possible while driving.

To use this function you need to connect your cellular phone to this product via Bluetooth in advance.

↳ *Registration and connection of Bluetooth device on page 11*

Displaying the Phone menu screen

1 Press .

2 Touch .

The Phone menu screen appears.

Making a phone call

You can make a phone call in many different ways.

Direct dialing

1 Display the "Phone menu" screen.

↳ *Displaying the Phone menu screen on page 13*

2 Touch .

3 Touch the number keys to enter the phone number.

4 Touch  to make a call.

5 Touch  to end the call.

You may hear a noise when you hang up the phone.

Calling a number in the phone book

The contacts on your phone will be automatically transferred to this product.

"Visibility" of the "Bluetooth" screen should be on.

↳ *Switching visibility on page 11*

1 Display the "Phone menu" screen.

↳ *Displaying the Phone menu screen on page 13*

2 Touch .

3 Touch the desired name on the list.

4 Touch the phone number you want to dial.

The dial screen appears and dialing starts.

5 Touch  to end the call.

Dialing from the history


1 Display the "Phone menu" screen.

↳ *Displaying the Phone menu screen on page 13*

2 Touch .

3 Touch the item to switch the history list.

The following items are available:

●  Received call list

●  Dialed call list

●  Missed call list

4 Touch the desired entry on the list to make a call.

The dial screen appears and dialing starts.

5 Touch  to end the call.

Using the preset dial lists

Registering a phone number

You can easily store up to six phone numbers per device as presets.

1 Display the "Phone menu" screen.

↳ *Displaying the Phone menu screen on page 13*

2 Touch  or .

On the "Phone Book" screen, touch the desired name.

3 Touch .

Dialing from the preset dial list

1 Display the "Phone menu" screen.

↳ *Displaying the Phone menu screen on page 13*


2 Touch .


3 Touch the desired item you want to dial.

The dial screen appears and dialing starts.

Receiving a phone call

1 Touch  to answer the call.



▪ If you touch  while getting a call waiting, you can switch to the talking person.

▪ Touch  to reject the call.

Hands-free phoning

- 2 Touch  to end the call.

Minimizing the dial confirmation screen

- The dial confirmation screen cannot be minimized on the AV operation screen.
- AV sources cannot be selected even if the dial confirmation screen is minimized while talking on the phone or receiving an incoming call.
- Touch .
- Touch  to display the dial confirmation screen again.

Changing the phone settings

Answering a call automatically

- 1 Display the “Bluetooth” screen.
➔ *Displaying the “Bluetooth” screen on page 11*
- 2 Touch [Auto Answer] to switch “On” or “Off” (default).

Switching the ring tone

You can select whether or not to use this product’s ring tone.



- 1 Display the “Bluetooth” screen.
➔ *Displaying the “Bluetooth” screen on page 11*
- 2 Touch [Ring Tone] to switch “On” (default) or “Off”.

Inverting names in the phone book

- 1 Display the “Bluetooth” screen.
➔ *Displaying the “Bluetooth” screen on page 11*
- 2 Touch [Invert Name].


Setting the private mode

During a conversation, you can switch to private mode (talk directly on your cellular phone).

- Touch  or  to turn private mode on or off.

Adjusting the other party’s listening volume

This product can be adjusted to the other party’s listening volume.

- Touch  to switch between the three volume levels.
- Settings can be stored for each device.

Using the voice recognition function (for iPhone)


By connecting your iPhone to this unit, you can use the voice recognition function (Siri Eyes Free Mode) on this unit.

- When an iPhone running iOS 6.1 or higher is used, Siri Eyes Free Mode is available with this product.

- 1 Display the “Phone menu” screen.
➔ *Displaying the Phone menu screen on page 13*

- 2 Touch .

The voice recognition function launches and the voice control screen appears.

- You can also launch the voice recognition function by pressing and holding .

Notes for hands-free phoning

General notes

- Connection to all cellular phones featuring Bluetooth wireless technology is not guaranteed.
- The line-of-sight distance between this product and your cellular phone must be 10 meters or less when sending and receiving voice and data via Bluetooth technology.
- With some cellular phones, the ring sound may not be output from the speakers.
- If private mode is selected on the cellular phone, hands-free phoning may be disabled.

Registration and connection

- Cellular phone operations vary depending on the type of cellular phone. Refer to the instruction manual that came with your cellular phone for detailed instructions.

- When phone book transfer does not work, disconnect your phone and then perform pairing again from your phone to this product.

Making and receiving calls

- You may hear a noise in the following situations:
 - When you answer the phone using the button on the phone.
 - When the person on the other end of the line hangs up the phone.
- If the person on the other end of the line cannot hear the conversation due to an echo, decrease the volume level for hands-free phoning.
- With some cellular phones, even after you press the accept button on the cellular phone when a call comes in, hands-free phoning may not be performed.
- The registered name will appear if the phone number is already registered in the phone book. When one phone number is registered under different names, only the phone number will be displayed.

The received call and the dialed number histories

- You cannot make a call to the entry of an unknown user (no phone number) in the received call history.
- If calls are made by operating your cellular phone, no history data will be recorded in this product.

Phone book transfers

- If there are more than 1 000 phone book entries on your cellular phone, not all entries may download completely.
- Depending on the phone, this product may not display the phone book correctly.
- If the phone book in the phone contains image data, the phone book may not be transferred correctly.
- Depending on the cellular phone, phone book transfer may not be available.

Setup for iPod / iPhone or smartphone

When using an iPod / iPhone or a smartphone with this product, configure the settings of this product according to the device to be connected.

This section describes the settings required for each device.

The basic flow of iPod / iPhone or smartphone setup

- 1 Select the method for connecting your device.
- 2 *Setting the device connection method* on page 15
- 3 Connect your device to this product.
- 4 Connection, refer to installation manual.
- 5 If necessary, connect your device to this product via Bluetooth connection.
- 6 *Registration and connection of Bluetooth device* on page 11

Setting the device connection method

To use the application for iPhone or smartphone on this product, select the method for connecting your device.

Settings are required according to the connected device.

1 Display the “System” setting screen.



2 Touch [Input/Output Settings].

3 Touch [Smartphone Setup].

4 Touch the following settings.

- **Device:** Select the device to be connected.
 - **Connection:** Select the connection method.
 - ☞ *Information on the connections and functions for each device* on page 16
- The setting will change after the following processes are automatically executed.
- The source is turned off.
 - **AppRadioMode** and **MirrorLink** mode are exited.
 - The smartphone connection (USB and Bluetooth) is disconnected.

iPod compatibility

This product supports only the following iPod models and iPod software versions. Others may not work correctly.

- iPhone 4, 4s, 5, 5s, 5c: iOS 7.0 or later.
- iPhone 3GS: iOS 6.0.1
- iPod touch (4th, 5th generation): iOS 6.0.1
- iPod touch (3rd generation): iOS 5.1.1
- iPod touch (2nd generation): iOS 4.2.1
- iPod classic 160GB (2009): Ver. 2.0.4
- iPod classic 160GB (2008): Ver. 2.0.1
- iPod classic 80GB: Ver. 1.1.2
- iPod nano (7th generation)
- iPod nano (6th generation): Ver. 1.2
- iPod nano (5th generation): Ver. 1.0.2
- iPod nano (4th generation): Ver. 1.0.4
- iPod nano (3rd generation): Ver. 1.1.3
- You can connect and control an iPod compatible with this product by using separately sold connector cables.
- Operation methods may vary depending on the iPod model and the software version.
- Depending on the software version of the iPod, it may not be compatible with this product.

For details about iPod compatibility with this product, refer to the information on our website.

This manual applies to the following iPod models.

iPod with 30-pin connector

- iPhone 3GS, 4, 4s
- iPod touch 2nd, 3rd, 4th generation
- iPod classic 80GB, 160GB
- iPod nano 3rd, 4th, 5th, 6th generation

iPod with Lightning connector

- iPhone 5, 5s, 5c
- iPod touch 5th generation
- iPod nano 7th generation

Android™ device compatibility

- Operation methods may vary depending on the Android device and the software version of the Android OS.
 - Depending on the version of the Android OS, it may not be compatible with this product.
 - Compatibility with all Android devices is not guaranteed.
- For details about Android device compatibility with this product, refer to the information on our website.

MirrorLink device compatibility

- This product is compatible with **MirrorLink** version 1.1.
- Compatibility with all **MirrorLink** devices is not guaranteed.

For details about **MirrorLink** device compatibility with this product, refer to the information on our website.

Setup for iPod / iPhone or smartphone

Information on the connections and functions for each device

The settings and cables required for connecting each device, and the available sources are as follows.


iPod / iPhone with a 30-pin connector			
Device connection method		When connecting via Bluetooth	When connecting via CD-IU201V (sold separately)
Smartphone Setup	Device	iPhone/iPod / iPod	iPhone/iPod / iPod
	Connection	Wireless via BT	USB
Bluetooth connection		Bluetooth connection is required.	—
Available sources	iPod (audio)	✓	✓
	iPod (video)	—	✓
	Pandora	✓ (AVH-X5700DAB) (AVH-X3700DAB)	✓

iPod / iPhone with a Lightning connector			
Device connection method		When connecting via Bluetooth	When connecting via CD-IU52 (sold separately)
Smartphone Setup	Device	iPhone/iPod / iPod	iPhone/iPod / iPod
	Connection	Wireless via BT	USB
Bluetooth connection		Bluetooth connection is required.	—
Available sources	iPod (audio)	✓	✓
	iPod (video)	—	—
	Pandora	✓ (AVH-X5700DAB) (AVH-X3700DAB)	✓
	AppRadioMode	—	✓

Android, MirrorLink device			
Device connection method		When connecting via Bluetooth	When connecting via CD-MU200 (sold separately)
Smartphone Setup	Device	Others	Others
	Connection	USB / MTP	MirrorLink / AppRadioMode
Bluetooth connection		Bluetooth connection is required for using Pandora.	Bluetooth connection is required for using Pandora.
Available sources	Pandora	✓ (AVH-X5700DAB) (AVH-X3700DAB)	✓
	MirrorLink	—	✓ When "Connection" of "Smartphone Setup" is set to "MirrorLink".
	AppRadioMode	—	✓ When "Connection" of "Smartphone Setup" is set to "AppRadioMode".

Digital Radio

X5700DAB X3700DAB

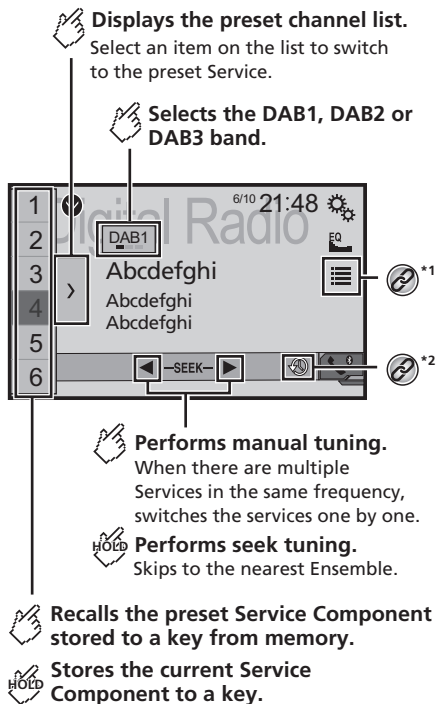

- *1 Displays the service list screen.
 - ☞ Selecting a Service Component on page 17
 - ☞ Updating service list information manually on page 17
- *2 Switches to time shift mode.
 - ☞ Listening to a recent broadcast (time shift) on page 17

- ☐ By pressing **◀◀** or **▶▶**, you can also switch the preset Service Components.
- ☐ By pressing and holding **◀◀** or **▶▶** and release, you can also perform seek tuning.

Digital Radio tuner operations

For improved Digital Radio reception, make sure a Digital Radio antenna with phantom power input (active type) is used. Pioneer recommends using AN-DAB1 (sold separately).

Current consumption of Digital Radio antenna should be 100 mA or less.

- High sound quality (nearly as high as for CDs, although it may be reduced in some cases in order to allow more services to be broadcast)
- Interference-free reception
- Some stations perform broadcast testing.

MFN support

When some ensembles support the same Service Component, switches to another ensemble that has better reception automatically.

Starting procedure

- 1 Display the "AV source selection" screen.



- 2 Touch [Digital Radio].

The "Digital Radio" screen appears.

- ☐ The service list will be automatically updated when the Digital Radio function is started for the first time. If the update succeeds, the station listed at the top of the service list will be automatically tuned in to.

Listening to a recent broadcast (time shift)

This product stores recent broadcasts to memory automatically. You can pause or listen to the stored broadcasts again by using this function (time shift mode).

- Touch **⏮** to switch to time shift mode.
- Touch **⏪** to resume the live broadcast.

- ☐ Stored broadcast is overwritten by the latest broadcast.
- ☐ If the duration that a selection is paused exceeds the length of the memory capacity, playback will resume from the beginning of the selection in memory.

Selecting a Service Component

You can select a Service Component.

- 1 Touch **☰** to display the service list screen.
- 2 Touch the service title to display the service list.
 - **Service** (service label): Displays all Service components.
 - **Program Type** (PTY label): Searches from program type information.
 - **Ensemble** (ensemble label): Displays the Ensemble list.
- 3 Touch the desired item.

Updating service list information manually

- 1 Touch **☰** to display the service list screen.
- 2 Touch [Update Stations].
 - ☐ When you start to use this source, service list information is automatically updated.
 - ☐ When there is any change in the current ensemble, service list information is automatically updated.

Displaying the "DAB settings" screen

- 1 Press **⏮**.
- 2 Touch **⏮**, and then **⏪**.
- 3 Touch [AV Source Settings].
- 4 Touch [DAB settings].

Setting the service follow

HARD LINK

When the tuner cannot get good reception, tunes to another ensemble that supports the same Service Component.

If no alternative Service Component can be found or reception remains poor, this function will automatically switch to an identical FM broadcast.

SOFT LINK

- ☐ This function is available when "Soft Link" is "On".
- ☞ *Setting the Soft link on page 18*
- ☐ Only available in areas where SOFT LINK function is supported.
- ☐ The broadcast content of the switched channel may differ from the content of the original channel.

When HARD LINK is unsuccessful, tunes to another ensemble that supports the similar Service Component.

If no alternative Service Component can be found or reception remains poor, this function will automatically switch to a similar FM broadcast.

1 Display the "DAB settings" screen.

☞ *Displaying the "DAB settings" screen on page 17*

2 Touch [Service Follow] to switch "On" (default) or "Off".

- Depending on the model used, this menu may not be displayed.

Switching Digital Radio antenna power supply

- ☐ For details on how to connect a Digital Radio antenna, refer to the installation manual.

1 Turn the source off.

☞ *Source on the AV source selection screen on page 9*

2 Display the "DAB settings" screen.

☞ *Displaying the "DAB settings" screen on page 17*

3 Touch [Antenna Power] to switch "On" (default) or "Off".

Receiving traffic announcements (TA)

The traffic announcement can be received from the last selected frequency, interrupting the other sources.

1 Display the "DAB settings" screen.

☞ *Displaying the "DAB settings" screen on page 17*

2 Touch [TA Interrupt].

3 Touch the item you want to set.

- TA OFF (default):

Turns TA Interrupt off.

● DAB+RDS TA:

Receives the traffic announcement from DAB and RDS. The traffic announcement from DAB has a priority.

● RDS TA ONLY:

Receives traffic announcements automatically from RDS station only.

- Depending on the model used, this menu may not be displayed.

Setting the Soft link

- ☐ This function is available when "Service Follow" is "On".
- ☞ *Setting the service follow on page 17*
- ☐ Only available in areas where SOFT LINK function is supported.


1 Display the "DAB settings" screen.

☞ *Displaying the "DAB settings" screen on page 17*

2 Touch [Soft Link] to switch "On" or "Off" (default).

- Depending on the model used, this menu may not be displayed.

Radio

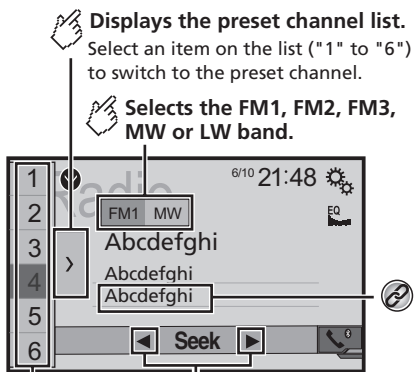

Displays the preset channel list. Select an item on the list ("1" to "6") to switch to the preset channel.

Selects the FM1, FM2, FM3, MW or LW band.

Performs manual tuning.

Performs seek tuning or non stop seek tuning.

Releasing the key in a few seconds, skips to the nearest station from the current frequency.

Keeping holding the key for a long seconds, performs non stop seek tuning.

Recalls the preset channel stored to a key from memory.

Stores the current broadcast frequency to a key.

Stores song information to an iPod.
→ Storing song information to an iPod (iTunes Tagging) on page 52

- By pressing **◀◀** or **▶▶**, you can also switch the preset channels.
- By pressing and hold **◀◀** or **▶▶** and release, you can also perform seek tuning.
- By keeping touching and holding **◀◀** or **▶▶**, you can perform non stop seek tuning. Touch again to cancel.

Starting procedure

- 1 Display the "AV source selection" screen.



- 2 Touch [Radio].
The "Radio" screen appears.

Storing the strongest broadcast frequencies

The BSM (best stations memory) function automatically stores the six strongest broadcast frequencies under the preset tuning keys "1" to "6".

- Storing broadcast frequencies with BSM may replace those you have already saved.
- Previously stored broadcast frequencies may remain stored if the number of frequencies stored has not reached the limit.

- 1 Touch .
- 2 Touch to begin a search.

While the message is displayed, the six strongest broadcast frequencies will be stored under the preset tuning keys in order of their signal strength.

- If you touch [Cancel], the storage process is canceled.

Displaying the "Radio settings" screen

- 1 Press .
- 2 Touch , and then .
- 3 Touch [AV Source Settings].
- 4 Touch [Radio settings].

Tuning into strong frequencies

- You can use this function when "Radio" is selected as the source.

Local seek tuning allows you to only tune into those radio stations with sufficiently strong signals.

- 1 Display the "Radio settings" screen.

→ Displaying the "Radio settings" screen on page 19

- 2 Touch [Local].

- 3 Touch the item you want to set.

● Off (default):

Turns the seek tuning setting off.

● Level1 to Level4:

Sets the level of sensitivity for FM to Level1 to Level4 (for MW and LW to Level1 or Level2).

- The FM "Level4" (MW and LW "Level2") setting allows reception of only stations with the strongest signals.

Setting the FM tuning step

You can switch the seek tuning step for FM band.

- The tuning step remains at 50 kHz during manual tuning.

- 1 Turn the source off.

→ Source on the AV source selection screen on page 9

- 2 Display the "Radio settings" screen.

→ Displaying the "Radio settings" screen on page 19

- 3 Touch [FM Step] to switch the step to "50kHz" (default) or "100kHz".

Switching the sound quality of the FM tuner

- This function is available only when you receive the FM band.

- 1 Display the "Radio settings" screen.

→ Displaying the "Radio settings" screen on page 19

- 2 Touch [Tuner Sound] to select the item.

● Music (default):

Gives priority to the sound quality.

● Talk:

Gives priority to noise prevention.

● Standard:

Gives no effect.

Setting the alternative frequency search

When the tuner cannot get a good reception, tunes to another broadcast station that supports the same program in the current network.

- 1 Display the "Radio settings" screen.

➤ *Displaying the "Radio settings" screen on page 19*

- 2 Touch [Alternative FREQ] to switch "On"(default) or "Off".

Setting the Auto PI search

When you switch to the broadcast station containing RDS data, searches for the same PI (Program Identification) code broadcast station from all frequency band automatically.

- 1 Display the "Radio settings" screen.

➤ *Displaying the "Radio settings" screen on page 19*

- 2 Touch [Auto PI] to switch "On" or "Off" (default).

Even if you set to "Off", the PI search is automatically performed when the tuner cannot get a good reception.

Limiting stations to regional programing

You can switch whether the area code is checked during the auto PI search.

- 1 Display the "Radio settings" screen.

➤ *Displaying the "Radio settings" screen on page 19*

- 2 Touch [Regional] to switch "On" (default) or "Off".

Receiving traffic announcements (TA)

This function is available only when you receive the FM band. The traffic announcement can be received from the last selected frequency, interrupting the other sources.

X5700DAB X3700DAB

- 1 Display the "Radio settings" screen.

➤ *Displaying the "Radio settings" screen on page 19*

- 2 Touch [TA Interrupt].

- 3 Touch the item you want to set.

- TA OFF (default):

Turns TA Interrupt off.

- DAB+RDS TA:

Receives the traffic announcement from DAB and RDS. The traffic announcement from DAB has a priority.

- RDS TA ONLY:

Receives traffic announcements automatically from RDS station only.

Receiving traffic announcements (TA)

This function is available only when you receive the FM band. The traffic announcement can be received from the last selected frequency, interrupting the other sources.

X2700BT

- 1 Display the "Radio settings" screen.

➤ *Displaying the "Radio settings" screen on page 19*

- 2 Touch [TA Interrupt] to switch "On" or "Off" (default).

Receiving news announcements

The news can be received from the last selected frequency, interrupting the other sources.


- 1 Display the "Radio settings" screen.

➤ *Displaying the "Radio settings" screen on page 19*

- 2 Touch [News Interrupt] to switch "On" or "Off" (default).

Track number indicator

Audio source screen 1

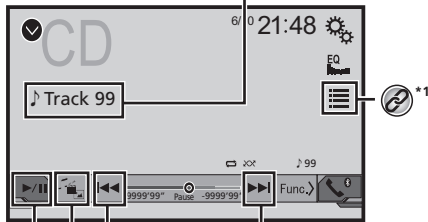

*2 Skips files forward or backward.


Switches between playback and pause.

Plays files in random order.
This function is available for music CD.

: Does not play tracks in random order.

: Plays all tracks in random order.

Audio source screen 2

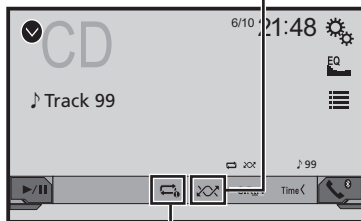

Sets a repeat play range.

: Repeats the current disc.

: Repeats the current track.


Hides the touch panel keys.
To display again the keys, touch anywhere on the screen.

Performs frame-by-frame playback.

Performs slow-motion playback.

Each time you touch it changes the speed in four steps in the following order: 1/16 → 1/8 → 1/4 → 1/2

Video source screen 1

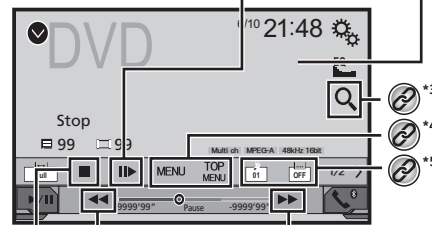


Performs fast reverse or fast forward.

Touch again to change play back the speed.

Stops playback.

Video source screen 2

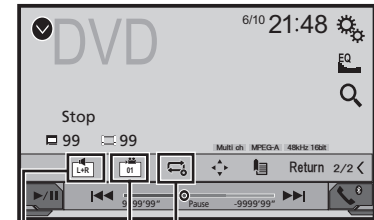

Sets a repeat play range.

: Repeats all files.

: Repeats the current chapter.

: Repeats the current title.


Changes the viewing angle (Multi-angle).

This function is available for DVDs featuring multi-angle recordings.

Selects the audio output from [L+R], [Left], [Right], [Mix].

This function is available for Video-CDs and DVDs recorded with LPCM audio.

Video source screen 2

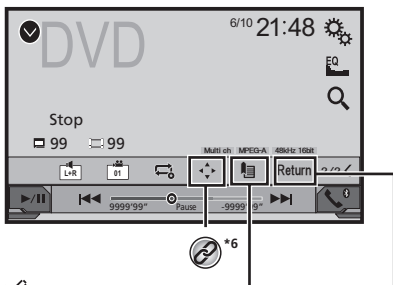

Resumes playback (Bookmark).
This function is available for DVD-Video. You can memorize one point as a Bookmark for a disc (up to five discs). To clear the bookmark on the disc, touch and hold this key.

Returns and begins playback from the specified point.
This function is available for DVD-Video and Video-CDs featuring PBC (playback control).

- *1 Selects a track from the list.
↳ *Selecting files from the file name list on page 22*
- *2 Switches the media file type.
↳ *Switching the media file type on page 22*
- *3 Searches for the part you want to play.
↳ *Searching for the part you want to play on page 22*
- *4 Displays the DVD menu.
↳ *Operating the DVD menu on page 22*
- *5 Switches the subtitle/audio language.
↳ *Switching the subtitle/audio language on page 22*
- *6 Displays the DVD menu keypad.
↳ *Operating the DVD menu using touch panel keys on page 22*

- ❑ By pressing **⏮** or **⏭**, you can also skip files/chapters forward or backward.
 - ❑ By pressing and holding **⏮** or **⏭**, you can also perform fast reverse or fast forward.
 - ❑ If a Video-CD with PBC On is being played, **[PBCOn]** appears.
 - ❑ Changing the wide screen mode.
 - ↳ *Common operations on page 52*
- You can play a normal music CD, Video-CD or DVD-Video using the built-in drive of this product.

⚠ CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

Starting procedure

- 1 Display the "AV source selection" screen.



- 2 Insert the disc you want to play.

The source changes and then playback will start.

- ↳ *Inserting and ejecting a disc on page 6*
- ❑ If the disc is already set, select **[Disc]** as the playing source.

Selecting files from the file name list

- 1 Touch **[List]**.
- 2 Touch a track on the list to play back.

Switching the media file type

When playing a digital media containing a mixture of various media file types you can switch between media file types to play.

- 1 Touch **[File]**.
- 2 Touch the item you want to set.
 - **Music:**
Switches the media file type to music (compressed audio).
 - **Video:**
Switches the media file type to video.
 - **CD-DA:**
Switches the media file type to CD (audio data (CD-DA)).

Searching for the part you want to play

- ❑ For DVD-Videos, you can select **[Title]**, **[Chapter]** or **[10Key]**.
- ❑ For Video-CDs, you can select **[Track]** or **[10Key]** (PBC only).

- 1 Touch **[Q]**.
- 2 Touch the item to select the search function.
- 3 Touch **[0]** to **[9]** to input the desired number.
 - ❑ To cancel an input number, touch **[Clear]**.
- 4 Touch **[Play]** to start playback from the number you registered.

Operating the DVD menu

You can operate the DVD menu by touching the menu item on the screen directly.

- ❑ This function may not work properly with some DVD disc content. In that case, use touch panel keys to operate the DVD menu.

- 1 Touch **[TOP MENU]** or **[MENU]**.
- 2 Touch the desired menu item.

Switching the subtitle/audio language


- Touch **[Sub]** or **[Audio]** to change the language.
- **[Sub]:** Changes the subtitle language.
- **[Audio]:** Changes the audio language.
- You can also switch the subtitle/audio languages using the "DVD/DivX Setup" menu.
- ↳ *Setting the top-priority languages on page 48*

Operating the DVD menu using touch panel keys

If items on the DVD menu appear, the touch panel keys may overlay them. If so, select an item using those touch panel keys.


- 1 Touch **[Key]**.
- 2 Touch **⏮**, **⏭**, **⏪** or **⏩** to select the desired menu item.
- 3 Touch **[Play]**.

Disc

- The way to display the menu differs depending on the disc.
 - If you touch , you can operate the DVD menu directly.

Compressed audio files

Playback screen 1 (Example: USB)

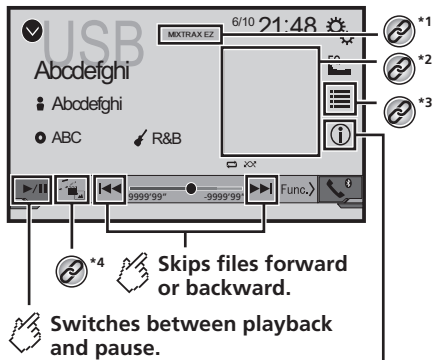

*4 Skips files forward or backward.

Switches between playback and pause.

Switches the current music information display.

This function is available only for USB.

Plays files in random order.

: Does not play files in random order.

: Plays all files within the repeat range in random order.

Playback screen 2 (Example: USB)



Sets a repeat play range.

or : Repeats all files.

: Repeats the current folder.

: Repeats the current file.

Selects the previous folder or the next folder.

Constructs the database for using the Music Browse mode.

This function is available only for USB.

*1 Displays the MIXTRAX screen.
This function is available for the USB storage device only.
↳ MIXTRAX on page 38

*2 Selects a file from the list.
↳ Selecting files from the file name list on page 25
 When you use a USB storage device, you can search a file by Music Browse.
↳ Selecting a file by Music Browse on page 25

*3 Displays the link search screen.
This function is available for the USB storage device only.

↳ Selecting a song in the album (link search) on page 25

*4 Switches the media file type.
↳ Switching the media file type on page 25

By pressing or , you can also skip files forward or backward.

By pressing and holding or , you can perform fast reverse or fast forward.

You can play compressed audio files stored in a disc or a USB storage device.

↳ Media compatibility chart on page 59

Starting procedure (for Disc)

1 Display the “AV source selection” screen.



2 Insert the disc you want to play.

The source changes and then playback will start.

↳ Inserting and ejecting a disc on page 6

If the disc is already set, select [Disc] as the playing source.

Starting procedure (for USB)

1 Display the “AV source selection” screen.



2 Plug the USB storage device.

↳ Plugging and unplugging a USB storage device on page 7


3 Touch [USB].

Play back is performed in order of folder numbers. Folders are skipped if they contain no playable files.

Compressed audio files

 

Selecting files from the file name list

You can find files or folders to play back using the file name or folder name list.

- 1 Touch .
- 2 Touch a file on the list to play back.
 - Files are played back in file number order.

Selecting a file by Music Browse

You can select files to play back using the file list related to the song currently playing.

- This function is available for the USB storage device only.
- 1 Touch  to switch to the Music Browse mode and construct the database.
 - 2 Touch .
 - 3 Touch the desired category to display the file list.
 - 4 Touch the item that you want to refine.


Refine the item until the desired song title or file name is displayed on the list.
 - 5 Touch the desired song title or file name to play back.

Selecting a song in the album (link search)


- 1 Touch the artwork to open the list of songs.
- 2 Touch the song to play back.

Switching the media file type


When playing a digital media containing a mixture of various media file types you can switch between media file types to play.

- 1 Touch .
- 2 Touch the item you want to set.
 - **Music:**
Switches the media file type to music (compressed audio).
 - **Video:**
Switches the media file type to video.
 - **CD-DA:**
Switches the media file type to CD (audio data (CD-DA)).
 - **Photo:**
Switches the media file type to still image (JPEG data).





Compressed video files

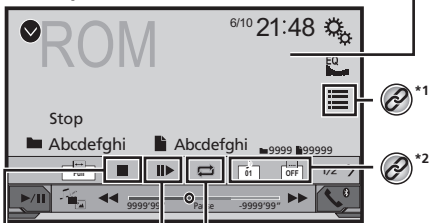 Hides the touch panel keys.
To display again the keys,
touch anywhere on the screen.

(Example: Disc)



 Sets a repeat play range.

-  or  : Repeats all files.
-  : Repeats the current folder.
-  : Repeats the current file.


 Performs frame-by-frame playback.


 **HOLD** Performs slow-motion playback.




 Stops playback.





(Example: Disc)



 Performs fast reverse
or fast forward.
Touch again to change the
playback speed.

 Switches between
playback and pause.

-  *1 Selects a file from the list.
↳ *Selecting files from the file name list on page 26*
-  *2 Switches the subtitle/audio language.
↳ *Switching the subtitle/audio language on page 22*
-  *3 Switches the media file type.
↳ *Switching the media file type on page 25*

- By pressing  or , you can also skip files forward or backward.
- By pressing and holding  or , you can perform fast reverse or fast forward.
- Changing the wide screen mode.

↳ *Common operations on page 52*

You can play compressed video files stored on a disc or in an USB storage device.

↳ *Media compatibility chart on page 59*

⚠ CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

Starting procedure

↳ *Compressed audio files on page 24*

Selecting files from the file name list

You can select files to view using the file name list.

1 Touch .

2 Touch a file on the list to play back.

Files are played back in file number order and folders are skipped when they contain no files.

- Touch the playback sign of the thumbnail to preview the file.

Still image files

Hides the touch panel keys.
To display again the keys, touch anywhere on the screen.

Rotates the displayed picture 90° clockwise.

Selects the previous or next folder.

Sets a repeat play range.
 : Repeats all files.
 : Repeats the current folder.

Plays files in random order.
 : Does not play files in random order.
 : Plays all files in the current repeat play range in random order.



Skips files forward or backward.

Switches between playback and pause.

- *1 Saves the current image as the wallpaper.
Saving the image as the wallpaper on page 27
- *2 Selects a file from the list.
Selecting files from the file name list on page 27
- *3 Switches the media file type.
Switching the media file type on page 27

- JPEG images are not displayed in the rear display.
- By pressing or , you can also skip files forward or backward.
- By pressing and holding or , you can search 10 JPEG files at a time. If the file currently being played is the first or last file in the folder, the search is not performed.
- Changing the wide screen mode.
Common operations on page 52
 You can view still images stored in an USB storage device.
Media compatibility chart on page 59

Starting procedure

- 1 Display the "AV source selection" screen.



- 2 Plug the USB storage device.

- Plugging and unplugging a USB storage device on page 7*
- Playback is performed in order of folder numbers. Folders are skipped if they contain no playable files.

3 Touch [USB].

The image is displayed on the screen.

Selecting files from the file name list

You can select files to view using the file name list.

- 1 Touch .

- 2 Touch a file on the list to play back.

- Touching a folder on the list shows its contents. You can play a file on the list by touching it.

Switching the media file type

When playing a digital media containing a mixture of various media file types you can switch between media file types to play.

- 1 Touch .

- 2 Touch the item you want to set.

- Music:**
Switches the media file type to music (compressed audio).
- Video:**
Switches the media file type to video.
- Photo:**
Switches the media file type to still image (JPEG data).

Saving the image as the wallpaper

You can save the current displayed image in the memory of this unit and set as the wallpaper as the AV screen or the Home screen.

- 1 Touch on the image that you want to save.

- 2 Touch the following items to set as the wallpaper.

- As AVScreen:**
Saves the image as the wallpaper of AV screen.
- As HomeScreen:**
Saves the image as the wallpaper of Home screen.
- As Both:**
Saves the image as the both wallpaper of AV screen and Home screen.

Still image files

3 Touch "Yes" to overwrite the image.

- ❑ Each one image can be saved for AV screen or Home screen. If you save the other image, the current wallpaper is overwritten.

Setting the slideshow interval

JPEG files can be viewed as a slideshow on this product. In this setting, the interval between each image can be set.

- ❑ This setting is available during playback of the JPEG files.

1 Display the "Video Setup" screen.




2 Touch [Time Per Photo Slide].

3 Touch the item you want to set.

The following items are available:

"10sec" (default), "5sec", "15sec", "Manual".

Audio source screen 1

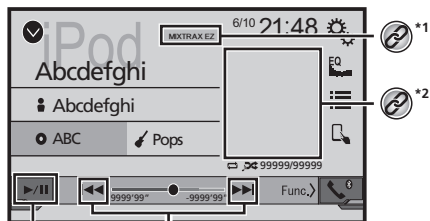

Skips files forward or backward.

Switches between playback and pause.




Plays files in random order.

: Plays randomly songs or videos within the selected list.

: Plays album randomly.

Audio source screen 2

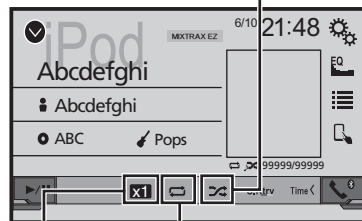

Sets a repeat play range.

: Repeats all in the selected list.

: Repeats the current song or video.



Changes the audiobook speed.

: Normal playback

: Fast playback

: Slow-motion playback

Video source screen



Performs fast reverse or fast forward.

- *1 Displays the "MIXTRAX" screen.
↳ MIXTRAX on page 38
- *2 Selects a file from the list.
↳ Selecting a song in the album (link search) on page 30
- *3 Selects a track from the list.
↳ Selecting song or video sources from the playlist screen on page 30
- *4 Switches the control mode to "App Mode".
↳ Using this product's iPod function from your iPod on page 30

- By pressing the or button, you can also skip files forward or backward.
- By pressing and hold the or button, you can also perform fast reverse or fast forward.
- Changing the wide screen mode.
- ↳ Common operations on page 52

Connecting your iPod

When connecting an iPod to this product, select the method for connecting your device. Settings are required according to the connected device.

↳ Setup for iPod / iPhone or smartphone on page 15

For iPod with a 30-pin connector users

Via USB cable

- Depending on your iPod, a USB interface cable for iPod / iPhone (CD-IU201V) (sold separately), is required to connect.

iPod audio and/or video sources are enabled if either of the cables is connected.

- For details on how to connect an iPhone with 30-pin connector, refer to the installation manual.

Via Bluetooth wireless technology

- *Registering your Bluetooth devices* on page 11

For iPod / iPhone with a Lightning connector users

Via USB cable

- ❑ With a USB interface cable for iPod/iPhone (CD-IU52) (sold separately), iPod audio source is available.

However, functions related to iPod video files are not available.

- For details on how to connect an iPhone with Lightning connector, refer to the installation manual.

Via Bluetooth wireless technology

- *Registering your Bluetooth devices* on page 11

⚠CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

Starting procedure

1 Connect your iPod.

- *Connecting your iPod* on page 29

The source changes and then playback will start.

- ❑ If connecting an iPhone or iPod touch, quit applications before.

2 Display the “AV source selection” screen.



3 Touch [iPod].

Selecting song or video sources from the playlist screen

You can search for the song or video you want to play from the playlist screen.

1 Touch .

2 Touch or to switch the music or video category list.

3 Touch the category you want to search for.

If you use English as the system language, the alphabet search function is available. Touch the initial search bar to use this function.

4 Touch the title of the list that you want to play.

If you can not find the desired song or video, try to search again according to the above steps.

5 Start playback of the selected list.

- ❑ Depending on the generation or version of the iPod, some functions may not be available.
- ❑ You can play playlists created with the **MusicSphere** application. The application is available on our website.


Using this product's iPod function from your iPod

You can control this product's iPod function from the iPod on “App Mode”. The application screen of the iPod can be displayed on this product, and the music files and video files are played back with this product.

- ❑ While this function is in use, the iPod will not turn off even if the ignition key is turned off. Operate the iPod to turn off the power.

1 Touch .

2 Operate the connected iPod to select a video or song and play.


- ❑ Some functions are still accessible from this product even if the control mode is set to “App Mode”. However, the operation will depend on your applications.
- ❑ Touch  to switch the control mode.

Selecting a song in the album (link search)

1 Touch the artwork to open the list of songs.

2 Touch the song to play back.

iPhone or smartphone applications

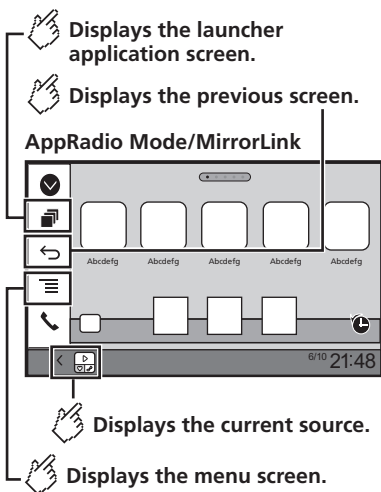

- ❑ In **AppRadioMode** and **MirrorLink Mode**, App control side bar will appear.
- ❑ Press the **DISP** button to hide the App control side bar. Press the **DISP** button again to display it again.
- ❑ and are not available depending on the type of device.

⚠WARNING

Certain uses of an iPhone or a smartphone may not be legal while driving in your jurisdiction, so you must be aware of and obey any such restrictions.

If in doubt as to a particular function, only perform it while the car is parked.

No feature should be used unless it is safe to do so under the driving conditions you are experiencing.

Using AppRadioMode

You can control applications for an iPhone or a smartphone directly from the screen (**AppRadioMode**).

In **AppRadioMode**, you can operate applications with finger gestures such as tapping, dragging, scrolling or flicking on the screen of this product.

- ❑ In this chapter, iPhone and iPod touch will be referred to as "iPhone".
 - ❑ The compatible finger gestures vary depending on the application for an iPhone or a smartphone.
 - ❑ Even though an application is not compatible with **AppRadioMode**, depending on the application an image may be displayed. But you can not operate the application.
- To use **AppRadioMode**, install the AppRadio app on the iPhone or smartphone in advance. For details about the AppRadio app, visit the following site:
<http://www.pioneer.eu/AppRadioMode>
- ❑ Be sure to read Using app-based connected content before you perform this operation.
 - ➔ *Using app-based connected content* on page 62

- Pioneer is not liable for any issues that may arise from incorrect or flawed app-based content.
- The content and functionality of the supported applications are the responsibility of the App providers.
- In **AppRadioMode**, functionality through the product is limited while driving, with available functions determined by the App providers.
- Availability of **AppRadioMode** functionality is determined by the App provider, and not determined by Pioneer.
- **AppRadioMode** allows access to applications other than those listed (subject to limitations while driving), but the extent to which content can be used is determined by the App providers.

Starting procedure

When connecting an iPhone or smartphone to this product, you must select the method for connecting your device. Settings are required according to the connected device.

➔ *Setup for iPod / iPhone or smartphone* on page 15

For iPhone users

1 Connect your iPhone.

- ❑ For details on how to connect an iPhone, refer to the installation manual.

2 Press .

3 Touch [APPS].

When the application is ready to launch, messages appear on the screen of this product and your iPhone.

4 Use your iPhone to launch the application.

The AppRadio app is launched.

5 Touch [OK].

The AppRadioOne screen (Application menu screen) appears.

For smartphone users

- ❑ Be sure that the registered device is selected as the priority device.

➔ *Registering your Bluetooth devices* on page 11

1 Unlock your smartphone and connect it to this product via USB.

- ❑ The cable connection method varies depending on your device.
- ❑ For details on how to connect an Android™ device, refer to the installation manual.

2 Press .

3 Touch [APPS].

The **AppRadio app** is launched, and the **AppRadioMode** screen (Application menu screen) appears.

Common operation of all device

- ❑ If you connect your device while an **AppRadioMode** compatible application is already running, the application operation screen will appear on this product.
- Touch the desired application icon after The AppRadio app is launched.
- The desired application is launched, and the application operation screen appears.
- Press to go back to the Top menu screen.

Using the keyboard

When you tap the text input area of an application for iPhone, a keyboard will be displayed on the screen. You can input the desired text directly from this product.

⚠CAUTION

For your safety, the keyboard functionality is only available when the vehicle is stopped and the parking brake is engaged.

- ❑ This function is only available in **AppRadioMode** on the iPhone.

1 Start up the AppRadioMode.

➔ *Starting procedure* on page 31

2 Touch the text input area on the application operation screen.

A keyboard for entering text appears.

- ❑ The language of the keyboard can be changed.
- ➔ *Setting the keyboard language with the application for iPhone* on page 40

iPhone or smartphone applications

Displaying the image of your application

You can set an image of an application for your device, which is not compatible with [AppRadioMode], to be shown on the screen.

- Depending on the type of application, you may not be able to see the image on the screen.
- When you use this function on iPhone with Lightning connector, do not connect other devices via Bluetooth wireless technology.
- You can only control the application on the connected device.
- When you touch the display in this function, "Don't Touch" mark appears on the upper right corner of the screen.

1 Connect your device.

- For details on how to connect an iPhone or Android™ device, refer to the installation manual.

2 Press **⏸**.

3 Touch [APPS].

When the application is ready to launch, messages appear on the screen of this product and your iPhone.

4 Launch the application on your device.

An image of the application appears on the screen.

- Press **⏸** to return to the Top menu screen.

Using MirrorLink

When you connect a **MirrorLink** device with compatible applications installed, you can control the applications for the mobile device directly from this product (**MirrorLink** mode).

You can view and operate the compatible applications via the display with multi-touch gestures like tapping, dragging, scrolling, and flicking.

- Multi-touch gestures may be disabled depending on the **MirrorLink** device model that is connected.

Starting procedure

When connecting a **MirrorLink** device to this product, you must select the method for connecting your device. Settings are required according to the connected device.

➡ *Setup for iPod / iPhone or smartphone* on page 15

1 Unlock your MirrorLink device.

2 Connect your MirrorLink device to this product via the separately sold USB interface cable for use with MirrorLink devices (CD-MU200).

- For details on how to connect the MirrorLink™ device, refer to the installation manual.

3 Press **⏸**.

4 Touch [APPS].

If the launcher application is installed in the **MirrorLink** device, the application launches.

If not, the Application menu screen will appear.

5 Touch the desired application icon.

The desired application is launched, and the application operation screen appears.

- Some applications may not launch depending on the state of the connected device. If it does not launch, launch the application according to the application startup message.
- Press **⏸** to go back to the Top menu screen.


Using the audio mix function

You can output audio mixing AV source and an application for iPhone or smartphone when the **AppRadioMode** or **MirrorLink** mode is used.

1 Start up the AppRadioMode or MirrorLink mode.

2 Press the Volume (+/-) button.

The audio mix menu will be displayed on the screen.

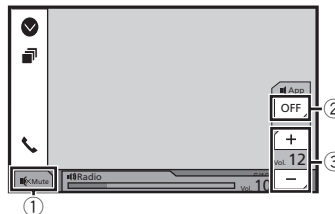

- ① Touch to mute. Touch again to unmute.
- ② Sets whether to switch the sound mix function off.
- ③ Adjusts the application audio volume.
Each touch of [+] or [-] increases or decreases the volume level.
 - The AV operation screen and the Application screen can be switched by pressing **⏸**.

- You cannot adjust the volume of the main sound on the screen. Press the **Volume (+/-)** button to adjust the volume of the main sound.

X5700DAB X3700DAB


 Gives a "Thumbs Down" to the playing track and skips to the next track.

Playback screen 1






 Gives a "Thumbs Up" to the playing track.

This function is not available when using a shared station.

 Switches between playback and pause.



 Adds information for the track currently playing to bookmarks.

-  *1 Selects a Pandora station from the list.
↳ *Selecting a Pandora station from the list on page 33*
-  *2 Creates a new station
↳ *Add station on page 34*

By pressing the  button, you can skip songs forward.

⚠ WARNING

Certain uses of an iPhone or a smartphone may not be legal while driving in your jurisdiction, so you must be aware of and obey any such restrictions. If in doubt as to a particular function, only perform it while the car is parked.

No feature should be used unless it is safe to do so under the driving conditions you are experiencing.

Pandora operations

You can use this source only when "Setting Location" is "Australia". (AVH-X5700DAB) (AVH-X3700DAB)

↳ *Selecting the using location on page 40*

You can enjoy Pandora by connecting an iPhone or a smartphone that has the Pandora application installed.

📌 Important

- Requirements to access Pandora using Pioneer car audio/video
- ↳ *Setup for iPod / iPhone or smartphone on page 15*
- Please update the firmware of the Pandora application to the latest version before use. Download it from the iTunes App Store or Google Play.
- Create a free or a paid account online. You can create the account in the Pandora application from your iPhone or from the website (<http://www.pandora.com/register>).
- To use the Pandora service, you need to connect to the Internet via 3G, EDGE, LTE (4G) or Wi-Fi network. If the data plan for your iPhone does not provide for unlimited data usage, additional charges from your carrier may apply.

Limitations:

- Depending on the availability of the Internet, you may not be able to receive the Pandora service.
- The Pandora service is subject to change without notice. The service could be affected by any of the following: firmware version of the iPhone, firmware version of the Pandora application, changes to the Pandora music service.
- Certain functions of the Pandora service are not available when accessing the service through Pioneer car audio/

video products.

They include, but are not limited to the following: creating new stations, deleting stations, sending information about current stations, buying tracks from iTunes, viewing additional text information, logging in to Pandora, adjusting Cell Network Audio Quality.

- Pandora internet radio is a music service not affiliated with Pioneer. More information is available at <http://www.pandora.com>
- The Pandora mobile application is available for most iPhone and smartphone, please visit www.pandora.com/everwhere and smartphone for the latest compatibility information.

Starting procedure

When connecting an iPhone or smartphone to this product, select the method for connecting your device. Settings are required according to the connected device.

- ↳ *Setup for iPod / iPhone or smartphone on page 15*
- You can use the Pandora service by connecting an iPhone via USB or Bluetooth.
- If you use a smartphone, connect via Bluetooth.
- ↳ *Registering your Bluetooth devices on page 11*
- For details on how to connect an iPhone or Android™ device, refer to the installation manual.

1 Unlock and connect your device.

2 Display the "AV source selection" screen.

 






3 Touch [Pandora].


Selecting a Pandora station from the list

- Touch .

The following items are available:

-  switches to the station list.
-  switches to the genre list.
-  plays only one track based on particular musical characteristics from several shuffled stations.
- **A-Z:** sorts the items in the list alphabetically.
- **Date:** sorts the items in the list in the order of the dates.
-  deletes the station.
- Shared stations are indicated by .


Add station

- 1 Touch .
- 2 Touch [Track] (from track) or [Artist] (from artist).

A new station is created.

Bluetooth audio player

Playback screen 1

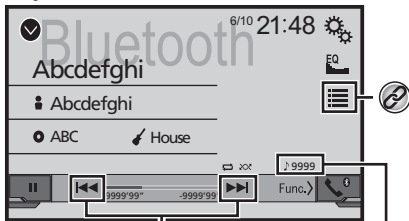


Skips files forward or backward.

Track number indicator

Plays files in random order.

Playback screen 2

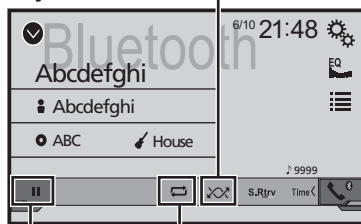

Sets a repeat play range.

Switches between playback and pause.

Selects a file from the list.
→ *Selecting files from the file name list on page 35*

- By pressing the or button, you can also skip files forward or backward.
- By pressing and hold the or button, you can also perform fast reverse or fast forward.

- Before using the Bluetooth audio player, register and connect the device to this product.
- *Registering your Bluetooth devices on page 11*
- Depending on the Bluetooth device connected to this product, the available operations with this product may be limited or differ from the descriptions in this manual.
- While you are listening to songs on your Bluetooth device, please refrain from operating the phone function as much as possible. If you try operating, the signal may cause noise for song playback.
- When you are talking on the Bluetooth device connected to this product via Bluetooth, it may pause playback.

Starting procedure

1 Pull out the connecting cable for using AppRadioMode.

- You cannot use Bluetooth device when the connecting cable for using **AppRadioMode** is connected.

2 Display the “System” setting screen.



3 Touch [AV Source Settings].

4 Confirm that “Bluetooth Audio” is turned on.

5 Display the “AV source selection” screen.



6 Touch [Bluetooth Audio] on the AV source selection screen.


Selecting files from the file name list


- This function may not be available depending on some Bluetooth device.

1 Touch .

2 Touch a file or a folder on the list to play back.



 Switches between the screen to operate video files and that to operate music files.

-  is only available when there are both audio and video files on the auxiliary equipment.
- A Mini-jack AV cable (CD-RM10) (sold separately) is required for connection.
 - For details on how to connect the external video component, refer to the installation manual.

CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

Starting procedure

You can display the video image output by the device connected to video input.

- 1 Display the “System” setting screen.



- 2 Touch [Input/Output Settings].
- 3 Confirm that “AUX Input” is turned on.
- 4 Display the “AV source selection” screen.



- 5 Touch [AUX].

The image is displayed on the screen.

Setting the video signal

When you connect this product to an AUX equipment, select the suitable video signal setting.

- You can operate this function only for the video signal input into the AUX input.

- 1 Display the “Video Setup” screen.



- 2 Touch [Video Signal Setting].
- 3 Touch [AUX].
- 4 Touch the item you want to set.

The following items are available:

Auto (default), **PAL**, **NTSC**, **PAL-M**, **PAL-N**, **SECAM**.

AV input

You can display the video image output by the device connected to this product.

- For details on how to connect the external video component, refer to the installation manual.

⚠ CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

Starting procedure

You can display the video image output by the device connected to video input.

1 Display the “System” setting screen.



2 Touch [Input/Output Settings].


3 Set the setting to “On”.

4 Display the AV source selection screen.



5 Touch [AV].

The image is displayed on the screen.

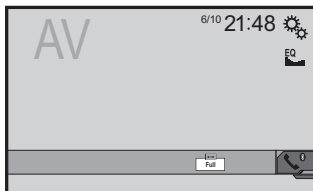

1 Display the “Video Setup” screen.



2 Touch [Video Signal Setting].

3 Touch [AV].

4 Touch the item you want to set.


The following items are available:


Auto (default), **PAL**, **NTSC**, **PAL-M**, **PAL-N**, **SECAM**.


Setting the video signal


When you connect this product to an AV equipment, select the suitable video signal setting.

- You can operate this function only for the video signal input into the AV input.

 Deactivates the MIXTRAX mode.

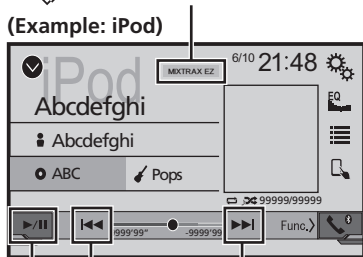

 Selects a track.

 Switches between playback and pause.

- By pressing the **⏮** or **⏭** button, you can also skip files forward or backward.
- By pressing and hold the **⏮** or **⏭** button, you can also perform fast reverse or fast forward.

MIXTRAX operation

MIXTRAX is original technology for creating non-stop mixes of selections from your audio library, complete with DJ effects that make them sound.

MIXTRAX EZ operation

You can use this unit to play iPod/USB audio files. MIXTRAX EZ is used to add a variety of sound effects between songs for arranging the pauses between songs. It allows you to enjoy listening to music non-stop.

- This function is only available when a file on a USB storage device or a song on an iPod is being played.
- This function is not available when the control mode is set to App Mode.
- Depending on the file/song, sound effects may not be available.
- Depending on the file/song, non-stop playback may not be available.

Displaying the “MIXTRAX Settings” screen

- 1 Press **⏸**.
- 2 Touch **⏸**, and then [AV Source Settings].
- 3 Touch [MIXTRAX Settings].

Setting the playback portion

You can specify the playback portion.

- 1 Display the “MIXTRAX Settings” screen.
 - ☞ Displaying the “MIXTRAX Settings” screen on page 38
- 2 Touch [Short Playback Mode].
- 3 Touch the item you want to set.
 - The following items are available:
 - 60s (default), 90s, 120s, 150s, 180s, Off, Random.

Setting the display effect

You can set the effect display for MIXTRAX.

- 1 Display the “MIXTRAX Settings” screen.
 - ☞ Displaying the “MIXTRAX Settings” screen on page 38
- 2 Touch [Display Effect] to switch “On” (default) or “Off”.

Setting the cut-in effect

You can set the effect tone that sounds when you skip tracks forward or backward.

- 1 Display the “MIXTRAX Settings” screen.
 - ☞ Displaying the “MIXTRAX Settings” screen on page 38
- 2 Touch [Cut-In Effect] to switch “On” (default) or “Off”.

Setting the MIXTRAX effect

You can set and play back the MIXTRAX effect that you want.

- 1 Display the “MIXTRAX Settings” screen.
 - ☞ Displaying the “MIXTRAX Settings” screen on page 38
- 2 Touch [Effect Setting].

3 Touch the item you want to set.

The following items are available:

Standard (default), **Simple**, **Custom**

- When you select “Custom”, check the effect that you want.

Setting the flash pattern

The flashing color changes with the changes in the sound and bass levels.

1 Display the “MIXTRAX Settings” screen.

- ☞ Displaying the “MIXTRAX Settings” screen on page 38

2 Touch [Flash Pattern].

3 Touch the item you want to set.

- **Sound1** (default) to **Sound6**:
The flash pattern changes according to the sound level. Select a desired mode.
- **L-Pass1** to **L-Pass6**:
The flash pattern changes according to the bass level. Select a desired mode.
- **Random1**:
The flash pattern changes randomly according to the sound level mode and low pass mode.
- **Random2**:
The flash pattern changes randomly according to the sound level mode.
- **Random3**:
The flash pattern changes randomly according to the low pass mode.
- **Off**:
The flash pattern does not flash.

System settings

Displaying the "System" setting screen

- 1 Press **⏏**.
- 2 Touch **[⏏]**, and then **[Y]**.
The "System" setting screen appears.

Activating the Bluetooth audio source

- 1 Display the "System" setting screen.
↳ *Displaying the "System" setting screen on page 39*
- 2 Touch [AV Source Settings].
- 3 Touch [Bluetooth Audio] to switch "On" (default) or "Off".

Setting the ever scroll

When "Ever Scroll" is set to "On", the recorded text information scrolls continuously in the display.

- 1 Display the "System" setting screen.
↳ *Displaying the "System" setting screen on page 39*
- 2 Touch [Ever Scroll] to switch "On" or "Off" (default).

Setting the beep tone

- 1 Display the "System" setting screen.
↳ *Displaying the "System" setting screen on page 39*
- 2 Touch [Beep Tone] to switch "On" (default) or "Off".
 - Depending on the model used, this menu may not be displayed.

Setting AppRadioMode Sound

You can set where the sound for AppRadioMode is output when it is used with an Android device.

- 1 Display the "System" setting screen.
↳ *Displaying the "System" setting screen on page 39*
- 2 Touch [Input/Output settings].

- 3 Touch [AppRadioMode Sound].
- 4 Touch the following settings.
 - **AVH** (default):
The sound is output from the speakers of this unit.
 - **Smartphone**
The sound is output from the speakers of the Android device.
 - ☐ With an iPhone, the sound is always output from the speakers of this unit.

Setting the rear view camera

A separately sold rear view camera (e.g. ND-BC6) is required for utilizing the rear view camera function. (For details, consult your dealer.)

Rear view camera

This product features a function that automatically switches to the full-screen image of the rear view camera installed on your vehicle, when the shift lever is in the REVERSE (R) position.

- ☐ When the shift lever is aligned to the REVERSE (R) position immediately after the system of this product is started up, only the camera image will be displayed and the parking assist guidelines and the message, "The video may appear reversed" will not be displayed.

⚠CAUTION

Pioneer recommends the use of a camera which outputs mirror reversed images, otherwise the screen image may appear reversed.

- ☐ Immediately verify whether the display changes to a rear view camera image when the shift lever is moved to REVERSE (R) from another position.
- ☐ When the screen changes to full-screen rear view camera image during normal driving, switch to the opposite setting in "Camera Polarity".

Setting rear view camera activation

- 1 Display the "System" setting screen.
↳ *Displaying the "System" setting screen on page 39*
- 2 Touch [Camera Settings].
- 3 Touch [Back Camera Input] to switch "On" or "Off" (default).

Setting the polarity of the rear view camera

- ☐ This function is available when "Back Camera Input" is "On".
↳ *Setting rear view camera activation on page 39*

- 1 Display the "System" setting screen.
↳ *Displaying the "System" setting screen on page 39*
- 2 Touch [Camera Settings].
- 3 Touch [Camera Polarity].
 - **Battery** (default):
The polarity of the connected lead is positive.
 - **Ground**:
The polarity of the connected lead is negative.

Setting the safe mode

X5700DAB **X3700DAB**

You can set the safe mode that regulate operating some functions only when you stop your vehicle in a safe place and apply the parking brake.

- 1 Display the "System" setting screen.
↳ *Displaying the "System" setting screen on page 39*
- 2 Touch [Safe Mode] to switch "On" (default) or "Off".

Turning off the demo screen

- 1 Display the "System" setting screen.
↳ *Displaying the "System" setting screen on page 39*
- 2 Touch [Demo Mode] to switch "On" (default) or "Off".

Selecting the system language

- If the embedded language and the selected language setting are not the same, text information may not display properly.
 - Some characters may not be displayed properly.
- 1 Display the "System" setting screen.
↳ *Displaying the "System" setting screen on page 39*
 - 2 Touch [System Language].
 - 3 Touch the language that you want to use.

System settings

After the language is selected, the previous screen returns.

Selecting the using location

X5700DAB X3700DAB

This setting is not available while using the Pandora.

1 Display the "System" setting screen.

➤ *Displaying the "System" setting screen on page 39*

2 Touch [Setting Location] to switch the following items.

- Europe (default)
- Australia

Setting the keyboard language with the application for iPhone

You can use the keyboard in **AppRadioMode** by setting the language of the keyboard for iPhone.

This function is only available in **AppRadioMode** on the iPhone.

1 Display the "System" setting screen.

➤ *Displaying the "System" setting screen on page 39*

2 Touch [Keyboard].

3 Touch the language that you want to use.

After the language is selected, the previous screen returns.

Adjusting the response positions of the touch panel (touch panel calibration)

If you feel that the touch panel keys on the screen deviate from the actual positions that respond to your touch, adjust the response positions of the touch panel screen.

This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

Do not use sharp pointed tools such as a ballpoint or mechanical pen, which could damage the screen.

Do not turn off the engine while saving the adjusted position data.

1 Display the "System" setting screen.

➤ *Displaying the "System" setting screen on page 39*

2 Touch [Touch Panel Calibration].

3 Touch two corners of the screen along the arrows, and then touch the centers of two + marks at the same time twice.

4 Press .



The adjustment results are saved.

5 Press once again.

Proceed to 16-point adjustment.

6 Gently touch the center of the "+" mark displayed on the screen.

The target indicates the order.

- When you press , the previous adjustment position returns.
- When you press and hold , the adjustment is canceled.

7 Press and hold .

The adjustment results are saved.

Setting the dimmer

Setting the dimmer trigger

This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

1 Display the "System" setting screen.

➤ *Displaying the "System" setting screen on page 39*

2 Touch [Dimmer Settings].

3 Touch [Dimmer Trigger].

4 Touch the item.

● Auto (default):

Switches the dimmer to on or off automatically according to your vehicle's headlight turning on or off.

● Manual:

Switches the dimmer to on or off manually.

● Time:

Switches the dimmer to on or off at the time you adjusted.

Setting the dimmer duration in day or night

You can use this function when "Dimmer Trigger" is set to "Manual".

This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

1 Display the "System" setting screen.

➤ *Displaying the "System" setting screen on page 39*

2 Touch [Dimmer Settings].

3 Touch [Day/Night] to switch the following items.

● Day (default):

Turns the dimmer manually to off.

● Night:

Turns the dimmer manually to on.

Setting the dimmer duration optional

You can adjust the time that the dimmer is turned on or off.

You can use this function when "Dimmer Trigger" is set to "Time".

This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

1 Display the "System" setting screen.



➤ *Displaying the "System" setting screen on page 39*

2 Touch [Dimmer Settings].

3 Touch [Dimmer Duration].

The "Duration Setting" screen appears.

4 Drag the cursors to set the dimmer duration.

- You can also set the dimmer duration touching  or .

Each touch of  or  moves the cursor backward or forward in the 15 minute width.

- The default setting is 18:00-6:00 (6:00 PM-6:00 AM).
- When the cursors are placed on the same point, the dimmer available time is 0 hours.
- When the cursor for off time setting is placed on the left end and the cursor for on time setting is placed on the right end, the dimmer available time is 0 hours.
- When the cursor for on time setting is placed on the left end and the cursor for off time setting is placed on the right end, the dimmer available time is 24 hours.

System settings

- The time display of the dimmer duration adjusting bar is depending on the clock display setting.
- ⇒ *Setting the time and date on page 52*

Adjusting the picture

You can adjust the picture for each source and rear view camera.

⚠CAUTION

For safety reasons, you cannot use some of these functions while your vehicle is in motion. To enable these functions, you must stop in a safe place and apply the parking brake. Refer to Important Information for the User (a separate manual).

1 Display the screen you wish to adjust.

2 Display the "System" setting screen.

⇒ *Displaying the "System" setting screen on page 39*

3 Touch [Picture Adjustment].

4 Touch the item to select the function to be adjusted.

● **Brightness:**

Adjusts the black intensity. (-24 to +24)

● **Contrast:**

Adjusts the contrast. (-24 to +24)

● **Color:**

Adjusts the color saturation. (-24 to +24)

● **Hue:**

Adjusts the tone of color (which color is emphasized, red or green). (-24 to +24)

● **Dimmer:**

Adjusts the brightness of the display. (+1 to +48)

● **Temperature:**

Adjusts the color temperature, resulting in a better white balance. (-3 to +3)

- With some pictures, you cannot adjust **Hue** and **Color**.
 - When you touch [Rear View], the mode changes to the selected camera mode. By touching [Source], [Navi] or [Apps], you can return to the selected mode.
- #### 5 Touch [Left], [Right], [Up], [Down] to adjust.
- The adjustments of "Brightness", "Contrast" and "Dimmer" are stored separately when your vehicle's headlights are off (daytime) and on (nighttime).

- "Brightness" and "Contrast" are switched automatically depending on whether the vehicle's headlights are on or off.
 - "Dimmer" can be changed the setting or the time to switch it to on or off.
- ⇒ *Setting the dimmer on page 40*
- The picture adjustment may not be available with some rear view cameras.
 - The setting contents can be memorized separately.

Displaying the firmware version

1 Display the "System" setting screen.

⇒ *Displaying the "System" setting screen on page 39*

2 Touch [System Information].

3 Touch [Firmware Information].

The "Firmware Information" screen appears.

Updating firmware

⚠CAUTION

- The USB storage device for updating must contain only the correct update file.
- Never turn this product off, disconnect the USB storage device while the firmware is being updated.
- You can only update the firmware when the vehicle is stopped and the parking brake is engaged.

1 Download the firmware update files.

2 Connect a blank (formatted) USB storage device to your computer, and then locate the correct update file and copy it onto the USB storage device.

3 Connect the USB storage device to this product.

4 Turn the source off.

⇒ *Source on the AV source selection screen on page 9*

5 Display the "System" setting screen.

⇒ *Displaying the "System" setting screen on page 39*

6 Touch [System Information].

7 Touch [Firmware Update].

8 Touch [Continue] to display the data transfer mode.

- Follow the on-screen instructions to finish updating the firmware.
- This product will reset automatically after the firmware update is completed if the update is successful.
- If an error message appears on the screen, touch the display and perform the above steps again.

Audio adjustments

Displaying the “Audio” setting screen

- 1 Press **⏏**.
- 2 Touch **[⏏]**, and then **[🔊]**.
The “Audio” setting screen appears.

Using fader adjustment

- 1 Display the “Audio” setting screen.
➔ *Displaying the “Audio” setting screen on page 42*
 - 2 Touch **[Fader]**.
 - 3 Touch **[▲]** or **[▼]** to adjust the front/rear speaker balance.
 - “Front25” to “Rear25” is displayed as the front/rear speaker balance moves from the front to rear.
 - The default setting is “F/R 0”.
 - Set “Front” and “Rear” to “0” when using a dual speaker system.
- You can also set the fader/balance by dragging the point on the displayed table.

Using balance adjustment

- This function is available when “Standard Mode” is selected as the speaker mode.
- 1 Display the “Audio” setting screen.
➔ *Displaying the “Audio” setting screen on page 42*
 - 2 Touch **[Balance]**.
 - 3 Touch **[◀]** or **[▶]** to adjust the left/right speaker balance.
 - “Left25” to “Right25” is displayed as the left/right speaker balance moves from the left to right.
 - The default setting is “L/R 0”.
- You can also set the fader/balance by dragging the point on the displayed table.

Switching sound muting/attenuation

You can automatically mute or attenuate the AV source volume and the iPhone application volume when the navigation outputs the guidance voice.

- 1 Display the “Audio” setting screen.
➔ *Displaying the “Audio” setting screen on page 42*
- 2 Touch **[Mute Level]**.
- 3 Touch the item you want to set.
 - **ATT** (default):
The volume becomes 20 dB lower than the current volume.
 - **Mute**:
The volume becomes 0.
 - **Off**:
The volume does not change.

Adjusting source levels

SLA (source level adjustment) lets you adjust the volume level of each source to prevent radical changes in volume when switching between sources.

- Settings are based on the FM tuner volume level, which remains unchanged.
- This function is not available when the FM tuner is selected as the AV source.

- 1 Compare the FM tuner volume level with the level of the source you want to adjust.
- 2 Display the “Audio” setting screen.
➔ *Displaying the “Audio” setting screen on page 42*
- 3 Touch **[Source Level Adjuster]**.
- 4 Touch **[▲]** or **[▼]** to adjust the source volume.
 - If you directly touch the area where the cursor can be moved, the SLA setting will be changed to the value of the touched point.
 - “+4” to “-4” is displayed as the source volume is increased or decreased.
 - The default setting is “0”.

Using the auto level control

This function corrects automatically the audio level difference between the music files or the sources.

- 1 Display the “Audio” setting screen.
➔ *Displaying the “Audio” setting screen on page 42*
- 2 Touch **[Automatic Level Control]**.
- 3 Touch the item.
 - **Off** (default):
Turns the auto level control setting off.
 - **Mode1**:

Corrects a little the audio level difference between the music files or the sources (for the narrow dynamic range audio signal).

- **Mode2**:
Corrects widely the audio level difference between the music files or the sources (for the wide dynamic range audio signal).

Adjusting loudness

This function compensates for deficiencies in the low-frequency and high-frequency ranges at low volume.

- This function is not available while you make or receive a call using the hands-free function.

- 1 Display the “Audio” setting screen.
➔ *Displaying the “Audio” setting screen on page 42*
- 2 Touch **[Loudness]**.
- 3 Touch the item.
The following items are available:
Off (default), **Low**, **Mid**, **High**.

Using the subwoofer output

This product is equipped with a subwoofer output mechanism, which can be turned on or off.

- 1 Display the “Audio” setting screen.
➔ *Displaying the “Audio” setting screen on page 42*
- 2 Touch **[Subwoofer]** to switch “On” (default) or “Off”.

Adjusting the cutoff frequency value

You can adjust the cutoff frequency value of each speaker. The following speakers can be adjusted:

Standard Mode: Front, Rear, Subwoofer.

Network Mode: High, Mid, Subwoofer.

- “Subwoofer” is available only when “Subwoofer” is “On”.
- ➔ *Using the subwoofer output on page 42*

- 1 Display the “Audio” setting screen.
➔ *Displaying the “Audio” setting screen on page 42*
- 2 Touch **[Crossover]** or **[Subwoofer Settings]**.
- 3 Touch **[◀]** or **[▶]** to switch the speaker you want to adjust.

Audio adjustments

4 Drag the graph lines to the position you want to adjust.

The following items can also be set.

● **Phase**

Switches the subwoofer phase between normal and reverse position.

● **LPF/HPF**

Switches the LPF/HPF setting to "On" or "Off".

- This function is not available when adjusting the High speaker.
- Touch or to switch the adjusting speaker.

Switching the rear speaker output

1 Turn the source off.

2 Display the "Audio" setting screen.

Displaying the "Audio" setting screen on page 42

3 Touch [Rear Speaker Output].

4 Touch to switch "Rear" (default) or "Subwoofer".

Boosting the bass

1 Display the "Audio" setting screen.

Displaying the "Audio" setting screen on page 42

2 Touch [BASS Boost].

3 Touch to select the bass boost level from 0 to +6.

Selecting the listening position

You can select a listening position that you want to make as the center of sound effects.

1 Display the "Audio" setting screen.

Displaying the "Audio" setting screen on page 42

2 Touch [Listening Position].

3 Touch the desired position to change the listening position.

The following items are available:

Off (default), **Front**, **Front Left**, **Front Right**, **All**.

"All" is not available when "Network Mode" is selected as the speaker mode.

Adjusting the speaker output levels finely

Fine adjustments of the speaker output level can be made by listening to audio output.

This function is available when "Subwoofer" is set to "On".

Using the subwoofer output on page 42

1 Display the "Audio" setting screen.

Displaying the "Audio" setting screen on page 42

2 Touch [Speaker Level].

3 Touch or to select the listening position if necessary.

The following items are available:

Off (default), **Front**, **Front Left**, **Front Right**, **All**.

"All" is not available when "Network Mode" is selected as the speaker mode.

If you change the listening position setting, the output levels of all the speakers will change in conjunction with the setting.

4 Touch or to adjust the speaker output level.

"-24" dB to "10" dB is displayed as the distance to be corrected is increased or decreased.

The following speakers are available:

Front Left, Front Right, Rear Left, Rear Right, Subwoofer

- To use this function, the vehicle's acoustics must be measured in advance.

Adjusting the time alignment

By adjusting the distance from each speaker to the listening position, time alignment is able to correct the time required for sound to reach the listening position.

1 Measure the distance between the head of the listener and each speaker unit.

2 Display the "Audio" setting screen.

Displaying the "Audio" setting screen on page 42

3 Touch [Time Alignment].

4 Touch or to select the listening position if necessary.

The following items are available:

Off (default), **Front**, **Front Left**, **Front Right**, **All**.

"All" is not available when "Network Mode" is selected as the speaker mode.

If you change the listening position setting, the output levels of all the speakers will change in conjunction with the setting.

5 Touch or to input the distance between the selected speaker and the listening position.

You can input the value every 2.5 cm (between 0 and 350 cm).

The following speakers are available:

Front Left, Front Right, Rear Left, Rear Right, Subwoofer

- If you touch [TA On], the time alignment is turned off mandatorily.
- This function is available only when the listening position setting is set to "Front Left" or "Front Right".
- To use this function, the vehicle's acoustics must be measured in advance.

Switching the time alignment preset

1 Display the "Audio" setting screen.

Displaying the "Audio" setting screen on page 42

2 Touch [Time Alignment Preset].

3 Touch the item.

● **Initial** (default):

Sets to the initial setting value.

● **ATA**:

Reflects the result of "A-EQ&TA Measurement" to the setting value.

● **Off**:

Resets all setting values to 0.

● **Custom**:

Sets to the value adjusted at "Time Alignment".

When you adjust the time alignment, the preset item will switch automatically to "Custom".

"Custom" can be selected only when the listening position is set to "Front Left" or "Front Right".

Audio adjustments

Using the equalizer

Recalling equalizer curves

There are seven stored equalizer curves that you can easily recall at any time. Here is a list of the equalizer curves:

- **S.Bass** is a curve in which only low-pitched sound is boosted.
 - **Powerful** is a curve in which low- and high-pitched sounds are boosted.
 - **Natural** is a curve in which low- and high-pitched sounds are slightly boosted.
 - **Vocal** is a curve in which the midrange, which is the human vocal range, is boosted.
 - **Flat** is a flat curve in which nothing is boosted.
 - **Custom1** is an adjusted equalizer curve that you create. If you select this curve, the effect is applied to all AV sources.
 - **Custom2** is an adjusted equalizer curve that you create. If you select this curve, the effect is applied to all AV sources.
- The default setting is **"Powerful"**.

- 1 **Display the "Audio" setting screen.**
➔ *Displaying the "Audio" setting screen on page 42*
- 2 **Touch [Graphic EQ].**
- 3 **Touch the equalizer you want.**

Customizing the equalizer curves

You can adjust the currently selected equalizer curve setting as desired. Adjustments can be made with a 13-band graphic equalizer.

- If you make adjustments when a curve **"S.Bass"**, **"Powerful"**, **"Natural"**, **"Vocal"**, or **"Flat"** is selected, the equalizer curve settings will be changed to **"Custom1"** mandatorily.
- If you make adjustments when the **"Custom2"** curve is selected for example, the **"Custom2"** curve will be updated.
- "Custom1"** and **"Custom2"** curves can be created common to all sources.

- 1 **Display the "Audio" setting screen.**
➔ *Displaying the "Audio" setting screen on page 42*
- 2 **Touch [Graphic EQ].**
- 3 **Select a curve that you want to use as the basis of customizing.**
- 4 **Touch the frequency for which you want to adjust the level.**

- If you trail a finger across the bars of multiple equalizer bands, the equalizer curve settings will be set to the value of the touched point on each bar.

Using the auto-adjusted equalizer

You can set the auto-adjusted equalizer to suit the vehicle's acoustics. To use this function, the vehicle's acoustics must be measured in advance.

- ➔ *Adjusting the equalizer curve automatically (Auto EQ) on page 44*
- To manually adjust the equalizer curve, set **"Auto EQ&TA"** to **"Off"**.

- 1 **Display the "Audio" setting screen.**
➔ *Displaying the "Audio" setting screen on page 42*
- 2 **Touch "[Auto EQ&TA] to switch "On" or "Off" (default).**

Adjusting the equalizer curve automatically (Auto EQ)

By measuring the vehicle's acoustics, the equalizer curve can be adjusted automatically to suit the vehicle interior.

⚠WARNING

A loud tone (noise) may be emitted from the speakers when measuring the vehicle's acoustics. Never perform Auto EQ measurement while driving.


⚠CAUTION

- Thoroughly check the conditions before performing Auto EQ, as the speakers may be damaged if this is performed under the following conditions:
- When the speakers are incorrectly connected. (For example, when a rear speaker is connected as a subwoofer output.)
- When a speaker is connected to a power amp delivering output higher than the speaker's maximum input power capability.
- If a microphone for acoustical measurement (sold separately) is not placed in an appropriate location, the measurement tone may become loud and measurement may take a long time, resulting in battery drainage. Be sure to place the microphone in the specified location.

Before operating the Auto EQ function

- Perform Auto EQ in as quiet a place as possible, with the vehicle engine and air conditioning switched off. Also, cut power to car phones or cellular phones in the vehicle, or remove them in advance. Surrounding sounds may prevent correct measurement of the vehicle's acoustics.
- Be sure to use the microphone for acoustical measurement (sold separately). Using another microphone may prevent measurement, or result in incorrect measurement of the vehicle's acoustics.
- To perform Auto EQ, the front speakers must be connected.
- When this product is connected to a power amp with input level control, Auto EQ may be impossible if the power amp's input level is set below the standard level.
- When this product is connected to a power amp with an LPF (low pass filter), turn the LPF off before performing Auto EQ. Also, set the cut-off frequency for the built-in LPF of an active subwoofer to the highest frequency.
- The distance has been calculated by a computer to provide optimum delay to ensure accurate results. Do not change this value.
 - The reflected sound within the vehicle is strong and delays occur.
 - The LPF on active subwoofers or external amps delay the lower sounds.
- If an error occurs during measurement, check the following before measuring the vehicle's acoustics.
 - Front speakers (left/right)
 - Rear speakers (left/right)
 - Noise
 - Microphone for acoustical measurement (sold separately)
 - Low battery

Performing Auto EQ

- Auto EQ changes the audio settings as follows:
- The fader/balance settings return to the center position.
- ➔ *Using balance adjustment on page 42*
- **"Mute Level"** is set to **"Off"**.
- ➔ *Switching sound muting/attenuation on page 42*
- Previous settings for Auto EQ will be overwritten.
- Do not press  to open or close the panel when you are using the microphone.

⚠CAUTION

Do not turn off the engine while the measurement is in progress.

Audio adjustments

1 Stop the vehicle in a quiet place, close all the doors, windows and sun roof, and then turn the engine off.

If the engine is left running, engine noise may prevent correct Auto EQ.

- If driving restrictions are detected during measurement, measurement is canceled.

2 Fix the microphone for acoustical measurement (sold separately) in the center of the headrest of the driver's seat, facing forward.

The Auto EQ may differ depending on where you place the microphone. If desired, place the microphone on the front passenger seat and perform Auto EQ.

3 Disconnect the iPhone or smartphone device.

4 Turn on the ignition switch (ACC ON).

If the vehicle's air conditioner or heater is turned on, turn it off.

5 Switch the AV source to "OFF".

➔ *Displaying the AV operation screen on page 9*

6 Display the "Audio" setting screen.

➔ *Displaying the "Audio" setting screen on page 42*

7 Touch [A-EQ&TA Measurement].

The "A-EQ&TA Measurement" screen appears.

8 Connect the microphone for acoustical measurement (sold separately) with this product.

Plug the microphone into the AUX input jack on this product. Use an extension cable (sold separately) if the cord of the Microphone (sold separately) is not long enough.

9 Touch [Front Left] or [Front Right] to select the current listening position.

10 Touch [Start].

A 10-second countdown starts.

- The Bluetooth connection is disconnected before the process starts.

11 Exit the vehicle and keep the doors closed until the countdown finishes.

When the countdown finishes, a measurement tone (noise) is emitted from the speakers and the Auto EQ measurement begins.

12 Wait until the measurement is completed.

When Auto EQ is completed, a message is displayed.

- The measurement time varies depending on the type of vehicle.
- To stop the measurement, touch [Stop].

13 Store the microphone carefully in the glove compartment or another safe place.

If the microphone is subjected to direct sunlight for an extended period, high temperatures may cause distortion, color change or malfunction.

Saving the sound settings

You can save to recall the following current sound settings: fader, balance, speaker level, Graphic EQ, HPF/LPF, listening position, crossover, time alignment.

1 Display the "Audio" setting screen.

➔ *Displaying the "Audio" setting screen on page 42*

2 Touch [Save Settings].

3 Touch [OK].

All of the current sound settings are saved.

- When you touch [Cancel], return to the "Audio" setting screen.

Loading the sound settings

1 Display the "Audio" setting screen.

➔ *Displaying the "Audio" setting screen on page 42*

2 Touch [Load Settings].

3 Touch the item you want to load.

The following items are available:

AEQ Setting Sound Setting.

- "AEQ Setting" is available only when you have already performed Auto EQ measurement.
- ➔ *Adjusting the equalizer curve automatically (Auto EQ) on page 44*
- "Sound Setting" is available only when you have already saved the sound settings.
- ➔ *Saving the sound settings on page 45*

Selecting the background display

The background display can be selected from 9 different preset displays for the AV operation screen and 6 different preset displays for the Top menu screen. Furthermore, you can change the background display to other images imported from a USB storage device.

1 Display the "Theme" screen.





2 Touch [Background].

- You can also change the screen for settings by touching [Illumination], [Theme] or [Utility] on this screen.

3 Touch [Home] or [AV] to switch the screen displays.

The setting contents can be memorized separately for the AV operation screen and the Top menu screen.

4 Touch the item you want to set.

- Preset displays: Selects the desired preset background display.
-  (custom): Displays the background display image imported from the USB storage device.
- ➔ *Saving the image as the wallpaper on page 27*
-  (off): Hides the background display.




Setting the illumination color

The illumination color can be selected from 7 different colors. Furthermore, the illumination can be switched between these 7 colors in order.

Selecting the color from the preset colors

You can select an illumination color from the color list.

1 Display the "Theme" screen.

- 
- The diagram shows three icons in a row, connected by right-pointing arrows. The first icon is a trapezoidal shape with four small squares inside, representing the Home screen. The second icon is a square with two interlocking gears, representing the Theme screen. The third icon is a square with a stylized 'C' shape, representing the Utility screen.
- 2 Touch [Illumination].**
 - You can also change the screen for settings by touching [Theme], [Background] or [Utility] on this screen.
 - 3 Touch the color you want.**
 - Colored keys: Selects the desired preset color.
 -  (custom): Displays the screen to customize the illumination color.
 - ➔ *Creating a user-defined color on page 46*
 -  (rainbow): Shifts gradually between the five default colors in sequence.
 - You can preview the Top menu screen or the AV operation screen by touching [Home] or [AV] respectively.

Creating a user-defined color

You can create a user-defined color. The created color is stored, and you can select the color when setting the illumination color the next time.

1 Display the "Theme" screen.



2 Touch [Illumination].

- You can also change the screen for settings by touching [Theme], [Background] or [Utility] on this screen.

3 Touch the following key.



Displays the screen to create a user-defined color and store it to memory.

4 Touch the following keys.



Adjusts the brightness and the level of red, green and blue to create a favorite color.

- You can also adjust the color tone by dragging the color bar.

5 Touch and hold [Memo] to store the customized color in the memory.

The customized color is stored in the memory. The set color will be recalled from the memory the next time you touch the same key.

Selecting the theme color

A theme color can be selected from 5 different colors.

1 Display the "Theme" screen.



2 Touch [Theme].

- You can also change the screen for settings by touching [Illumination], [Background] or [Utility] on this screen.

3 Touch the color you want.

- You can preview the Top menu screen or the AV operation screen by touching [Home] or [AV] respectively.

Selecting the clock image

The clock on the AV operation screen and the Top menu screen can be selected from 3 different images.

1 Display the "Theme" screen.



2 Touch [Utility].

Theme menu

- You can also change the screen for settings by touching [**Illumination**], [**Theme**] or [**Background**] on this screen.
- 3 Touch the item you want to set.**
- **Preset images:** Selects the desired preset clock image.
 - **[OFF]** (off): Hides the clock display.
- You can preview the Top menu screen or the AV operation screen by touching [**Home**] or [**AV**] respectively.

Setting up the video player

Setting the top-priority languages

 
You can assign the top-priority language to the top-priority subtitle, audio and menu in initial playback. If the selected language is recorded on the disc, subtitles, audio and menu are displayed or output in that language.

- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

Setting the subtitle language

You can set a desired subtitle language. When available, the subtitles will be displayed in the selected language.

1 Display the "Video Setup" screen.




2 Touch [DVD/DivX Setup].

3 Touch [Subtitle Language].

The pop-up menu appears.

4 Touch the desired language.

 
When you select "Others", a language code input screen is shown. Input the four-digit code of the desired language then touch .

- If the selected language is not available, the language specified on the disc is displayed.
- You can also switch the subtitle language by touching the switch subtitle languages key during playback.
- The setting made here will not be affected even if the subtitle language is switched during playback using the switch subtitle languages key.

Setting the audio language

You can set the preferred audio language.

1 Display the "Video Setup" screen.




2 Touch [DVD/DivX Setup].

3 Touch [Audio Language].

The pop-up menu appears.

4 Touch the desired language.

 
When you select "Others", a language code input screen is shown. Input the four-digit code of the desired language then touch .

- If the selected language is not available, the language specified on the disc is displayed.
- You can also switch the audio language by touching the switch audio languages key during playback.
- The setting made here will not be affected even if the audio language is switched during playback using the switch audio languages key.

Setting the menu language

You can set the preferred language in which the menus recorded on a disc are displayed.

1 Display the "Video Setup" screen.




2 Touch [DVD/DivX Setup].

3 Touch [Menu Language].

The pop-up menu appears.

4 Touch the desired language.

When you select "Others", a language code input screen is shown. Input the four-digit code of the desired language then touch .


- If the selected language is not available, the language specified on the disc is displayed.

Setting the angle icon display

The angle icon can be set so it appears on scenes where the angle can be switched.

- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

 1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

3 Touch [Multi Angle] repeatedly until the desired setting appears.

 
- **On** (default): Turns the multi-angle setting on.
- **Off**: Turns the multi-angle setting off.

Setting the aspect ratio

There are two kinds of displays. A wide screen display has a width-to-height ratio (TV aspect) of 16:9, while a regular display has a TV aspect of 4:3. If you use a regular rear display with a TV aspect of 4:3, you can set the aspect ratio suitable for your rear display. (We recommend use of this function only when you want to fit the aspect ratio to the rear display.)

- When using a regular display, select either "Letter Box" or "Pan Scan". Selecting "16:9" may result in an unnatural image.
- If you select the TV aspect ratio, this product's display will change to the same setting.
- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

 
3 Touch [TV Aspect].

The pop-up menu appears.

4 Touch the item you want to set.

- **16:9** (default): Displays the wide screen image (16:9) as it is (initial setting).

Setting up the video player

- **Letter Box:** Makes the image in the shape of a letterbox with black bands on the top and bottom of the screen.
- **Pan Scan:** Cuts the image short on the right and left sides of the screen.
- When playing discs that do not have a panscan system, the disc is played back with "Letter Box" even if you select the "Pan Scan" setting. Confirm whether the disc package bears the  mark.
- The TV aspect ratio cannot be changed for some discs. For details, refer to the disc's instructions.

 
Setting parental lock

- Some DVD-Video discs let you use parental lock to set restrictions so that children cannot watch violent or adult-oriented scenes. You can set the parental lock level in steps as desired.
- When you set a parental lock level and then play a disc featuring parental lock, code number input indications may be displayed. In this case, playback will begin when the correct code number is input.
 - This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

Setting the code number and level

When you first use this function, register your code number. If you do not register a code number, the parental lock will not operate.

1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

3 Touch [Parental].

The "Parental" screen appears.

4 Touch [0] to [9] to input a four-digit code number.

5 Touch the following key.



Registers the code number, and you can now set the level.

6 Touch any number between [1] to [8] to select the desired level.

- [8]: Enables playback of the entire disc (initial setting).
- [7] to [2]: Enables playback of discs for children and non-adult oriented discs.
- [1]: Enables only playback of discs for children.

7 Touch the following key.



Sets the parental lock level.

- We recommend to keep a record of your code number in case you forget it.
- The parental lock level is recorded on the disc. You can confirm it by looking at the disc package, the included literature or the disc itself. You cannot use parental lock with discs that do not feature a recorded parental lock level.
- With some discs, parental lock operates to skip certain scenes only, after which normal playback resumes. For details, refer to the disc's instructions.

Displaying your DivX VOD registration code

If you want to play DivX® VOD (video on demand) content on this product, you must first register this product with your DivX VOD content provider. You do this by generating a DivX VOD registration code, which you submit to your provider.

- Keep a record of the code as you will need it when you register this product to the DivX VOD provider.
- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

3 Touch [DivX® VOD].

The "DivX® VOD" screen appears.

- If a registration code has already been activated, it cannot be displayed.

4 Touch [Registration Code].

Your 10-digit registration code is displayed.

 
- Make a note of the code as you will need it when you deregister from a DivX VOD provider.

Displaying your DivX VOD deregistration code

A registration code registered with a deregistration code can be deleted.

- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

3 Touch [DivX® VOD].

The "DivX® VOD" screen appears.

4 Touch [Deregistration Code].

Your 8-digit deregistration code is displayed.

- Make a note of the code as you will need it when you deregister from a DivX VOD provider.

Automatic playback of DVDs

When a DVD disc with a DVD menu is inserted, this product will cancel the menu automatically and start playback from the first chapter of the first title.

- Some DVDs may not operate properly. If this function is not fully operable, turn this function off and start playback.
- This setting is available when the selected source is "Disc", "CD", "Video CD" or "DVD".

1 Display the "Video Setup" screen.



2 Touch [DVD/DivX Setup].

3 Touch [DVD Auto Play] repeatedly until the desired setting appears.

- **Off** (default): Turns the DVD Auto Play setting off
- **On:** Turns the DVD Auto Play setting on

 
Setting up the video player

Setting the video signal for the rear view camera

When you connect a rear view camera to this product, select the suitable video signal setting.

- You can operate this function only for the video signal input into the AV input.

1 Display the “Video Setup” screen.



2 Touch [Video Signal Setting].

3 Touch [Camera].

The pop-up menu appears.

4 Touch the item you want to set.

- **Auto** (default): Adjusts the video signal setting automatically.
- **PAL**: Sets the video signal to PAL.
- **NTSC**: Sets the video signal to NTSC.
- **PAL-M**: Sets the video signal to PAL-M.
- **PAL-N**: Sets the video signal to PAL-N.
- **SECAM**: Sets the video signal to SECAM.

Favorite menu

Registering your favorite menu items in shortcuts allows you to quickly jump to the registered menu screen by a simple touch on the **"Favorites"** screen.

- Up to 12 menu items can be registered in the favorite menu.

Creating a shortcut

- 1 Display the "Settings" screen.



- 2 Touch the star icon of the menu item that you want to add to the favorite menu.

The star icon for the selected menu is filled in.

- To cancel the registration, touch the star icon in the menu column again.

Selecting a shortcut

- 1 Display the "Favorites" screen.



- 2 Touch the desired menu item.

Removing a shortcut

- 1 Display the "Favorites" screen.




- 2 Touch the favorite menu column you want to remove.

The selected menu item is removed from the **"Favorites"** screen.

- You can also remove a shortcut by touching the star icon in the registered menu column.

Common operations

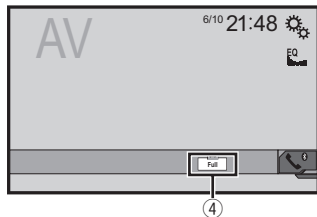

- ① Clock display
Displays the time and date setting screen
➔ *Setting the time and date* on page 52
- ② Song information
Performs the iTunes Tagging
➔ *Storing song information to an iPod (iTunes Tagging)* on page 52
- ③ S.Rtrv key
Switches the sound retriever setting
➔ *Setting the "Sound Retriever" function* on page 52
- ④ Screen display mode key
Changes the wide screen mode

➔ *Changing the wide screen mode* on page 52

Setting the time and date

- 1 Touch the current time on the screen.
- 2 Touch ▲ or ▼ to set the correct time and date.

You can operate the following items: Year, month, date, hour, minute.

- You can change the time display format to "12hour" (default) or "24hour".
- You can change the order of date display format: Day-month-year, Month-day-year, Year-month-date.

Storing song information to an iPod (iTunes Tagging)

You can store song information to the iPod when this product receives song information. The songs will appear in a playlist called "Tagged playlist" in iTunes the next time you synchronize your iPod. You can directly buy the songs via this product.

- The iTunes Tagging function is available while digital broadcasts are being received.
- This function is available for the following iPod models: iPhone, 3G, 3GS, 4, 4s, 5, 5s, 5c
iPod touch 1st, 2nd, 3rd, 4th, 5th generation
iPod classic 1st, 2nd generation
iPod nano 3rd, 4th, 5th, 6th generation
 The version of iTunes must be 7.4 or higher.

- 1 Tune into the radio station.
➔ *Radio* on page 19
- 2 Touch the song title or artist name.

The information on the song on air is stored in this product. When the information is acquired, [S.Rtrv] turns off and [i] is displayed.

- The song information for up to 50 songs can be stored in this product.

3 Connect your iPod.

The song information is transferred to your iPod.

- When your iPod is already connected, the song information will be transferred directly to your iPod every time you touch the song information.
- When the song information transfer is completed, the information stored in this product will be automatically deleted.

- If you turn off this product or disconnect the iPod while transferring song information, the transfer may not successfully complete.
- While this product is storing song information, transfer to an iPod is not possible.

Setting the "Sound Retriever" function

The "Sound Retriever" function automatically enhances compressed audio and restores rich sound.

- Touch [S.Rtrv] to switch the settings.
- [S.Rtrv] (Mode1) (default), [S.Rtrv] (Mode2): Activates the "Sound Retriever" function.
- [S.Rtrv] (Off): Deactivates the "Sound Retriever" function.
- Mode1 has a stronger effect than Mode2.

Changing the wide screen mode

You can set the screen size for the video and JPEG images.

- The default setting is "Full", and for JPEG images is "Normal".
- 1 Touch the screen display mode key.
 - The appearance of this key changes according to the current setting.

2 Touch the desired mode.

- **Full:**
A 4:3 picture is enlarged in the horizontal direction only, enabling you to enjoy an image without any omissions.
 This setting is for video only.
 - **Zoom:**
A 4:3 picture is enlarged in the same proportion both vertically and horizontally.
 This setting is for video only.
 - **Normal:**
A 4:3 picture is displayed normally, without changing its proportion.
 This setting is for video and JPEG images.
 - **Trimming**
An image is displayed across the entire screen with the horizontal-to-vertical ratio left as is. If the screen ratio differs from the image, the image may be displayed partly cut off either at the top/bottom or sides.
 This setting is for JPEG images only.
- You cannot operate this function while driving.
 - Different settings can be stored for each video source.

Common operations

- ❑ When a video is viewed in a wide screen mode that does not match its original aspect ratio, it may appear different.
- ❑ The video image will appear coarser when viewed in **"Zoom"** mode.

Other functions

Restoring this product to the default settings

You can restore settings or recorded content to the default settings. Various methods are used to clear user data.

Method 1: Remove the vehicle battery

Resets various settings registered to this product.

- The settings configured on the "Theme" screen are not reset.

Method 2: Initialize from the "System" menu

Method 3: Press the RESET button

➤ *Resetting the microprocessor on page 5*

Restoring the default settings

- This setting is available only when you stop your vehicle in a safe place and apply the parking brake.

⚠ CAUTION

Do not turn off the engine while restoring the settings.

1 Display the "System" setting screen.



2 Touch [Restore Settings].

A message confirming whether to initialize the settings appears.

3 Touch [Restore].

- The source is turned off and the Bluetooth connection is disconnected before the process starts.

Troubleshooting

If you have problems operating this product, refer to this section. The most common problems are listed below, along with likely causes and solutions. If a solution to your problem cannot be found here, contact your dealer or the nearest authorized Pioneer service facility.

Problems with the AV screen

CD or DVD playback is not possible.

- The disc is inserted upside down.
 - Insert the disc with the label upward.
- The disc is dirty.
 - Clean the disc.
- The disc is cracked or otherwise damaged.
 - Insert a normal, round disc.
- The files on the disc are in an irregular file format.
 - Check the file format.
- The disc format cannot be played back.
 - Replace the disc.
- The loaded disc is a type this product cannot play.
 - Check what type of disc it is.

The screen is covered by a caution message and the video cannot be shown.

- The parking brake lead is not connected or applied.
 - Connect the parking brake lead correctly, and apply the parking brake.
- The parking brake interlock is activated.
 - Park your vehicle in a safe place and apply the parking brake.

No video output from the connected equipment.

- The "AV Input" setting is incorrect.
 - Correct the settings.

The audio or video skips.

- This product is not firmly secured.
 - Secure this product firmly.

No sounds are produced. The volume level will not rise.

- Cables are not connected correctly.
 - Connect the cables correctly.
- The system is performing still, slow motion, or frame-by-frame playback with DVD-Video.
 - There is no sound during still, slow motion, or frame-by-frame playback with DVD-Video.
- The system is paused or performing, fast reverse or forward during the disc playback.
 - For the media other than music CD (CD-DA), there is no sound on fast reverse or forward.

The icon is displayed, and operation is impossible.

- The operation is not compatible with the video configuration.
 - This operation is not possible. (For example, the DVD playing does not feature that angle, audio system, subtitle language, etc.)

The picture stops (pauses) and this product cannot be operated.

- The reading of data is impossible during disc playback.
 - Stop playback once, then restart.

The picture is stretched, with an incorrect aspect ratio.

- The aspect setting is incorrect for the display.
 - Select the appropriate setting for that image.

A parental lock message is displayed and DVD playback is not possible.

- The parental lock is on.
 - Turn the parental lock off or change the level.

The parental lock for DVD playback cannot be canceled.

- The code number is incorrect.
 - Input the correct code number.

Playback is not with the audio language and subtitle language settings selected in "DVD/DivX Setup".

- The DVD playing does not feature dialog or subtitles in the language selected in "DVD/DivX Setup".
 - Switching to a selected language is not possible if the language selected in "DVD/DivX Setup" is not recorded on the disc.

The picture is extremely unclear/distorted and dark during playback.

- The disc features a signal to prohibit copying. (Some discs may have this.)
 - Since this product is compatible with the copy guard analog copy protect system, the picture may suffer from horizontal stripes or other imperfections when a disc with that kind of protection signal is viewed on some displays. This is not a malfunction.

iPod cannot be operated.

- The iPod is frozen.
 - Reconnect the iPod with the USB interface cable for iPod/iPhone.
 - Update the iPod software version.
- An error has occurred.
 - Reconnect the iPod with the USB interface cable for iPod/iPhone.
 - Park your vehicle in a safe place, and turn off the engine. Turn the ignition key back to off (ACC OFF). Then restart the engine, and turn the power to this product back on.
 - Update the iPod software version.
- Cables are not connected correctly.
 - Connect the cables correctly.

Sound from the iPod cannot be heard.

- The audio output direction may switch automatically when the Bluetooth and USB connections are used at the same time.
 - Use the iPod to change the audio output direction.


Problems with the phone screen

Dialing is impossible because the touch panel keys for dialing are inactive.

- Your phone is out of range for service.
 - Retry after re-entering the range for service.
- The connection between the cellular phone and this product cannot be established now.
 - Perform the connection process.

Problems with the Application screen

A black screen is displayed.

- While operating an application, the application was ended on the smartphone side.
 - Press  to display the Top menu screen.
- The smartphone OS may be awaiting screen operation.
 - Stop the vehicle in a safe place and check the screen on the smartphone.

The screen is displayed, but operation does not work at all.

- An error has occurred.
 - Park your vehicle in a safe place, and then turn off the ignition switch (ACC OFF). Subsequently, turn the ignition switch to on (ACC ON) again.
 - When an Android device is connected, disconnect the Bluetooth connection from this product and then reconnect it.

The smartphone was not charged.

- Charging stopped because the temperature of the smartphone rose due to prolonged use of the smartphone during charging.
 - Disconnect the smartphone from the cable, and wait until the smartphone cools down.
- More battery power was consumed than was gained from charging.
 - This problem may be resolved by stopping any unnecessary services on the smartphone.

Sound from AppRadioMode of the Android device cannot be heard from the speakers of this unit.

- Depending on the Android device, the sound from AppRadioMode may not be output from the speakers of this unit.
 - Switch to "Smartphone" in the "AppRadioMode Sound" settings. (Refer to 39)

Error messages

When problems occur with this product, an error message appears on the display. Refer to the table below to identify the problem, then take the suggested corrective action. If the error persists, record the error message and contact your dealer or your nearest Pioneer service center.

Common

AMP Error

- This product fails to operate or the speaker connection is incorrect; the protective circuit is activated.
 - Check the speaker connection. If the message fails to disappear even after the engine is switched off/on, contact your dealer or an authorized Pioneer Service Station for assistance.

Product overheat. System will be shut down automatically in 1 minute. Restart the product by ACC Off/On may fix this problem. If this message keep showing up, it is possible that some problem occurred in the product.

- The temperature is too high for this product to operate.
 - Follow the instructions displayed on the screen. If this does not solve the problem, contact your dealer or an authorized Pioneer Station for assistance.

Pandora

Error-19

- Communication failed.
 - Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.

Skip limit reached.

- Skip limit reached.
 - Do not exceed the skip limit.
 - Due to music licensing restrictions, Pandora limits the total number of skips per hour.

Check Device

- Device error message displayed in Pandora application.
 - Please check your connected device.

Incompatible USB

- The connected USB storage device is not supported by this product.
 - Disconnect your device and replace it with a compatible USB storage device.

Check USB

- The USB connector or USB cable has short-circuited.
 - Check that the USB connector or USB cable is not caught in something or damaged.
- The connected USB storage device consumes more than maximum allowable current.
 - Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect a compliant USB storage device.

Disc

Error-02-XX/FF-FF

- The disc is dirty.
 - Clean the disc.
- The disc is scratched.
 - Replace the disc.
- The disc is loaded upside down.
 - Check that the disc is loaded correctly.
- There is an electrical or mechanical error.
 - Press the **RESET** button.

Different Region Disc

- The disc does not have the same region number as this product.
 - Replace the DVD with one bearing the correct region number.

Unplayable Disc

- This type of disc cannot be played on this product.
 - Replace the disc with one that can be played on this product.

Unplayable File

- This type of file cannot be played on this product.
 - Select a file that can be played.

Skipped

- The inserted disc contains DRM protected files.
 - The protected files are skipped.

Protect

- All the files on the inserted disc are embedded with DRM.
 - Replace the disc.

TEMP

- The temperature of this product is outside the normal operating range.
 - Wait until this product returns to a temperature within the normal operating limits.

This DivX rental has expired.

- The inserted disc contains expired DivX VOD content.
 - Select a file that can be played.

Video resolution not supported

- Files that cannot be played on this product are included in the file.
 - Select a file that can be played.

Unable to write to flash memory.

- The playback history for VOD contents cannot be saved for some reason.
 - Retry.
 - If the message appears frequently, consult your dealer.

Your device is not authorized to play this DivX protected video.

- This product's DivX registration code has not been authorized by the DivX VOD contents provider.
 - Register this product to the DivX VOD contents provider.

Video frame rate not supported

- DivX file's frame rate is more than 30 fps.
 - Select a file that can be played.

Audio Format not supported

- This type of file is not supported on this product.
 - Select a file that can be played.

USB storage device

Error-02-9X/-DX

- Communication failed.
 - Turn the ignition switch OFF and back ON.
 - Disconnect the USB storage device.
 - Change to a different source. Then, return to the USB storage device.

Unplayable File

- This type of file cannot be played on this product.
 - Select a file that can be played.
- Security for the connected USB storage device is enabled.
 - Follow the USB storage device instructions to disable security.

Skipped

- The connected USB storage device contains DRM protected files.
 - The protected files are skipped.

Protect

- All the files on the connected USB storage device are embedded with DRM.
 - Replace the USB storage device.

Incompatible USB

- The connected USB storage device is not supported by this product.
 - Disconnect your device and replace it with a compatible USB storage device.

Check USB

- The USB connector or USB cable is short-circuited.
 - Check that the USB connector or USB cable is not caught in something or damaged.
- The connected USB storage device consumes more than maximum allowable current.
 - Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect a compliant USB storage device.

Video resolution not supported

- Files that cannot be played on this product are included in the file.
 - Select a file that can be played.

USB was disconnected for device protection. Do not reinsert this USB memory into the unit. Please reset the unit.

- The USB connector or USB cable is short-circuited.
 - Check that the USB connector or USB cable is not caught in something or damaged.
- The connected USB storage device consumes more than maximum allowable current.
 - Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect a compliant USB storage device.
- The USB interface cable for iPod / iPhone is short-circuited.
 - Confirm that the USB interface cable for iPod / iPhone or USB cable is not caught in something or damaged.

Audio Format not supported

- This type of file is not supported on this product.
 - Select a file that can be played.

iPod

Error-02-6X/-9X/-DX

- iPod failure.
 - Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.

Error-02-67

- The iPod firmware version is old.
 - Update the iPod version.

iTunes tagging

Error-8D

- Built-in FLASH ROM encountered an error.
 - Turn the ignition switch to OFF and then to ON.

Tag store failed.

- Tag information cannot be stored in this product.
 - Try again.

Already stored.

- This tag information is already stored in memory.
 - Tag information can only be saved once for any given song. Tag information cannot be saved for the same song more than once.

Memory full. Connect iPod.

- The tag information is successfully stored. The flash memory of this product has become full.
 - The tag information on this product is transferred to the iPod automatically when an iPod is connected.

Memory full. Tags not stored. Connect iPod.

- This product's flash memory used as the temporary storage area is full.
 - The tag information on this product is transferred to the iPod automatically when an iPod is connected.

iPod full. Tags not transferred.

- Memory used for tag information on the iPod is full.
 - Sync the iPod with iTunes and clean up the tagged playlist.

Tag transfer failed. Reconnect your iPod.

- This product's tag information cannot transfer to the iPod.
 - Check the iPod and try again.

Bluetooth

Error-10

- The power failed for the Bluetooth module of this product.
 - Turn the ignition switch to OFF and then to ON.
 - If the error message is still displayed after performing the above action, please contact your dealer or an authorized Pioneer Service Station.

MirrorLink

The application list could not be read out.

- Failed to load the application list.
 - Disconnect the cable from the smartphone, and then connect the smartphone again after a few seconds.
 - Turn the ignition switch to OFF and then to ON. If the error message is still displayed after performing the above action, reset the smartphone. If the error message is still displayed after performing the above action, please contact your dealer or an authorized Pioneer Service Station.

There is no supported application on your MirrorLink device.

- No supported applications can be found.
 - Install **MirrorLink** compliant applications to your **MirrorLink** device.

Communication error occurred.

- There was a communication error.
 - Disconnect the cable from the smartphone, and then connect the smartphone again after a few seconds.
 - Turn the ignition switch to OFF and then to ON. If the error message is still displayed after performing the above action, reset the smartphone. If the error message is still displayed after performing the above action, please contact your dealer or an authorized Pioneer Service Station.

Launching the application failed.

- Failed to launch the application.
 - Try again.

Failed to display the screen of your device because of irregular resolution.

- The image size is too large.
 - The size of the images transferred from the device exceeds 800 × 480.

Handling and care of discs

Some basic precautions are necessary when handling your discs.

Built-in drive and care

- Use only conventional, fully circular discs. Do not use shaped discs.
- Do not use cracked, chipped, warped, or otherwise damaged discs as they may damage the built-in drive.

Appendix

- Use 12-cm discs. Do not use 8-cm discs or an adapter for 8-cm discs.
- When using discs that can be printed on label surfaces, check the instructions and the warnings of the discs. Depending on the discs, inserting and ejecting may not be possible. Using such discs may result in damage to this equipment.
- Do not attach labels, write on or apply chemicals to the surface of the discs.
- Do not attach commercially available labels or other materials to the discs.
- To clean a disc, wipe it with a soft cloth, moving outward from the center.
- Condensation may temporarily impair the built-in drive's performance.
- Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions and so on.
- Road shocks may interrupt disc playback.
- Read the precautions for discs before using them.

Ambient conditions for playing a disc

- At extremely high temperatures, a temperature cutout protects this product by switching it off automatically.
- Despite our careful design of the product, small scratches that do not affect actual operation may appear on the disc surface as a result of mechanical wear, ambient conditions for use or handling of the disc. This is not a sign of the malfunction of this product. Consider it to be normal wear and tear.

Playable discs

DVD-Video



- **DVD** is a trademark of DVD Format/Logo Licensing Corporation.
- It is not possible to play DVD-Audio discs. This DVD drive may not be able to play all discs bearing the marks shown above.

CD



AVCHD recorded discs

This unit is not compatible with discs recorded in AVCHD (Advanced Video Codec High Definition) format. Do not insert AVCHD discs. If inserted, the disc may not be ejected.

Playing DualDisc

- DualDisc are two-sided discs that have a recordable CD for audio on one side and a recordable DVD for video on the other.
- Playback of the DVD side is possible with this product.
- However, since the CD side of DualDiscs is not physically compatible with the general CD standard, it may not be possible to play the CD side with this product.
- Frequent loading and ejecting of a DualDisc may result in scratches to the disc.
- Serious scratches can lead to playback problems on this product. In some cases, a DualDisc may become stuck in the disc-loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this product.
- Please refer to the manufacturer for more detailed information about DualDiscs.

Dolby Digital

This product will down-mix Dolby Digital signals internally and the sound will be output in stereo.

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Detailed information for playable media

Compatibility

Common notes about disc compatibility

- Certain functions of this product may not be available for some discs.
- Compatibility with all discs is not guaranteed.
- It is not possible to playback DVD-ROM/DVD-RAM discs.
- Playback of discs may become impossible with direct exposure to sunlight, high temperatures, or depending on the storage conditions in the vehicle.

DVD-Video discs

- DVD-Video discs that have incompatible region numbers cannot be played on this DVD drive. The region number of the player can be found on this product's chassis.

DVD-R/DVD-RW/DVD-R SL (Single Layer)/DVD-R DL (Dual Layer) discs

- Unfinalized discs which have been recorded with the Video format (video mode) cannot be played back.
- Discs which have been recorded with the Video Recording format (VR mode) cannot be played back.
- DVD-R DL (Dual Layer) discs which have been recorded with Layer Jump recording cannot be played back.
- For detailed information about recording mode, please contact the manufacturer of media, recorders, or writing software.

CD-R/CD-RW discs

- Unfinalized discs cannot be played back.
- It may not be possible to playback CD-R/CD-RW discs recorded on a music CD recorder or a computer because

of disc characteristics, scratches or dirt on the disc, or dirt, scratches or condensation on the lens of the built-in drive.

- Playback of discs recorded on a computer may not be possible, depending on the recording device, writing software, their settings, and other environmental factors.
- Please record with the correct format. (For details, please contact manufacturer of media, recorders, or writing software.)
- Titles and other text information recorded on a CD-R/CD-RW disc may not be displayed by this product (in the case of audio data (CD-DA)).
- Read the precautions with CD-R/CD-RW discs before using them.

Common notes about the USB storage device

- Do not leave the USB storage device in any location with high temperatures.
- Depending on the kind of the USB storage device you use, this product may not recognize the storage device or files may not be played back properly.
- The text information of some audio and video files may not be correctly displayed.
- File extensions must be used properly.
- There may be a slight delay when starting playback of files on an USB storage device with complex folder hierarchies.
- Operations may vary depending on the kind of an USB storage device.
- It may not be possible to play some music files from USB because of file characteristics, file format, recorded application, playback environment, storage conditions, and so on.

Handling guidelines and supplemental information

- This product is not compatible with the Multi Media Card (MMC).
- Copyright protected files cannot be played back.

Common notes about DivX files

Notes specific to DivX files

- Only DivX files downloaded from DivX partner sites are guaranteed for proper operation. Unauthorized DivX files may not operate properly.
- DRM rental files cannot be operated until playing back is started.
- This product corresponds to a DivX file display of up to 1 590 minutes 43 seconds. Search operations beyond this time limit are prohibited.
- DivX VOD file playback requires supplying the ID code of this product to the DivX VOD provider. Regarding the ID code,

refer to *Displaying your DivX VOD registration code* on page 49.

- For details on the DivX video versions that can be played on this product, refer to *Specifications* on page 63.
- For more details about DivX, visit the following site: <http://www.divx.com/>

DivX subtitle files

- Srt format subtitle files with the extension ".srt" can be used.
- Only one subtitle file can be used for each DivX file. Multiple subtitle files cannot be associated.
- Subtitle files that are named with the same character string as the DivX file before the extension are associated with the DivX file. The character strings before the extension must be exactly the same. However, if there is only one DivX file and one subtitle file in a single folder, the files are associated even if the file names are not the same.
- The subtitle file must be stored in the same folder as the DivX file.
- Up to 255 subtitle files may be used. Any more subtitle files will not be recognized.
- Up to 64 characters can be used for the name of the subtitle file, including the extension. If more than 64 characters are used for the file name, the subtitle file may not be recognized.
- The character code for the subtitle file should comply with ISO-8859-1. Using characters other than ISO-8859-1 may cause the characters to be displayed incorrectly.
- The subtitles may not be displayed correctly if the displayed characters in the subtitle file include control code.
- For materials that use a high transfer rate, the subtitles and video may not be completely synchronized.
- If multiple subtitles are programmed to display within a very short time frame, such as 0.1 seconds, the subtitles may not be displayed at the correct time.

Media compatibility chart

General

- Maximum playback time of audio file stored in the disc: 60 h
- Maximum playback time of audio file stored on an USB storage device: 7.5 h (450 minutes)

CD-R/-RW

File system: ISO9660 level 1.ISO9660 level 2.Romeo, Joliet.UDF 1.02/1.50/2.00/2.01/2.50
Maximum number of folders: 700
Maximum number of files: 999
Playable file types: MP3, WMA, AAC, DivX, MPEG1, MPEG2, MPEG4

DVD-R/-R SL/-R DL/ DVD-RW

File system: ISO9660 level 1.ISO9660 level 2.Romeo, Joliet.UDF 1.02/1.50/2.00/2.01/2.50
Maximum number of folders: 700
Maximum number of files: 3 500
Playable file types: MP3, WMA, AAC, DivX, MPEG1, MPEG2, MPEG4

USB storage device

File system: FAT16/FAT32
Maximum number of folders: 1 500
Maximum number of files: 15 000
Playable file types: MP3, WMA, AAC, WAVE, H.264, MPEG4, MKV, JPEG

MP3 compatibility

- Ver. 2.x of ID3 tag is prioritized when both Ver. 1.x and Ver. 2.x exist.
- This product is not compatible with the following: MP3i (MP3 interactive), mp3 PRO, m3u playlist

CD-R/-RW

File extension: .mp3
Bit rate: 8 kbps to 320 kbps (CBR), VBR
Sampling frequency: 16 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)
ID3 tag: ID3 tag Ver. 1.0, 1.1, 2.2, 2.3

DVD-R/-R SL/-R DL/ DVD-RW

File extension: .mp3
Bit rate: 8 kbps to 320 kbps (CBR), VBR
Sampling frequency: 16 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)
ID3 tag: ID3 tag Ver. 1.0, 1.1, 2.2, 2.3

USB storage device

File extension: .mp3
Bit rate: 8 kbps to 320 kbps (CBR), VBR
Sampling frequency: 8 kHz to 48 kHz
ID3 tag: ID3 tag Ver. 1.0, 1.1, 2.2, 2.3, 2.4

WMA compatibility

- This product is not compatible with the following: Windows Media™ Audio 9 Professional, Lossless, Voice

CD-R/-RW

File extension: .wma
Bit rate: 5 kbps to 320 kbps (CBR), VBR
Sampling frequency: 8 kHz to 48 kHz

DVD-R/-R SL/-R DL/ DVD-RW

File extension: .wma
Bit rate: 5 kbps to 320 kbps (CBR), VBR
Sampling frequency: 8 kHz to 48 kHz

Appendix

USB storage device

File extension: .wma
Bit rate: 5 kbps to 320 kbps (CBR), VBR
Sampling frequency: 8 kHz to 48 kHz

WAV compatibility

- The sampling frequency shown in the display may be rounded.
- WAV files on the CD-R/RW, DVD-R/RW/R SL/R DL cannot be played.

USB storage device

File extension: .wav
Format: Linear PCM (LPCM)
Sampling frequency: 16 kHz to 48 kHz
Quantization bits: 8 bits and 16 bits

AAC compatibility

- This product plays back AAC files encoded by iTunes.

CD-R/RW

File extension: .m4a
Bit rate: 8 kbps to 320 kbps (CBR)
Sampling frequency: 8 kHz to 44.1 kHz

DVD-R/R SL/R DL/ DVD-RW

File extension: .m4a
Bit rate: 8 kbps to 320 kbps (CBR)
Sampling frequency: 8 kHz to 44.1 kHz

USB storage device

File extension: .m4a
Bit rate: 8 kbps to 320 kbps (CBR)
Sampling frequency: 8 kHz to 48 kHz

DivX compatibility

- This product is not compatible with the following: DivX Ultra format, DivX files without video data, DivX files encoded with LPCM (Linear PCM) audio codec
- Depending on the file information composition, such as the number of audio streams, there may be a slight delay in the start of playback on discs.
- If a file contains more than 4 GB, playback stops before the end.
- Some special operations may be prohibited because of the composition of DivX files.
- Files with high transfer rates may not be played back correctly. The standard transfer rate is 4 Mbps for CDs and 10.08 Mbps for DVDs.
- DivX files on the USB storage device cannot be played.

CD-R/RW

File extension: .avi/divx

Profile (DivX version): Home Theater Ver. 3.11/Ver. 4.x/Ver. 5.x/Ver. 6.x
Compatible audio codec: MP3, Dolby Digital
Bit rate (MP3): 8 kbps to 320 kbps (CBR), VBR
Sampling frequency (MP3): 16 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)
Maximum image size: 720 pixels × 576 pixels
Maximum file size: 4 GB

DVD-R/R SL/R DL/ DVD-RW

File extension: .avi/divx
Profile (DivX version): Home Theater Ver. 3.11/Ver. 4.x/Ver. 5.x/Ver. 6.x
Compatible audio codec: MP3, Dolby Digital
Bit rate (MP3): 8 kbps to 320 kbps (CBR), VBR
Sampling frequency (MP3): 16 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)
Maximum image size: 720 pixels × 576 pixels
Maximum file size: 4 GB

Video files compatibility (USB)

- Files may not be played back properly depending on the environment in which the file was created or on the contents of the file.
- This product may not operate correctly, depending on the application used to encode WMA files.
- Depending on the version of Windows Media™ Player used to encode WMA files, album names and other text information may not be correctly displayed.
- There may be a slight delay when starting playback of audio files encoded with image data.
- This product is not compatible with packet write data transfer.
- This product can recognize up to 32 characters, beginning with the first character, including extension for the file and folder name. Depending on the display area, this product may try to display them with a reduced font size. However, the maximum number of the characters that you can display varies according to the width of each character, and of the display area.
- Folder selection sequence or other operations may be altered, depending on the encoding or writing software.
- Regardless of the length of blank section between the songs of original recording, compressed audio discs play with a short pause between songs.

.avi

Format: MPEG-4/H.264
Compatible video codec: MPEG-4 (Simple Profile)/H.264 (Base Line Profile)
Compatible audio codec: Linear PCM (LPCM) MP3
Maximum resolution: 640 pixels × 360 pixels

Maximum Frame rate: 30 fps
Maximum file size: 2 GB
Maximum playback time: 150 minutes
■ Files may not be able to be played back depending on the bit rate.

.mp4

Format: MPEG-4/H.264
Compatible video codec: MPEG-4 (Simple Profile)/H.264 (Base Line Profile)
Compatible audio codec: AAC/Linear PCM (LPCM) MP3
Maximum resolution: 640 pixels × 360 pixels
Maximum Frame rate: 30 fps
Maximum file size: 2 GB
Maximum playback time: 150 minutes
■ Files may not be able to be played back depending on the bit rate.

.3gp

Format: MPEG-4/H.264
Compatible video codec: MPEG-4 (Simple Profile)/H.264 (Base Line Profile)
Compatible audio codec: AAC/Linear PCM (LPCM) MP3
Maximum resolution: 640 pixels × 360 pixels
Maximum Frame rate: 30 fps
Maximum file size: 2 GB
Maximum playback time: 150 minutes
■ Files may not be able to be played back depending on the bit rate.

.mkv

Format: MPEG-4/H.264
Compatible video codec: MPEG-4 (Simple Profile)/H.264 (Base Line Profile)
Compatible audio codec: AAC/Linear PCM (LPCM) MP3/AC-3
Maximum resolution: 640 pixels × 360 pixels
Maximum Frame rate: 30 fps
Maximum file size: 2 GB
Maximum playback time: 150 minutes
■ Files may not be able to be played back depending on the bit rate.

.mov

Format: MPEG-4/H.264
Compatible video codec: MPEG-4 (Simple Profile)/H.264 (Base Line Profile)
Compatible audio codec: AAC/Linear PCM (LPCM) MP3
Maximum resolution: 640 pixels × 360 pixels
Maximum Frame rate: 30 fps
Maximum file size: 2 GB
Maximum playback time: 150 minutes
■ Files may not be able to be played back depending on the bit rate.

Example of a hierarchy

- This folder assigns folder numbers. The user cannot assign folder numbers.

Copyright and trademark notice

Copyright (c) 1987, 1993, 1994

The Regents of the University of California. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
 3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.
 4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.
- THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE

Bluetooth



The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by PIONEER CORPORATION is under license. Other trademarks and trade names are those of their respective owners.

WMA

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

DivX



DivX is a compressed digital video format created by the DivX video codec from DivX, LLC, a subsidiary of Rovi Corporation. This unit can play DivX video files recorded on CD-R/RW/ROM and DVD-R/RW/ROM discs. Keeping the same terminology as DVD video, individual DivX video files are called "Titles". Keep in mind that when naming files/titles on a CD-R/RW or a DVD-R/RW disc prior to burning, they will be played in written order by default.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license. ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX Inc. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate

the DivX VOD section in Displaying your DivX VOD registration code. Go to vod.divx.com for more information on how to complete your registration.

- *Displaying your DivX VOD registration code on page 49*

AAC

AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG-2 and MPEG-4. Several applications can be used to encode AAC files, but file formats and extensions differ depending on the application which is used to encode. This unit plays back AAC files encoded by iTunes.

Android™

Android is a trademark of Google Inc.

MirrorLink

MirrorLink Certified™, the Design Only™ Certification Logo, MirrorLink™ and the MirrorLink™ Logo are certification marks and trademarks of the Car Connectivity Consortium LLC. Unauthorized use is strictly prohibited.

Detailed information regarding connected iPod devices

- Pioneer accepts no responsibility for data lost from an iPod, even if that data is lost while using this product. Please back up your iPod data regularly.
 - Do not leave the iPod in direct sunlight for extended amounts of time. Extended exposure to direct sunlight can result in iPod malfunction due to the resulting high temperature.
 - Do not leave the iPod in any location with high temperatures.
 - Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or gas pedal.
- For details, refer to the iPod manuals.

Appendix

iPod and iPhone



"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Lightning

Lightning is a trademark of Apple Inc.

App Store

App Store is a service mark of Apple Inc.

iOS

iOS is a trademark on which Cisco holds the trademark right in the US and certain other countries.

iTunes

iTunes is a trademark of Apple Inc., registered in the U.S. and other countries.

Using app-based connected content

IMPORTANT

Requirements to access app-based connected content services using this product:

- Latest version of the Pioneer compatible connected content application(s) for the smartphone, available from the service provider, downloaded to your smartphone.
- A current account with the content service provider.
- Smartphone Data Plan.

Note: if the Data Plan for your smartphone does not provide for unlimited data usage, additional charges from your carrier may apply for accessing app-based connected content via 3G, EDGE and/or LTE (4G) networks.

- Connection to the Internet via 3G, EDGE, LTE (4G) or Wi-Fi network.
- Optional Pioneer adapter cable connecting your iPhone to this product.

Limitations:

- Access to app-based connected content will depend on the availability of cellular and/or Wi-Fi network coverage for the purpose of allowing your smartphone to connect to the Internet.
- Service availability may be geographically limited to the region. Consult the connected content service provider for additional information.
- Ability of this product to access connected content is subject to change without notice and could be affected by any of the following: compatibility issues with future firmware versions of smartphone; compatibility issues with future versions of the connected content application(s) for the smartphone; changes to or discontinuation of the connected Content application(s) or service by its provider.

Pandora®

PANDORA, the PANDORA logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. Used with permission. Pandora is currently available in the United States, Australia and New Zealand.

Notice regarding video viewing

Remember that use of this system for commercial or public viewing purposes may constitute an infringement on the author's rights as protected by the Copyright Law.

Notice regarding DVD-Video viewing

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Notice regarding MP3 file usage

Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>.

Using the LCD screen correctly

Handling the LCD screen

- When the LCD screen is subjected to direct sunlight for a long period of time, it will become very hot, resulting in possible damage to the LCD screen. When not using this product, avoid exposing it to direct sunlight as much as possible.
- The LCD screen should be used within the temperature ranges shown in *Specifications* on page 63.
- Do not use the LCD screen at temperatures higher or lower than the operating temperature range, because the LCD screen may not operate normally and could be damaged.
- The LCD screen is exposed in order to increase its visibility within the vehicle. Please do not press strongly on it as this may damage it.
- Do not push the LCD screen with excessive force as this may scratch it.

- Never touch the LCD screen with anything besides your finger when operating the touch panel functions. The LCD screen can scratch easily.

Liquid crystal display (LCD) screen

- If the LCD screen is near the vent of an air conditioner, make sure that air from the air conditioner is not blowing on it. Heat from the heater may break the LCD screen, and cool air from the cooler may cause moisture to form inside this product, resulting in possible damage.
- Small black dots or white dots (bright dots) may appear on the LCD screen. These are due to the characteristics of the LCD screen and do not indicate a malfunction.
- The LCD screen will be difficult to see if it is exposed to direct sunlight.
- When using a cellular phone, keep the antenna of the cellular phone away from the LCD screen to prevent disruption of the video in the form of disturbances such as spots or colored stripes.

Maintaining the LCD screen

- When removing dust from or cleaning the LCD screen, first turn this product off and then wipe the screen with a soft dry cloth.
- When wiping the LCD screen, take care not to scratch the surface. Do not use harsh or abrasive chemical cleaners.

LED (light-emitting diode) backlight

A light emitting diode is used inside the display to illuminate the LCD screen.

- At low temperatures, using the LED backlight may increase image lag and degrade the image quality because of the characteristics of the LCD screen. Image quality will improve with an increase in temperature.
- The product lifetime of the LED backlight is more than 10 000 hours. However, it may decrease if used in high temperatures.
- If the LED backlight reaches the end of its product lifetime, the screen will become dimmer and the image will no longer be visible. In that case, please consult your dealer or the nearest authorized Pioneer Service Station.

Specifications

General

Rated power source	14.4 V DC (10.8 V to 15.1 V allowable)
Grounding system	Negative type
Maximum current consumption	10.0 A
Dimensions (W × H × D):	
DIN	
Chassis	178 mm × 100 mm × 157 mm
Nose	188 mm × 118 mm × 26 mm (AVH-X5700DAB)
Nose	188 mm × 118 mm × 11 mm (AVH-X3700DAB/AVH-X2700BT)
D	
Chassis	178 mm × 100 mm × 165 mm
Nose	171 mm × 97 mm × 18 mm (AVH-X5700DAB)
Nose	171 mm × 97 mm × 3 mm (AVH-X3700DAB/AVH-X2700BT)
Weight	1.8 kg (AVH-X5700DAB)
Weight	1.6 kg (AVH-X3700DAB/AVH-X2700BT)

Display

Screen size/aspect ratio	6.95 inch wide/16:9 (effective display area: 156.6 mm × 81.6 mm) (AVH-X5700DAB)
Screen size/aspect ratio	6.2 inch wide/16:9 (effective display area: 137.52 mm × 77.232 mm) (AVH-X3700DAB/AVH-X2700BT)
Pixels	1 152 000 (2 400 × 480)
Display method	TFT Active matrix driving
Color system	PAL/NTSC/PAL-M/PAL-N/SECAM compatible

Audio

Maximum power output	•50 W × 4 ch/4 Ω •50 W × 2 ch/4 Ω + 70 W × 1 ch/2 Ω (for subwoofer)
Continuous power output	22 W × 4 (50 Hz to 15 kHz, 5 %THD, 4Ω LOAD, Both Channels Driven)
Load impedance	4 Ω (4 Ω to 8 Ω [2 Ω for 1 ch] allowable)
Preout output level (max)	4.0 V
Equalizer (13-Band Graphic Equalizer):	
Frequency	50 Hz/80 Hz/125 Hz/200 Hz/315 Hz/500 Hz/800 Hz/ 1.25 kHz/2 kHz/3.15 kHz/5 kHz/8 kHz/12.5 kHz
Gain	±12 dB
<Standard Mode>	
HPF:	

Frequency	50 Hz/63 Hz/80 Hz/100 Hz/125 Hz/160 Hz/200 Hz
Slope	-6 dB/oct, -12 dB/oct, -18 dB/oct, -24 dB/oct, OFF
Subwoofer/LPF:	
Frequency	50 Hz/63 Hz/80 Hz/100 Hz/125 Hz/160 Hz/200 Hz
Slope	-6 dB/oct, -12 dB/oct, -18 dB/oct, -24 dB/oct, OFF
Gain	+10 dB to -24 dB
Phase	Normal/Reverse
Time alignment	0 to 140 step (2.5 cm/step)
Bass boost:	
Gain	+12 dB to 0 dB
Speaker level	+10 dB to -24 dB (1 dB/step)
<Network Mode>	
HPF (High):	
Frequency	1.25 kHz/1.6 kHz/2 kHz/2.5 kHz/3.15 kHz/4 kHz/ 5 kHz/6.3 kHz/8 kHz/10 kHz/12.5 kHz
Slope	-6 dB/oct, -12 dB/oct, -18 dB/oct, -24 dB/oct
HPF (Mid):	
Frequency	25 Hz/31.5 Hz/40 Hz/50 Hz/63 Hz/80 Hz/100 Hz/ 125 Hz/160 Hz/200 Hz/250 Hz
Slope	-6 dB/oct, -12 dB/oct, -18 dB/oct, -24 dB/oct, OFF
LPF (Mid):	
Frequency	1.25 kHz/1.6 kHz/2 kHz/2.5 kHz/3.15 kHz/4 kHz/ 5 kHz/6.3 kHz/8 kHz/10 kHz/12.5 kHz
Slope	-6 dB/oct, -12 dB/oct, -18 dB/oct, -24 dB/oct, OFF
Subwoofer:	
Frequency	25 Hz/31.5 Hz/40 Hz/50 Hz/63 Hz/80 Hz/100 Hz/ 125 Hz/160 Hz/200 Hz/250 Hz
Slope	-12 dB/oct, -18 dB/oct, -24 dB/oct, -30 dB/oct, -36 dB/oct, OFF
Gain	+10 dB to -24 dB
Phase	Normal/Reverse
Time alignment	0 to 140 step (2.5 cm/step)
Bass boost:	
Gain	+12 dB to 0 dB
Speaker level	+10 dB to -24 dB (1 dB/step)

DVD drive

System	DVD-Video, VCD, CD, MP3, WMA, AAC, DivX, MPEG player
Usable discs	DVD-VIDEO, VIDEO-CD, CD, CD-R, CD-RW, DVD-R, DVD-RW, DVD-RDL
Region number	2
Signal Format:	
Sampling frequency	32 kHz/44.1 kHz/48 kHz/96 kHz
Number of quantization bits	16 bit/20 bit/24 bit; linear
Frequency response	5 Hz to 22 000 Hz (with DVD, at sampling frequency 48 kHz)
Signal-to-noise ratio	91 dB (1 kHz) (IEC-A network) (RCA level)
Output level:	
Video	1.0 Vp-p/75Ω (±0.2 V)
Number of channels	2 (stereo)

Appendix

MP3 decoding format	MPEG-1 & 2 Audio Layer 3
WMA decoding format	Ver.7, 7.1, 8, 9, 10, 11, 12 (2 ch audio) (Windows Media Player)
AAC decoding format	MPEG-4 AAC (iTunes encoded only): .m4a (Ver. 10.6 and earlier)
DivX decoding format	Home Theater Ver. 3, 4, 5.2, 6 (Except ultra and HD) : .avi, .divx
MPEG video decoding format	MPEG-1, MPEG-2, MPEG-4 (part2), MS MPEG-4 (ver. 3)

USB

USB standard spec	USB 1.1, USB 2.0 full speed, USB 2.0 high speed
Max current supply	1.0 A
USB Class	MSC (Mass Storage Class), MTP (Media Transfer Protocol)
File system	FAT16, FAT32
MP3 decoding format	MPEG-1 & 2 Audio Layer 3
WMA decoding format	Ver. 7, 7.1, 8, 9, 10, 11, 12 (2 ch audio) (Windows Media Player)
AAC decoding format	MPEG-4 AAC (iTunes encoded only) (Ver. 10.6 and earlier)
WAV signal format (MSC Mode only)	Linear PCM
Sampling Frequency	Linear PCM: 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz
JPEG decoding formatjpeg, .jpg, .jpe
Pixel Sampling	4:2:2, 4:2:0
Decode Size	MAX: 8 192 (H) x 7 680 (W), MIN: 32 (H) x 32 (W)
H.264 video decoding format	Base Line Profile
MPEG4 video decoding format	Simple Profile

Bluetooth

Version	Bluetooth 3.0 certified
Output power	+4 dBm Max. (Power class 2)

FM tuner

Frequency range	87.5 MHz to 108 MHz
Usable sensitivity	11 dBf (0.8 μ V/75 Ω , mono, S/N: 30 dB)
Signal-to-noise ratio	72 dB (IEC-A network)


MW tuner

Frequency range	531 kHz to 1 602 kHz (9 kHz)
Usable sensitivity	28 μ V (S/N: 20 dB)
Signal-to-noise ratio	62 dB (IEC-A network)

LW tuner

Frequency range	153 kHz to 281 kHz
Usable sensitivity	30 μ V (S/N: 20 dB)
Signal-to-noise ratio	62 dB (IEC-A network)

DAB tuner

(AVH-X5700DAB/AVH-X3700DAB)	
Frequency range (Band III)	174.928 MHz to 239.200 MHz (5A to 13F)
Frequency range (L Band)	1 452.960 MHz to 1 490.624 MHz (LA to LW)
Usable sensitivity (Band III)	-96 dBm
Usable sensitivity (L Band)	-94 dBm
Signal-to-noise ratio	85 dB
 Specifications and design are subject to possible modifica- tions without notice due to improvements.	

<http://www.pioneer.eu>

Visit www.pioneer.co.uk (or www.pioneer.eu) to register your product.

PIONEER CORPORATION

28-8, Honkomagome 2-chome, Bunkyo-ku,
Tokyo 113-0021, JAPAN

PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.
TEL: (800) 421-1404

PIONEER ELECTRONICS OF CANADA, INC.

340 Ferrier Street, Unit 2, Markham, Ontario L3R 2Z5,
Canada

TEL: 1-877-283-5901

TEL: 905-479-4411

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium/
Belgique

TEL: (0) 3/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

2 Jalan Kilang Barat, #07-01, Singapore 159346

TEL: 65-6378-7888

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

5 Arco Lane, Heatherton, Victoria, 3202, Australia

TEL: (03) 9586-6300

PIONEER ELECTRONICS DE MÉXICO S.A. DE C.V.

Blvd. Manuel Ávila Camacho 138, 10 piso
Col.Lomas de Chapultepec, México, D.F. 11000

Tel: 52-55-9178-4270, Fax: 52-55-5202-3714

先鋒股份有限公司

台北市內湖區瑞光路407號8樓

電話：886-(0)2-2657-3588

先鋒電子（香港）有限公司

香港九龍長沙灣道909號5樓

電話：852-2848-6488