

Pioneer *sound.vision.soul*



Hardware Manual

ENGLISH

DVD AV NAVIGATION HEAD-UNIT

AVIC-X1BT

Hands-free phoning is enabled by connecting the BT adapter (CD-BT10). Use the navigation system with CD-BT10 connected.



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the 25 member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

For countries not mentioned above, please contact your local authorities for the correct method of disposal.

By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.

Introduction

Manual Overview

This manual mainly describes information related to the hardware, such as the names of parts for the navigation system or precautions for use. Please read this manual and all other enclosed manuals before using your navigation system. The following issues are described in each chapter:

How to use this manual

Introduction

This chapter describes precautions for the use of the navigation system.

How to Use the Navigation System and Names of the Parts

This chapter describes important issues to know before using the navigation system, such as the names of each part, and how to insert or eject discs.

Appendix

This section describes how to handle the navigation system or discs, and the specifications of the navigation system.

Terminology

Before moving on, take a few minutes to read the following information about the conventions used in this manual. Familiarity with these conventions will help you greatly as you learn how to use your new equipment.

- Buttons on your navigation system are indicated by **ALL CAPITAL, BOLD** lettering: e.g.) **POS** button, **NAVI MENU** button.
- Items in the different menus or touch keys available on the screen are written in bold with quotations (" "): e.g.) "**Destination**", "**Settings**".
- Extra information, alternative uses and other notes are presented as follows: e.g.)
 - ☐ When the source icon is not displayed, you can display it by touching the screen.
- The references are indicated as follows: e.g.)
 - ↪ For suitable discs → Page 5

Display Definition

- In this manual, the screen that is attached to the body of the product will be referred to as the "Front Display". Any additional optional screen that is purchased for use in conjunction with this product will be referred to as the "Rear Display".

Table of Contents

Introduction

- Manual Overview **1**
 - How to use this manual **1**
 - Terminology **1**
- Table of Contents **2**
- Important Safety Information **3**
- Notes Before Using the System and Additional Safety Information **4**
 - Precaution **4**
 - Product registration **5**
 - Upgrade DVD Map Disc **5**
 - Playable discs **5**
 - About playing Dual Disc **6**
 - DVD-Video disc region numbers **6**
 - Features (Characteristics of this hardware) **6**
- About Bluetooth **7**
- To Protect the LCD Screen **8**
- For Viewing LCD Comfortably **8**
- Condition Memory **8**
- What the Marks on DVDs Indicate **8**
 - When an operation is prohibited **8**
- Resetting the Microprocessor of the Navigation System **8**
 - Reset the navigation system without changing the condition memory **9**
 - Reset the navigation system to the initial (factory) setting **9**
 - About the data of the navigation system being deleted **9**
- Resetting the Bluetooth Adapter **9**
 - Reset the Bluetooth adapter without erasing the memory **9**
 - Reset the Bluetooth adapter to the initial (factory) setting **10**

Chapter 1

How to Use the Navigation System and Names of the Parts

- Display unit **11**
- Turning the Navigation System On and Selecting a Source **13**
- Loading a Disc **13**
- Adjusting the Volume **14**
- Turning the Source Off **14**
- Using the REAR/GUIDE Button **14**
- Opening and Closing the LCD Panel **14**
 - Adjusting the LCD panel angle **15**
 - Turning the LCD panel horizontal **15**
- Protecting Your Product from Theft **15**
 - Removing the front panel **15**
 - Attaching the front panel **15**

Appendix

- Troubleshooting **17**
- Handling and Care of the Disc **18**
 - DVD Map Discs **18**
 - DVD drive and care **18**
 - DVD discs and other DVD media types **18**
 - CD-R/CD-RW discs **18**
 - MP3 files **19**
 - Ambient conditions for playing disc **20**
- Using the Navigation System Correctly **20**
 - Handling the display unit **21**
 - Liquid crystal display (LCD) screen **21**
 - Keeping the LCD screen in good condition **21**
 - Small fluorescent tube **21**
- Glossary **22**
- Specifications **22**

Important Safety Information

Before using your navigation system, be sure to read and fully understand the following safety information:

- ❑ Read the entire manual before operating this navigation system.
- ❑ The navigation features of this product (and rear view camera option if purchased) is intended solely as an aid to you in the operation of your vehicle. It is not a substitute for your attentiveness, judgement, and care when driving.
- ❑ Do not operate this navigation system (or the rear view camera option if purchased) if doing so in any way will divert your attention from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating the system or reading the display, park your vehicle in a safe location and apply the handbrake before making the necessary adjustments.
- ❑ Never allow others to use the system unless they have read and understood the operating instructions.
- ❑ Never use this navigation system to route to hospitals, police stations, or similar facilities in an emergency. Please call the appropriate emergency number.
- ❑ Route and guidance information displayed by this equipment is for reference purposes only. It may not accurately reflect the latest permissible routes, road conditions, one way streets, road closures, or traffic restrictions.
- ❑ Traffic restrictions and advisories currently in force should always take precedence over guidance given by the navigation system. Always obey current traffic restrictions, even if the navigation system provides contrary advice.
- ❑ Failure to input correct information about the local time may result in the navigation system providing improper routing and guidance instructions.
- ❑ Never set the volume of your navigation system so high that you cannot hear outside traffic and emergency vehicles.
- ❑ To promote safety, certain functions are disabled unless the vehicle is stopped and/or the handbrake is applied.
- ❑ The data encoded in the disc is the intellectual property of the provider, and the provider is responsible for such content.
- ❑ Keep this manual handy as a reference for operating procedures and safety information.
- ❑ Pay close attention to all warnings in this manual and follow the instructions carefully.
- ❑ Do not install the display where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags, hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.
- ❑ Please remember to wear your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled.
- ❑ Using the most current DVD Map Discs will allow for most accurate destination mapping. Upgrade DVD Map Discs are available for purchase through your local Pioneer dealer.
- ❑ Never use headphones while driving.

WARNING

- ❑ Do not attempt to install or service your navigation system by yourself. Installation or servicing of the navigation system by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock or other hazards.

Notes Before Using the System and Additional Safety Information

Precaution

- The tuner frequencies on this unit are allocated for use in Western Europe, Asia, the Middle East, Africa and Oceania. Use in other areas may result in improper reception. The RDS function operates only in areas with FM stations broadcasting RDS signals.

CAUTION

“CLASS 1 LASER PRODUCT”

This product contains a laser diode of higher class than 1. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product.

Refer all servicing to qualified personnel.

WARNING

- **THE LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE HANDBRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE.**
-

CAUTION

- **Do not allow this product to come into contact with liquids. Electrical shock could result. Also, damage to the product, smoke, and overheating could result from contact with liquids.**
- The Pioneer CarStereo-Pass is for use only in Germany.
- Protect this product from moisture.
- If the battery is disconnected or discharged, the memory will be erased and must be reprogrammed.

In case of trouble

- Should this product fail to operate properly, contact your dealer or nearest authorised Pioneer Service Station.

Handbrake interlock

Certain functions offered by this navigation system could be dangerous if used while driving. To prevent them being used while in motion, there is an interlock with your vehicle's handbrake. If you attempt to use these functions during driving, they may be inoperable. If so, stop in a safe place, apply the handbrake, then operate.

See “Handbrake interlock” in the Operation Manual for more information.

To ensure safe driving

WARNING

- **To avoid the risk of accident and the potential violation of applicable laws, this product should never be used while the vehicle is being driven except for navigation purposes. Also, Rear Displays should not be in a location where it is a visible distraction to the driver.**
 - **In some countries or states the viewing of images on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed and the product's video image features should not be used.**
-

- “Video image” in this manual indicates the moving image from the equipments which are connected to this product with AV-BUS or RCA cable, such as DVD player and TV tuner.

The navigation system detects whether your vehicle's handbrake is engaged or not, and prevents you from watching video images on the front display while driving. When you attempt to watch a DVD or TV, the warning **VIDEO VIEWING IS NOT AVAILABLE WHILE DRIVING** will appear on the front display.

To watch video image on the front display, park your vehicle in a safe place and apply the handbrake.

See “Handbrake interlock” in the Operation Manual for more information.

When using a display connected to REAR OUT

This product's **REAR OUT** is for connection of a display to enable passengers in the rear seats to watch video images.

- The map screen navigation images output to the rear display differs from standard NTSC format images. Therefore, the quality will be inferior to the images that appear on the front display.

▲ WARNING

- **NEVER install the rear display in a location that enables the driver to watch video images while driving.**

To avoid battery exhaustion

Be sure to run the vehicle engine while using this product. Using this product without running the engine can result in battery drainage.

▲ WARNING

- **Do not use with vehicles that do not feature an ACC position.**

About rear view camera

- With an optional rear view camera (sold separately) you are able to use the navigation system as an aid to keep an eye on trailers, or while backing up.

▲ WARNING

- **SCREEN IMAGE MAY APPEAR REVERSED.**
- **USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.**

▲ CAUTION

- **The rear view camera function is to be used as an aid to keep an eye on trailers, or while backing up. Do not use for entertainment purposes.**
- **Please note that the edges of the rear view camera images may differ slightly according to whether full screen images are displayed when backing up, and whether the images are used for checking the rear when the vehicle is moving forward.**

Product registration

Visit us at the following site:



- Register your product. We will keep the details of your purchase on file to help you refer to this information in the event of an insurance claim such as loss or theft.

Upgrade DVD Map Disc

- Upgrade DVD Map Discs are available for purchase from your local Pioneer dealer. These include the most current map and point of interest information. Contact your local Pioneer dealer for details.

Playable discs

About DVD-Video and CD

DVD and CD discs that display the logos shown below generally can be played back on this built-in DVD drive.

DVD-Video



CD



- **DVD** is a trademark of DVD Format/Logo Licensing Corporation.
- It is not possible to play back DVD audio discs. This DVD drive may not be able to play all discs bearing the marks shown above.

About playing Dual Disc

Dual Discs are two-sided discs that have a recordable CD for audio on one side and a recordable DVD for video on the other. Playback of the DVD side is possible with this unit. However, since the CD side of Dual Discs is not physically compatible with the general CD standard, it may not be possible to play the CD side with this unit.

Frequent loading and ejecting of a Dual Disc may result in scratches on the disc.

Serious scratches can lead to playback problems on this unit. In some cases, a Dual Disc may become stuck in the disc loading slot and will not eject.

To prevent this, we recommend you refrain from using Dual Disc with this unit.

Please refer to the manufacturer for more detailed information about Dual Discs.

About DVD Map Disc

You can use discs intended for this navigation system. Use only discs approved by Pioneer.

➤ For details on other discs → Page 18

About Dolby Digital/DTS sounds

The AVIC-X1BT will down-mix Dolby Digital signals internally and the sound will be output by the stereo. (Equipped with optical output for future extension.)

- ❑ Manufactured under licence from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



- ❑ Only digital output of DTS audio is possible. If navigation system's optical digital outputs are not connected, DTS audio will not be output, so select an audio setting other than DTS.

DVD-Video disc region numbers

DVD-Video discs that have incompatible region numbers cannot be played on this DVD drive. The region number of the player can be found on the bottom of this product.

The illustration below shows the regions and corresponding region numbers.



Features (Characteristics of this hardware)

Touch panel key operation

It is possible to operate this product by using touch panel keys.

Built-in navigation system

You can use DVD Map Discs that are compatible with this system.

Memory navigation

This navigation system can memorise a certain amount of information up to the set destination. This navigation system continues to operate even when you remove the DVD Map Disc, allowing you to play a CD or DVD while using the navigation. (If the destination is particularly distant, you may need to insert the DVD Map Disc again.)

DVD-Video playback

It is possible to play back DVD-Video, DVD-R (video mode) and DVD-RW (video mode). Remember that use of this system for commercial or public viewing purposes may constitute an infringement on the author's rights protected by the Copyright Law.

➤ "Handling and Care of the Disc" → Page 18

➤ "Playable discs" → Page 5

CD playback

Music CD/CD-R/CD-RW playback is possible.

➤ "Handling and Care of the Disc" → Page 18

➤ "Playable discs" → Page 5

MP3 file playback

It is possible to play back MP3 files recorded on CD-ROM/CD-R/CD-RW (ISO9660 Level 1/Level 2 standard recordings).

- Supply of this navigation system only conveys a licence for private, non-commercial use and does not convey a licence nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent licence for such use is required. For details, please visit <http://www.mp3licensing.com>.

➤ "Handling and Care of the Disc" → Page 18

➤ "Playable discs" → Page 5

NTSC/PAL compatibility

This product is NTSC/PAL system compatible. When connecting other components to the product, be sure components are compatible with the same video system or else images will not be correctly reproduced.

iPod® compatibility

When you use this navigation system with a Pioneer iPod adapter (CD-IB100), you can control an iPod with Dock connector.

- iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

Bluetooth technology compatibility

When you use this navigation system with a Pioneer Bluetooth adapter (CD-BT10), a mobile phone features Bluetooth technology can be connected wirelessly.

Multi-aspect

You can switch between wide screen, letter box and panscan display.

Multi-audio, Multi-subtitle, and Multi-angle

You can switch between multiple audio systems, subtitle languages, and multiple viewing angles of a scene recorded on a DVD as desired.

- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Rear entertainment

By setting the DVD-Video, etc. in the built-in DVD drive, you can output images and sounds (or sound only) from the DVD drive to the rear display even when the screen of this product is displaying navigation.

➤ "Using the REAR/GUIDE button" → Page 14

Rear view camera ready

You can display what is behind the vehicle if connected to a rear view camera (sold separately).

➤ "About rear view camera" → Page 5

About Bluetooth



Bluetooth is a short-range wireless radio connectivity technology that is developed as a cable replacement for mobile phones, handheld PCs and other devices. Bluetooth operates in 2.4 GHz frequency range and transmits voice and data at speeds up to 1 megabit per second. Bluetooth was launched by a special interest group (SIG) that comprises of Ericsson Inc., Intel Corp., Nokia Corp., Toshiba and IBM in 1998, and it is currently developed by nearly 2 000 companies worldwide.

- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Pioneer Corporation is under license. Other trademarks and trade names are those of their respective owners.

To Protect the LCD Screen

- Do not allow direct sunlight to fall on the display when this product is not being used. Extended exposure to direct sunlight can result in LCD screen malfunction due to the resulting high temperatures.
- When using a portable phone, keep the aerial of the portable phone away from the display to prevent disruption of the video with disturbances such as spots or coloured stripes.
- Never touch the screen with anything besides your finger when operating the Touch Panel functions. The screen can be scratched easily.

For Viewing LCD Comfortably

Due to its construction, the viewing angle of the LCD screen is limited. The viewing angle (vertical and horizontal) can be increased, however, by using **BRIGHTNESS** to adjust the black density of the video. When using for the first time, adjust the black density in accordance with the viewing angle (vertical and horizontal) to adjust for clear viewing. **DIMMER** can also be used to adjust the brightness of the LCD screen itself to suit your personal preference.




 

Condition Memory

This function memorises selections made for audio language, subtitle language, angle number and aspect ratio during disc playback for up to 30 discs. Without any special operations, the final setting details during playback of a disc are memorised. The next time a disc is played, the previous settings are automatically applied.

- With some discs, audio language and subtitle language are automatically specified, in which case condition memory does not function.
- When the number of discs exceeds 30, settings for the latest disc replace those for the earliest disc.


What the Marks on DVDs Indicate


The marks below may be found on DVD disc labels and packages. They indicate the type of images and audio recorded on the disc, and the functions you can use.

Mark	Meaning
	Indicates the number of audio systems.
	Indicates the number of subtitle languages.
	Indicates the number of viewing angles.
	Indicates the picture size (aspect ratio: screen width-to-height ratio) type.
	Indicates the number of the region where playback is possible.

If marks other than those listed are found on DVD disc labels and packages, please ask the DVD disc supplier for their meaning.

When an operation is prohibited

When you are watching a DVD and attempt to perform an operation, sometimes it may not be performed because of the programming on the disc. When this happens, this product shows the icon  on the screen.

- The icon  may not appear in certain discs.

Resetting the Microprocessor of the Navigation System

CAUTION

- Pressing the **RESET** button of the navigation system with the ignition switch **ON (ACC ON)** deletes the contents of the system's memory.
 - See page 9 "About the data of the navigation system being deleted" for details.
-

Reset the navigation system without changing the condition memory


Pressing the **RESET** button of the navigation system lets you reset the microprocessor to its initial settings without changing the condition memory.

The microprocessor must be reset under the following conditions:

- Prior to using this product for the first time after installation.
- If the product fails to operate properly.
- If there appear to be problems with the operation of the system.
- When changing the combination of the equipment.
- When adding/removing additional products that connect to the navigation system.
- When the display and the Hide-away units are re-connected.

1 Turn the ignition switch OFF.

2 Press the RESET button with a pen tip or other pointed instrument.

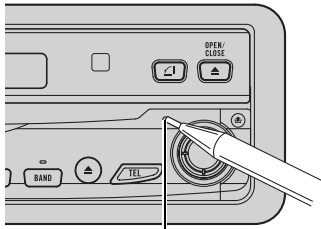

RESET button

- If you have connected other equipment (for example, Bluetooth adapter) to this navigation system, be sure to reset that equipment too.

Reset the navigation system to the initial (factory) setting

When you want to erase memorised settings and return the navigation system to its initial (factory) settings, carry out the following operations.

1 Turn the engine ON or set the ignition switch to ACC position.

2 Press the RESET button with a pen tip or other pointed instrument.

- Some navigation settings and data are not erased.

About the data of the navigation system being deleted

The information is erased by pressing the **RESET** button or disconnecting yellow lead from the battery (or removing the battery itself. However, the following items are not erased:

- Sensor learning status and driving status
- Memory area memorised manually
- **Areas to avoid**
- Registered Locations in "**Address Book**"
- Data registered in "**Emergency Info**"

Resetting the Bluetooth Adapter

CAUTION

- **Pressing the RESET button of the Bluetooth adapter with the ignition switch ON (ACC ON) erasing the contents of the adapter's memory.**

Reset the Bluetooth adapter without erasing the memory

Pressing the **RESET** button of the Bluetooth adapter lets you reset the adapter to its initial settings without erasing the memory.

The Bluetooth adapter must be reset under the following conditions:

- Prior to using this adapter for the first time after installation.
- If there appear to be problems with the operation of the Hands-free Phoning function.
- When the Bluetooth adapter and the navigation system are re-connected.

- 1 Turn the ignition switch OFF.**
- 2 Press the RESET button with a pen tip or other pointed instrument.**



RESET button

Reset the Bluetooth adapter to the initial (factory) setting

When you want to erase all the memorised settings and return the adapter to its initial (factory) settings, carry out the following operations.


- 1 Turn the engine ON or set the ignition switch to ACC position.**
- 2 Press the RESET button with a pen tip or other pointed instrument.**
 - Please confirm if all data in the Bluetooth adapter have been completely cleared.
 - For confirmation of the data status, refer to "Hands-free Phoning" in the Operation Manual.

How to Use the Navigation System and Names of the Parts

Display unit

This section gives information about the names of the parts and the main features using the buttons.

□ For more detailed operations and functional limitations, please refer to the Operation Manual.

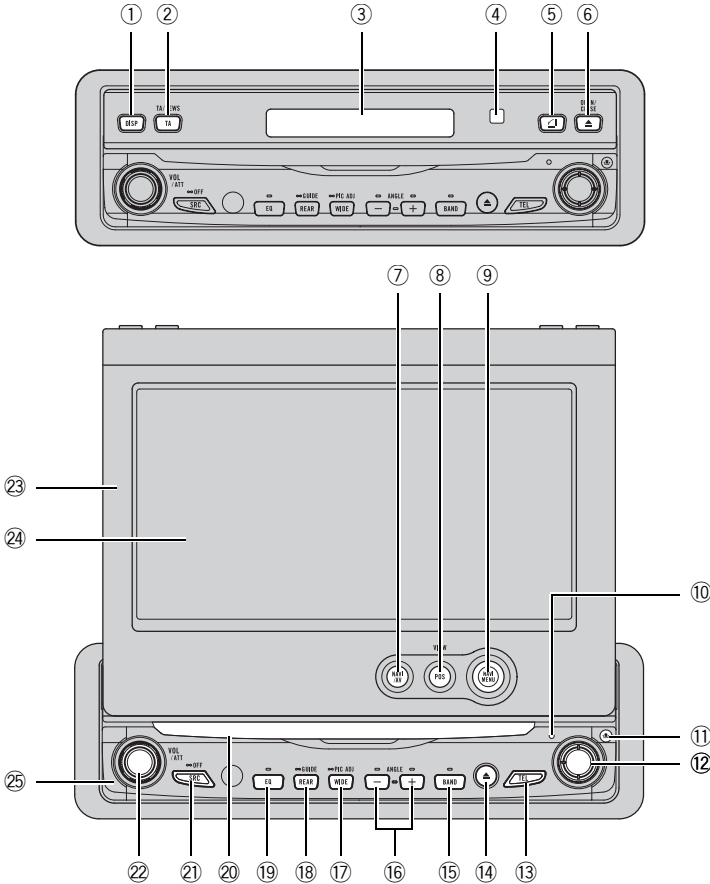

① DISP button

Press to select different displays.
Press and hold to display radio text when the source is **RADIO**.

② TA/NEWS button

Press to turn traffic announcements function on or off. Press and hold to turn NEWS function on or off.

③ Sub display

Displays the current time or the information of the audio source currently playing when the LCD panel is closed.

④ Ambient light sensor

Senses ambient light. This system automatically adjusts the brightness of the display to compensate for ambient light.

⑤ FLIP DOWN/CLOCK button

Press to turn the LCD panel horizontal temporarily when the LCD panel is upright.

Press to turn the clock of the sub display on or off when the LCD panel is closed.

⑥ OPEN/CLOSE button

Press to open or close the LCD panel.

⑦ NAVI/AV button

Use to switch between navigation map displays and the audio operation displays.

⑧ POS button

Press to view the map or return to guidance.

Also, when the map is scrolling, pressing this button returns you to the display of the map of your surroundings.

Use to switch the view mode of the navigation when the map of your surroundings is displayed.

⑨ NAVI MENU button

Press to display a menu of Navigation.

⑩ RESET button

Press to return to the factory settings (initial settings). Some information items are not erased.

➤ "Resetting the microprocessor" → Page 8

⑪ DETACH button

Press to remove the front panel from the display unit.

⑫ Joystick

Move to perform manual seek tuning, fast forward, reverse and track search controls, etc. Push to display **A.MENU**.

⑬ TEL button

When the Bluetooth adapter (CD-BT10) is connected to this product, press this button to display the **TEL** source screen. On the **TEL** source screen, a mobile phone that supports Bluetooth technology can transmit or receive calls through this product.

➤ **TEL** source → See "Hands-free Phoning" in the Operation Manual.

⑭ EJECT button

Press to eject a disc from this product.

⑮ BAND button

Radio:

Press to select among three FM and MW/LW bands.

Built-in DVD drive:

When playing back a disc containing MP3 files and audio data (CD-DA), pressing this button switches playback between the MP3 files and CD-DA. Touch and hold this button when a disc containing MP3 files is inserted to return you to the root folder.

⑯ ANGLE (+/-) button

Press to change the LCD panel angle.

⑰ WIDE/PIC ADJ button

Press to select a desired mode for enlarging a 4:3 picture to a 16:9 one.

Press and hold to enter the **PICTURE ADJUSTMENT** mode.

➤ See "Changing the Wide Screen Mode" and "Operating the Picture Adjustment" in the Operation Manual.

⑱ REAR/GUIDE button

Press to output the sound and images of a disc inserted in the built-in DVD drive that is different the currently selected source to the **REAR OUT** terminal.

➤ "Using the REAR/GUIDE button" → Page 14

Press and hold to display the Volume setting screen. On the Volume setting screen, you can set "**Guidance Volume**", "**Beep Volume**", and "**Mute Settings**".

➤ "**Guidance Volume**", "**Beep Volume**", "**Mute Settings**" → Operation Manual

⑲ EQ button

Press to select various equalizer curves.

⑳ Disc loading slot

Insert a disc to play.

➤ "Loading a Disc" → Page 13

㉑ SRC (SOURCE) button

Turn on this product by selecting a source. Press to cycle through all of the available sources. Press and hold to turn the source off.

22 VOLUME/ATT button

Rotate to increase or decrease the volume. Press to quickly lower the volume level by about 90%. Press once more to return to the original volume level.

23 LCD panel**24 LCD screen****25 Front panel**


Turning the Navigation System On and Selecting a Source

CAUTION

- If the program is not installed, see **Operation Manual** and install the program.

1 Turn the ignition switch (ACC) ON.

The navigation system's power supply comes on.

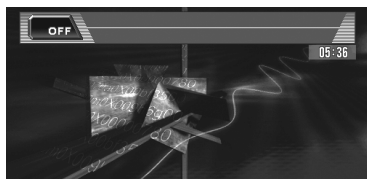

2 Press the SRC button to select a source.

Press the **SRC** button repeatedly to switch between the following sources:
"RADIO" (tuner) — **"TV"** (television) — **"AV"** (video input) — **"DISC"** [CD, MP3, CD/MP3](built-in DVD drive) — **"S-DVD"** (DVD player/multi-DVD player) — **"M-CD"** (multi-CD player) — **"iPod"** (iPod) — **"EXT-1"** (external unit 1) — **"EXT-2"** (external unit 2) — **"AUX"** (Auxiliary equipment) — **"TEL"** (hands-free phoning)

- Press and hold to turn the source off.
- In the following cases, the sound source cannot be used:
 - When a unit corresponding to each source is not connected to this product.
 - When no disc (DVD-Video, CD) is set in this product.
 - When no disc is set in the DVD-player ("**S-DVD**").

- When no magazine is set in the multi-CD player.
- When no magazine is set in the multi-DVD player.
- When "**AUX**" (auxiliary input) is set to off (refer to Operation Manual).
- When "**AV INPUT**" (video input) is not set to "**VIDEO**" (refer to Operation Manual).

- External unit refers to a Pioneer product (such as one available in the future) that, although incompatible as a source, enables control of basic functions by this product. Two external units can be controlled by this product. When two external units are connected, the product allocates them to external unit 1 or external unit 2.
- When this product's blue lead is connected to the vehicle's auto-aerial relay control terminal, the vehicle's aerial extends when ACC (ignition) is turned on and the front panel is attached. To retract the antenna, detach the front panel.
The vehicle's aerial extends regardless of whether this product's source is turned on or off.

Loading a Disc

- **Insert a disc into the disc loading slot.**
Format reading will start.
For DVD-Video, CD
 - "**DISC AUTO**" is off in the default setting.
 - "**DISC AUTO**" → Operation Manual
 - When a disc is already loaded in this product, select the source by pressing the **SRC** button.
 - To eject a disc, press the **EJECT** button.
- **For the DVD Map Disc**
 - Inserting the disc starts DVD navigation mode.
 - Removing the disc sets Memory navi mode.
- You can use the **NAVI/AV** button to switch between navigation map displays and audio operation displays.
- The DVD drive plays one standard 12-cm or 8-cm (single) disc at a time. Do not use an adapter when playing 8-cm discs.

- ❑ Do not insert anything other than a disc into the disc loading slot.
- "Playable discs" → Page 5
- ❑ If you cannot insert a disc completely or if the disc is not recognised after you insert a disc, check that the label side of the disc is up. Press the **EJECT** button to eject the disc, and check the disc for damage before inserting the disc again.
- ❑ If the DVD drive does not operate properly, an error message such as ERROR-11 may be displayed.
- Error messages → Operation Manual

Adjusting the Volume

- Use the **VOLUME/ATT** button to adjust the audio sound level.
Rotate the **VOLUME/ATT** button to increase or decrease the volume.
 - ❑ To adjust the navigation volume, go to the navigation menu.
 - Navigation volume adjustment → Operation Manual

Turning the Source Off

- Press the **SRC** button and hold until the source turns off.
 - ❑ This product also can be switched off by turning the ACC (ignition) OFF or detaching the front panel.

Using the REAR/GUIDE Button

You can output the sound and video of the disc into the built-in DVD drive to the rear display regardless of whether DVD drive is selected as the source (REAR ON mode).

⚠ CAUTION

- When you have turned the **REAR ON** mode on by pressing the **REAR/GUIDE** button, you cannot turn it off even if you press the **SRC** button and hold. In this case, press the **REAR/GUIDE** button to turn the **REAR ON** mode off.

- Press the **REAR/GUIDE** button to turn the **REAR ON** mode on.

The sound and video are output to the rear display and the illumination colour of the **REAR/GUIDE** button changes to different colour.

- ❑ To turn the **REAR ON** mode off, press the **REAR/GUIDE** button again.
- ❑ When a CD or CD-ROM is inserted, sound only is output to the rear display.
- Selecting the video of rear display → Operation Manual

Opening and Closing the LCD Panel

⚠ CAUTION

- Do not close the LCD panel with hands by force. This may cause malfunction.
- Keep hands and fingers clear of the display unit when opening, closing, or adjusting the LCD panel. Be especially cautious of children's hands and fingers.

The LCD panel will open or close automatically by turning the ignition switch on or off. You can turn off the automatic open/close function.

- Setting the automatic open/close function → Operation Manual
- The automatic open/close function will operate the display as follows:
 - When the ignition switch is turned OFF while the LCD panel is open, the LCD panel will close after six seconds.
 - When the ignition switch is turned ON again (or turned to ACC), the LCD panel will open automatically.
 - Removing or attaching the front panel will automatically close or open the LCD panel.
 - Removing the front panel → Page 15
- When the ignition switch is turned OFF after the LCD panel has been closed, turning the ignition switch ON again (or turning it to ACC) will not open the LCD panel. In this case, press the **OPEN/CLOSE** button to open the LCD panel.
- When closing the LCD panel, check to make sure that it has closed completely. If the LCD


panel has stopped halfway, leaving it like this could result in damage.

- **Press the OPEN/CLOSE button to open the LCD panel.**
 - To close the LCD panel, press the **OPEN/CLOSE** button again.

Adjusting the LCD panel angle

Important:

- If you can hear the LCD panel knocking against your vehicle's console or dashboard, press the **ANGLE (-)** button to move the LCD panel slightly forward.
- When adjusting the LCD panel angle, be sure to press the **ANGLE (+/-)** button. Forcibly adjusting the LCD panel by hand may damage it.
- **Press the ANGLE (+/-) button to adjust the LCD panel to an easily viewable angle.**
The LCD panel angle continues changing as long as you press and hold the **ANGLE (+/-)**.

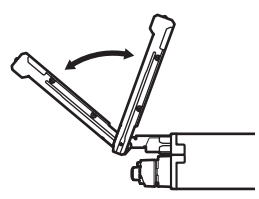

- The adjusted the LCD panel angle will be memorised and the LCD panel will automatically return to this angle the next time the LCD panel is opened.

Turning the LCD panel horizontal

When the LCD panel is upright and it hinders the operation of the air conditioner, the position of the panel can be turned horizontal temporarily.

- **Press the FLIP DOWN/CLOCK button to turn the LCD panel horizontal.**
 - To return to original position, press the **FLIP DOWN/CLOCK** button again.
 - The LCD panel returns to the original position automatically and beeps 10 seconds after operation.

Protecting Your Product from Theft


The front panel can be detached from the display unit to discourage theft, as described below.

Important:

- Never grip the display and the buttons tightly or use force when removing or attaching.
- Avoid subjecting the front panel to excessive shocks.
- Keep the front panel out of direct sunlight and high temperatures.
- After detaching the front panel, keep it in a safe place so it is not scratched or damaged.

Removing the front panel

- 1 Press the DETACH button to remove the front panel.**
- 2 Gently grip the right side of the front panel and slowly pull it outward.**
Take care not to drop the front panel and protect it from contact with water or other fluids to prevent permanent damage.

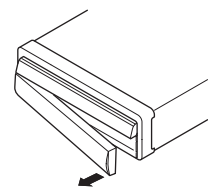

Attaching the front panel

- **Replace the front panel by holding it upright to this product and clipping it securely into the mounting hooks.**

Appendix

Troubleshooting

↪ Troubleshooting problems other than those described below → Appendix of the Operation Manual

Symptom	Cause	Action (See)
No picture.	The handbrake cord is not connected.	Connect the handbrake cord, and apply the handbrake.
	The handbrake is not applied.	Connect the handbrake cord, and apply the handbrake.
The picture is stretched, the aspect is incorrect.	The aspect setting is incorrect for the display.	Select the appropriate setting for your display. (→ "Changing the Wide Screen Mode" and "Operating the Picture Adjustment" in the Operation Manual.)
Rear display picture disappears.	The source disc being played back with the navigation system has been ejected.	Before ejecting the disc, switch the source. This problem may occur when certain connection methods are used.
	The REAR/GUIDE button was pressed and REAR ON mode switched off.	Press the REAR/GUIDE button to turn REAR ON mode on.
	There was a problem with the rear display or a faulty wiring connection, for example.	Check the rear display and its connection.
	Rear View is selected on the screen.	Select view mode other than Rear View .
	When the gear stick is in [R], the screen displays rear view camera images. (When NAVI is selected in REAR DISP menu.)	Move the gear stick to a position other than [R]. (Select " SOURCE " in REAR DISP menu.)
	A source without video is selected.	Switch to a source with a video.
Nothing is displayed and the touch panel keys cannot be used.	Operating PICTURE ADJUSTMENT .	There is no picture on the rear display while PICTURE ADJUSTMENT is carried out.
	The setting for the rear view camera is incorrect. The gear stick was placed in [R] when the rear view camera was not connected.	Connect a rear view camera correctly. Press the NAVI/AV button to return to the source display and then select the correct setting for CAMERA . ↪ About CAMERA setting → Operation Manual
Volume of beeps and navigation guidance cannot be adjusted.	You cannot adjust these parameters with the VOLUME/ATT button.	<ul style="list-style-type: none"> • Turn the volume up or down with "Volume" in the Setting menu. • Press the REAR/GUIDE button and turn the volume up or down.
Playback is not possible.	The disc is dirty.	Clean disc.
	The loaded disc is a type your navigation system cannot play.	Check what type the disc is. (→ Page 18)
	Non compatible video system disc is loaded.	Change to a disc compatible to your video system. (→ Page 18)
LCD Panel knocks against your vehicle's console or dashboard.	The loaded disc has a different region number from the navigation system.	Replace the disc with one featuring the same region number as the navigation system. (→ Page 6)
	Incorrect angle setting.	Press the ANGLE (+/-) button to adjust the LCD angle. Forcibly adjusting the LCD panel by hand may damage it.
Video image appears grainy.	This happens when videos are viewed in CINEMA or ZOOM mode.	Select a different mode to view videos.

Handling and Care of the Disc

Some basic precautions are necessary when handling your discs.

DVD Map Discs

- Do not use discs other than those intended for this product. Use only discs approved by Pioneer.
 - ↳ For suitable discs → Page 5
 - If you wish to use other DVD Map Discs, first check that they are compatible with this equipment and approved by Pioneer.

DVD drive and care

- Use only normal, round discs. If you insert irregular, non-round shaped discs they may jam in the DVD drive or not play properly.



- Check all discs for cracks, scratches or warpage before playing. Discs that have cracks or scratches, or those that are warped may not play properly. Do not use such discs.
- Avoid touching the recorded (non-printed) side surface when handling the disc.
- Store discs in their cases when not in use.
- Keep discs out of direct sunlight and do not expose the discs to high temperatures.
- Do not attach labels to, write on or apply chemicals to the surface of the discs.
- To clean dirt from a disc, wipe the disc with a soft cloth outward from the centre of the disc.



- If the heater is used in cold weather, condensation may form on components inside the DVD drive. Condensation may cause the DVD drive to operate incorrectly. If you think that condensation is a problem, turn off the DVD drive for an hour or so to allow the DVD drive to dry out, and wipe any damp discs with a soft cloth to remove the moisture.
- Road shocks may interrupt disc playback.

DVD discs and other DVD media types

- It may not be possible to use certain functions with some DVD-Video discs.
- It may not be possible to play back some DVD video discs.
- When DVD-R/DVD-RW discs are used, playback is possible only for discs which have been finalised.
- When DVD-R/DVD-RW discs are used, playback is possible only for discs which have been recorded in Video format (video mode). It is not possible to play back DVD-RW discs which have been recorded in Video Recording format (VR mode).
- It may not be possible to play back DVD-R/DVD-RW discs which have been recorded in Video format (video mode) because of disc characteristics, scratches or dirt on the disc, or dirt, scratches or condensation on the lens of this product.
- It is not possible to play back DVD-RAM discs or DVD-ROM discs other than Pioneer DVD Map Disc.
- Playback of discs recorded on a personal computer may not be possible depending on the application settings and the environment. Please record with the correct format. (For details, contact the manufacturer of the application.)

CD-R/CD-RW discs

- When CD-R/CD-RW discs are used, playback is possible only for discs which have been finalised.
- It may not be possible to play back CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, scratches or condensation on the lens of this product.
- Playback of discs recorded on a personal computer may not be possible, depending on the application settings and the environment. Please record with the correct format. (For details, contact the manufacturer of the application.)
- Playback of CD-R/CD-RW discs may become impossible with direct exposure to sunlight, high temperatures, or depending on the storage conditions in the vehicle.

- Titles and other text information recorded on a CD-R/CD-RW disc may not be displayed by this product (in the case of audio data (CD-DA)).
- If you insert a CD-RW disc into this product, time to play back will be longer than when you insert a conventional CD or CD-R disc.
- Read the precautions with CD-R/CD-RW discs before using them.

MP3 files

Important:


- When naming an MP3 file, add the corresponding filename extension (.mp3).
- This product plays back files with the filename extension (.mp3) as MP3 files. To prevent noise and malfunctions, do not use this extension for files other than MP3 files.
- MP3 is short for MPEG Audio Layer 3 and refers to an audio compression technology standard.
- This product allows playback of MP3 files on CD-ROM, CD-R and CD-RW discs. Disc recordings can be played back if they are compatible with level 1 and level 2 of ISO9660 and with the Romeo and Joliet file system.
- It is possible to play back multi-session compatible recorded discs.
- MP3 files are not compatible with packet write data transfer.
- The maximum number of characters which can be displayed for a file name, including the extension (.mp3), is 30 characters from the first character.
- The maximum number of characters which can be displayed for a folder name is 30 characters.
- For files recorded according to the Romeo and Joliet file system, only the first 30 characters can be displayed. Depending on the width of the characters, the screen may not be able to display 30 characters.
- When playing discs with MP3 files and audio data (CD-DA) such as CD-EXTRA and MIXED-MODE CDs, both types can be played only by switching mode between MP3 and CD-DA.
- The folder selection sequence for playback and other operations is the writing sequence used by the writing software. For this reason, the expected sequence at the time of playback may not coincide with the actual playback sequence. However, there also are some writ-

ing software that permit the setting of the playback order.

- Some audio CDs contain tracks that merge into one another without a pause. When these discs are converted to MP3 files and burned to a CD-R/CD-RW/CD-ROM, the files will be played back on this player with a short pause between each one, regardless of the length of the pause between tracks on the original audio CD.
- Files are compatible with the ID3 Tag Ver. 1.0 and Ver. 1.1 formats for display of album (disc title), track (track title) and artist (track artist).
- The emphasis function is valid only when MP3 files of 32, 44.1 and 48 kHz frequencies are played back. (16, 22.05, 24, 32, 44.1, 48 kHz sampling frequencies can be played back.)
- There is no m3u playlist compatibility.
- There is no compatibility with the MP3i (MP3 interactive) or MP3 PRO formats.
- The sound quality of MP3 files generally becomes better with an increased bit rate. This product can play recordings with bit rates from 8 kbps to 320 kbps, but in order to be able to enjoy sound of a certain quality, we recommend using only discs recorded with a bit rate of at least 128 kbps.

About folders and MP3 files

- An outline of a CD-ROM with MP3 files on it is shown below. Subfolders are shown as folders in the folder currently selected.
- The following figure is an example of the tier structure in the CD. The numbers in the figure indicate the order in which folder numbers are assigned and the order to be played back.
- Indicates the order in which folder numbers are assigned.
- ♪ Indicates each file. The number is assigned in the order of the track to be played back.

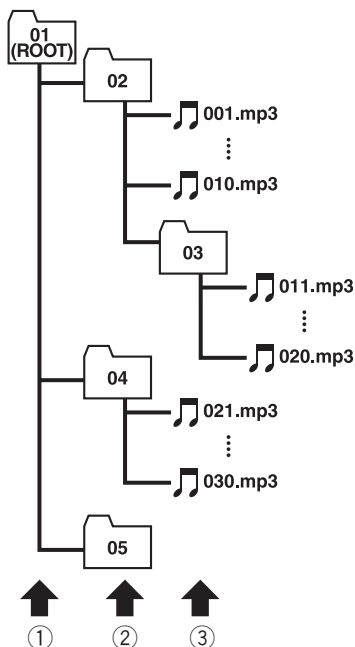

- ① **First tier**
- ② **Second tier**
- ③ **Third tier**

Notes:

- This product assigns folder numbers. The user can not assign folder numbers.
- If you are using a folder that does not contain an MP3 file, the folder itself will display but you will not be able to see any files in the folder.
- MP3 files in up to 8 tiers of folders can be played back. However, there is a delay in the start of playback on discs with numerous tiers. For this reason we recommend creating discs with no more than 2 tiers.
- It is possible to play back up to 253 folders on one disc.

Ambient conditions for playing disc

- At extremely high temperatures, a temperature cutoff protects this product by switching it off automatically.
- Despite our careful design of the product, as a result of mechanical wear, ambient conditions for use, or handling of the disc, small scratches that do not affect actual operation may appear on the disc surface. This is not a sign of the malfunction of this product. Consider it to be normal wear and tear.

Using the Navigation System Correctly

WARNING

- **If liquid or foreign matter should get inside this navigation system, turn off the power immediately and consult your dealer or the nearest authorised PIONEER Service Station. Do not use the navigation system in this condition because doing so may result in a fire, electric shock, or other failure.**
- **If you notice smoke, a strange noise or smell from the navigation system, or any other abnormal signs on the LCD screen or Sub display, turn off the power immediately and consult your dealer or the nearest authorised PIONEER Service Station. Using this navigation system in this condition may result in permanent damage to the system.**
- **Do not disassemble or modify this navigation system, as there are high-voltage components inside which may cause an electric shock. Be sure to consult your dealer or the nearest authorised PIONEER Service Station for internal inspection, adjustments or repairs.**

Handling the display unit

- When the LCD panel is subjected to direct sunlight for a long period of time, it will become very hot, resulting in possible damage to the LCD screen. When not using this navigation system, close the LCD panel and avoid exposing it to direct sunlight as much as possible.
- The display unit should be used within the temperature ranges shown below.
- Operating temperature range: $-10\text{ }^{\circ}\text{C}$ to $+50\text{ }^{\circ}\text{C}$
- Storage temperature range: $-20\text{ }^{\circ}\text{C}$ to $+80\text{ }^{\circ}\text{C}$
- Do not use the display unit at temperatures higher or lower than the operating temperature range because the display unit may not operate normally and the display unit can be damaged.
- The LCD screen is exposed in order to increase its visibility within the vehicle. Please do not press strongly on it as this may damage it.
- Do not place anything on the LCD panel when it is deployed. Also, do not attempt to carry out angle adjustment, or open/close the LCD panel by hand. Applying strong force to the LCD panel may damage it.
- Do not push the LCD screen with much force as this may scratch it.
- Never touch the LCD screen with anything besides your finger when operating the Touch Panel functions. The LCD screen can scratch easily.
- Be careful not to place anything between the LCD panel and the main body when the LCD panel is opening or closing. If an object gets between the LCD panel and main body, the LCD panel may stop working.

CAUTION

- **Be careful of fingers, long hair, and loose articles of clothing which could possibly get caught between the LCD panel and the main body and cause serious injury.**

Liquid crystal display (LCD) screen

- If the LCD panel is near the vent of an air conditioner when it is opened, make sure that air from the air conditioner is not blowing on it. Heat from the heater may break the LCD screen, and cool air from the cooler may cause moisture to form inside the display unit, resulting in possible damage. Also, if the LCD panel is cooled down by the air conditioner, the LCD screen may become dark, or the life span of the small fluorescent tube used inside the LCD panel may be shortened.
- Small black dots or white dots (bright dots) may appear on the LCD screen. These are due to the characteristics of the LCD screen and do not indicate a problem with the display unit.
- At low temperatures, the LCD screen may be dark for a while after the power is turned on.
- The LCD screen will be difficult to see if it is exposed to direct sunlight.
- When using a portable phone, keep the aerial of the portable phone away from the display unit to prevent disruption of the video with disturbances such as spots or coloured stripes.

Keeping the LCD screen in good condition

- When removing dust from the LCD screen or cleaning the LCD screen, first turn the system power off, then wipe with the supplied cloth.
- When wiping the LCD screen, take care not to scratch the surface. Do not use harsh or abrasive chemical cleaners.

Small fluorescent tube

- A small fluorescent tube is used inside the display to illuminate the LCD screen.
 - The fluorescent tube should last for approximately 10 000 hours, depending on operating conditions. (Using the display unit at low temperatures reduces the service life of the fluorescent tube.)
 - When the fluorescent tube reaches the end of its useful life, the LCD screen will be dark and the image will no longer be projected. If this happens, consult your dealer or the nearest authorised PIONEER Service Station.

General

Rated power source	14.4 V DC (allowable voltage range: 12.0 V to 14.4 V DC)
Earthing system.....	Negative type Maximum current consumption 10.0 A
Display unit:	
Dimensions (W × H × D):	
DIN	
Chassis	178 × 50 × 160 mm
Nose	188 × 58 × 34 mm
D	
Chassis	178 × 50 × 165 mm
Nose	170 × 46 × 29 mm
Weight	2.5 kg
Hideaway unit:	
Dimensions (W × H × D)	
.....	180 × 30 × 140 mm
Weight	0.7 kg

Navigation

GPS Receiver:	
System	L1, C/Acode GPS SPS (Standard Positioning Service)
Reception system	8-channel multi-channel reception system
Reception frequency ...	1 575.42 MHz
Sensitivity	-130 dBm
Position update frequency	
.....	Approx. once per second
GPS aerial:	
Aerial	Micro strip flat aerial/right- handed helical polarization
Aerial cable	5.0 m
Dimensions (W × H × D)	
.....	33 × 13 × 36 mm
Weight	105 g

Display

Screen size/aspect ratio.....	6.5 inch wide/16:9 (effective display area: 144 × 76 mm)
Pixels	336 960 (1 440 × 234)
Type.....	TFT active matrix, transmis- sive type
Colour system	NTSC/PAL compatible
Operating temperature range	
.....	-10 °C to +50 °C
Storage temperature range	
.....	-20 °C to +80 °C
Angle adjustment.....	50° to 110° (initial settings: 110°)

Audio

Maximum power output.....	50 W × 4 50 W × 2 ch/4 Ω + 70 W × 1 ch/2 Ω (for subwoofer)
Continuous power output ...	27 W × 4 (DIN 45324, +B=14.4 V)

Load impedance	4 Ω (4 Ω to 8 Ω [2 Ω for 1 ch] allowable)
Preout max output level/output impedance	2.0 V/100 ohm
Equalizer (3-Band Parametric Equalizer):	
Low	
Frequency.....	40/80/100/160 Hz
Q Factor	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain.....	± 12 dB
Mid	
Frequency.....	200/500/1k/2k Hz
Q Factor	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain.....	± 12 dB
High	
Frequency.....	3.15k/8k/10k/12.5k Hz
Q Factor.....	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain.....	± 12 dB
Loudness contour:	
Low.....	+3.5 dB (100 Hz), +3 dB (10 kHz)
Mid.....	+10 dB (100 Hz), +6.5 dB (10 kHz)
High.....	+11 dB (100 Hz), +11 dB (10 kHz) (volume: -30 dB)
Tone controls:	
Bass	
Frequency.....	40/63/100/160 Hz
Gain.....	± 12 dB
Treble	
Frequency.....	2.5k/4k/6.3k/10k Hz
Gain.....	± 12 dB
HPF:	
Frequency.....	50/80/125 Hz
Slope.....	-12 dB/oct
Subwoofer:	
Frequency.....	50/80/125 Hz
Slope.....	-18 dB/oct
Gain.....	± 12 dB
Phase.....	Normal/Reverse

DVD Drive

System	DVD-Video, Compact disc audio, MP3 system
Usable discs.....	DVD-Video, Compact disc, MP3
Region number.....	2
Signal format:	
Sampling frequency	44.1/48/96 kHz
Number of quantization bits	16/20/24; linear
Frequency response	5 Hz to 44 000 Hz (with DVD, at sampling frequency 96 kHz)
Signal-to-noise ratio	97 dB (1 kHz) (IEC-A network) (CD: 96 dB (1 kHz) (IEC-A network))

Dynamic range	95 dB (1 kHz) (CD: 94 dB (1 kHz))
Distortion	0.008 % (1 kHz)
Output level:	
Video.....	1.0 Vp-p/75 Ω (± 0.2 V)
Audio	1.0 V (1 kHz, 0 dB)
Number of channels	2 (stereo)
MP3 decoding format	MPEG-1 & 2 Audio Layer 3
FM tuner	
Frequency range.....	87.5 MHz to 108.0 MHz
Usable sensitivity.....	8 dBf (0.7 μ V/75 Ω , mono, S/N: 30 dB)
50 dB quieting sensitivity....	10 dBf (0.9 μ V/75 Ω , mono)
Signal-to-noise ratio	75 dB (IEC-A network)
Distortion	0.3 % (at 65 dBf, 1 kHz, stereo) 0.1 % (at 65 dBf, 1 kHz, mono)
Frequency response.....	30 Hz to 15 000 Hz (± 3 dB)
Stereo separation	45 dB (at 65 dBf, 1 kHz)
Selectivity	80 dB (± 200 kHz)

MW tuner

Frequency range.....	531 kHz to 1 602 kHz (9 kHz)
Usable sensitivity.....	18 μ V (S/N: 20 dB)
Signal-to-noise ratio	65 dB (IEC-A network)

LW tuner

Frequency range.....	153 kHz to 281 kHz (9 kHz)
Usable sensitivity.....	30 μ V (S/N: 20 dB)
Signal-to-noise ratio	65 dB (IEC-A network)

Laser diode characteristics

Wavelength.....	785 nm to 815 nm
Maximum output.....	1 190 μ m (Emitting period: unlimited)

Note:

- Specifications and design are subject to possible modifications without notice due to improvements.



Visit **www.pioneer.co.uk** (or **www.pioneer-eur.com**) to register your product.

Visite **www.pioneer.es** (o **www.pioneer-eur.com**) para registrar su producto.

Zum Registrieren Ihres Produktes besuchen Sie bitte **www.pioneer.de** (oder **www.pioneer-eur.com**).

Visitez **www.pioneer.fr** (ou **www.pioneer-eur.com**) pour enregistrer votre appareil.

Si prega di visitare il sito **www.pioneer.it** (o **www.pioneer-eur.com**) per registrare il prodotto.

Bezoek **www.pioneer.nl** (of **www.pioneer-eur.com**) om uw product te registreren.

PIONEER CORPORATION

4-1, MEGURO 1-CHOME, MEGURO-KU, TOKYO 153-8654, JAPAN

PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.

TEL: (800) 421-1404

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium

TEL: (0) 3/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

253 Alexandra Road, #04-01, Singapore 159936

TEL: 65-6472-7555

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

178-184 Boundary Road, Braeside, Victoria 3195, Australia

TEL: (03) 9586-6300

PIONEER ELECTRONICS OF CANADA, INC.

300 Allstate Parkway, Markham, Ontario L3R OP2, Canada

TEL: 1-877-283-5901

PIONEER ELECTRONICS DE MEXICO, S.A. de C.V.

Blvd.Manuel Avila Camacho 138 10 piso

Col.Lomas de Chapultepec, Mexico, D.F. 11000

TEL:55-9178-4270

先鋒股份有限公司

總公司: 台北市中山北路二段44號13樓

電話: (02) 2521-3588

先鋒電子(香港)有限公司

香港九龍尖沙咀海港城世界商業中心9樓901-6室

電話: (0852) 2848-6488

Published by Pioneer Corporation.

Copyright © 2005 by Pioneer Corporation.

All rights reserved.

Printed in Belgium

<CRB2151-A> EW

MAN-X1BT-HARDW-EN