



Pioneer *sound.vision.soul*

Operation Manual

 
 
 
ENGLISH

DVD MULTIMEDIA AV NAVIGATION SERVER





AVIC-D3

**Don't forget to register your
product on www.pioneer.co.uk
(or www.pioneer.eu)**





    **The screens shown in the examples may differ from the actual screens.
The actual screens may be changed without notice for performance and function
improvements.**



Introduction

Licence Agreement

PIONEER AVIC-D3

THIS IS A LEGAL AGREEMENT BETWEEN YOU, AS THE END USER, AND PIONEER CORP.(JAPAN) ("PIONEER"). PLEASE READ THE TERMS AND CONDITIONS OF THIS AGREEMENT CAREFULLY BEFORE USING THE SOFTWARE INSTALLED ON THE PIONEER PRODUCTS. BY USING THE SOFTWARE INSTALLED ON THE PIONEER PRODUCTS, YOU AGREE TO BE BOUND BY THE TERMS OF THIS AGREEMENT. THE SOFTWARE INCLUDES A DATABASE LICENSED BY THIRD PARTY SUPPLIER(S) ("SUPPLIERS"), AND YOUR USE OF THE DATABASE IS COVERED BY THE SUPPLIERS' SEPARATE TERMS, WHICH ARE ATTACHED TO THIS AGREEMENT (Refer to page 2). IF YOU DO NOT AGREE WITH ALL OF THESE TERMS, PLEASE RETURN THE PIONEER PRODUCTS (INCLUDING THE SOFTWARE, AND ANY WRITTEN MATERIALS) WITHIN FIVE (5) DAYS OF RECEIPT OF THE PRODUCTS, TO THE AUTHORISED PIONEER DEALER FROM WHICH YOU PURCHASED THEM.

1. GRANT OF LICENCE

Pioneer grants to you a non-transferable, non-exclusive licence to use the software installed on the Pioneer products (the "Software") and the related documentation solely for your own personal use or for internal use by your business, only on such Pioneer products.

You shall not copy, reverse engineer, translate, port, modify or make derivative works of the Software. You shall not loan, rent, disclose, publish, sell, assign, lease, sublicense, market or otherwise transfer the Software or use it in any manner not expressly authorised by this agreement. You shall not derive or attempt to derive the source code or structure of all or any portion of the Software by reverse engineering, disassembly, decompilation, or any other means. You shall not use the Software to operate a service bureau or for any other use involving the processing of data for other persons or entities.

Pioneer and its licensor(s) shall retain all copyright, trade secret, patent and other proprietary ownership rights in the Software. The Software is copyrighted and may not be copied, even if modified or merged with other products. You shall not alter or remove any copyright notice or proprietary legend contained in or on the Software.

You may transfer all of your licence rights in the Software, the related documentation and a copy of this Licence Agreement to another party, provided that the party reads and agrees to accept the terms and conditions of this Licence Agreement.

2. DISCLAIMER OF WARRANTY

The Software and related documentation are provided to you "AS IS". PIONEER AND ITS LICENSOR(S) (for the purpose of provisions 2 and 3, Pioneer and its licensor(s) shall be collectively referred to as "Pioneer") MAKES AND YOU RECEIVE NO WARRANTY, WHETHER EXPRESS OR IMPLIED, AND ALL WARRANTIES OF MERCHANTABILITY AND FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED. SOME COUNTRIES DO NOT ALLOW EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. The Software is complex and may contain some non-conformities, defects or errors. Pioneer does not warrant that the Software will meet your needs or expectations, that operation of the Software will be error free or uninterrupted, or that all non-conformities can or will be corrected. Furthermore, Pioneer does not make any representations or warranties regarding the use or results of the use of the Software in terms of its accuracy, reliability or otherwise.

3. LIMITATION OF LIABILITY

IN NO EVENT SHALL PIONEER BE LIABLE FOR ANY DAMAGES, CLAIM OR LOSS INCURRED BY YOU (INCLUDING, WITHOUT LIMITATION, COMPENSATORY, INCIDENTAL, INDIRECT, SPECIAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES, LOST PROFITS, LOST SALES OR BUSINESS, EXPENDITURES, INVESTMENTS, OR COMMITMENTS IN CONNECTION WITH ANY BUSINESS, LOSS OF ANY GOODWILL, OR DAMAGES) RESULTING FROM THE USE OF OR INABILITY TO USE THE SOFTWARE, EVEN IF PIONEER HAS BEEN INFORMED OF, KNEW OF, OR SHOULD HAVE KNOWN OF THE LIKELIHOOD OF SUCH DAMAGES. THIS LIMITATION APPLIES TO ALL CAUSES OF ACTION IN THE AGGREGATE, INCLUDING WITHOUT LIMITATION BREACH OF CONTRACT, BREACH OF WARRANTY, NEGLIGENCE, STRICT LIABILITY, MISREPRESENTATION, AND OTHER TORTS. IF PIONEER'S WARRANTY DISCLAIMER OR LIMITATION OF LIABILITY SET FORTH IN THIS AGREEMENT SHALL OR FOR ANY REASON WHATSOEVER BE HELD UNENFORCEABLE OR INAPPLICABLE, YOU AGREE THAT PIONEER'S LIABILITY SHALL NOT EXCEED FIFTY PERCENT (50%) OF THE PRICE PAID BY YOU FOR THE ENCLOSED PIONEER PRODUCT.

Some countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty disclaimer and limitation of liability shall not be applicable to the extent that any provision of this warranty is prohibited by any country or local law which cannot be preempted.

4. EXPORT LAW ASSURANCES

You agree and certify that neither the Software nor any other technical data received from Pioneer, nor the direct product thereof, will be exported outside the country or district (the "Country") governed by the government having jurisdiction over you (the "Government") except as authorised and as permitted by the laws and regulations of the Government. If the Software has been rightfully obtained by you outside of the Country, you agree that you will not re-export the Software nor any other technical data received from Pioneer, nor the direct product thereof, except as permitted by the laws and regulations of the Government and the laws and regulations of the jurisdiction in which you obtained the Software.

5. TERMINATION

This Agreement is effective until terminated. You may terminate it at any time by destroying the Software. The Agreement also will terminate if you do not comply with any terms or conditions of this Agreement. Upon such termination, you agree to destroy the Software.

6. MISCELLANEOUS

This is the entire Agreement between Pioneer and you regarding its subject matter. No change in this Agreement shall be effective unless agreed to in writing by Pioneer. If any provision of this Agreement is declared invalid or unenforceable, the remaining provisions of this Agreement shall remain in full force and effect.

Tele Atlas End User Licensing Terms

THIS IS A LEGAL AGREEMENT (THE "AGREEMENT") BETWEEN YOU, THE END USER, AND PIONEER and its licensors of Data product (sometimes collectively "Licensors"). BY USING YOUR COPY OF THE LICENSED DATA, YOU AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT.

1. Grant of License.

Licensors grant you a non-transferable, nonexclusive license to use the map data and business points of interest information (the "POIs"), (together, the "Data") contained on these discs, solely for personal, non-commercial use and not to operate a service bureau or for any other use involving the processing of data of other persons or entities. You may make one (1) copy of the Data for archival or backup purposes only but you may not otherwise copy, reproduce, modify, make derivative works, derive the structure of or reverse engineer the Data. The Data is restricted for use with the PIONEER Product(s). The Data contains confidential and proprietary information and materials, and may contain trade secrets, so you agree to hold the Data in confidence and in trust and not to disclose the Data or any portions in any form, including by renting, leasing, publishing, leasing, sublicensing or transferring the Data to any third party. You are explicitly prohibited from downloading the digital maps and programmes contained in the Data or from transferring these to another data carrier or computer. You are prohibited from using the POIs (i) to create mailing lists or (ii) for other such similar uses.

2. Ownership.

The Data is copyrighted by the Licensors and the Licensors retain all ownership rights in the Data. You agree not to alter, remove, obliterate, or obscure any copyright notice or proprietary legend contained in or on the Data. The current copyrights are as follows:

Data Source © 2007 Tele Atlas
 © BEV, GZ 1368/2003
 © DAV
 © IGN France Michelin data © Michelin 2007
 © Ordnance Survey of Northern Ireland
 © Norwegian Mapping Authority, Public Roads Administration /
 © Mapsolutions
 © Swisstopo
 Topografische ondergrond Copyright © dienst voor het kadaster en de openbare registers, Apeldoorn 2007
 "This data has been approved by Turkish Military Forces by the given authority from Councils of Ministers of Turkey".
 © Roskartographia

This product includes mapping data licenced from Ordnance Survey with the permission of the Controller of Her Majesty's Stationery Office. © Crown copyright and/or database right 2007. All rights reserved. Licence number 100026920.

3. Warranty Disclaimer.

THE DATA IS PROVIDED ON AN "AS IS" AND "WITH ALL FAULTS BASIS" AND PIONEER, ITS LICENSORS, AND ITS LICENSED DISTRIBUTORS AND SUPPLIERS (COLLECTIVELY, "SUPPLIERS") EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, EFFECTIVENESS, COMPLETENESS, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. PIONEER, ITS LICENSORS AND SUPPLIERS DO NOT WARRANT THAT THE DATA WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE DATA WILL BE UNINTERRUPTED OR ERROR FREE. NO ORAL OR WRITTEN ADVICE GIVEN BY PIONEER, ITS LICENSORS, SUPPLIERS OR ANY OF THEIR RESPECTIVE EMPLOYEES CREATES A WARRANTY OR IN ANY WAY INCREASES PIONEER', ITS LICENSORS OR SUPPLIERS LIABILITY AND YOU MAY NOT RELY ON ANY SUCH INFORMATION OR ADVICE. THIS DISCLAIMER IS AN ESSENTIAL CONDITION OF THIS AGREEMENT AND YOU ACCEPT THE DATA ON THIS BASIS.

4. Limitation of Liability.

IN NO EVENT SHALL PIONEER, ITS LICENSORS' OR SUPPLIER' AGGREGATE LIABILITY FOR ALL MATTERS ARISING OUT OF THE SUBJECT MATTER OF THIS AGREEMENT, WHETHER IN CONTRACT, TORT OR OTHERWISE, EXCEED THE AMOUNT PAID BY YOU FOR YOUR COPY OF THE PIONEER DATA. PIONEER, ITS LICENSORS AND SUPPLIERS SHALL NOT BE LIABLE IN ANY MATTER TO YOU FOR ANY SPECIAL, INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THIS AGREEMENT OR THE USE OF OR INABILITY TO USE THE DATA, EVEN IF PIONEER, ITS LICENSORS OR SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

5. Termination.

This Agreement will terminate immediately and automatically, without notice, if you breach any term of this Agreement. You agree that in the event of termination of the Agreement, you shall return the Data (including all documentation and all copies) to PIONEER and its suppliers.

6. Indemnity.

You agree to indemnify, defend and hold PIONEER, its Licensors, and its suppliers (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of the Data.

7. Additional Provisions with respect to the Great Britain Data and Northern Ireland data only.

- a. You are prohibited from removing or obscuring of any copyright, trademark or restrictive legend belonging to Ordnance Survey.
- b. The Data may include the data of licensors, including Ordnance Survey. Such Data is provided on an "AS IS" AND "WITH ALL FAULTS BASIS" and the licensors EXPRESSLY DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, QUALITY, EFFECTIVENESS, COMPLETENESS, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE DATA PRODUCT RESTS WITH YOU. ORDNANCE SURVEY DOES NOT WARRANT THAT THE DATA WILL MEET YOUR REQUIREMENTS, OR COMPLETE OR ACCURATE OR UP TO DATE OR ACCURATE OR THAT THE OPERATION OF THE DATA WILL BE UNINTERRUPTED OR ERROR FREE. NO ORAL OR WRITTEN ADVICE GIVEN BY ORDNANCE SURVEY, PIONEER OR ITS LICENSORS AND EMPLOYEES CREATES A WARRANTY OR IN ANY WAY INCREASES ORDNANCE SURVEY'S LIABILITY AND YOU MAY NOT RELY ON ANY SUCH INFORMATION OR ADVICE. This is an essential condition of the Agreement and You accept the Data on that basis.
- c. IN NO EVENT SHALL ORDNANCE SURVEY BE LIABLE TO YOU FOR MATTERS ARISING OUT OF THE SUBJECT MATTER OF THE AGREEMENTS, WHETHER IN CONTRACT, TORT OR OTHERWISE. THE LICENSORS SHALL NOT BE LIABLE TO YOU FOR ANY SPECIAL, INDIRECT, CONSEQUENTIAL, OR INCIDENTAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE AGREEMENT OR THE USE OF OR INABILITY TO USE THE DATA, EVEN IF THEY HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.



- d. You are prohibited from using the Data in any printed, published form that results in derivative products to be distributed freely or sold to the public without the prior permission of Ordnance Survey.
- e. You shall indemnify and hold harmless Ordnance Survey from and against any claim, demand or action, irrespective of the nature of the claim, demand or action alleging loss, costs, damages, expenses, or injury (including injury from death) resulting from your authorized or unauthorized use, possession, modification, or alteration of the Data.
- f. End User accepts the obligation to, on request, provide Ordnance Survey with information on what products and/or services containing and/or derived from the Licensed Products they produce.
- g. You are liable to Ordnance Survey in the event of discovery of breach of the aforementioned contractual terms.

8. Additional Provisions with respect to the Denmark Data only.

You shall be prohibited from using the Data to create maps within telephone books, telephone books or other products similar to telephone books (e.g. directories), including such products in digital form.

9. Additional Provisions with respect to the Norway Data only.

You shall be prohibited from using the Data to create general purpose printed or digital maps, which are similar to the basic national products of the Norwegian Mapping Authority. (Any derivative product of the Data of Norway shall be regarded as similar to the basic national products of the Norwegian Mapping Authority if such derivative product has a regional or national coverage, and at the same time has a content, scale and format that are similar to the basic national products of the Norwegian Mapping Authority.)

10. Additional Provisions with respect to the Poland Data only.

You shall be prohibited from using the Data to create printed maps.

11. Miscellaneous.

This is the exclusive and complete Agreement between the Licensors and you regarding its subject matter. Nothing in this Agreement shall create a joint venture, partnership or principal-agent relationship between the Licensors and you. The internal laws of Sections 2 - 4 and 6 - 11 shall survive the expiration or termination of this Agreement. This Agreement may be amended, altered, or modified only by PIONEER. You may not assign any part of this Agreement without PIONEER' prior written consent. You acknowledge and understand that the Data may be subject to restrictions on exportation and agree to comply with any applicable export laws. In the event that any provision or part of a provision of this Agreement is determined to be invalid, illegal, or unenforceable, such provision or part thereof shall be stricken from this Agreement and the remainder of this Agreement shall be valid, legal, and enforceable to the maximum extent possible. Any notice under this Agreement shall be delivered by courier to PIONEER, Attention Legal Department.

About the Data for the Map Database

- This database was developed and recorded up to April 2006. Changes to streets/highways made after that time may not be reflected in this database.
- It is strictly prohibited to reproduce and use any part or the whole of this map in any form without permission from the copyright owner.
- If the local traffic regulations or conditions deviate from this data, follow the local traffic regulations (such as signs, indications, etc.) and conditions (such as construction, weather, etc.).
- The traffic regulation data used in the map database applies only to standard sized passenger vehicles. Note that regulations for larger vehicles, motorbikes, and other non-standard vehicles are not included in the database.

Copyright

Data Source © 2007 Tele Atlas
© BEV, GZ 1368/2003
© DAV
© IGN France Michelin data © Michelin 2007
© Ordnance Survey of Northern Ireland
© Norwegian Mapping Authority, Public Roads Administration /
© Mapsolutions
© Swisstopo
Topografische ondergrond Copyright © dienst voor het kadaster en de openbare registers, Apeldoorn 2007
"This data has been approved by Turkish Military Forces by the given authority from Councils of Ministers of Turkey".
© Roskartographia

This product includes mapping data licenced from Ordnance Survey with the permission of the Controller of Her Majesty's Stationery Office. © Crown copyright and/or database right 2007. All rights reserved. Licence number 100026920.

© 2007 INCREMENT P CORP. ALL RIGHTS RESERVED

 




Table of Contents

Introduction

- Licence Agreement 1
 - PIONEER AVIC-D3 1
 - Tele Atlas End User Licensing Terms 2
- About the Data for the Map Database 3
- Copyright 3
- Table of Contents 4
- Manual Overview 8
 - How to use this manual 8
 - Terminology 9
 - About the definition of terminology 9
- Important Safety Information 10
- Notes Before Using the System and Additional Safety Information 11
 - In case of trouble 11
 - Visit Our Web site 11
 - Precaution 11
- Playable Discs 13
 - DVD-Video disc region numbers 13
- Features 13
 - About WMA 15
 - About AAC 15
 - About DivX 16
- To Protect the LCD Screen 16
- For Viewing LCD Comfortably 16
- What the Marks on DVDs Indicate 16
 - When an operation is prohibited 16
- Resetting the Microprocessor 16
 - Reset the navigation system without changing the condition memory 16
 - Reset the navigation system to the initial (factory) setting 17
 - About the data being deleted 17
- DVD Map Discs for Your Navigation System 18
 - Configuration of data recorded on discs 18
- Initial Use 18

Chapter 1

Basic Operation

- Navigation unit 19
- Inserting/Ejecting a Disc 20
 - Inserting a disc 20
 - Ejecting a disc 20
- Flow from Startup to Termination 20
- About NAVI MENU and AV MENU 21
- Basic Navigation 21
 - How to set your destination by address 22
 - Memory navi mode 25
- Basic AV Source 25
 - Selecting an AV source 25
 - Adjusting the volume 26

- Turning the source off 26
- Muting the AV source 26
- How to listen to a CD 26
- Available buttons 27

Chapter 2


Navigation Menu and Map Display

- How to Use Menu Screens 29
 - NAVI MENU 29
 - Shortcut menu 30
- How to Use the Map 30
 - Switching the current position screen display mode 30
 - How to view the map of the current location 31
 - Changing the scale of the map 34
 - Moving the map to the location you want to see 34

Chapter 3

Setting a Route to Your Destination

 - Finding Your Destination by Selecting the Type of Facility 37
 - Searching for Points of Interest (POI) 37
 - Finding a POI in your surroundings 38
 - Searching the facilities around the scroll cursor 38
- Setting an Entrance or Exit of a Motorway as Your Destination 39
- Finding Your Destination by Specifying the Postcode 39
- Route Calculation to Your Home Location or to Your Favourite Location 40
- Selecting Destination from the Destination History and Address Book 40
- Cancelling the Route Guidance 40
- Checking the Set Route 41
 - Checking the set route with the map 41
 - Checking the set route by text 41
 - Checking the entire route overview 42
 - Checking the set route from the shortcut menu 42
- Recalculating the Route to Your Destination 42
 - Recalculating the route to the destination using the Route Options menu 42
 - Recalculating a specified distance in the route ahead of your current position 42
- Editing Way Points to the Current Route 43
 - Editing a way point 43
 - Skipping a way point 43
- Setting Areas to Avoid 44
 - Registering an area to avoid 44
 - Changing or deleting an area to avoid 44
- Displaying Certain POI on the Map 45



- Registering/deleting POI Shortcuts 45
 - Registering a POI shortcut 45
 - Deleting a POI shortcut 46
- Modifying the Route Calculation Conditions 46
 - Items that users can operate 46
 - Perform the route calculation for several route options, and select one 47

Chapter 4 Editing the Navigation Utilities

- Editing Registered Locations 49
 - Registering your home and your favourite location 49
 - Registering a previous location in the Address Book 50
 - Editing a location's information 50
 - Deleting Address Book or Destination History information 51
 - Changing the position of locations registered in the Address Book 52
 - Loading registered locations data from a Disc 52
- Using Traffic Information 52
 - Viewing traffic information 53
 - Information on avoiding traffic jam on route ahead 54
 - When checking traffic jam information manually 54
 - Selecting the radio station 56
- Changing Background Picture 56
- Setting the Vehicle Dynamics Display 58
- Checking the Navigation Status 58
 - Checking sensor learning status and driving status 58
 - Checking the connections of leads and installation positions 59

Chapter 5 Customising Your Navigation System

- Modifying the Default Settings 61
- Items Users can Change 61
 - Volume 61
 - System Options 62
 - Short-Cut Selection 63
 - Map Display Options 63
 - Defined Locations 64
 - Demo Mode 65
 - Time 65
 - Modify Current Location 65
 - Hardware Info 65
 - Restore Factory Settings 65

Chapter 6 Using the AV Source (Built-in DVD Drive and Radio)

- How to Display each Menu 67
- Operating the Built-in DVD drive 69
 - Switching the media files type 70
 - Touch key operation 70
 - Operation using the Function menu 72
 - Other DVD-Video/DivX function 73
- Radio 76
 - Listening to the radio 76
 - Switching between the detail information display and the preset list display 77
 - Storing and recalling broadcast stations 77
 - Advanced radio operation 77
 - Storing the strongest broadcast frequencies 78
 - Tuning in strong signals 78
- RDS 78
 - RDS operation 78
 - Selecting alternative frequencies 79
 - Limiting stations to regional programming 79
 - Receiving traffic announcements 79
 - Using PTY functions 80
 - Using radio text 80
 - PTY list 82

Chapter 7 Using the AV Source (Pioneer AV Equipment)

- Multi-CD Player 83
 - Listening a CD 83
 - Switching between the detail information display and the list display 83
 - 50-disc multi-CD player 84
 - Advanced multi-CD player operation 84
 - Repeating play 84
 - Playing tracks in a random order 84
 - Scanning CDs and tracks 84
- Hands-free Phoning 85
 - Hands-free phoning with mobile phones featuring Bluetooth technology 85
 - About the telephone source standby mode 86
 - Setting up for hands-free phoning 86
 - Making a call by entering phone number 86
 - Making a call from the history list 87
 - Making a call from the preset dial list 87
 - Calling a number in the phone book 88
 - Making a call via voice recognition 89
 - Taking a phone call 89
 - Advanced hands-free phoning operation 90
 - Connecting a mobile phone 90
 - Registering your mobile phone 91
 - Displaying BD (Bluetooth Device) address 91
 - Disconnecting a mobile phone 92
 - Deleting a registered phone 92

- Transferring the phone book 92
- Changing the phone book display order 93
- Editing the phone book 93
- Clearing memory 94
- Setting the automatic answering 94
- Setting the automatic rejecting 94
- Setting a ring tone 94
- Setting the automatic connection 95
- Echo cancelling and noise reduction 95
- iPod 95
 - Operating the iPod 95
 - Pausing track playback 96
 - Browsing for a song 96
 - Performing random play with one touch 96
 - Playing video 96
 - Pausing video playback 97
 - Advanced iPod operation 97
 - Repeating play 97
 - Shuffle play 97
 - Turning on or off charging for the iPod 97
- Bluetooth Audio 98
 - Listening to songs on BT Audio (Bluetooth audio player) 98
 - Pausing track playback 99
 - Advanced BT-Audio operation 99
 - Connecting a Bluetooth audio player 99
 - Disconnecting a Bluetooth audio player 99
 - Displaying BD (Bluetooth Device) address 99
- External Unit 100
 - Operating the external unit 100
 - Operate the external unit by using 1 KEY – 6 KEY 100
 - Operate the external unit by using F1 – F4 100
 - Switching the automatic and manual function 100
- AV Input (AV) 101
 - Selecting AV as the source 101

Chapter 8

Customising the Audio Source Setting

- Audio Adjustments 103
 - Introduction to audio adjustments 103
 - Using the equaliser 103
 - Using balance adjustment 103
 - Adjusting equaliser curves 104
 - Setting the simulated sound stage 104
 - Adjusting loudness 105
 - Using subwoofer output 105
 - Using non fading output 105
 - Using the high pass filter 105
 - Adjusting source levels 106
- Setting Up the DVD/DivX Player 106
 - DVD/DivX setup adjustments 106
 - Setting the language 106
 - Setting assist subtitles on or off 107






- Setting angle icon display 107
- Setting the aspect ratio 107
- Setting the parental lock 107
- Displaying your DivX® VOD registration code 108
- Setting the Auto Play 108
- Setting the Subtitle File 108
- Initial Settings 108
 - Adjusting initial settings 108
 - Setting the FM tuning step 108
 - Switching Auto PI seek 109
 - Setting the rear output and subwoofer controller 109
 - Editing the PIN code 109
 - Switching the sound muting/attenuation 110
 - Adjusting a blurry or low contrast screen 110
- Other Functions 110
 - Setup adjustments 110
 - Setting the video input 110
 - Setting for rear view camera 111
 - Switching the auto aerial setting 111
 - Setting the illumination colour 111
 - Setting the screen colour 112
- Changing the Wide Screen Mode 112
- Operating the Picture Adjustment 113
 - Switching the backlight On/Off 113
- Language Code Chart for DVD 114

Appendix

- Anti-theft function 115
 - Setting the password 115
 - Enter the password 115
 - Delete the password 115
 - If the password is forgotten 115
- Installing the Programme 116
- Adjusting the Response Positions of the Touch Panels (Touch Panel Calibration) 117
- Memory Navi Mode 118
 - Navigation in the memory navi mode 118
 - About the icon for the memory navi mode 119
 - Major restrictions during the memory navi mode 120
 - Cautions relating to auto reroute in memory navi mode 120
 - TMC icon during the memory navi mode 120
 - Operation outside the memorised area 121
- Positioning Technology 121
 - Positioning by GPS 121
 - Positioning by dead reckoning 121
 - How do GPS and dead reckoning work together? 122
- Handling Large Errors 122
 - When the positioning by GPS is impossible 122
- Vehicles that Cannot Obtain Speed Pulse Data 123



     - Conditions Likely to Cause Noticeable Positioning Errors 123
- About the Data being Deleted 125
- Limitation of Functions for Areas not Stored on the Disc 125
 - Displaying the map 125
 - Destination search 125
 - Guidance 126
 - Route information 126
 - Other function limitations 126
- Troubleshooting 127
 - Problems in the navigation screen 127
 - Problems in the audio screen (during DVD-Video playback) 129
 - Problems in the audio screen (during iPod playback) 130
 - Messages and how to react to them 131
- Error Messages 134
- Handling and Care of the Disc 135
 - DVD Map Discs 135
 - DVD drive and care 135
 - DVD-Video 135
 - DVD-R/-RW and CD-R/-RW 135
 - MP3, WMA and AAC files 136
 - DivX video files 137
 - DivX subtitle files 138
 - Ambient conditions for playing a disc 138
- Using the Navigation System Correctly 139
 - Handling the LCD screen 139
 - Liquid crystal display (LCD) screen 139
 - Keeping the LCD screen in good condition 139
 - Small fluorescent tube 139
- Route Setting Information 140
 - Route search specifications 140
 - Route highlighting 141
 - Tracking 141
 - About traffic information 141
- Types of the Road Stored in the Disc 142
 - Roads included in the route guidance and roads not included 142
 - Non routable roads (pink colour road) 142
- Glossary 142
- Specifications 145
- Display Information 147
 - NAVI MENU 147
 - Shortcut menu 149
- Menu in the Audio Screen 150
 - Sound menu 150
 - Initial menu 150
 - System menu 151
 - Function menu 152





Manual Overview

This manual provides the important information you need to make full use of your new navigation system.

Please note that when you have decided what you want to do, you can find the page you need from the "Table of Contents".

If you want to check the meaning of each item displayed on the screen, you will find the necessary page from the "Display Information" section at the end of the manual.

How to use this manual

For safety reasons, it is particularly important that you fully understand your navigation system before using it. Be sure to read the Introduction, Chapter 1 in particular.

1

Basic Operation

This chapter describes the names of each part of the navigation system and the basic operations of this navigation system.

It also describes basic operations for playing a CD in the navigation system.

2

Navigation Menu and Map Display

Describes how to display the navigation menu screen, and the method of changing map mode or map scale.

3

Setting a Route to Your Destination

This section describes various ways of searching the destination, editing the current route conditions, and the route operation during route guidance.

4

Editing the Navigation Utilities

Describes convenient functions for navigation, including how to organise information on places you have visited.

5

Customising Your Navigation System

The behaviour of your navigation system depends on a number of settings. If you need to change any of the initial settings (default settings), read the relevant section of this chapter.

6

Using the AV Source (Built-in DVD Drive and Radio)

Describes how to use DVD-Video, CD, ROM, DivX and the radio.

7

Using the AV Source (Pioneer AV Equipment)

When Pioneer audio equipment is connected to the navigation system, that equipment can be operated from the navigation system. This chapter describes the operation of the audio source that can be used when Pioneer audio equipment is connected.

8

Customising the Audio Source Setting

Using the audio source, various settings are available to suit your audio-visual taste. This chapter describes how to change the settings.



Appendix

Read the appendix to learn more about your navigation system and such information as the availability of after-care. Please see "**Display Information**" section at the end of this manual for checking the details of each item on the menu.

Terminology

Before moving on, take a few minutes to read the following information about the conventions used in this manual. Familiarity with these conventions will help you greatly as you learn how to use your new equipment.

- Buttons on your navigation system are described in **ALL CAPITAL, BOLD** lettering:
e.g.)
MENU button, **MAP** button.
- Items in the different menus or touch keys available on the screen are described in quotations (" ") and bold:
e.g.)
"**Destination**", "**Settings**".
- Extra information, alternative use and other notes are presented like this:
e.g.)
 After removing the disc from the slot, keep it in the case.
- The references are indicated like this:
e.g.)
↪ Setting the Route Options → Page 46

 
 
 
 
 
About the definition of terminology

"Front Display" and "Rear Display"

In this manual, the screen that is attached to the body of this navigation unit will be referred to as the "Front Display". Any additional optional screen that is purchased for use in conjunction with this navigation unit will be referred to as the "Rear Display".

"Video image"

"Video image" in this manual indicates the moving image from DVD-Video in the built-in DVD drive or from the equipment that is connected to this system with a RCA cable, such as a general-purpose AV equipment.



Important Safety Information

Before using your navigation system, be sure to read and fully understand the following safety information:

- Read the entire manual before operating this navigation system.
- The navigation features of your navigation system (and rear view camera option if purchased) are intended solely as an aid to you in the operation of your vehicle. It is not a substitute for your attentiveness, judgement, and care when driving.
- Do not operate this navigation system (or the rear view camera option if purchased) if doing so will divert your attention in any way from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating the system or reading the display, park your vehicle in a safe location and apply the handbrake before making the necessary adjustments.
- Never allow others to use the system unless they have read and understood the operating instructions.
- Never use this navigation system to route to hospitals, police stations, or similar facilities in an emergency. Please call the appropriate emergency number.
- Route and guidance information displayed by this equipment is for reference purposes only. It may not accurately reflect the latest permissible routes, road conditions, one way streets, road closures, or traffic restrictions.
- Traffic restrictions and advisories currently in force should always take precedence over guidance given by the navigation system. Always obey current traffic restrictions, even if the navigation system provides contrary advice.
- Failure to input correct information about the local time may result in the navigation system providing improper routing and guidance instructions.
- Never set the volume of your navigation system so high that you cannot hear outside traffic and emergency vehicles.
- To promote safety, certain functions are disabled unless the vehicle is stopped and/or the handbrake is applied.
- The data encoded in the disc for the navigation system is the intellectual property of the provider, and the provider is responsible for such content.
- Keep this manual handy as a reference for operating procedures and safety information.
- Pay close attention to all warnings in this manual and follow the instructions carefully.
- Do not install the navigation unit where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags, hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.
- Please remember to wear your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled.
- Using the most current map DVDs will allow for most accurate destination mapping. Upgrade DVDs are available for purchase through your local Pioneer dealer.
- Never use headphones while driving.

WARNING

- Do not attempt to install or service your navigation system by yourself. Installation or servicing of the navigation system by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock or other hazards.

Notes Before Using the System and Additional Safety Information

In case of trouble

Should the navigation system fail to operate properly, contact your dealer or nearest authorised Pioneer Service Station.

[1] Visit Our Web site

Visit us at the following site:

www.pioneer.co.uk

- Register your product. We will keep the details of your purchase on file to help you refer to this information in the event of an insurance claim such as loss or theft.

Precaution

- This navigation system does not work correctly in areas other than Europe. The RDS (Radio Data System) function operates only in areas with FM stations broadcasting RDS signals. The RDS-TMC service can also be used in the area where there is a station that broadcasts the RDS-TMC signal.

"CLASS 1 LASER PRODUCT"

This product contains a laser diode of higher class than 1. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product.
Refer all servicing to qualified personnel.



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the 25 member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

For countries not mentioned above, please contact your local authorities for the correct method of disposal.

By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.

CAUTION

- **Do not allow this product to come into contact with liquids. Electrical shock could result. Also, damage to the product, smoke, and overheating could result from contact with liquids.**

- The Pioneer CarStereo-Pass is for use only in Germany.
- Protect this product from moisture.
- If the battery is disconnected or discharged, the memory will be erased and must be reprogrammed.

Handbrake interlock

Certain functions (such as viewing of DVD-Video and certain touch key operations) offered by this navigation system could be dangerous and/or unlawful if used while driving. To prevent such functions from being used while the vehicle is in motion, there is an interlock system that senses when the handbrake is set and when the vehicle is moving. If you attempt to use the functions described above while driving, they will become disabled until you stop the vehicle in a safe place, and apply the handbrake. Please keep the brake pedal pushed down before releasing the handbrake.

WARNING

- **To avoid the risk of damage and injury and the potential violation of applicable laws, the navigation system is not for use with a "Video image" that is visible to the driver.**
- **In some countries the viewing of "Video image" on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed.**


- When applying the handbrake in order to view "Video image" or to enable other functions offered by the navigation system, park your vehicle in a safe place, and keep the brake pedal pushed down before releasing the handbrake if the vehicle is parked on a hill or otherwise might move when releasing the handbrake.

CAUTION

- Accuracy/performance of interlock may be impacted by such factors as GPS signal detection, speed pulse wire connectivity, and driving habits or conditions of the place where the vehicle is parked.
- It is strongly suggested that the speed pulse wire be connected for accuracy of navigation and better performance of interlock.
- If the speed pulse wire is unavailable for some reason, it is recommended that the pulse generator ND-PG1 (sold separately) be used.

When you attempt to watch "Video image" while driving, the warning "VIDEO VIEWING IS NOT AVAILABLE WHILE DRIVING" will appear on the screen. To watch "Video image" on this display, stop the vehicle in a safe place and apply the handbrake. Please keep the brake pedal pushed down before releasing the handbrake.

Colour difference of the map display between day and night

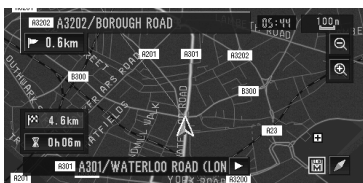

Night display

The examples in this manual are illustrated using the daytime display. When driving at night, the colours you see may differ from those shown.

☞ "Day/Night Display" → Page 64

When using a display connected to REAR MONITOR OUT

This product's REAR MONITOR OUT is for connection of a display to enable passengers in the rear seats to watch video images.

WARNING

- NEVER install the rear display in a location that enables the driver to watch video images while driving.

To avoid battery exhaustion

Be sure to run the vehicle engine while using this product. Using this product without running the engine can result in battery drainage.

WARNING

- Do not use with vehicles that do not feature an ACC position.

Rear view camera

With an optional rear view camera, you are able to use the navigation system as an aid to keep an eye on trailers, or backing into a tight parking spot.

WARNING

- SCREEN IMAGE MAY APPEAR REVERSED
- USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.

CAUTION

- The rear view mode is to use the navigation system as an aid to keep an eye on the trailers, or while backing up. Do not use this function for entertainment purposes.

Playable Discs

About DVD-Video and CD

DVD and CD discs that display the logos shown below generally can be played back on this built-in DVD drive.

DVD-Video



CD



- DVD** is a trademark of DVD Format/Logo Licensing Corporation.
- It is not possible to play back DVD-Audio discs. This DVD drive may not be able to play all discs bearing the marks shown above.

About Dual layer disc

The unit cannot play back DVD-R/RW discs that are written in Layer Jump Recording mode. For more information about the writing method, see the operation manual for the writing device.

About DVD Map Disc

You can use discs intended for this navigation system. Use only discs approved by Pioneer.

➔ For details on other discs → Page 135

About Dolby Digital

The AVIC-D3 will down-mix Dolby Digital signals internally and the sound will be output by the stereo. (Equipped with optical output for future extension.)


- Manufactured under licence from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



DVD-Video disc region numbers

DVD-Video discs that have incompatible region numbers cannot be played on this DVD drive. The region number of the player can be found on the bottom of this product.

The illustration below shows the regions and corresponding region numbers.

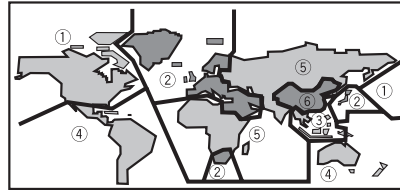

Features

Touch panel key operation


It is possible to operate the navigation function and the audio function by using touch panel key.

Compatible with the memory navi mode

Memory navigation functions are provided with the hardware. For details, see page 25, "Memory navi mode".

Variety of view modes

Various types of screen display can be selected for navigation guidance.

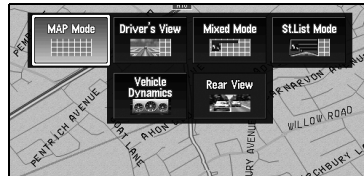

Wide variety of facility information for Points of Interest (POI) Search

You can search your destination from all areas. Approximately 1.5 million POIs are included in the database.

Auto Reroute Function

If you deviate from the set route, the system will re-calculate the route from that point so that you remain on track to the destination.

- This function may not work in certain areas.



Assign an Original Image as a Background Image

You can store your own pictures on a CD-R/-RW and DVD-R/-RW in JPEG format and import original images in this navigation system. These imported images can be set as a background image.

- Imported original images will be stored in the memory, but saving cannot be guaranteed completely. If original image data is deleted, set the CD-R/-RW and DVD-R/-RW again and re-import the original image.

DVD-Video playback

It is possible to play back DVD-Video, DVD-R (video mode) and DVD-RW (video mode).

- Remember that use of this system for commercial or public viewing purposes may constitute an infringement on the author's rights protected by the Copyright Law.
- ☞ "Handling and Care of the Disc" → Page 135
- ☞ "Playable Discs" → Page 13

CD playback

Music CD/CD-R/CD-RW playback is possible.

- ☞ "Handling and Care of the Disc" → Page 135
- ☞ "Playable Discs" → Page 13

MP3 file playback

It is possible to play back MP3 files recorded on CD-R/-RW/-ROM and DVD-R/-RW/-ROM (ISO9660 level 1 and level 2, Romeo and Joliet / UDF1.02).

- Supply of this navigation system only conveys a licence for private, non-commercial use and does not convey a licence nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent licence for such use is required. For details, please visit <http://www.mp3licensing.com>.
- ☞ "Handling and Care of the Disc" → Page 135
- ☞ "Playable Discs" → Page 13

WMA file playback

You can play back WMA files recorded on CD-R/-RW/-ROM and DVD-R/-RW/-ROM (ISO9660 level 1 and level 2, Romeo and Joliet / UDF1.02).

AAC file playback

You can play back AAC files recorded on CD-R/-RW/-ROM and DVD-R/-RW/-ROM (ISO9660 level 1 and level 2, Romeo and Joliet / UDF1.02).

DivX® video file playback

You can play back DivX video files recorded on CD-R/-RW/-ROM and DVD-R/-RW/-ROM.

NTSC/PAL compatibility

This product is NTSC/PAL system compatible. When connecting other components to the product, be sure components are compatible with the same video system or else images will not be correctly reproduced.

Auto CD title and MP3/WMA/AAC file listing

Title lists will automatically be displayed when a CD TEXT, MP3, WMA or AAC disc is played. This system provides easy-to-operate audio functions that allow playback simply by selecting an item from the list.

Station name auto display

While tuning to an RDS station, you can display a list of the stations that you are receiving with the programme service names. This facilitates selection of stations.

- If the system cannot receive the programme service name, the frequency will be displayed instead.

 
iPod® compatibility

When you use this navigation system with a Pioneer iPod cable (CD-I200) (sold separately), you can control an iPod with Dock connector.

- iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

Hands-free phoning

Using Bluetooth adapter (e.g. CD-BTB200) (sold separately), this unit realises effortless hands-free phoning with Bluetooth wireless technology.



Bluetooth audio player compatibility

Using a Bluetooth adapter (e.g. CD-BTB200) (sold separately), you can control a Bluetooth audio player featuring Bluetooth wireless technology.

Multi-aspect

You can switch between wide screen, letter box and panscan display.

Multi-audio, Multi-subtitle, and Multi-angle

You can switch between multiple audio systems, subtitle languages and multiple viewing angles of a scene recorded on a DVD as desired.

- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Rear entertainment

Video from sources with video can be displayed on the rear display.

Rear view camera ready

You can display what is behind the vehicle if connected to a rear view camera (sold separately).

- ☞ "Rear view camera" → Page 12

About WMA

The Windows Media™ logo printed on the box indicates that this unit can play back WMA data. WMA is short for Windows Media Audio and refers to an audio compression technology that is developed by Microsoft Corporation. WMA data can be encoded by using Windows Media Player version 7 or later.

Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Notes

- This unit may not operate correctly depending on the application used to encode WMA files.
- Depending on the version of Windows Media Player used to encode WMA files, album names and other text information may not be correctly displayed.
- There may be a slight delay when starting playback of WMA files encoded with image data.

About AAC

AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG 2 and MPEG 4. Several applications can be used to encode AAC files, but file formats and extensions differ depending on the application which is used to encode.

This unit plays back AAC files encoded by iTunes® version 4.6.

- iTunes is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

About DivX



DivX is a compressed digital video format created by the DivX[®] video codec from DivX, Inc. This unit can play DivX video files recorded on CD-R/RW/ROM and DVD-R/RW/ROM discs. Keeping the same terminology as DVD video, individual DivX video files are called "Titles". When naming files/titles on a CD-R/RW or a DVD-R/RW disc prior to burning, keep in mind that by default they will be played in alphabetical order. Official DivX[®] Certified product Plays all versions of DivX[®] video (including DivX[®] 6) with standard playback of DivX[®] media files

- DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

To Protect the LCD Screen

- Do not allow direct sunlight to fall on the display when this product is not being used. Extended exposure to direct sunlight can result in LCD screen malfunction due to the resulting high temperatures.
- When using a mobile phone, keep the aerial of the mobile phone away from the display to prevent disruption of the video with disturbances such as spots or coloured stripes.
- To protect the LCD screen from damage, be sure to touch the touch keys with a finger. (The stylus is supplied for special calibrations. Do not use the stylus for normal operations.)

For Viewing LCD Comfortably

Due to its construction, the viewing angle of the LCD screen is limited. The viewing angle (vertical and horizontal) can be increased, however, by using **Brightness** to adjust the black density of the video. When using for the first time, adjust the black density in accordance with the viewing angle (vertical and horizontal) to adjust for clear viewing. **Dimmer** can also be used to adjust the

brightness of the LCD screen itself to suit your personal preference.

What the Marks on DVDs Indicate

The marks below may be found on DVD disc labels and packages. They indicate the type of images and audio recorded on the disc, and the functions you can use.

Mark	Meaning
	Indicates the number of audio systems.
	Indicates the number of subtitle languages.
	Indicates the number of viewing angles.
	Indicates the picture size (aspect ratio: screen width-to-height ratio) type.
	Indicates the number of the region where playback is possible.

If marks other than those listed are found on DVD disc labels and packages, please ask the DVD disc supplier for their meaning.

When an operation is prohibited

When you are watching a DVD and attempt to perform an operation, sometimes it may not be performed because of the programming on the disc. When this happens, this product shows the icon on the screen.

- The icon may not appear in certain discs.

Resetting the Microprocessor

⚠ CAUTION

- Pressing the **RESET** button deletes the contents of the system's memory.

Reset the navigation system without changing the condition memory

Pressing the **RESET** button of the navigation system lets you reset the microprocessor to its initial settings without changing the condition memory.


The microprocessor must be reset under the following conditions:

- Prior to using this product for the first time after installation.
- If the product fails to operate properly.
- If there appear to be problems with the operation of the system.
- When changing the combination of the equipment.
- When adding/removing additional products that connect to the navigation system.

1 Turn the ignition switch OFF.

2 Press the RESET button with a pen tip or other pointed instrument.

RESET button

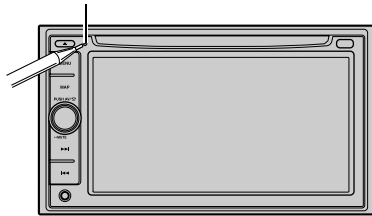

- If you have connected other equipment (for example, Bluetooth adapter) to this navigation system, be sure to reset that equipment too.

Reset the navigation system to the initial (factory) setting

When you want to erase memorised settings and return the navigation system to its initial (factory) settings, carry out the following operations.

1 Turn the engine ON or set the ignition switch to ACC position.

2 Press the RESET button with a pen tip or other pointed instrument.

- Some navigation settings and data are not erased.

About the data being deleted

The information is erased by pressing the **RESET** button or disconnecting the yellow lead from the battery (or removing the battery itself). However, the following items are not erased:


- Sensor learning status and driving status
- Memory areas that were memorised manually
- **Areas to avoid**
- Registered Locations in "**Address Book**"

DVD Map Discs for Your Navigation System


Configuration of data recorded on discs

The map for this navigation system is supplied on two discs: one for the west and the other for the east. Please set the disc to use according to your destination or current location.

The areas recorded on each disc are as follows:

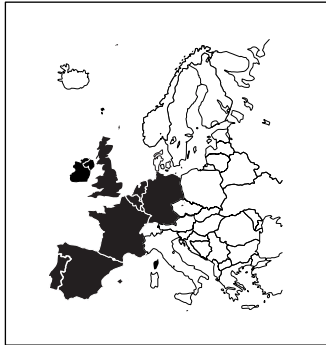

West area disc

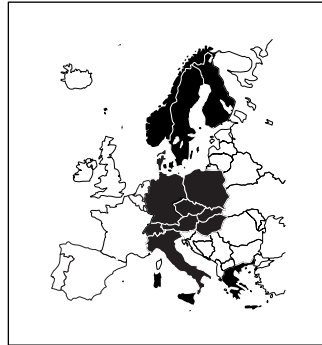


East area disc

- Removing the disc and inserting another disc causes the navigation system to automatically restart and reload the new route. (This automatic "Reroute" operation cannot be cancelled.)

Initial Use

If the initial learning is not complete, following screen appears.

1 If a message appears, touch "OK".

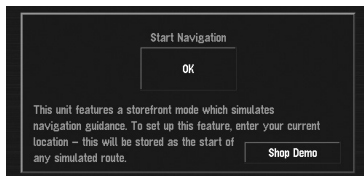

When the navigation system begins running for the first time, the 3D Hybrid Sensor automatically begins initial learning. Positioning is performed solely by GPS satellites until the 3D Hybrid Sensor initial learning is complete, so the location of your vehicle may not be very accurate. This is not an error. When the initial learning is complete, the location of your vehicle can be detected with high accuracy.


- "**Shop Demo**" is the demonstration used in a store. Do not touch "**Shop Demo**".
- ☞ If an error message appears during initial learning → Page 131

Basic Operation

NAVI/AV

Navigation unit

This section gives information about the names of the parts and the main features using the buttons.

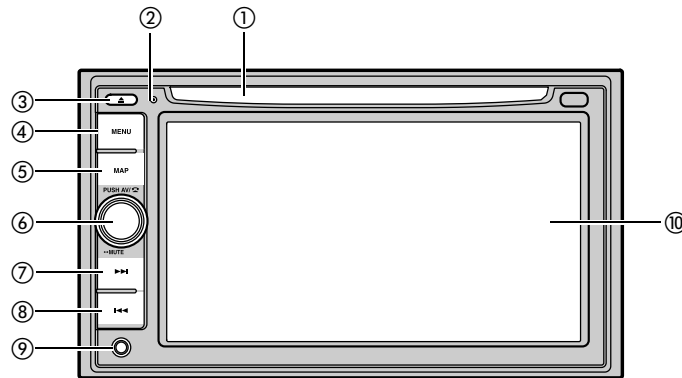

① Disc loading slot

➤ "Inserting/Ejecting a Disc" → Page 20

② RESET button

➤ "Resetting the Microprocessor" → Page 16

③ EJECT button

④ MENU button
Press to display the navigation menu or audio menu.

⑤ MAP button

Press to view the map or change view mode.

⑥ VOLUME knob

Turn to adjust the AV volume or press to change AV source.

⑦ Fast forward button

⑧ Backward button

⑨ Mini jack


This is the AV-2 input terminal. Use the CD-RM10 (sold separately) to connect the external video component.

⑩ LCD display

Inserting/Ejecting a Disc

Inserting a disc

1 Insert a disc into the disc loading slot.

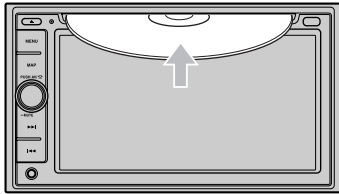

- The DVD drive plays one standard 12-cm or 8-cm (single) disc at a time. Do not use an adapter when playing 8-cm discs.
- Do not insert anything other than a disc into the disc loading slot.
- ↳ "Playable Discs" → Page 13
- If you cannot insert a disc completely or if a inserted disc is not recognised, check that the label side of the disc is up. Also, press the **EJECT** button to eject the disc, and check the disc for damage before inserting the disc again.
- If the built-in DVD drive does not operate properly, an error message such as Error-02 may be displayed.
- ↳ "Error Messages" → Page 134

Ejecting a disc

1 Press the EJECT button.

The disc is ejected.


Flow from Startup to Termination

- If the programme is not installed, see page 116 and install the programme.

1 Start the engine.

After some time, the navigation opening screen comes on for a few seconds. Then, a message screen is displayed.

2 Insert the Pioneer DVD Map Disc to the disc loading slot.

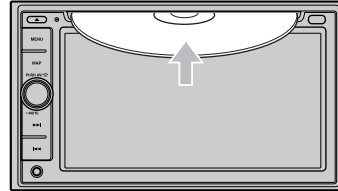

3 Check the details of the caution message and touch "OK".

You can operate the navigation system by touching keys displayed on the screen. If the route is already set, it changes to route guidance mode. The map of your surroundings is displayed.

- ↳ How to read the current position screen → Page 30
- ↳ Setting the time → Page 117

4 Press the MENU button in the map screen.

Displays the NAVI MENU.

5 Allows you to assign a destination and begin route guidance.



- ↳ Specifying the address and searching the destination → Page 21
- ↳ Other search methods → Page 37 to 40


6 Turn off the vehicle engine.

This navigation system is also turned off.

- Until the vicinity of the destination is reached, the set route will not be deleted even if the engine is turned off.

About NAVI MENU and AV MENU

The methods for displaying the NAVI MENU, used for navigation operations, and the AV MENU, used for AV operations, are different depending on which screen is currently displayed.

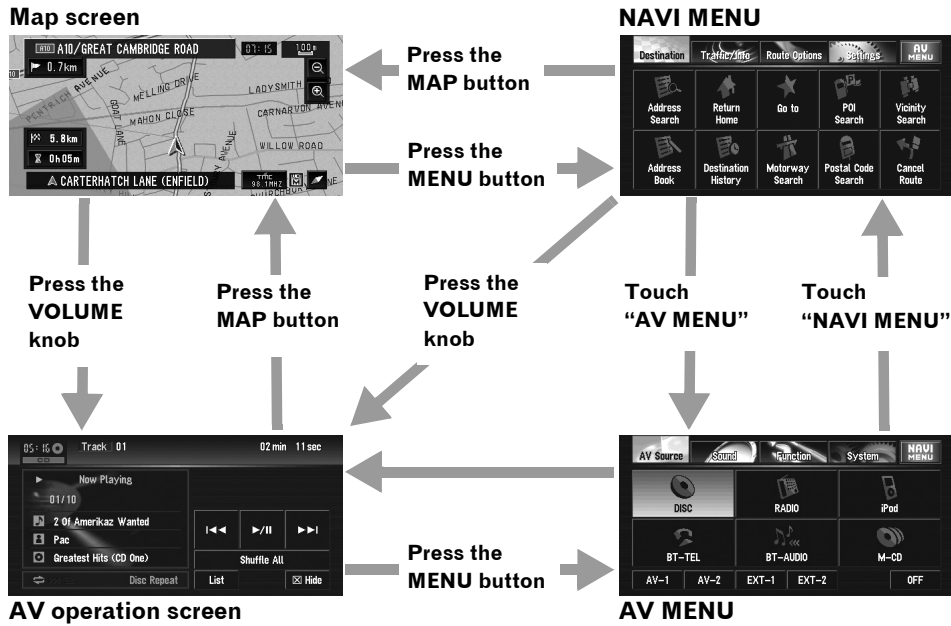

Basic Navigation

The most basic search function is **Address Search**, in which the address is specified and the destination searched. This section describes how to use **Address Search** and the basics of using the navigation system.

CAUTION

- For safety reasons, you cannot use some of these basic navigation functions while your vehicle is in motion. To enable these functions, you must stop in a safe place and apply the handbrake (see page 11 Interlock for details).



Basic flow of operation

- 1 Park your vehicle in a safe place, and apply the handbrake.
- 2 Insert the Pioneer DVD Map Disc to the disc loading slot.
- 3 Press the MAP button to display the map screen.
- 4 Press the MENU button to display the NAVI MENU.
- 5 Touch "Destination" to display Destination menu.
- 6 Select the method of searching for your destination.
- 7 Enter the information about your destination.
- 8 Navigation system calculates the route to your destination, and then shows the route on the map.
- 9 After releasing the handbrake, drive in accordance with the navigation guidance, subject to the important safety instructions noted on page 11 to 12.

How to set your destination by address

- 1 Press the MAP button to display the map screen.
- 2 Press the MENU button to display the NAVI MENU.
- 3 Touch "Destination" to display Destination menu.
- 4 Touch "Address Search".



There are two methods of address search: one involves first specifying the street name and the other specifying the name of the town or area first. This description uses the method of specifying the street name first as an example.


- 5 Touch "Country key".

If the destination is in another country, this changes the country setting.



Country key

6 Touch the country codes of the destination country, then touch "OK".

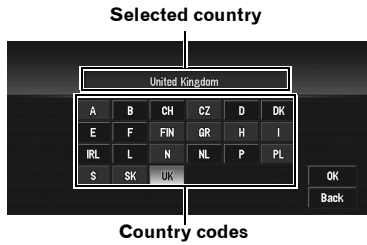


- The characters contained in "Others" are treated in the same way as other alphabets are, upon searching. For example, when you use any of "A", "Ä", "Å", "Æ", the result is the same.

Searching your destination after specifying the name of the city or area

You can narrow down the search candidates by initially specifying the name of the city or area where your destination is located. Inputting the name of the city or area then selecting the destination city or area from the list returns you to the Street Name input screen. Now input the street name, select the street from the list, and proceed to step 9.

7 Input the street name.

Touch the letter you wish to input. If the next screen is not automatically displayed even though the street name is entered, try touching "OK".

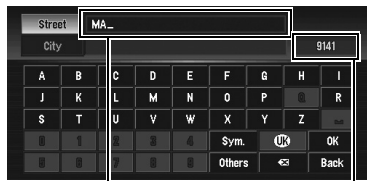

Inputted text.

The number of applicable candidates.

In the selected country, if you touch "City" without entering the name of the city or area, you can set the cities or areas that you have searched in the past from the list. (This function is not available in the first time and when you have selected a country that you have never searched before.)

"City":

Touch if you wish to first specify the destination city or area.



The input text is deleted letter by letter from the end of the text. Continuing to this will delete all of the text.

"Others":

You can input text with accents and umlauts.

"Sym.":

You can input symbols such as "&" and "+".

"0-9":


You can input numbers.

"Back":

Returns you to the previous screen.

- For example, for "West Higgins Road", you can just enter part of the name, such as "Higgins".
- When entering the characters, the unit will automatically query the database for all possible options. If there is only one letter that could possibly follow your entry, that letter will automatically be entered.

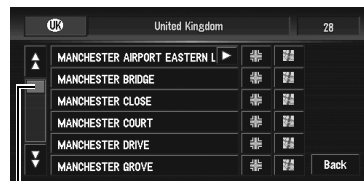


8 Touch the street from the list.




Scroll bar

Touching the ▲ or ▼ on the scroll bar scrolls you through the list and allows you to view the remaining items.

If an item cannot be displayed in a single line, touching the ► to the right of the item allows you to see the whole line.


- Touching the  specifies the selected street and streets intersecting it, allowing you to set an intersection as your destination. This is useful when you don't know the house number of your destination or cannot input the house number of the specified street.
- Touching the  displays a map of the place you have selected. (Candidate place names may appear in the list screen.)
- ↳ "When  appears to the right of the list" → Page 35
- If the selected street has only one matching location, route calculation starts after touching the item.
- A list appears if multiple options exist, select the desired one from the list, and proceed to the next step.

9 Input the house number and touch "OK".

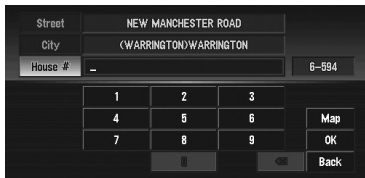

Map:

A map of that location is displayed.

- A list appears if multiple options exist, select the desired one from the list, and proceed to the next step.
- ↳ "When  appears to the right of the list" → Page 35

10 Route calculation starts automatically.


Route calculation starts. When the route calculation is completed, the map of your surroundings appears. (The route is highlighted in green or light blue on the map.)

- If you press the **MENU** button, the calculation is cancelled.
- After the route calculation, the system start storing the map data around the route for "Memory navi mode".
- When performing a destination search with the route already set, select whether to regard the specified area as your destination and search for a new route, or search for a route via that area.
- ↳ Adding way points to the route → Page 43

- Once searched for, the location is automatically stored in the "**Destination History**".
- ↳ "Registering a previous location in the Address Book" → Page 50

11 Drive in accordance with the screen and voice information.


Your navigation system gives you the following information with the timing adjusted to the speed of your vehicle:

- Distance to the next turning point
- Direction of travel
- Road number of the motorway
- Way point (If this is set)
- Your destination
- ↳ Searching for another route → Page 42
- ↳ "Cancelling the Route Guidance" → Page 40
- Touching the  0.4km allows you to hear the information again.
- To adjust the navigation volume, go to the NAVI MENU.
- ↳ Navigation volume adjustment → Page 61
- If you stop at a petrol station or a restaurant during the route guidance, your navigation system remembers your destination and route information. When you start the engine and get back on the road, route guidance resumes.

How to view the map screen

This section describes only the items that are displayed on the map screen.


☞ Details of the map screen → Page 30

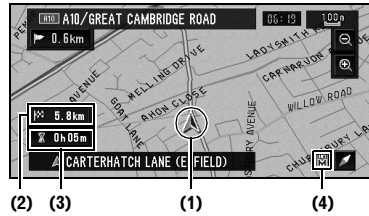

- (1) Current location
- (2) Distance to the destination
- (3) Estimated time of arrival (or travel time to your destination)
- (4) Memory navi indicator

☞ "Memory Navi Mode" → Page 118

Memory navi mode

While the DVD Map Disc is inserted, you can store the map data into the internal memory of the navigation system. If the DVD Map Disc is removed from the navigation system after storing is completed, navigation is performed using the data in the memory (memory navi mode). When the  disappears, memory navi mode is ready. You can now remove the DVD Map Disc. In the memory navi mode, you can play a music CD or DVD-Video on the navigation system while navigation is taking place. The operation automatically switches to the memory navi mode when the DVD Map Disc is removed from the navigation system.

Some functions are restricted and different from the navigation using the DVD Map Disc (DVD navi mode). If you want to use these functions, please insert the DVD Map Disc again.

During the memory navi mode, navigation is performed only using the data read into the memory.

- ☐ You may need to insert the DVD Map Disc and store new data in the memory during navigation operation, such as when the destination is far away. The memory navi mode uses the following map data to perform navigation.

☞ Refer to page 118 for more detail information.

Basic AV Source

This section describes basic AV operations, such as adjusting the volume, switching the source and stopping the source, using CD operations as an example.

Selecting an AV source

- 1 Press the **VOLUME** knob to switch to the Audio operation screen.



- 2 Press the **MENU** button to change to the AV MENU.

- 3 Touch the source icon to select the desired source in the AV Source screen.



- ☐ Also, press the **VOLUME** knob repeatedly when the Audio operation screen is displayed to switch between sources: "DISC" [CD, ROM, DVD-V, DivX] (built-in DVD drive) – "RADIO" (tuner) – "iPod" (iPod) – "BT-TEL" (Bluetooth Telephone) – "BT-AUDIO" (Bluetooth Audio) – "M-CD" (multi-CD player) – "AV-1" (video input1) – "AV-2" (video input2) – "EXT-1" (external unit 1) – "EXT-2" (external unit 2)
- ☐ Touch "OFF" to switch the source to **OFF**.
- ☐ Press and hold the **VOLUME** knob to switch the source to mute.
- ☐ Sources that are not connected to the navigation system, sources that are busy reading a disc or magazine, and sources with incomplete settings cannot be used.



- The term "external unit" refers to a Pioneer product (such as one available in the future) that, although incompatible as a source, enables control of basic functions by the navigation system. Two external units can be controlled by the navigation system. When two external units are connected, the navigation system allocates them to external unit 1 or external unit 2.
- When the navigation system's blue lead is connected to the vehicle's auto-aerial relay control terminal, the vehicle's aerial extends when ACC (ignition) is turned on. To retract the aerial, turn the ACC (ignition) off. The vehicle's aerial extends regardless of whether the navigation system's source is turned on or off.

Adjusting the volume

- 1 Use the **VOLUME** knob to adjust the audio sound level.
 Rotate the **VOLUME** knob to increase or decrease the volume.
 - To adjust the navigation volume, go to the NAVI MENU.
 - ▷ Navigation volume adjustment → Page 61

Turning the source off

- 1 Press the **VOLUME** knob to switch to the Audio operation screen.
- 2 Press the **MENU** button to change to the AV MENU.
- 3 Touch **"OFF"** in the AV Source screen.
 - This product also can be switched off by turning the ACC (ignition) OFF.

Muting the AV source

The AV source can be muted manually. See "Volume" on page 61 for information about automatic muting when a mobile phone call is received or when listening to voice guidance.


- 1 Press and hold the **VOLUME** knob.
 Press and hold the **VOLUME** knob again for at least 2 seconds or adjust the volume to stop the muting.

How to listen to a CD


You can listen to an audio CD by removing the DVD Map Disc from the navigation system.

- ▷ About Memory Navigation → "Memory navigation mode" on page 25. (For details, see page 118.)


- 1 Press the **EJECT** button to remove the DVD Map Disc.

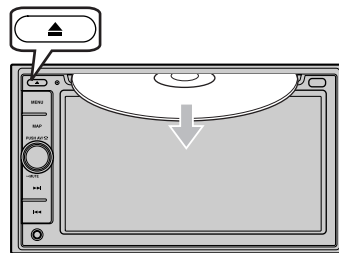



- 2 The audio CD set in the navigation system is played.

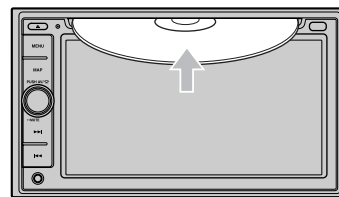

- 3 Press the **VOLUME** knob to switch the Audio screen.

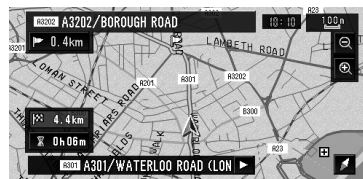

Current track information

 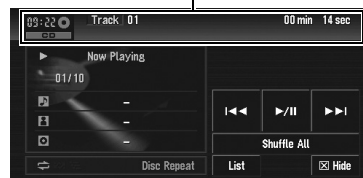



4 Rotate the VOLUME knob to adjust the volume.


5 Touch ◀◀ or ▶▶ to select a track you want to listen to.

Information of the track being played



You can also select a track by pressing the ◀◀ or ▶▶ button.

6 To fast forward or rewind, keep touching ◀◀ or ▶▶.

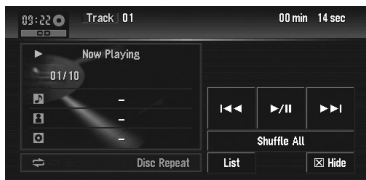

You can also perform fast rewind/fast forward by holding the ◀◀ or ▶▶ button.

7 To hide the touch key, touch "Hide".

Information of the Audio source being played



Distance to the guidance point

Current direction of travel

Next direction of travel

- If you touch the screen, the touch panel keys are displayed again.

Available buttons

The availability of a specific button or functionality is indicated by its colour. Depending on the status of your vehicle, some buttons will be available, while others will not be.



Black touch key:
The button is operable.

 


Grey touch key with white letters:
The function is not available during memory navigation mode. Or, the function is not available for areas not stored on the disc.

Touching this button activates a message indicating that the function is not available.



Grey touch key with black letters:
The function is not available (e.g., operation is prohibited while driving).






NAVI/AV

Chapter 1

 Basic Operation



Navigation Menu and Map Display

This section describes the basic navigation operations, including how to display the NAVI MENU and how to use the shortcut menu and the map screen.

How to Use Menu Screens

There are two types of navigation menu: the "NAVI MENU" and the "Shortcut menu".

- The functions that cannot be used during the memory navi mode are indicated in grey with black letters. If you want to use such functions, insert the DVD Map Disc.

NAVI MENU

Use this menu for basic operation of your navigation system.

- 1 With the map displayed, press the MENU button.
- 2 To change to the menu you want to use, touch the name of the menu displayed at the top of the screen.

The NAVI MENU is divided into four sub-menus: "Destination", "Traffic/Info", "Route Options", "Settings".

- Touch "AV MENU" changes to the Audio operation screen.
 - ▷ Audio operation screen → Page 69
- 3 If you want to return to the map, press the MAP button.

Destination menu



Select the destination search method. The route also can be cancelled from this menu.

- ▷ Specifying the address and searching the destination → Page 22
- ▷ Other search methods → Page 37 to 40


Traffic/Info menu



Use this menu to check traffic information mainly.

- ▷ All Traffic → Page 53
- ▷ Traffic On Route → Page 53

Route Options menu

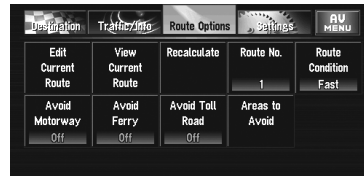

Used to specify the conditions for setting the route to the destination.

- ▷ Setting the Route Options → Page 46
- "Edit Current Route", "View Current Route" and "Recalculate" can be used when the route is set.

Settings menu



Set the navigation functions so they can be used easily.

- ▷ Settings menu → Chapter 5

NAVI

Shortcut menu

Shortcuts allow you to perform various tasks, such as route calculation for the location indicated by the scroll cursor or registering a location in the **Address Book**, faster than using the NAVI MENU.

- The shortcuts displayed onscreen can be changed. The shortcuts described here are those that can be selected with the system as default setting.
- Items marked with an asterisk (*) cannot be removed from the shortcut menu.
- ↳ Changing a shortcut → Page 63

1 When the map is displayed, briefly touch any part of the map.

If you continue to touch the map, it will start scrolling.



Shortcut menu

: Destination*

Displayed when the map is scrolled. Set the route to the place specified with the scroll cursor.

- ↳ Searching the destination by map → Page 35

: Change Route*

Displayed when the map is not scrolled. This item can be selected only during route guidance. You can add changes to the route in the route guidance.

- ↳ "Recalculating the route to the destination using the Route Options menu" → Page 42
- ↳ "Recalculating a specified distance in the route ahead of your current position" → Page 42
- ↳ "Checking the Set Route" → Page 41
- ↳ "Cancelling the Route Guidance" → Page 40
- ↳ "Skipping a way point" → Page 43

: Vicinity Search

Select a location with the scroll cursor. Nearby POIs (Points Of Interest) will also be found.

- ↳ Searching the facilities surrounding a certain place → Page 38

: Registration

Registers the location indicated by the scroll cursor to **Address Book**.

- Touching "**Registration**" and selecting "**Save**" allows you to register the location to Address Book.
- ↳ Registering a place → Page 50

: Volume Setting

The sound volume for the navigation can be set.

- ↳ Setting the guidance volume → Page 61

: Menu Close

Hides the shortcut menu.

How to Use the Map


Most of the information provided by your navigation system can be seen on the map. You need to get to know how the information that appears on the map.

Switching the current position screen display mode

There are four types of map display and two additional view modes.

- **MAP Mode**
 - **Driver's View**
 - **Mixed Mode** (during route guidance only)
 - **St.List Mode** (during route guidance only)
 - **Vehicle Dynamics**
 - **Rear View** (Only possible when the "**Camera**" is set to "**On**")
- If you deviate from the route when the view mode is **St.List Mode** or **Mixed Mode** and enter a street not recorded on the disc, the screen changes to **MAP Mode**. When you return to the route, the screen returns to the original mode and resumes route guidance.

- 1 Press the **MAP** button to display a map of the area around your current position.
- 2 Press the **MAP** button again.
- 3 Touch the mode name or press the **MAP** button to select the mode you want to display.

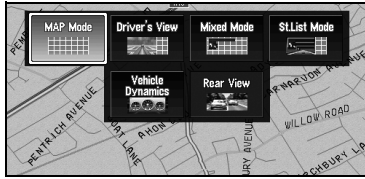


- If the mode is selected by pressing the **MAP** button, the screen automatically switches to the selected map display mode after 4 seconds.

How to view the map of the current location


MAP Mode

Displays the standard map.

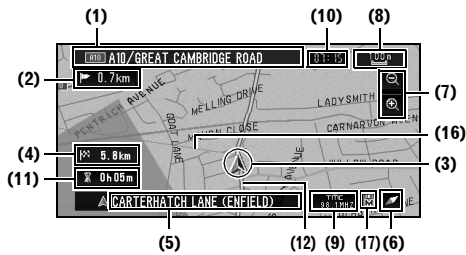

Driver's View

Displays the map from the driver's viewpoint.

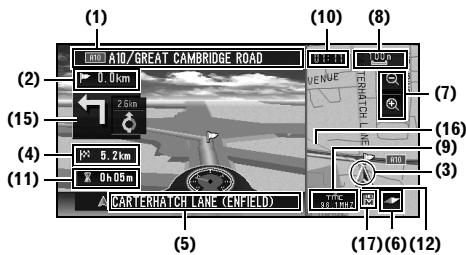


CAUTION

- In **Driver's View**, a small gauge with no scale is depicted, but is not intended to be used as a speedometer. Use the actual speedometer of your vehicle to confirm speed.


Mixed Mode

Overlays two arrows onto the standard map ("MAP Mode").

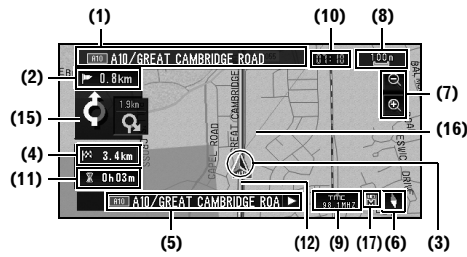

St.List Mode

Displays the name of the street you will travel along next and an arrow indicating the direction of travel.

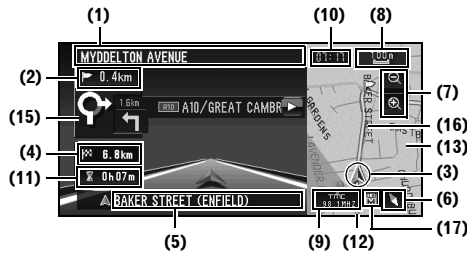

NAVI

Vehicle Dynamics Display

Indicates the status of your vehicle.



- You can change the items indicated on the left and right meters.

CAUTION

- **In the Vehicle Dynamics Display mode, the speedometer display may show a different speed than your vehicle's actual speedometer, because your unit measures speed in a different way.**

Chapter 2

- "Setting the Vehicle Dynamics Display" → Page 58

Rear View


Rear view image is displayed on the screen.



- If you touch the screen briefly, the screen changes **MAP Mode** with shortcut menu. If you close the shortcut menu the screen returns to **Rear View**.
- If the "Camera" is set to "Off", the rear view image is not displayed. Please set it to "On".
- Camera setting → Page 111
- When using a camera set to turn ON/OFF in conjunction with the reverse signal, no camera images will be displayed in rear view mode while you are moving forward.
- If the camera is set always ON, it can display images in rear view mode when the vehicle is moving forward. In that case, you should ask the camera maker or dealer whether the camera's functions or longevity would be affected.

Enlarged map of the intersection

When "Close-up of Junction" in the Settings menu is "On", an enlarged map of the junction appears. When driving on a motorway, a special guide illustration is displayed.

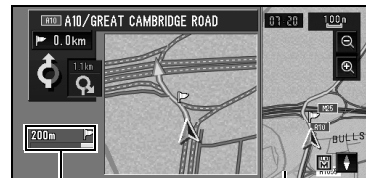


(14)

(13)

- The system cannot be changed to an enlarged intersection map in the following mode.
 - Driver's View
 - Vehicle Dynamics
 - Rear View


Display during motorway driving

In certain locations of the motorway, lane information is available, indicating the recommended lane to be in to easily maneuver the next guidance.

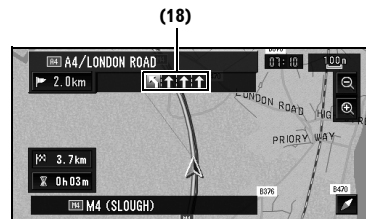

(18)

While driving on the motorway, motorway exit numbers and motorway signs may be displayed when in the vicinity of interchanges and exits.

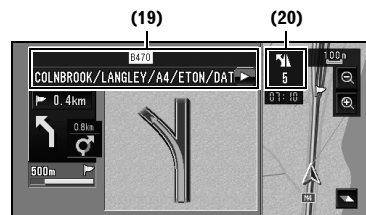

(19)

(20)



Display items

Guidance point*

The next guidance point (next turning point, etc.) is shown by a yellow flag.

Destination*

A chequered flag indicates your destination.

(1) Name of the next street to be used (or next guidance point)*

(2) Distance to the guidance point*
Touch to access the next information.

(3) Current location

The current location of your vehicle. The tip of the triangular mark indicates your heading and the display moves automatically as you drive.

(4) Distance to the destination (or distance to way point)*

If way points are set, the display changes with each touch. When two or more way points are set, the distance to the destination and the distance to the next way point are switched.

(5) Name of the street your vehicle is travelling along (or City Name, etc.)

(6) Compass

The red arrow indicates north. If the scale is less than 50 km (25 mi), touching the map changes the direction that it is displayed in (north up/heading up). When the scale of the map is greater than 50 km (25 mi), it is fixed to "north up".

Heading up:

The map display always shows the vehicle's direction as proceeding toward the top of the screen.

North up:

The map display always has north at the top of the screen.

(7) Zoom in/Zoom out

Touch to change the map's scale.

☞ "Changing the scale of the map" → Page 34

(8) Map scale

The scale of the map is indicated by distance.

☞ "Changing the scale of the map" → Page 34

(9) TMC icon

When a route has been calculated, touch to check whether there is any traffic jam or closure information on your route. When no route has been calculated, touch to display the traffic list.

(10) Current time

(11) Estimated time of arrival (or travel time to your destination)*

The display alternates by touching it.

The estimated time of arrival is automatically calculated from the **Average Speed** set and the actual average speed.

☞ How to set average speed → Page 62

(12) Tracking mark

The tracking mark shows the route your vehicle has travelled with dots.

☞ Select the tracking setting → Page 63

(13) Map of your surroundings (Side map)

Touching the map briefly shows the shortcut menu, while touching longer changes the map to Scroll mode.

☞ "Moving the map to the location you want to see" → Page 34

(14) Distance to a turning point*

Displayed on the enlarged intersection map. The green bar gets shorter as your vehicle approaches a turning point.

(15) Next direction of travel*

When you approach an intersection, it appears green. The screen displays the distance to the next guidance point, and the next guidance point after that.

(16) Direction line*

 
The direction towards your destination (or scroll cursor) is indicated with a straight line.

(17) Memory navi indicator

☞ About memory navi indicator → Page 119

(18) Lane information*

Lane information is displayed the first time there is a voice guidance on your route. When the guidance screen is displayed near an interchange or exit, the lane information disappears.





(19) Motorway signs*

These show the road number and give directional information.

(20) Motorway exit information


Displays the motorway exit.

- Information with the mark (*) appears only when the route is set.
- Depending on the conditions and settings, some items may not be displayed.

Changing the scale of the map

Touching or allows you to change the map scale. Touch and holding or allows you to change the scale in smaller step within a range of 25 meters to 500 kilometres (25 yards to 250 miles). When the view mode is set to **MAP Mode** or **Mixed Mode**, "Direct scale key" is displayed. Touching "Direct scale key" changes the map to the selected scale directly.

- In memory navi mode and/or when traversing an area not stored on the disc, selection of the scales is limited.

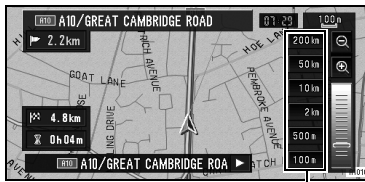

Direct scale key

- The icon of a registered location and the traffic information icons are displayed when the map scale is 20 km (10 miles) or lower.
- POI icons and the traffic jam lines are displayed when the map scale is 1 km (0.75 miles) or lower.


Moving the map to the location you want to see

If you touch the display briefly, the shortcut menu appears. Touching anywhere on the map for at least 2 seconds changes the map to Scroll mode and the map begins scrolling in the direction you touched. The scrolling stops when you release your finger from the screen. At this time, the

scroll cursor appears at the centre of the screen. Also a line connecting between the current location and scroll cursor appears.

Pressing the **MAP** button returns you to the map of your surroundings.

- Touch the area close to the centre of the screen to scroll slowly. Touch near the sides of the screen to scroll quickly.

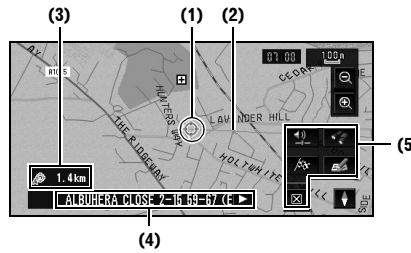

(1) Scroll location

The position of the scroll cursor shows the location selected on the current map.

- When the scale is 200 m (0.25 mi) or lower, the road appears light blue in the vicinity of the scroll cursor.

(2) Direction line

The direction towards the scroll cursor is indicated with a straight line.

(3) Distance from the current location

The distance in a straight line between the location indicated by the scroll cursor and your current location.

(4) The street name, city name, area name and other information for this location.

(The displayed information varies according to the scale.)

Touching the on the right displays hidden text.

- Displaying information on the specified location → Page 35

(5) Shortcut menu

- How to use shortcut menu → Page 30



Viewing the information of a specified location

An icon appears at registered places (home location, specific places, address book entries) and places where there is a POI icon or traffic information icon. Place the scroll cursor over the icon to view detailed information.

1 Scroll the map and move the scroll cursor to the icon you want to view.

2 Touch .




Information for a specified location appears. The displayed information varies according to the location. (There may be no information for that location.)

- ☞ Registering places → Page 49
- ☞ "Displaying Certain POI on the Map" → Page 45
- ☞ "Confirming traffic information on the map" → Page 54

3 Touch "Back".

- You are returned to the previous display.
- In the memory navi mode, you can only see detailed information for registered points (when available).

Finding a destination on the map

If you search the location you want to visit by scrolling the map, touch  in the Shortcut menu to specify your destination on the map.

1 Press the MAP button to access the map screen.


2 Touch the map for at least 2 seconds.
The map display changes to Scroll mode.


3 Scroll the map and move the scroll cursor to the place you want to make your destination.

- ☞ Moving the map to view the part you want to see → Page 34

4 Touch .

When  appears to the right of the list

You can also set a destination by touching  to the right of the destination list such as the Address Book. Touch "OK" to confirm. The location indicated by the scroll cursor will be set as a destination.

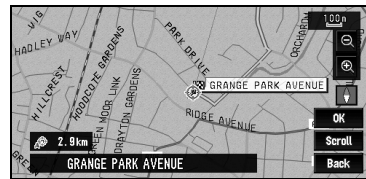


Scroll:

The map display changes to the Shortcut menu. If you touch anywhere on the map, the map display changes to Scroll mode.

- ☞ "Shortcut menu" → Page 30







 NAVI



Chapter 2

    Navigation Menu and Map Display



Setting a Route to Your Destination

⚠ CAUTION

- **For safety reasons, these route-setting functions are not available while your vehicle is in motion. To enable these functions, you must stop in a safe place and put on the handbrake before setting your route (see page 11 Interlock for details).**
- Some information on traffic regulations depends on the time when the route calculation is performed. Thus, the information may not correspond with a certain traffic regulation when your vehicle actually passes the location. Also, the information on the traffic regulations provided will be for a passenger vehicle, and not for a truck or other delivery vehicles. Always follow the actual traffic regulations when driving.
- If you press the **MANU** button during route calculation, the calculation is cancelled and the map display appears.
- Inserting the DVD Map Disc will cause a forced reroute. (This rerouting cannot be cancelled.)

Finding Your Destination by Selecting the Type of Facility

Information about various facilities (Points Of Interest - POI), such as petrol stations, amusement parks or restaurants, is available. By selecting the category (or entering the POI Name), you can search for a POI.

Searching for Points of Interest (POI)

- 1 Touch "Destination" in the NAVI MENU, and then touch "POI Search".
- 2 Touch the country key of the destination country and touch "OK".
 - ▷ Selecting the country where you want to search → Page 22
- 3 Touch "Category".




"Name":

Touch if you wish to first specify the POI Name.

"City":

Touch if you wish to first specify the destination city or area.

- 4 Touch the desired category.

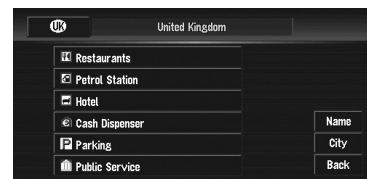

If the category is not sub-divided into more detailed categories, the list will not be displayed. Proceed to Step 6.

- 5 Touch the subcategory.

- 6 Input the name of the POI.



If the list does not automatically appear when the name of the POI has been entered, try touching "OK".

NAVI

“City”:

Touch to specify the destination city or area.
 □ If less than six POIs in a subcategory are available, the screen for inputting the POI name is skipped. Please proceed to Step 7.

7 Touch POI for your destination.

- Touching  displays a map of the surroundings of the selected POI.
- ☞ “When  appears to the right of the list” → Page 35

Finding a POI in your surroundings

You can search for Points Of Interest in your surroundings on the map. Use it to find a POI to visit during a journey.

1 Touch “Destination” in the NAVI MENU, and then touch “Vicinity Search”.

2 Touch the desired category.



The selected category will have a red tick mark.

OK:


Starts searching.


Back:

Returns to the previous screen.

Set:


Display the screen for registering POI shortcuts.

- ☞ Register POI shortcut → Page 45
- If you touch one of the POI shortcuts (e.g. ) , you can start searching POI directly for the selected category on the POI shortcut.
- If you want to search for facilities by using both marked category and POI shortcuts, select some categories in the list and then touch the POI shortcut to start searching.


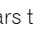
- If you want to search with more detailed categories, touch . When the subcategory list appears, touch the item and touch “Back”. When only a few types of the detailed categories are selected, blue tick marks will appear.
- You can select from the detailed category for up to 100 items.

3 Touch “OK”.

Names of POIs and their distance from your current location appear. They are listed in order from nearest to farthest.

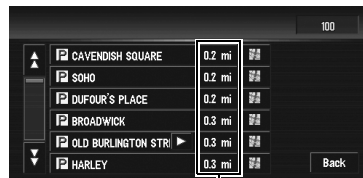

Distance to the facility

- When you touch , the POIs around the specified location are shown on a map.
- ☞ “When  appears to the right of the list” → Page 35
- Searching range is approximately 16 km (10 miles) square from the current location.

Searching the facilities around the scroll cursor

1 Scroll the map and move the scroll cursor to the place where you want to search for POI.


2 Touch .

See Step 2 of “Finding a POI in your surroundings” for the following operations.

- ☞ “Finding a POI in your surroundings” → Page 38
- This can be used when setting the Vicinity Search icon to display as a shortcut on the map screen.
- ☞ Changing Shortcut → Page 63
- The distance indicated in the search result is the distance from the scroll cursor to the facility.



Setting a Route to Your Destination

Chapter 3

- ❑ The bottom icons are for shortcuts to your favourite categories. Touching a shortcut icon displays a list of the facilities in the category.
- ❑ **"Vicinity Search"** in the NAVI MENU searches your surroundings. On the other hand, when using  in the Shortcut menu (→ Page 30), the area around the scroll cursor will be searched.

Setting an Entrance or Exit of a Motorway as Your Destination

You can set the entrance or exit of a motorway as your destination.

- 1 Touch "Destination" in the NAVI MENU, and then touch "Motorway Search".**
- 2 Touch the country key of the destination and touch "OK".**
- 3 Enter the name of the motorway and touch "OK".**
- 4 Touch the motorway.**
The display for selecting your destination to the entrance or to the exit of the motorway appears.
- 5 Touch "Entrance" or "Exit".**
The list of entrances to, or exits from, the selected motorway appears.
- 6 Touch your destination.**
 - ❑ You can also see the destination by touching the  on the right of the list.
 - ☞ "When  appears to the right of the list" → Page 35

Finding Your Destination by Specifying the Postcode

If you know the postcode of your destination, you can use it to find your destination.

- 1 Touch "Destination" in the NAVI MENU, then touch "Postal Code Search".**
- 2 Touch the country key of the destination country and touch "OK".**
- 3 Input the postcode.**

A list of cities with the specified postal code is shown.

British postcode:

If you input a British postal code, the map with the cursor on the selected position is shown. When you touch **"OK"**, a route search begins.

Netherlands postcode:

- If you input a complete postcode, a list of streets is shown.
- If you input a partial postcode, and touch **"OK"**, a list of cities is shown.

- 4 Search for your destination in accordance with the procedures after Step 6 in Chapter 1, "Basic Navigation".**
 - ❑ Depending on the destination, the search may start directly.
 - ❑ Not all postcodes are recorded on the disc. Thus, you may not be able to find the location corresponding to the postcode you enter.



NAVI

Route Calculation to Your Home Location or to Your Favourite Location

If your home location is registered, the route home can be calculated by a single touch of the touch key from the NAVI MENU. Also, you can register one location, such as your workplace, as your favourite location, and the route is calculated in a similar way.

1 Touch "Destination" in the NAVI MENU, and then touch "Return Home" or "Go to".

- "Registering your home and your favourite location" → Page 49


Selecting Destination from the Destination History and Address Book

Any place that has been searched before is stored in the "Destination History". Places that you have registered manually, such as your home, are stored in the "Address Book". Simply select the place you want to go to from the list and a route to that place will be calculated.

- For information on the **Address Book** → Chapter 4
- For information on the **Destination History** → Chapter 4

1 Touch "Destination" in the NAVI MENU, and then touch "Address Book" or "Destination History".

2 Touch your destination name.

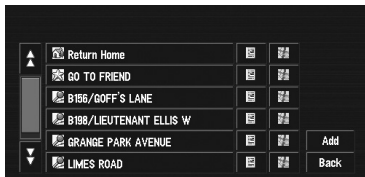

Route calculation starts.

- You can also see the destination by touching on the right of the list.
- "When appears to the right of the list" → Page 35


Cancelling the Route Guidance

If you no longer need to travel to your destination or if you want to change your destination, follow the steps below to cancel the route guidance.

1 Touch "Destination" in the NAVI MENU, then touch "Cancel Route".

The message confirming whether to cancel the current route appears.

2 Touch "Yes (all)".

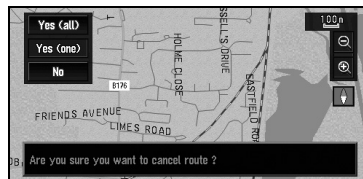

The current route is deleted, and a map of your surroundings reappears.

Yes (one):

Route is recalculated by cancelling the selected way point.

No:


Returns to the previous display without deleting the route.

- You can also cancel the route using the **Change Route** in the shortcut menu.



Chapter 3

 Setting a Route to Your Destination




Checking the Set Route

You can check information about the route between your current location and your destination.

You can select from the following methods: checking the passing streets with a list, checking the shape of the route by scrolling the map along the route, and checking the entire distance of the route in a single screen.


Checking the set route with the map

- 1 Touch **"Route Options"** in the NAVI MENU, then touch **"View Current Route"**.
 - "View Current Route"** is active only when the route is set.
 - You can also see the location by touching the  on the right of the list.

- 2 Touch **"Scroll"**.

The screen for selecting the point to start scrolling appears.

- 3 Touch the point to start scrolling.

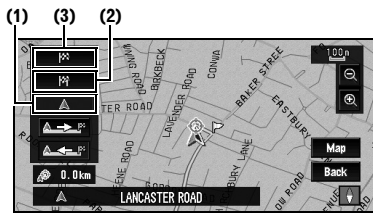




You can select the following items:

- (1) Starting Point
- (2) Way Point (If this is set)
- (3) Destination

- If there are multiple way points, selecting **"Way Point"** displays a list of the way points on the route. Touch the place you want to start scrolling from and proceed to step 4.



- 4 Touch  or  to scroll the map.

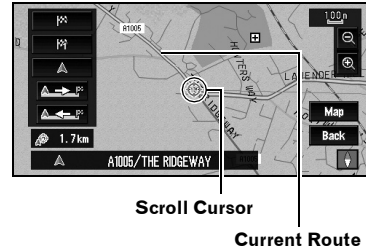To continue scrolling after you release your finger, touch and hold  or . If necessary, the scale of the map can be changed.



Map:

The scroll screen is displayed.

-  "When  appears to the right of the list" → Page 35

- 5 Touch **"Back"**.


You can return to the previous display.

Checking the set route by text

This function is not available if your vehicle has deviated from the set route.

- When **Profile** is selected during the memory navi mode, information is displayed up to the location where the route is stored in memory.

- 1 Touch **"Route Options"** in the NAVI MENU, then touch **"View Current Route"**.

- "View Current Route"** is active only when the route is set.
- You can also see the location by touching  on the right of the list.

- 2 Touch **"Profile"**.

- 3 Check the contents on the display.

Scroll the list as necessary.

Name of the streets you are driving through



Driving distance

NAVI

Chapter 3

Setting a Route to Your Destination



4 Touch "Back".

You can return to the previous display.


- When a long distance route is calculated, your navigation system may not be able to list all the roads. (In this case, the remaining roads will be shown in the list as you drive on.)

Checking the entire route overview

You can check the entire shape of the current route.

- When **View Current Route** is selected during the memory navi mode, the information is displayed up to the location where the route is in memory.

1 After touching "Route Options" in the NAVI MENU, touch "View Current Route".

- "View Current Route" is active only when the route is set.
- You can also see the location by touching  on the right of the list.

2 Touch "Overview".

A map of the whole route up to the destination is displayed.

- You can also check the overview by using the shortcut menu if "Whole Route Overview" is selected on the "Short-Cut Selection".

Checking the set route from the shortcut menu

You can also check the information about the set route from the shortcut menu.

1 Touch the map screen.

The Shortcut menu appears.

2 Touch .

3 Touch "Route Profile" or "Route Scroll".

- ↳ "Route Profile" → Page 41 (Step 3)
- ↳ "Route Scroll" → Page 41 (Step 3 and 4)

4 Touch "Back".

You can return to the previous display.


Recalculating the Route to Your Destination

You can set the length of the area, avoid just a certain area, or you can even search a new route from the current location to your destination. (On the map screen during route guidance, try the following operations.)

Recalculating the route to the destination using the Route Options menu

1 Touch "Route Options" in the NAVI MENU, and then touch "Recalculate".

This option automatically searches the route to the destination again.

- "Recalculate" is active only when the route is set.
- You can also recalculate (reroute) your route using the  **Change Route** in the shortcut menu.


Recalculating a specified distance in the route ahead of your current position

1 Touch the map screen.

The Shortcut menu appears.

2 Touch .

3 Touch the distance from the list.

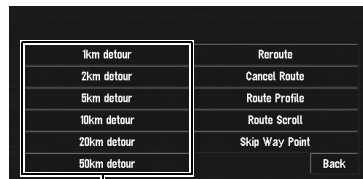

Detour distance

Searches detours for a specified distance in the route ahead of your current position. After the route is calculated, the map screen shows your surroundings and route guidance is resumed.



Editing Way Points to the Current Route

You can select way points (locations you want to visit on the way to your destination) and you can recalculate the route to pass through these locations.

Editing a way point


Up to 5 way points can be selected, and selected points can be sorted automatically or manually.

- “Edit Current Route”** is active only when the route is set.

1 Touch “Route Options” in the NAVI MENU, and then touch “Edit Current Route”.

2 Select editing method.



- You can also see the location by touching  on the right of the list.


 
Add:

Switch the display to search for points. After searching for a point, display it on a map, then touch **“OK”** to add to the way points. (You can add up to five way points in total.)

Delete:

You can delete way points from the list. (You can delete way points successively.)

Sort:

Touch to display a screen listing the way points. Touching  or  on the left of the list allows you to sort the way points manually.



Automatic:

You can sort the destination and way points automatically. The system will show the nearest way point (distance in a straight line) from the current location as way point 1, and sort the other points (including your destination) in order of distance from your current location.

Original:

Returns to the original order.

Select from manual order, **“Automatic”** or **“Original”** and touch **“Done”** to start the route search.

3 Touch “Done”.

- If you set a way point(s) in the route to your destination, the route up to the next way point will appear light green. The rest of the route will be light blue.

Skipping a way point

If the points are set, the next way point along the route can be skipped.

1 Touch the map screen.

The Shortcut menu appears.

2 Touch .

3 Touch “Skip Way Point”.

A message asking whether you want to skip the next way point appears.

4 Touch “Yes”.

A new route to your destination through all the remaining way points, except for the skipped way point, is calculated.



NAVI

Setting Areas to Avoid

If you register **Areas to Avoid**, such as crowded intersections or congested areas, routes can be calculated that avoid those areas.

Registering an area to avoid


This section describes how to register an Area to Avoid for the first time. You can register up to five Areas to Avoid.

1 Touch "Route Options" in the NAVI MENU, then touch "Areas to Avoid".

2 Touch "Yes".

3 Select one of the items shown in "New Area".

When registering for the first time, any item on the list is shown as **"New Area"**.

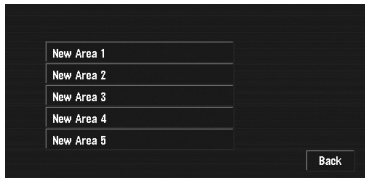

4 Select the place to register and display the map.

↳ Searching places to register → Page 37 to 40

Once a search is complete, a map with the specified location at its centre appears.

5 Change the map scale and decide the size of the Area to Avoid.

The Area to avoid is enclosed in a red frame. You can also change the map scale though the maximum map scale for registering Areas to Avoid is 100 m (0.1 mile).

6 Scroll the map, adjust the position of the red frame, and touch "OK".



If you want to stop registration, touch **"Back"**.

- Depending on the setting of route search conditions, you may not be able to avoid the specified areas. A confirmation message is displayed on the screen at this time.
- ↳ Information on route calculation conditions → Page 47


Changing or deleting an area to avoid

You can subsequently change/rename/delete an Area to Avoid.

1 Touch "Route Options" in the NAVI MENU, then touch "Areas to Avoid".

2 Select the area you want to change or delete.

3 Select the desired operation.

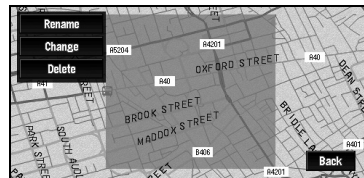

Rename:

Changes the name. Enter the new name and touch **"OK"**. This returns you to the Route Options menu.

Change:

A specified area can be changed. For the next steps, see Step 3 in the "Registering an area to avoid" above.

Delete:

Delete the selected Area to Avoid.



Chapter 3

Setting a Route to Your Destination





Displaying Certain POI on the Map

POI in a certain category can be shown on the map, and you can check the location on the display.

1 Touch "Traffic/Info" in the NAVI MENU, then touch "Overlay POI".

2 Touch the category you want to display.

The selected item is marked. If you want to select other categories, repeat this step.

- If you want to display more detailed categories, touch . When the subcategory list appears, touch the item you want to display and touch "Back".
- When some sub-categories are selected, the corresponding category is marked blue. When all the sub-categories within a category are selected, that category is marked red.
- You can select up to 100 items from the detailed category.
- If you touch one of the POI shortcuts (e.g. ), you can start searching for POI directly in the selected category on the POI shortcut.

3 Press the "MAP" button.

POI's in the selected category appear on the map.

- You can also display POI by using the shortcut menu if "Overlay POI" is selected on the "Short-Cut Selection".

Registering/deleting POI Shortcuts

You can register up to six shortcuts to your favourite POI. You can also change or delete the registered shortcuts.

Registering a POI shortcut


1 Touch "Destination" in the NAVI MENU, and then touch "Vicinity Search".

2 Touch "Set".




Displays a list of already registered POI shortcuts.


3 Touch "Add".

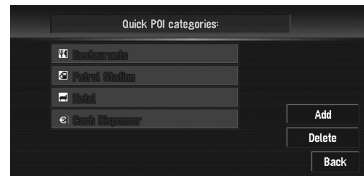

Displays a POI category list.

4 Touch category or .

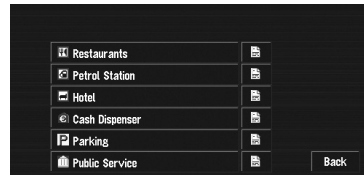



Touching a category adds that category to the shortcuts. After touching , please proceed to Step 5 and select a subcategory.

5 Touch subcategory.

The selected category is added to the list of POI.

When registering another icon, repeat steps 3 through 5.

- You can register a POI shortcut by touching "Overlay POI" under "Traffic/Info" in the NAVI MENU, or by touching the icons such as  and  on the map. The steps for registration are the same as described above.


NAVI

Chapter 3

Setting a Route to Your Destination



Deleting a POI shortcut

- 1 Touch "Destination" in the NAVI MENU, and then touch "Vicinity Search".**
 - You can also touch  in the shortcut menu or "Traffic/Info" in the NAVI MENU, then touch "Overlay POI".
- 2 Touch "Set".**
- 3 Touch "Delete".**

Displays a list of already registered POI shortcuts.
- 4 Touch the category to be deleted.**

A red tick appears on the selected shortcut.

All:
A red tick will appear on all registered categories.
- 5 Touch "Delete".**

Deletes the selected shortcut from the list.

Modifying the Route Calculation Conditions

You can change the route calculation conditions using the Route Options menu. The following description features an example of changing the number of routes to be searched.

- 1 Touch "Route Options" in the NAVI MENU.**
- 2 Touch "Route No."**

The current settings appear under the name of the item. Each time you touch the item, the setting changes. Repeatedly touch the item until the value you want to set appears.



Items that users can operate

This section describes the details of each item. Settings marked with an asterisk (*) show that they are default or factory settings.

Edit Current Route

This displays a screen for adding or deleting way points. The method is the same as described in "Editing Way Points to the Current Route".

- "Edit Current Route" is displayed only when the route is set.
- "Editing Way Points to the Current Route" → Page 43

View Current Route

- "Checking the set route with the map" → Page 41
- "Checking the set route by text" → Page 41
- "Checking the entire route overview" → Page 42

Recalculate

Automatically searches the route to the destination again.

- "Recalculate" is displayed only when the route is set.
- "Recalculating the route to the destination using the Route Options menu" → Page 42

Route No.

This setting controls whether the system should calculate only one route, or several routes.

1*:

Only one route judged as being optimum by your navigation system is calculated.

Multiple:

 
Several route options are calculated (maximum 6 routes).

Route Condition

This setting controls whether the route should be calculated by taking into account the time or the distance.

Fast*:

Calculate a route with the shortest travel time to your destination as a priority.



Short:

Calculate a route with the shortest distance to your destination as a priority.

Avoid Motorway

This setting controls whether motorways may be included in the road calculation. (A route using a motorway may be calculated in some cases, such as when setting your destination far away.)

On:

Calculate a route that avoids motorways.

Off*:

Calculate a route that may include motorways.

Avoid Ferry

This setting controls whether ferry crossings should be taken into account.

On:

Calculate a route that avoids ferries.

Off*:

Calculate a route that may include ferries.

- The system may calculate a route that includes ferries even if **"On"** is selected.

Avoid Toll Road

This setting controls whether toll roads (including toll areas) should be taken into account.

On:

Calculate a route that avoids toll roads (including toll areas).

Off*:

Calculate a route that may include toll roads (including toll areas).

- The system may calculate a route that includes toll roads even if **"On"** is selected.

Areas to Avoid

- About Areas to Avoid → Page 44

Perform the route calculation for several route options, and select one

You can get route calculations for several route options. After route options are calculated, select the one you want.

- 1 Set the "Route No." to "Multiple".**
 - Changing the search conditions → Page 46

2 Search your destination and set the route.

Calculated routes are shown in different colours (from two to six routes).

3 Touch "Next" to change the displayed route.



The following information is displayed on this screen:

(1) Route calculation condition

Displays the conditions set by the Route Options menu by icon.

- Use/avoid motorway
- Use/avoid toll road
- Use/avoid ferry

Displays the inability to fulfill the conditions by icon.

- Pass through Area to Avoid.
- Use toll road although the setting **"Avoid Toll Road"** is **"On"**.
- Use Ferry although the setting **"Avoid Ferry"** is **"On"**.

(2) Distance to your destination

 
(3) Travel time to your destination

- The **"Avoid Motorway"** setting may not be reflected, depending on the distance to the destination.
- You can see other places while displaying a possible route by scrolling the map. Touching **"Next"** moves the next candidate route to the centre and indicates the map.

4 Touch "Information" to check the information on the selected route.

You can also check details of the roads along the selected route. (If you touch **"Back"**, you can return to the previous display.)

- **"Route Scroll"** → Page 41 (Step 3 and 4)
- **"Route Profile"** → Page 41 (Step 3 and 4)
- After the route is calculated, it may take some time until the detailed route information (Route Profile) is displayed.



NAVI

5 Touch "OK".



The route you selected is accepted, and the map of your surroundings appears. When you start driving, the route guidance begins.

- If the above operations are not performed within 30 seconds after the route calculation is completed and you have already started your vehicle, the route selected at the time is automatically chosen.



Chapter 3

  Setting a Route to Your Destination



Editing the Navigation Utilities

NAVI

⚠ CAUTION

- **For safety reasons, these functions are not available while your vehicle is in motion. To enable these functions, you must stop in a safe place and put on the handbrake before setting your route (see page 11 Interlock for details).**

Editing Registered Locations


The **Address Book** can store up to 300 registered locations. These can include home location, favourite places and destinations you have already registered. This registered location information can also be modified. Also, routes to registered locations can be calculated by touching the screen. Registering places you visit frequently saves time and effort.


- The Address Book is automatically updated in alphabetic order. However, "**Return Home**" and "**Go to**" always appear at the top.

Registering your home and your favourite location

Of the 300 registered locations that can be stored, home location and favourite locations can be stored separately in the **Address Book**. Registering your favourite location for the first time is described here. You can change the registered information later. You might find it useful to register your workplace or a relative's home as your favourite location.

Map icons:


: Home location icon

: Favourite location icon

1 Touch "Settings" in the NAVI MENU, then touch "Defined Locations".

2 Touch "Set "Go To"".

When registering your home location, touch "**Set "Home"**".

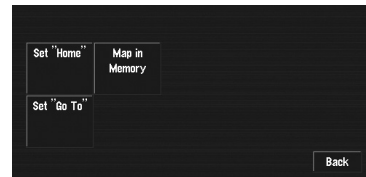

- The items already registered under "**Return Home**" or "**Go to**" can be modified.

3 Search for a location to register.

You can select a method of location search on the display.

- Address Search → Page 21
- Information on searching locations to register → Page 37 to 40
- If you select "**Map Search**", move the scroll cursor to the location you want to set and touch "**OK**".


4 Point the scroll cursor to the location you want to register and touch "OK".

5 Touch "Save".


Completes the registration.

Registering a previous location in the Address Book

Once a destination or way point is searched, it is automatically retained and stored in the **Destination History**. If a search is cancelled while still in progress, only the places where the map was displayed and scrolled through or places where the shortcut menu was displayed are retained and stored. Note that after 100 places are stored, new places are automatically overwritten on top of old ones, in order from oldest to most recent. Therefore, to ensure that certain places are kept and not overwritten, be sure to register them in the **Address Book**.

- 1 Touch **"Destination"** in the NAVI MENU, then touch **"Destination History"**.
- 2 Touch  on the right-hand side of the place you want to register in the Address Book.




The map of that place can be displayed.
 ↳ "When  appears to the right of the list" → Page 35

- 3 Touch **"Registration"**.


- 4 Touch **"Save"**.


Registration is now complete.
 If you want to stop registration, touch **"Back"**.
 ↳ "Editing a location's information" → Page 50


Editing a location's information

In the Address Book menu, touching  on the right-hand side of the place displays the Address Book Operate menu.

To edit the information about the location:

- 1 Touch **"Destination"** in the NAVI MENU, then touch **"Address Book"**.
- 2 Touch  on the right-hand side of the place whose information you want to edit.

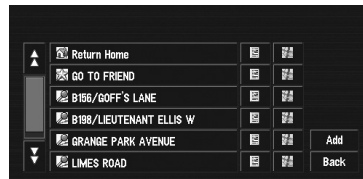


The map of that place can be displayed.
 ↳ "When  appears to the right of the list" → Page 35

Add:


The screen for selecting the method for registering the location in the Address Book appears.

- ↳ Address Search → Page 21
- ↳ Searching places to register → Page 37 to 40
- If you select **"Map Search"**, move the scroll cursor to the place you want to set and touch **"OK"**.

- 3 Touch **"Information/Edit"**.

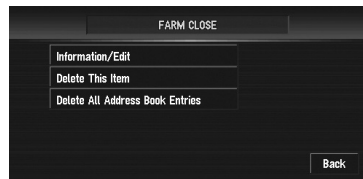

The Address Information menu appears. Refer to the item corresponding to the subsequent operation. After finishing the operation, the Address Book menu appears. You can continue to edit other information items if necessary.

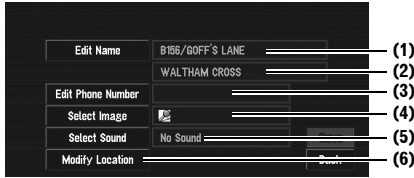

- (1) Name**
You can enter the desired name.
- (2) Name (2nd line)**
The name of the city appears in this column. (Not editable)
- (3) Phone number**
- (4) Pictograph**
The symbol displayed on the map.
- (5) Sound**
The selected operating sound is played.
- (6) Modify Location**
You can change the registered location by scrolling the map.

- 4 Touch "Save".**
Completes the registration.

Changing a name

- 1 Touch "Edit Name".**
- 2 Enter a new name; touch "OK".**
The name of the current location appears in the text box. Delete the current name, and enter a new name between 1 and 23 characters long.
- 3 Touch "Save".**
The details you set are registered.
 You cannot change the name of your home.

Entering or changing a phone number

- 1 Touch "Edit Phone Number".**
- 2 Input a phone number and touch "OK".**
The Address Information menu appears.
 To change a registered phone number, delete the existing number and then enter a new one.

Selecting a pictograph to appear on the map

- 1 Touch "Select Image".**
- 2 Touch the Pictograph to appear on the map.**
The Address Information menu appears.
 You cannot change the mark of your home and your favourite location.

Selecting sound

- 1 Touch "Select Sound".**
- 2 Select the sound.**
The Address Information menu appears.
 If you want to hear the operating sound, touch


Modify the location

- ▷ "Changing the position of locations registered in the Address Book" → Page 52

Deleting Address Book or Destination History information

Items registered in the **Address Book** or **Destination History** can be deleted. All entries of the data in the **Address Book** or **Destination History** can be deleted at once.

- 1 Touch "Destination" in the NAVI MENU, then touch "Address Book".**
To delete items in the **Destination History**, touch "**Destination History**".
- 2 Touch on the right-hand side of the place you want to delete.**
- 3 Select the deletion method.**

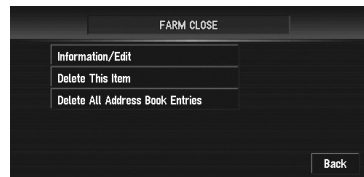

- Delete This Item:**
Delete the location selected in Step 2.

Delete All Address Book Entries (or Delete All Destinations):

Delete all the Address Book or Destination History data.

4 Select "Yes".

The data you selected is deleted.

Alternative option:


No:


The display shown in Step 3 appears.

- Because deleted data cannot be restored, take extra care not to select "**Delete All Address Book Entries**" and "**Delete All Destinations**" by mistake.

Changing the position of locations registered in the Address Book

You can select a location registered in the **Address Book**, display a map of its surroundings and change its position.

- 1** In the **Address Book** menu, touch  on the right-hand side of the place whose position you want to change.
- 2** Touch "**Information/Edit**", and then touch "**Modify Location**".
The map of the selected area and its surroundings appears.
- 3** Touch the display to change its position, then touch "**OK**".

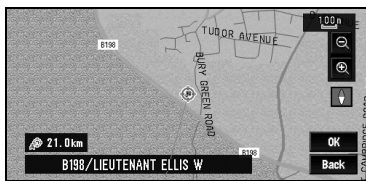**4 Touch "Save".**

The position is changed.

Loading registered locations data from a Disc

Address Book data stored on a CD-R/-RW and DVD-R/-RW can be loaded to the navigation system.

This function is used when moving Address Book data from a Pioneer navigation system with a PC card slot (e.g., AVIC-900DVD) to a Pioneer navigation system without a PC card slot.

- When moving data, copy the folder named "**POINT**" from the PC card to a personal computer. Then use the personal computer to store the "**POINT**" folder in the first level of a CD-R/-RW and DVD-R/-RW.

- 1** Insert the **CD-R (-RW)** to the disc loading slot.
- 2** Touch "**Settings**" in the **NAVI MENU**, then touch "**System Options**".
- 3** Touch "**Read from Disc**".
The list of groups appears.
- 4** Touch the desired group.
- 5** Touch the desired locations.
Selected locations are marked. To load the data from other locations, repeat this step.
Alternative option:
Select All:
All the locations are selected (or cancelled) at once.
- 6** Touch "**OK**".
The data of the selected locations is stored in the Address Book.

Using Traffic Information

You can check traffic information transmitted by the FM radio service through the Radio Data System (RDS-TMC) on the display. Such traffic information is updated periodically. When you receive traffic information, the navigation system automatically displays an icon informing you of the traffic information. You can also select whether to recalculate the route to avoid a traffic jam. (In this case, route calculation is carried out by considering a traffic jam within a 150 km (92 mile) radius from your current location.)



- The term "traffic jam" in this section refers to the following types of traffic information: stop and go traffic, stopped traffic and closed/blocked roads. This information is always taken into consideration for checking your route, and the information related with these events cannot be turned off.


Viewing traffic information

Traffic Information is displayed onscreen in a list. This allows you to check how many traffic incidents have occurred, their location and their distance from your current position.


Checking all traffic information

- 1 Touch "Traffic/Info" in the NAVI MENU, then touch "All Traffic".**
The list with received traffic information is shown.

- 2 Touch  or  to view the incident list.**
Places (street names) where incidents have occurred are displayed in the list.

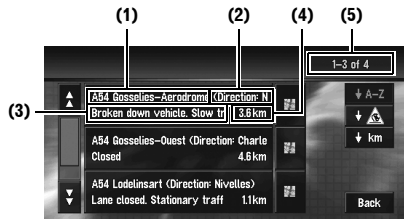

- (1) Street or place name**
- (2) Direction**
- (3) Incident**
- (4) Distance to the location**
- (5) The incident numbers currently displayed and the total number of incidents**

- The incidents that have already been read will be displayed in letters with a white outline. Unread incidents will be in white.
- Touching  allows you to check the place on a map. (Traffic information without positional information cannot be checked on a map.)

 :

You can sort the traffic information in alphabetical order.

 :

You can sort the traffic information according to the incident.

 km :



You can sort the traffic information by distance from your current position.

 :

When new traffic information is received, current information is changed or old information has been removed, the list is updated to reflect the new situation.

- 3 Select an incident you want to view in detail.**

The details of the selected incident are displayed.

- Touching an incident you want to see allows you to view the detailed information of the incident. If the information cannot be displayed on one screen, touch  or  to view the remaining information.

- 4 Touch "Back" to return to the list with traffic information.**

A list with traffic information appears again.

Checking traffic information on the route

- 1 Touch "Traffic/Info" in the NAVI MENU, and then touch "Traffic On Route".**


The currently set traffic information on the route appears on the screen.

- The method for checking the content displayed on the screen is the same for "Checking all traffic information".
- ▷ "Checking all traffic information" → Page 53

NAVI

Confirming traffic information on the map

The traffic-related information displayed on the map is as follows.

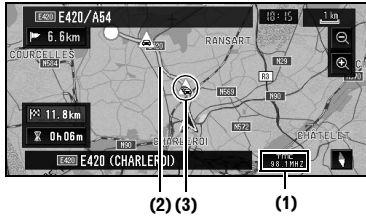

Traffic 98.1 MHz (or , , 98.1 MHz):

(1) Name of the service provider, radio station or frequency currently being received.

- "Selecting the radio station" → Page 56
- When is displayed, reading from the DVD Map Disc is required. Please insert the DVD Map Disc.
- When is displayed, the data is being loaded from the DVD Map Disc.

When a route has been calculated, touch to check whether there is any traffic jam information on your route. When no route has been calculated, touch to display the traffic list.

(2) A line to indicate the length of the traffic jam

Displayed only when the scale on the map is 1 km (0.75 mi) or lower. Stop and go: orange, Stopped traffic: red, Closed/blocked roads: black.

(3) Icon for traffic information

Appears only when the scale on the map is 20 km or lower.


- The traffic jam lines indicate the length of the traffic jam and traffic-related icons are not displayed on city maps.
- "Selecting traffic information to display" → Page 55

If you want to check the traffic information details, move the scroll cursor onto the icon, such as , and touch . This allows you to view place names and other information.

Information on avoiding traffic jam on route ahead

If there is a traffic jam on your route at least 1 km (0.75 miles) ahead on an ordinary road, or 2.6 km (1.6 mi) ahead while driving on a motorway, the navigation system automatically searches for a possible detour.

If a better route can be calculated, the following screen will appear.

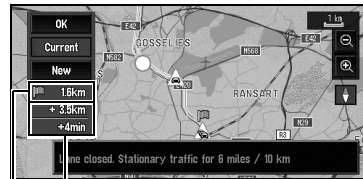

Difference in distance and travel time between existing route and new route

Distance from the current position of your vehicle to the point of entry into the new route.

On this screen, you can select the following items:

New:

A new route is displayed on the screen.

Current:

The current route is displayed on the screen.

OK:

Select the route that is displayed on the screen.

- When no selection is made, the current route will be automatically selected after a short while.

When checking traffic jam information manually

Touching on the screen allows you to check for traffic jam information on your route. If there is any information about a traffic jam on your route, a message appears asking you whether to search for another route to avoid the traffic jam. If there is no traffic jam information along the route being guided, it is announced on screen and by voice.



If there is a traffic jam on the route

When receiving information about a traffic jam, a message announces the presence of a traffic jam.

On this screen, you can select the following items:

Yes:

The route is recalculated taking the traffic jam into account.

No:

The message disappears, and the map display reappears.

List:

The list with traffic information is displayed.

- In memory navi mode, no detailed information is available for traffic information on **List**.

If there is no traffic jam information on the route

If there is no traffic jam information, a message informing you that there is no traffic jam information on the route that is shown.

On this screen, you can select the following items:

List:

The list with all traffic information is displayed.

Back:

The message disappears, and the screen returns to the map screen.

- In the memory navi mode, you can only select **Back**.

Selecting traffic information to display

Select the type of traffic information to display with the navigation system.

1 Touch "Traffic/Info" in the NAVI MENU, and then touch "Traffic Settings".

The icon for the traffic information currently being displayed appears on the screen.


2 Touch "Change".



The names of the displayed traffic information items and a list of icons appears on the screen.

3 Touch the traffic information item to display.

A red tick appears next to the selected traffic information.

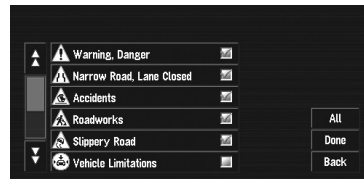

- Touching "All" selects all the traffic information.

- Touch "Back" to not add the selected traffic information.

4 Touch "Done".

The selected traffic information icon is added to the screen.

5 Touch "Back".





NAVI

Selecting the radio station

The RDS-Tuner of the navigation system automatically tunes to the radio station to receive available traffic information (RDS-TMC station). If reception is poor, you can switch to another station manually. Once the received radio station is selected, the system automatically tunes to stations that provide traffic information according to the location of the vehicle.

Tuning to a RDS-TMC station with good reception

1 Touch "Traffic/Info" in the NAVI MENU, then touch "Manual Station Search".

2 Touch "Next".

Available radio stations can be searched automatically. If a radio station with good reception is found, the tuning mode is stopped.



Store:

Store the current RDS-TMC station in the preset list. If there are already five stations stored in the list, select one to be overwritten.

- If you want to continue to search for another station, repeat this procedure.

3 Touch "OK".

Switches to the selected RDS-TMC station and returns to the Information menu.

Selecting from pre-registered RDS-TMC stations


You can pre-select up to five RDS-TMC stations (Preset Stations). From the list of the RDS-TMC stations, you can select the one you want to receive.

1 Touch "Traffic/Info" in the NAVI MENU, then touch "Manual Station Search".

The list of registered RDS-TMC stations appears. This list of broadcasting stations (Preset Stations) cannot be used unless those broadcasting stations have been stored.

2 Select a radio station on the list.

The currently selected RDS-TMC station

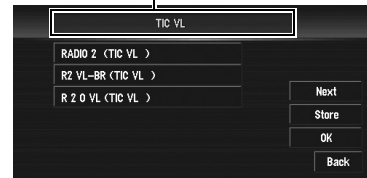

Switching to the specified RDS-TMC station.

Changing Background Picture

CAUTION

- When you burn a CD-R/-RW and DVD-R/-RW, make sure the total data size of the CD-R/-RW and DVD-R/-RW is greater than the amount noted below by storing dummy data or other filler information. Otherwise, the disc may not be recognised by the built-in DVD drive.
 - CD-R/-RW: 1.8 MB
 - DVD-R/-RW: 170 MB

In the menu operation screen, you can specify a picture for the background. Some pictures are already stored, but you can also use pictures (JPEG format data) created by a personal computer or a digital camera. If you save the pictures to a CD-R/-RW and DVD-R/-RW, you can use them as background pictures. The following three types of background pictures can be changed:

- **Splash Screen:** The screen that appears when the Navigation system starts up.
- **AV Background:** Background for the screen during audio operations or during playback.
- **Navigation Background:** Background of navigation menu screen.

Several background pictures are stored in the Pioneer DVD Map Disc. If you want to use these pictures, insert the Pioneer DVD Map Disc. Here, a method for changing the background picture is described with an example of loading a picture stored on a CD-R/-RW and DVD-R/-RW onto the navigation system as the background picture.




- ❑ When storing original pictures on a CD-R/-RW and DVD-R/-RW, create a folder named **"PICTURES"** in the CD-R/-RW and DVD-R/-RW, and store the picture files in this folder. Up to 20 picture files can be used in the **"PICTURES"** folder.
- ❑ You cannot use a CD-R/-RW and DVD-R/-RW containing MP3 files or the Audio data part (CD-DA session) for the **"Background Picture Setting"** function.
- ❑ Only JPEG format (".jpg" or ".JPG") pictures can be used as a background picture.
- ❑ You can only use standard characters (alphabets of both cases: A-Z, a-z) and numbers (0-9) for the file name of a background picture (international (accented) characters cannot be used).
- ❑ Pictures up to a maximum of 2 048×1 536 pixels can be used. We cannot guarantee proper operation for a picture bigger than this size.
- ❑ Progressive format JPEG pictures cannot be used.

1 Insert a CD-R (-RW) to the disc loading slot.

2 Touch "Settings" in the NAVI MENU, then touch "System Options".

3 Touch "Background Picture Setting".
The picture selected for each screen is indicated on the right side of **"Splash Screen"**, **"Navigation Background"** and **"AV Background"** items.

4 Touch "Splash Screen", "Navigation Background" or "AV Background".

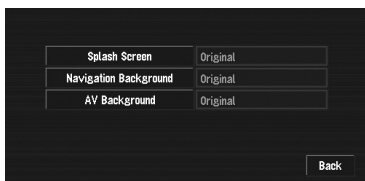

5 Touch "Import from Disc".

The list of the pictures stored in the CD-R (-RW) is displayed. On this screen, you can select the following item:

"Back to Original":

The picture originally used when the system was purchased is selected.

- ❑ Only when a Pioneer DVD Map Disc is inserted, you can select **"Back to Original"**. Only when the CD-R/-RW and DVD-R/-RW is inserted, you can select **"Import from Disc"**.
- ❑ In step 5, touching other than **"Import from Disc"** allows you to select a background image stored on the Pioneer DVD Map Disc.

6 Touch a picture you want for the background.

7 Select how to display the picture.

You can select the following items:

"Centre":

Selected picture is displayed at the centre of the screen.

"Repeat":

Selected picture is repeated in a pattern to cover the whole screen.

The background image starts changing. After a short while, the new background image appears.

- ❑ When you select images stored on the Pioneer DVD Map Disc, you cannot select the layout method.
- ❑ When the picture starts to change, do not turn off the vehicle engine until the message appears to indicate that the picture has finished changing.

8 Touch "Done".



On this screen, you can select the following items:

"Select another Picture":

This is selected when you want to change to another picture. Return to Step 5.



“Change to another background”:

Select if you want to successively change the Splash Screen, Audio Operating screen backgrounds or the Navigation backgrounds. Return to step 3.


- When the navigation system is reset, or the language setting is changed, the background picture may change back to the original picture. (There is also a possibility that the system will revert to the original picture for some other reason.) If this happens, set the background picture again.

Setting the Vehicle Dynamics Display

You can change the values displayed by the instruments on the left and right of the Vehicle Dynamics Display.

Until the sensor’s initial learning is complete, only the voltage and clock are displayed.

- 1 Switch to the Vehicle Dynamics Display.**
 ☞ Changing the map display mode → Page 30
- 2 Touch the left or right instrument.**
 Touch keys are displayed.
- 3 Touch the items you want to display.**

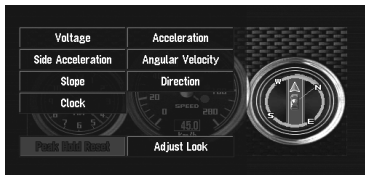

You can select the following items.

- “Voltage”:**
 Displays the power supply and voltage supplied from the battery to this system.
- “Acceleration”:**
 Displays acceleration in a forward direction. The + sign indicates acceleration while the – sign indicates deceleration.
- “Side Acceleration”:**
 Displays acceleration in a side direction, such as when turning. The + sign indicates a right turn, while the – sign indicates a left turn.
- “Angular Velocity”:**
 Displays the vehicle’s turning angle over one second (how far it has turned in a second).

 

- “Slope”:**
 Displays the vehicle’s vertical movement. The + side represents the rising angle, and the – side the falling angle.
- “Direction”:**
 Displays the direction your vehicle is travelling in.
- “Clock”:**
 Displays the current time.
- “Adjust Look”:**
 Touch **“Adjust Look”** to display a screen for selecting the panel pattern. Touch one of the patterns from among those displayed onscreen to change the panel to the selected pattern.
- If you touch **“Peak Hold Reset”**, the maximum and minimum (green line) values indicated in **“Acceleration”** and **“Side Acceleration”** are reset.
- You cannot change the speedometer at the centre.
- Selecting Demo Mode in the Settings menu enables you to perform a demonstration with random values.

Checking the Navigation Status

The navigation status, including the driving status of a vehicle, positioning status by satellite, learning status of the 3D sensor and cable connection status, can be checked.

Checking sensor learning status and driving status

- 1 Touch “Settings” in the NAVI MENU, then touch “Hardware Info”.**
- 2 Touch “3D Calibration Status”.**
 The 3D Calibration Status screen appears.

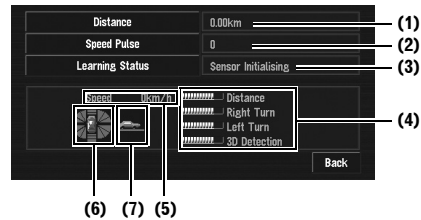

(1) Distance

Driving distance is indicated.

(2) Speed Pulse

Total number of speed pulses is indicated.

(3) Learning Status

Current driving mode is indicated.

(4) Degree of learning

Sensor learning situations for distance (**Distance**), right turn (**Right Turn**), left turn (**Left Turn**) and 3D detection (**3D Detection**) are indicated by the length of bars.

- When tyres have been changed or chains fitted, turning on the Speed Pulse allows the system to detect the fact that the tyre diameter has changed, and automatically replaces the value for calculating distance.
- If the ND-PG1 is connected, the distance calculation value cannot be replaced automatically.

(5) Speed

Speed detected by the navigation system is indicated. (This indication may be different from the actual speed of your vehicle, so please do not use this instead of the speedometer of your vehicle.)

(6) Acceleration or deceleration/Rotational speed

Acceleration or deceleration velocity of your vehicle is indicated. Also, rotational speed when your vehicle turns to left or right is shown.

(7) Inclination

Degree of slope of the street is indicated.



To clear values...

If you want to delete the learned results stored in "**Distance**", "**Speed Pulse**" or "**Learning Status**", touch the relevant result, then touch "**Clear**".



- The navigation system can automatically use its sensor memory based on the outer dimensions of the tyres.


Checking the connections of leads and installation positions

Check that leads are properly connected between the navigation system and the vehicle. Please also check whether they are connected in the correct positions.

1 Touch "Settings" in the NAVI MENU, then touch "Hardware Info".

2 Touch "Connection Status".

The Connection Status screen appears.

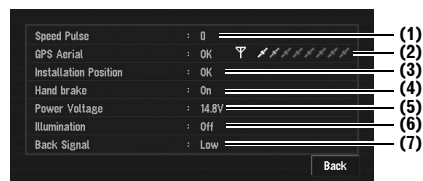

(1) Speed Pulse

The Speed Pulse value detected by the navigation system is shown. "0" is shown while the vehicle is stationary.

(2) GPS Aerial

 
Indicates the connection status of the GPS aerial, the reception sensitivity and from how many satellites the signal is received. If the signal is received correctly, "**OK**" is displayed. If reception is poor, "**NOK**" appears.

(3) Installation Position

The installation position of the navigation system is shown. If installed correctly, "**OK**" appears. Indicates whether the installation position of the navigation system is correct or not. When the navigation system is installed at an extreme angle exceeding the limitation of the installing angle, "**Incorrect angle**" will be displayed. When the angle of the navigation system has been changed, "**Excessive vibration**" will be displayed.

(4) Hand brake

When the handbrake is applied, "**On**" is displayed. When the handbrake is released, "**Off**" is displayed.



NAVI

(5) Power Voltage

 
 
The power supply (reference value) provided from the vehicle battery to the navigation system is shown. If the voltage does not fall within the range of 11 to 15V, check that power cable connection is correct.

(6) Illumination

When the headlights or small lamps of a vehicle are on, "On" is displayed. (If the orange/white lead is not connected, "Off" appears.)




(7) Back Signal

When the gearstick is shifted to "R", the signal switches to "High" or "Low". (Which of these is displayed depends on the vehicle.)



Chapter 4

   Editing the Navigation Utilities



Customising Your Navigation System

CAUTION

- For safety reasons, these functions are not available while your vehicle is in motion. To enable these functions, you must stop in a safe place and put on the handbrake before setting your route (see page 11 Interlock for details).

Modifying the Default Settings

You can tailor default settings, such as navigation functions and information display, for ease of use.

The following example describes how to change settings. In this example, the "KM Mile Setting" settings is set to "Mile".

1 Touch "Settings" in the NAVI MENU.



The Settings menu appears.

2 Touch "System Options".

The screen changes. "km" is displayed below "KM Mile Setting", indicating that this function is currently set to "km".

- When you touch items with a setting below them, their setting changes. When you touch items with no setting below them, a setting screen appears.
- Touching "Back" switch to Settings Menu.

3 Touch "KM Mile Setting".

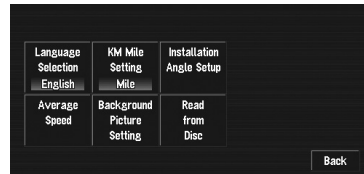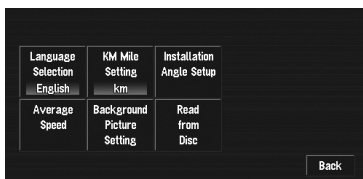

"Mile" is displayed below "KM Mile Setting", indicating that "KM Mile Setting" is set to "Mile".

If you want to change another setting, select the item you want to change and repeat the procedure in step 3.


Items Users can Change

This section describes the details of the setting for each item. Settings marked with an asterisk (*) show that they are default or factory settings.

Volume

The sound volume for the navigation can be set. You can set the volume of the route guidance and of the beep sound separately.

To display the Volume setting screen, touch "Volume" in the Settings menu.

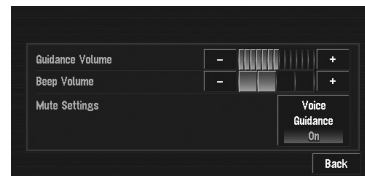

- When you move to the Volume setting screen by touching "Volume" in the Settings menu, touching "Back" returns you to the Settings menu screen.

Guidance Volume

Touch "+" or "-" to change the Guidance volume.

Beep Volume

Touch "+" or "-" to change the Beep volume.

Voice Guidance

This setting controls whether the volume of the Audio source is automatically muted during voice guidance.

On*:

During voice guidance, the volume of the Audio source is muted automatically.

Off:


Volume of the Audio source stays the same during voice guidance.

- When **Voice Guidance** is **"On"**, be sure to set the **Mute Input/Guide** setting in the AV MENU to **Mute** or **ATT**.

☞ "Switching the sound muting/attenuation" → Page 110

System Options

Touch **"System Options"** in the Settings menu to display.

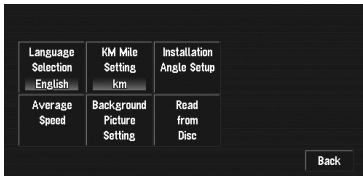

Language Selection

☞ The language displayed can be set → Page 116

Once you change the language, installation of the programme starts.

CAUTION

- **Once the installation of the programme starts, do not stop the engine of your vehicle and do not switch off the navigation system until the installation is completed and the map of your surroundings appears.**

KM Mile Setting

This setting controls the unit of distance displayed on your navigation system.

km*:

Show distances in kilometres.

Mile:


Show distances in miles.

Mile & Yard:

Show distances in miles and yards.

Installation Angle Setup

You can correct the installation angle of the navigation system. Correcting the installation angle improves the accuracy of sensor learning, even if the unit is not facing centre. Select the orientation of the LCD panel from the left, centre, and right. Check the direction the LCD panel faces, and touch the corresponding item.

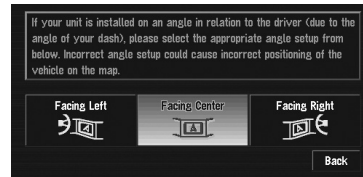

"Facing Left":

Select this when the angle is 5° or more to the left from the centre.

"Facing Center"*:

Select this when the angle is less than 5° to the left and right from the centre.

"Facing Right":

Select this when the angle is 5° or more to the right from the centre.

- If the **"Learning Status"** in the **"3D Calibration Status"** is **"Simple Hybrid"**, the installation angle can be corrected.

Average Speed

When calculating expected time of arrival and the number of hours to the destination, set the average speed for the motorway or ordinary road using "+" and "-".

Minor Ordinary Road

- When the **"KM Mile Setting"** is set to **"km"**, it can be set in 5 km increments from 20 km to 110 km (40 km*).
- When the **"KM Mile Setting"** is set to **"Mile"** or **"Mile & Yard"**, it can be set in 5 mile increments from 10 miles to 100 miles (30 miles*).

Major Ordinary Road

- When the **"KM Mile Setting"** is set to **"km"**, it can be set in 5 km increments from 20 km to 150 km (60 km*).
- When the **"KM Mile Setting"** is set to **"Mile"** or **"Mile & Yard"**, it can be set in 5 mile increments from 10 miles to 120 miles (40 miles*).

Motorway

- When the **"KM Mile Setting"** is set to **"km"**, it can be set in 5 km increments from 60 km to 150 km (120 km*).
- When the **"KM Mile Setting"** is set to **"Mile"** or **"Mile & Yard"**, it can be set in 5 mile increments from 30 miles to 120 miles (80 miles*).

Background Picture Setting


- ↳ "Changing Background Picture" → Page 56

Read from Disc

- ↳ "Loading registered locations data from a Disc" → Page 52

Short-Cut Selection

Select shortcuts to display on the map screen. In the list displayed onscreen, the items with red ticks are displayed on the map screen. Touch the shortcut you wish to display and then touch **"Done"** when a red tick appears. You can select up to three shortcuts.

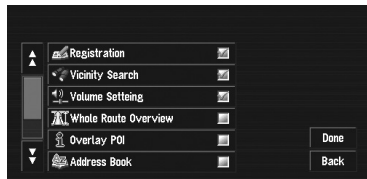

Registration*

Register information about the location indicated by the scroll cursor to the Address Book.

Vicinity Search*

Find POIs (Points Of Interest) in the vicinity of the scroll cursor.

- ↳ "Searching the facilities around the scroll cursor" → Page 38

Volume Setting*

Set the sound volume for the navigation.

- ↳ "Volume" → Page 61

Whole Route Overview

Displays the entire currently set route.

Overlay POI

Displays marks for surrounding facilities (POI) on the map.

- ↳ "Displaying Certain POI on the Map" → Page 45

Address Book

Displays the Address Book.

- ↳ Editing the Address Book → Page 49

Route Options

Displays the **Route Options** menu.

- ↳ Displays the **Route Options** menu → Page 46

Edit Current Route

Displays the screen for adding or deleting way points.

- ↳ Adding or deleting way points → Page 43


Traffic On Route

Displays a list of traffic information on the route.

- ↳ Displays traffic information on the route → Page 53

Map Display Options

Touch **"Map Display Options"** in the Settings Menu to display.

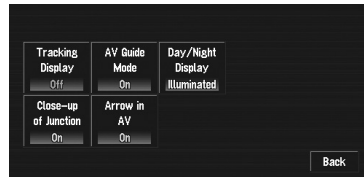

Tracking Display

The tracking display setting has the following options.

Always:

Display tracking for all journeys.

This Trip:

Display tracking dots but erase them when the navigation system is turned off (when turning off the engine of your vehicle).

Off*:

Do not display tracking dots.



AV Guide Mode

Set whether to automatically switch to the navigation screen from the AV screen when your vehicle approaches a guidance point such as an intersection while displaying a screen other than navigation.

On*:

Switches from audio operation screen to navigation screen.

Off:

Does not switch the screen.

Day/Night Display

To improve the visibility of the map during the evening, you can change the combination of the colours of the map.

Illuminated*:

You can change the combination of the colours of a map according to whether the vehicle lights are On or Off.

Daytime:

The map is always displayed with bright colours.

Close-up of Junction

This setting enables switching to an enlarged map around the point where your vehicle is approaching an intersection, entrance/exit of motorway or a junction.

On*:

Switches to an enlarged map.

Off:

Does not switch to an enlarged map.

Arrow in AV

Set whether to display the guidance information with arrows on the Audio Operation screen.

On*:

Displays guidance information with arrows on the Audio Operation screen.

Off:

Does not display guidance information with arrows on the Audio Operation screen.

- When using a source with video, the arrow cannot be displayed.

Defined Locations

Touch **"Defined Locations"** in the Settings menu to display.




Set "Home"

- ☞ Registering and changing your home location → Page 49

Map In Memory

The memory area is the area in the map, which is being read in advance for the memory navi mode. There are two ways of setting the memory area.

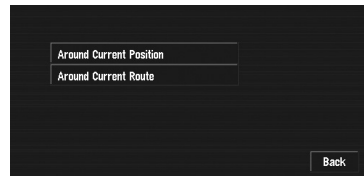

Around Current Position

A square that has sides of approximately 17 km (10.6 miles) with the selected location at the centre is read into the memory.

Indicate the map you want to store in the memory by touching ◀, ▶, ▲ or ▼. Then, adjust the map scale to the one you desire, and touch **"OK"**. Continuously touching ◀, ▶, ▲ or ▼ allows you to rapidly scroll the map screen.

- An area not stored in the DVD Map Disc cannot be memorised.

 
Around Current Route

Sets the surrounding currently set route to the memory area. The route to the destination will appear on screen. You can memorise the area by touching **"OK"**.

- The extent of the information that can be set in the memory area is about 10.6 km (6.6 mi) surrounding the route.

Set "Go To"

- ☞ Registering and changing your favourite location → Page 49





Demo Mode

This is a demonstration function for shops. After a route is set, a simulation of route guidance to a destination is automatically displayed. Normally, set this to "Off".

Repeat:

Repeat demo drive.

Off*:

Demo Mode is set off.

- If you eject the DVD Map Disc during the demo drive, the demo mode will be stopped.

Time

Adjusts the systems clock. The time difference (+, -) between the time originally set in your navigation system is set here.

You can also select summer time On/Off.

- ☞ Time settings → Page 117

Summer Time

Choose whether or not to take summer time into account.

On:

Summer time is taken into account.

Off*:

Summer time is not taken into account.

- When the period of summer time comes, or when the summer time ends, this unit does not automatically change the summer time setting.


- ☞ Change the summer time setting → Page 117

Modify Current Location

Touch the screen to adjust the current position and direction of the vehicle displayed on the map.

Hardware Info

Touch "Hardware Info" in the Settings menu to display.

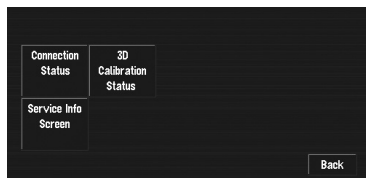

Connection Status

- ☞ "Checking the connections of leads and installation positions" → Page 59

3D Calibration Status

- ☞ "Checking the Navigation Status" → Page 58

Service Info Screen

 
 
Displays the disc production number and version information.

Restore Factory Settings

Reset various settings registered to the navigation system and restores to the default or factory settings. To restore, touch "Yes".

- About the item return to the default, please check "Display Information" at the end of this manual.










NAVI

Chapter 5

     Customising Your Navigation System



Chapter 6

Using the AV Source (Built-in DVD Drive and Radio)

AV

This chapter describes how to display the AV MENU for AV operations and perform operations with the DVD drive and radio.

How to Display each Menu

- 1 Press the **VOLUME** knob to switch to the Audio operation screen.



- 2 Press the **MENU** button to change to the AV MENU.



Chapter 6


Using the AV Source (Built-in DVD Drive and Radio)

AV

3 Touch "Sound", "Function" or "System" to enter the menu you want to operate.

Each menu is displayed. The items that cannot be operated according to the sources or conditions are indicated in grey.

- If you touch "**AV Source**", the screen changes to the AV Source screen.

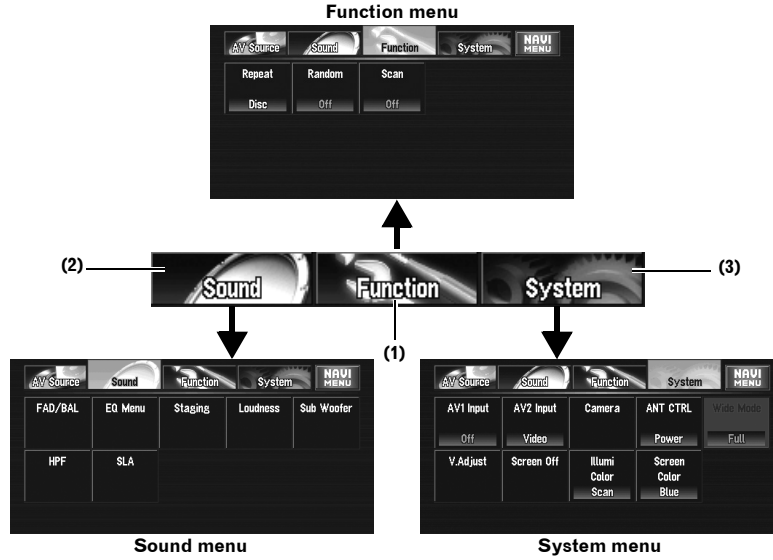

Chapter 6

Using the AV Source (Built-in DVD Drive and Radio)

- When the source is "**OFF**", the "**Function**" key changes to "**Initial**" key.

(1) Function key

Touch to enter the **Function** menu for each source.

- ☞ Using the **Function** menu → "Operation using the **Function** menu" and "Advanced <each source> operation"

(2) Sound key

Touch to select various sound quality controls.

- ☞ Using the **Sound** menu → Page 103

(3) System key

Touch to select various setup functions.

- ☞ Using the **System** menu → Page 110


4 Press the MENU button to return to the display of each source.

Operating the Built-in DVD drive


This section explains the operation of DVD-Video, CD, MP3/WMA/AAC or DivX.

- The built-in DVD drive of this unit can recognise the several types of media as following sources.
 - DVD-Video: “**DVD**”
 - Audio data (CD-DA): “**CD**”
 - Compressed audio (MP3/WMA/AAC) files: “**ROM**”
 - DivX video files: “**DivX**”
- Also see at “Handling and Care of the Disc” for more cautions about handling each media.


DVD-Video

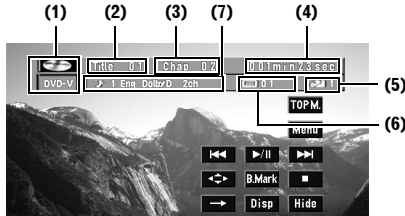


CD

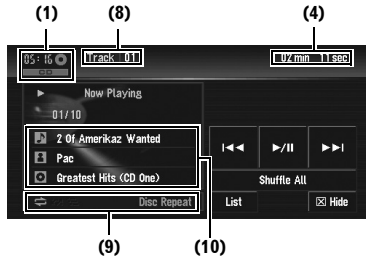

ROM (MP3/WMA/AAC files)

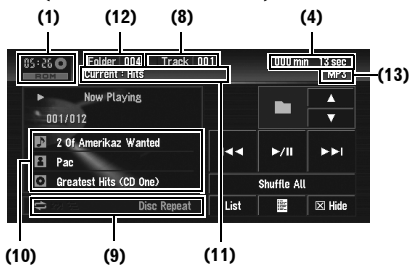

DivX

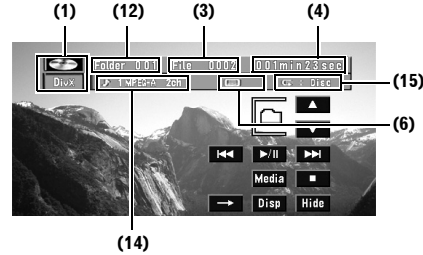

- ▷ Common operation of the **DISC** sources → Page 70
- ▷ “Other DVD-Video/DivX function” → Page 73
- ▷ Switching screen display → Page 71

- (1) **Source icon**
- (2) **Title number indicator**
- (3) **Chapter or file number indicator**
- (4) **Play time indicator**
- (5) **Viewing angle indicator**
- (6) **Subtitle language indicator**
- (7) **Audio language indicator**
- (8) **Track number indicator**
- (9) **Repeat/Random/Scan indicator**

The marks shown below indicate the current playback status.

- and repeat range:** Displays the repeat range
- :** Random
- :** Scan

- (10) **Detail information display**
Displays the track title, artist and disc title.
- :** Track title
- :** Artist
- :** Disc title (album title)

- The “-” mark is displayed if there is no corresponding information.

- (11) **Current folder name indicator**
- (12) **Folder number indicator**
- (13) **File type indicator**
- (14) **Audio indicator**
- (15) **Repeat indicator**

AV

Built-in DVD drive source

Chapter 6

Using the AV Source (Built-in DVD Drive and Radio)

AV

Switching the media files type

When playing a disc containing a mixture of various media file types such as DivX and MP3, you can switch between media files types to play.

- This unit allows playback of the following media file type recorded on CD-R/RW and DVD-R/RW discs.
 - Audio data (CD-DA)
 - Compressed audio (MP3/WMA/AAC) files
 - DivX video files
- In case of DVD-R/RW/ROM, this unit does not allow playback of audio data (CD-DA) files.

1 Touch “Media” to switch between media file types.

Touch “Media” repeatedly to switch between the following media file types:

CD (audio data (CD-DA)) – ROM (MP3/WMA/AAC files) – DivX (DivX video files)

- There is sometimes a delay between starting up playback and the sound being issued. This is particularly the case when playing back multi-session discs and discs with many folders. When being read in, **Reading Format** is displayed.
- Playback is carried out in order of file number. Folders are skipped if they contain no files. (If folder 001 (ROOT) contains no files, playback commences with folder 002.)
- When playing back files recorded as VBR (variable bit rate) files, the play time will not be correctly displayed if fast forward or rewind operations are used.
- If more than 255 tracks are stored in the folder, some time may be required to display the track list.

Touch key operation

1 Touch “DISC” in the AV Source screen to select the built-in DVD drive.


When the source icon is not displayed, you can display it by touching the screen. If no disc is loaded in navigation system, you cannot select “DISC” (built-in DVD drive).

☞ “Selecting an AV source” → Page 25


2 Touch the screen to display the touch panel keys.

Touch keys (DVD-Video, Page 1)


- The following screen appears when the vehicle is stopped. When the vehicle is moving, the shape of the touch keys changes.

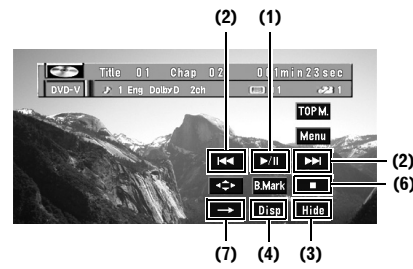

Touch keys (DVD-Video, Page 2)

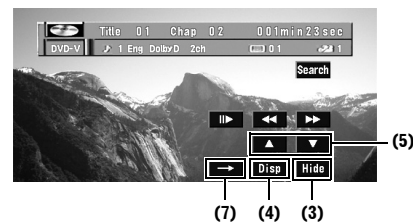

Touch keys (CD)

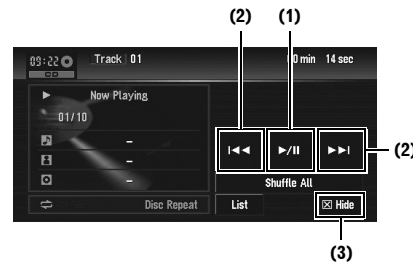


Built-in DVD drive source

Chapter 6


Using the AV Source (Built-in DVD Drive and Radio)

Touch keys (ROM)

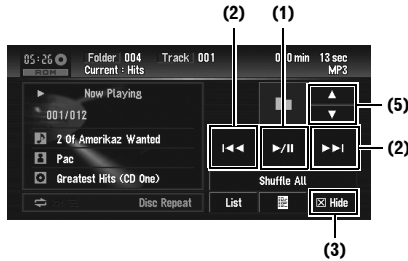

Touch keys (DivX, Page 1)

- The following screen appears when the vehicle is stopped. When the vehicle is moving, the shape of the touch keys changes.

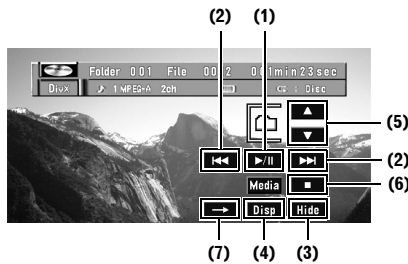

Touch keys (DivX, Page 2)



(1) Playback and Pause

Pause lets you temporarily stop disc playback. Touching ►|| switches between "playback" and "pause".

- **DVD, DivX:** The icon || is displayed and playback is paused letting you view a still image.
- Depending on the disc and the playback location on the disc, the icon Ⓞ may be displayed, indicating that still playback is not possible.
- **CD, ROM:** **PAUSE** is displayed and playback is paused.

- **PAUSE** is displayed for the DVD or DivX while the vehicle is running.

(2) DVD: Skip the chapter forward or backward

Touching ►► skips to the start of the next chapter. Touching ◀◀ once skips to the start of the current chapter. Touching again will skip to the previous chapter.

You can also select a chapter by pressing the ◀◀ or ►► button.

CD, ROM: Skip the track forward or backward

Touching ►► skips to the start of the next track. Touching ◀◀ once skips to the start of the current track. Touching again will skip to the previous track.

You can also select a track by pressing the ◀◀ or ►► button.

DivX: Skip the file forward or backward

Touching ►► skips to the start of the next file. Touching ◀◀ once skips to the start of the current file. Touching again will skip to the previous file.

You can also select a file by pressing the ◀◀ or ►► button.

CD, ROM: Fast rewind or forward

Keep touching ◀◀ or ►► to perform fast rewind or forward.

You can also perform fast rewind/fast forward by holding the ◀◀ or ►► button.

(3) Hide the touch keys

Touching "Hide" clears the touch keys.

Touch anywhere on the LCD screen, display the touch keys again.

(4) Switch the display

- **DVD:** Touching "Disp" changes the information as follows:
Disc information display – Repeat range display
- **DivX:** Touching "Disp" changes the information as follows:
Audio, SubTitle, Repeat display – Folder name display – File name display

(5) DVD: Skip the title forward or backward

Touching ▲ skips to the start of the next title. Touching ▼ skips to the start of the previous title.

AV

Built-in DVD drive source

Chapter 6

Using the AV Source (Built-in DVD Drive and Radio)



AV

ROM, DivX: Move the folder up or down
 Touch ▲ or ▼ to select the desired folder.
 You cannot select a folder that does not have an MP3/WMA/AAC/DivX file recorded in it.

(6) DVD, DivX: Stop playback
 When you stop DVD playback by touching ■, that location on the disc is memorised enabling playback from that point when you play the disc again.

- To play the disc again, touch ►/II.

(7) DVD, DivX: Switch to other pages of touch keys

(ROM) Moving to upper folders

When using an MP3/WMA/AAC disc in which the data is divided into folders, you can move a track to upper folders. This is used to play back tracks recorded in other folders.

1 Touch [Up] .

- [Up] is only displayed when the list is displayed.
- If the current folder is the ROOT folder, [Up] is displayed in grey.
- If the upper folder has no MP3/WMA/AAC files, the track currently playing will not change.

(ROM) Displaying text information on MP3 disc

1 Touch [Text] .


The next piece of information is displayed.

- **Album Title** (album title)
- **Track Title** (track title)
- **Folder Title** (folder name)
- **File Name** (file name)
- **Artist Name** (artist name)
- **Genre** (genre)
- **Year** (year)

If specific information has not been recorded on MP3/WMA/AAC files on disc, nothing may be displayed.

(CD, ROM) Select the track from the list

The list lets you see the list of track titles or folder names on a disc and select one of them to play back.

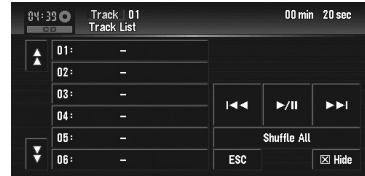

1 Touch "List".

To return to the previous screen, touch "Detail".

- Touching ▲ or ▼ switches to the next or previous page in the list.
- The "-" mark is displayed if there is no corresponding information.

(CD, ROM) Randomly play a CD-ROM with one touch

All of the songs in a disc can be played at random by only touching one key.


1 Touch "Shuffle All".

To cancel the random play, switch "Random" to "Off" in the **Function** menu.

Operation using the Function menu

- How to display the **Function** menu → Page 67

Function menu (e.g., CD)

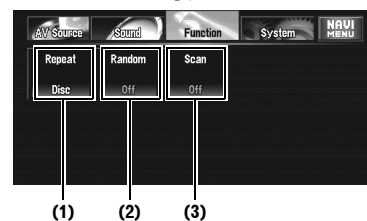

- "Random" and "Scan" cannot be used during a DVD-Video or DivX playback.

Built-in DVD drive source

Chapter 6

Using the AV Source (Built-in DVD Drive and Radio)

(1) Repeating play

Each touch of "**Repeat**" changes the settings as follows:

DVD:

- **Title** – Repeat just the current title
 - **Chapter** – Repeat just the current chapter
 - **Disc** – Play throughout the current disc
- If you perform chapter (title) search, fast forward/rewind or slow motion playback, the repeat play range changes to "**Disc**".

CD:

- **Disc** – Repeat the current disc
 - **Track** – Repeat just the current track
- If you perform track search or fast forward/rewind, repeat play is automatically cancelled.
- When playing discs with MP3/WMA/AAC files and audio data (CD-DA), repeat play is performed within the each data session even if **Disc** is selected.

ROM:

- **Folder** – Repeat the current folder
 - **Disc** – Repeat all tracks
 - **Track** – Repeat just the current track
- If you select another folder during repeat play, the repeat play range changes to **Disc**.
- If you perform fast forward/rewind during **Track**, the repeat play range changes to **Folder**.
- When **Folder** is selected, it is not possible to play back a subfolder of that folder.
- When playing discs with MP3/WMA/AAC files and audio data (CD-DA), repeat play is performed within the currently playing data session even if **Disc** is selected.

DivX:

- **Folder** – Repeat the current folder
 - **Disc** – Repeat all files
 - **File** – Repeat just the current file
- If you select another folder during repeat play, the repeat play range changes to **Disc**.
- If you perform file search or fast forward/rewind during **File**, the repeat play range changes to **Folder**.
- When **Folder** is selected, it is not possible to play back a subfolder of that folder.

(2) Play tracks in a random order

Touching "**Random**" switches between "**On**" and "**Off**". When using ROM, the selected tracks in the repeated range are randomly played.

- If you turn "**Random**" to "**On**" during the repeat play range is "**Track**", the repeat play range changes to "**Folder**" automatically.

(3) CD: Scan tracks of a CD

Touching "**Scan**" switches between "**On**" and "**Off**". Scan play lets you hear the first 10 seconds of each track on the CD. When you find the desired track touch "**Scan**" to turn scan play off.

- After scanning of a CD is finished, normal playback of the tracks will begin again.

ROM: Scan folders and tracks

Touching "**Scan**" switches between "**On**" and "**Off**". Scan play takes place for the selected tracks in the repeat range. When you find the desired track touch "**Scan**" to turn scan play off.

- After track or folder scanning is finished, normal playback of the tracks will begin again.
- If you turn "**Random**" to "**On**" during the repeat play range is "**Track**", the repeat play range changes to "**Folder**" automatically.

Other DVD-Video/DivX function**(DVD) Operating the DVD menu**

Some DVDs allow you to select the disc contents using a menu.

- You can display the menu by touching "**Menu**" or "**TOP M.**" while a disc is playing. Touching either of these keys again lets you start playback from the location selected from the menu. For details, refer to the instructions provided with the disc.

1 Touch the screen to display to touch panel keys.

2 Touch "TOP M." or "Menu" to display touch panel keys to operate the DVD menu.

AV

Built-in DVD drive source

Chapter 6

Using the AV Source (Built-in DVD Drive and Radio)


AV

Built-in DVD drive source

Chapter 6

Using the AV Source (Built-in DVD Drive and Radio)

3 Touch ▲, ▼, ◀ or ▶ to select the desired menu item.

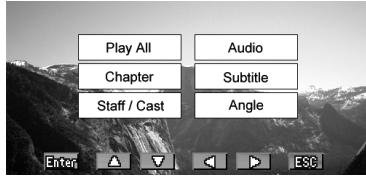

- If the "Enter", "ESC", ▲, ▼, ◀ or ▶ keys disappear from the screen, touch touch key to display them again.
- Even when the "Enter", "ESC", ▲, ▼, ◀ or ▶ keys are displayed on the screen, the items can also be selected by touching the items in the DVD menu. When directly touching the items, "Enter" does not have to be touched in step 4.
- If an item is touched in the DVD menu at the same time that the "Enter", "ESC", ▲, ▼, ◀ or ▶ key is touched, the "Enter", "ESC", ▲, ▼, ◀ or ▶ touch keys take priority and those actions are operated.

4 Touch "Enter".

Playback starts from the selected menu item. The way to display the menu differs depending on the disc.

Fast rewind or forward

Touching ◀◀ or ▶▶ to perform fast rewind or forward.

- You can also perform fast rewind/fast forward by holding the ◀◀ or ▶▶ button.

Frame-by-frame playback

This lets you move ahead one frame at a time during playback.

1 Touch during playback.

Each time you touch , you move ahead one frame.

To return to normal playback, touch .

- Depending on the disc and the playback location on the disc, the icon may be displayed indicating that frame-by-frame playback is not possible.
- With some discs, images may be unclear during frame-by-frame playback.

Slow motion playback

This lets you slow down playback speed.

1 Keep touching until is displayed during playback.

The icon is displayed, forward slow motion playback begins.

To return to normal playback, touch .

- There is no sound during slow motion playback.
- Depending on the disc and the playback location on the disc, the icon may be displayed indicating that slow motion playback is not possible.
- With some discs, images may be unclear during slow motion playback.
- Reverse slow motion playback is not possible.

Searching for a playback location

When playing back a DVD-Video, you can search for a specific title, chapter or time to begin playback. When playing back DivX, you can search for a specific folder, file or time to begin playback.

- Chapter search, time search and file search are not possible when disc playback has been stopped.

1 Touch "Search" and then touch desired item.

- When playing a DVD, touch "Title" (title), "Chapter" (chapter) or "Time" (time).
- When playing DivX, touch "Folder" (folder), "File" (file) or "Time" (time).

2 Touch 0 – 9 to input the desired number. For titles and chapters

- To select 3, touch 3.
- To select 10, touch 1 and 0 in order.
- To select 23, touch 2 and 3 in order.


For time (time search)

- To select 21 minutes 43 seconds, touch 2, 1, 4 and 3 in order.
- To select 1 hour 11 minutes, convert the time into 71 minutes 00 seconds and touch 7, 1, 0 and 0 in order.

To cancel the input numbers, touch "Clear".

3 While the input number is displayed, touch "Enter".

This starts playback from the selected scene.

- With some DVD-Video discs, the icon  may be displayed, indicating that titles, chapters and time cannot be specified.

Changing audio system and audio language during playback (Multi-audio)

With DVDs or DivX featuring multi-audio recordings, you can switch between languages/audio systems during playback.

1 Touch "Audio" during playback.

Each time you touch "Audio" switches between audio mode.

- With some DVDs, switching between languages/audio systems may only be possible while using a menu display.
- Display indications such as Dolby D and 5.1ch indicate the audio system recorded on the DVD or DivX file. Depending on the setting, playback may not be with the same audio system as the one indicated.
- Touching "Audio" during fast forward/fast rewind, pause or slow motion playback returns you to normal playback.

Changing the subtitle language during playback (Multi-subtitle)

With DVDs or DivX featuring multi-subtitle recordings, you can switch between subtitle languages during playback.


1 Touch "S.Title" during playback.

Each time you touch "S.Title" switches between subtitle language.

- With some DVDs, switching between subtitle languages may only be possible using a menu display.
- Touching "S.Title" during fast forward/fast rewind, pause or slow motion playback returns you to normal playback.
- When using DivX, you can switch between showing or hiding the subtitles while a subtitle file is displayed. This switches the subtitles while displaying subtitles in a DivX file.

(DVD) Changing the viewing angle during playback (Multi-angle)

With DVDs featuring multi-angle (scenes shot from multiple angles) recordings, you can switch among viewing angles during playback.

- During playback of a scene shot from multiple angles, the angle icon  is displayed. Turn angle icon display on or off using **DVD/DivX Setup** menu.

➤ Setting angle icon → Page 107

1 Touch "Angle" during playback of a scene shot from multiple angles.

Each time you touch "Angle" switches between angle.

- Touching "Angle" during fast forward/fast rewind, pause or slow motion playback returns you to normal playback.

(DVD) Resume playback (Bookmark)

When playing DVD-Video discs, you can use this function.

The Bookmark function lets you resume playback from a selected scene the next time the disc is loaded.

1 During playback, touch "B.Mark" at the point you want to resume playback next time.

The selected scene will be bookmarked so that playback resumes from that point next time.

You can bookmark up to five discs. After that, the oldest bookmark is replaced by the new one.

- To clear the bookmark on a disc, keep touching **B.Mark** during playback.
- You can also bookmark a disc by pressing and holding the **EJECT** button at the point you want to bookmark. Next time you load the disc, playback will resume from the bookmarked point. Note that you can only bookmark one disc using this method. To clear the bookmark on a disc, press the **EJECT** button.

AV

Built-in DVD drive source

Chapter 6

Using the AV Source (Built-in DVD Drive and Radio)

(DivX) Playing DivX® VOD content


Some DivX VOD (video on demand) content may only be playable a fixed number of times. When you load a disc containing this type of DivX VOD content, the remaining number of plays is shown on-screen and you then have the option of playing the disc (thereby using up one of the remaining plays), or stopping. If you load a disc that contains expired DivX VOD content (for example, content that has zero remaining plays), Rental expired is displayed.

- If your DivX VOD content allows an unlimited number of plays, then you may load the disc into your player and play the content as often as you like, and no message will be displayed.
- In order to play DivX VOD content on this unit, you first need to register the unit with your DivX VOD content provider. For information about your registration code, refer to Displaying your DivX® VOD registration code on page 108.
- DivX VOD content is protected by a DRM (Digital Rights Management) system. This restricts playback of content to specific, registered devices.

1 If the message is displayed after loading a disc containing DivX VOD content, touch "Play".

Playback of the DivX VOD content will start.

- Touch "**Next**" or "**Previous**" to switch between files.
- If you do not want to play the DivX VOD content, touch "**Stop**".

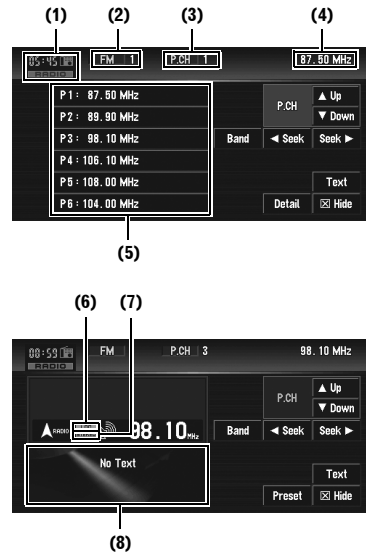Radio**Listening to the radio**

These are the basic steps necessary to operate the radio.

➤ More advanced radio operation → Page 77

This unit's AF (alternative frequencies search) function can be turned on and off. AF should be off for normal tuning operation.

➤ Setting the AF function → Page 79

(1) Source icon

(2) Band indicator

(3) Preset number indicator

(4) Frequency indicator

(5) Preset list or Detail information display

(6) LOCAL indicator

(7) STEREO indicator

(8) Current radio text

1 Touch "RADIO" in the AV Source screen to select the radio.

➤ "Selecting an AV source" → Page 25

2 Touch “Band” to select a band.

Touch “Band” repeatedly until the desired band is displayed, FM1, FM2, FM3 for FM or MW/LW.

3 To perform manual tuning, touch ◀ Seek or ▶ Seek briefly.

The frequencies move up or down step by step.

4 To perform seek tuning, keep touching ◀ Seek or ▶ Seek for about one second and release.

The tuner will scan the frequencies until a broadcast strong enough for good reception is found.

You can cancel seek tuning by touching either ◀ Seek or ▶ Seek briefly.

If you keep touching ◀ Seek or ▶ Seek you can skip broadcasting stations. Seek tuning starts as soon as you release the keys.


Switching between the detail information display and the preset list display

You can switch the left side of the basic screen according to your preference.

1 Touch “Detail” (or “Preset”).

Each touch of “Detail” (or “Preset”) changes the detail information display or preset list display.

Preset list display

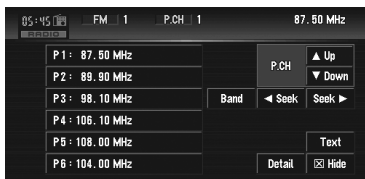


Detail information display



Storing and recalling broadcast stations

If you touch any of the preset tuning keys **P1** (PRESET 1) – **P6** (PRESET 6) you can easily store up to six broadcast stations for later recall with the touch of a key.

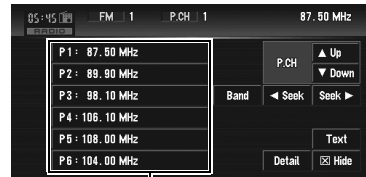

Preset tuning keys (P1 – P6)

1 When you find a frequency that you want to store in memory, keep touching a preset tuning key P1 – P6 until the preset number (e.g., P.CH 1) stops flashing.


The number you have touched will flash in the preset number indicator and then remain lit. The selected radio station has been stored in memory.

- Up to 18 FM stations, 6 for each of the three FM bands, and 6 MW/LW stations can be stored in memory.

2 The next time you touch the same preset tuning key P1 – P6, the radio station is recalled from memory.

- You can also use ▲ and ▼ to recall radio stations assigned to preset tuning keys **P1 – P6**.

Advanced radio operation

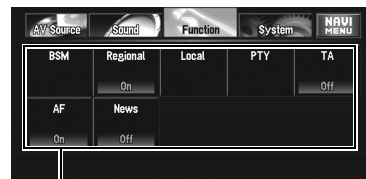

(1)

(1) Function display

- How to display the **Function** menu → Page 67

AV

Storing the strongest broadcast frequencies

BSM (best stations memory) lets you automatically store the six strongest broadcast frequencies under preset tuning keys **P1 – P6** and once stored there you can tune in to those frequencies with the touch of a key.

1 Touch “BSM” in the Function menu.

2 Touch “Start” to turn BSM on.

BSM begins to flash. While **BSM** is flashing the six strongest broadcast frequencies will be stored under preset tuning keys **P1 – P6** in order of their signal strength. When finished, **BSM** stops flashing.

To cancel the storage process, touch **Stop**.

- Storing broadcast frequencies with **BSM** may replace broadcast frequencies you have saved using **P1 – P6**.

RDS

Chapter 6

Using the AV Source (Built-in DVD Drive and Radio)

Tuning in strong signals

Local seek tuning lets you tune in only those radio stations with sufficiently strong signals for good reception.

1 Touch “Local” in the Function menu.

2 Touch “On” to turn local seek tuning on.

To turn local seek tuning off, touch **Off**.

3 Touch ◀ or ▶ to set the sensitivity.

There are four levels of sensitivity for FM and

two levels for MW/LW:

FM: 1 – 2 – 3 – 4

MW/LW: 1 – 2

- The 4 setting allows reception of only the strongest stations, while lower settings let you receive progressively weaker stations.

RDS

RDS operation



(1)

(3) (2) (4)



RDS (radio data system) is a system for providing information along with FM broadcasts. This inaudible information provides features, such as programme service name, programme type, traffic announcement standby and automatic tuning, that are intended to aid radio listeners in finding and tuning in to a desired station.

(1) Preset list or Detail information display

(2) News indicator

(3) TRFC indicator

(4) TEXT indicator

➤ How to display the **Function** menu → Page 67

- RDS service may not be provided by all stations.
- RDS functions like AF and TA are only active when your radio is tuned to an RDS station.

Selecting alternative frequencies

If you are listening to a broadcast and the reception becomes weak or there are other problems, the navigation system will automatically search for a different station in the same network that is broadcasting a stronger signal.

- **AF** is on as a default.

1 Touch "AF" in the Function menu.

Touching "**AF**" switches between "**On**" and "**Off**".

- Only RDS stations are tuned in during seek tuning or BSM when AF is on.
- When you recall a preset station, the tuner may update the preset station with a new frequency from the station's AF list. (This is only available when using presets on the FM1 or FM2 bands.) No preset number appears on the display if the RDS data for the station received differs from that for the originally stored station.
- Sound may be temporarily interrupted by another programme during an AF frequency search.
- AF can be turned on or off independently for each FM band.

Using PI Seek

If the unit fails to find a suitable alternative frequency, or if you are listening to a broadcast and the reception becomes weak, the navigation system will automatically search for a different station with the same programming. During the search, PI SEEK is displayed and the output is muted. The muting is discontinued after completion of the PI Seek, whether or not a different station is found.

Using Auto PI Seek for preset stations

When preset stations cannot be recalled, as when travelling long distances, the unit can be set to perform PI Seek during preset recall.

- The default setting for Auto PI Seek is off.
 - ☞ "Switching Auto PI seek" → Page 109

Limiting stations to regional programming

When AF is used to automatically retune frequencies, the regional function limits the selection to stations broadcasting regional programmes.

1 Touch "Regional" in the Function menu.



Touching "**Regional**" switches between "**On**" and "**Off**".

- Regional programming and regional networks are organised differently depending on the country (i.e., they may change according to the time, country or broadcast area).
- The preset number may disappear on the display if the tuner tunes in a regional station that differs from the originally set station.
- The regional function can be turned on or off independently for each FM band.


Receiving traffic announcements


TA (traffic announcement standby) lets you receive traffic announcements automatically, no matter what source you are listening to. TA can be activated for both a TP station (a station that broadcasts traffic information) or another enhanced network's TP station (a station carrying information that cross-references TP stations).

1 Tune in a TP station or another enhanced network's TP station.

When you are tuned into a TP station or another enhanced network's TP station the  or  indicator will light.

2 Touch "TA" in the Function menu to turn traffic announcement standby on.

 appears in the display. The tuner will standby for traffic announcements.

If you turned the TA function on while tuned in to neither a TP station nor another enhanced network's TP station, the  indicator lights.

To turn traffic announcements standby off, touch "**TA**" again.

AV

RDS
Chapter 6

Using the AV Source (Built-in DVD Drive and Radio)



AV

3 Use the **VOLUME** knob to adjust the **TA** volume when a traffic announcement begins.

The newly set volume is stored in memory and recalled for subsequent traffic announcements.

4 Touch **"TA"** in the **Function** menu while a traffic announcement is being received to cancel the announcement.

The tuner returns to the original source but remains in standby mode until **"TA"** is touched again.

You can also cancel the announcement by changing the source or band.

- When the preset list is displayed, the TA function icon will not be displayed.
- Switching screen display → Page 77
- The system switches back to the original source following traffic announcement reception.
- Only TP stations and other enhanced network's TP stations are tuned in during seek tuning or BSM when TA is on.

- If no station is broadcasting the type of programme you searched for, **Not Found** is displayed for about two seconds and then the tuner returns to the original station.

Using news programme interruption

When a news programme is broadcast from a PTY code news station, the navigation system can switch from any station to the news broadcast station. When the news programme ends, reception of the previous programme resumes.

1 Touch **"News"** in the **Function** menu to turn on news programme interruption.

Touch **"News"** until **NEWS** or **NEWS** appears in the display.

To turn off news programme interruption, touch **"News"** again.

A news programme can be cancelled by touching **"News"**.

You can also cancel the news programme by changing the source or band.

- When the preset list is displayed, the NEWS function icon will not be displayed.

RDS

Chapter 6

Using the AV Source (Built-in DVD Drive and Radio)

Using PTY functions

You can tune in a station by using PTY information.

Searching for an RDS station by PTY information

You can search for general types of broadcasting programmes.

- "PTY list" → Page 82

1 Touch **"PTY"** in the **Function** menu.

2 Touch **◀** or **▶** to select a programme type.

There are four programme types:
News&INF – **Popular** – **Classics** – **Others**

3 Touch **"Start"** to begin the search.

The tuner searches for a station broadcasting that programme type.

To cancel the search, touch **"Stop"**.

- The programme of some stations may differ from that indicated by the transmitted PTY.

Receiving PTY alarm broadcasts

PTY alarm is a special PTY code for announcements regarding emergencies such as natural disasters. When the tuner receives the radio alarm code, **ALARM** appears on the display and the volume adjusts to the TA volume. When the station stops broadcasting the emergency announcement, the system returns to the previous source.

- An emergency announcement can be cancelled by touching **"TA"**.
- You can also cancel an emergency announcement by changing the source or band.

Using radio text

This tuner can display radio text data transmitted by RDS stations, such as station information, the name of the currently broadcast song and the name of the artist.

- The tuner automatically memorises the three latest radio text broadcasts received, replacing text from the least recent reception with new text when it is received.





Displaying radio text

You can display the currently received radio text and the three most recent radio text.

1 Touch "Text" to display radio text.

Radio text for the currently broadcasting station is displayed.

You can cancel radio text display by touching "ESC".

When no radio text is received, **No Text** is displayed.

2 Press the ◀◀ or ▶▶ button to recall the three most recent radio text.

Pressing the ◀◀ or ▶▶ button switches between the current and the three radio text data displays.

If there is no radio text data in memory the display will not change.

Storing and recalling radio text

You can store data from up to six radio text transmissions at touch keys **1 – 6**.

 
 
1 Display the radio text you want to store in memory.

☞ "Displaying radio text" → Page 81

2 Press and hold any of the keys **1 – 6** to store the selected radio text.

The memory number will display and the selected radio text is stored in memory.

The next time you press the same **1 – 6** button in the radio text display, the stored text is recalled from memory.






AV

RDS



Chapter 6

   Using the AV Source (Built-in DVD Drive and Radio)





AV


PTY list

General	Specific	Type of programme
News&INF	News	News
	Affairs	Current affairs
	Info	General information and advice
	Sport	Sports
	Weather	Weather reports/meteorological information
	Finance	Stock market reports, commerce, trading, etc.
	Popular	Pop Mus
Rock Mus		Contemporary modern music
Easy Mus		Easy listening music
Oth Mus		Non categorised music
Jazz		Jazz
Country		Country music
Nat Mus		National music
Oldies		Oldies music, golden oldies
Folk Mus		Folk music
Classics		L. Class
	Classic	Serious classical music
Others	Educate	Educational programmes
	Drama	All radio plays and serials
	Culture	National or regional culture
	Science	Nature, science and technology
	Varied	Light entertainment
	Children	Children's
	Social	Social affairs
	Religion	Religion affairs or services
	Phone In	Phone In
	Touring	Travel programmes, not for announcements about traffic problems
Leisure	Hobbies and recreational activities	
Document	Documentaries	

RDS

Chapter 6

 Using the AV Source (Built-in DVD Drive and Radio)



Using the AV Source (Pioneer AV Equipment)


AV

When Pioneer audio equipment is connected to the navigation system using IP-BUS, such equipment can be operated from the navigation system.

When reading this chapter, please also refer to the operation manual of the AV equipment connected to the navigation system.

Multi-CD Player

Listening a CD

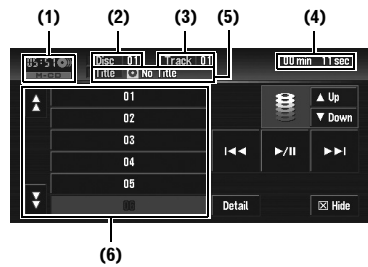

You can use the navigation system to control a multi-CD player, which is sold separately. These are the basic steps necessary to play a CD with your multi-CD player.

☞ "Advanced multi-CD player operation" → Page 84

- (1) **Source icon**
- (2) **Disc number indicator**
- (3) **Track number indicator**
- (4) **Play time indicator**
- (5) **Disc title, Disc artist, Track title and Track artist indicator**
When playing a CD TEXT disc, each Disc title, Disc artist, Track title or Track artist is displayed. Touch "**Disp**" repeatedly to switch these items. When using a normal music CD they are display as "**No Title**".
- (6) **Disc list display**

1 Touch "M-CD" in the AV Source screen to select the multi-CD player.

☞ "Selecting an AV source" → Page 25

2 Touch any of the keys 01 – 12 to select a disc you want to listen to.

If you want to select a disc located at 7 to 12, touch ▲ or ▼ to display 07 – 12.

You can also sequentially select a disc by touching **Up** or **Down**.

3 To skip back or forward to another track, touch ◀◀ or ▶▶.

Touching ▶▶ skips to the start of the next track. Touching ◀◀ once skips to the start of the current track. Touching again will skip to the previous track.

You can also skip back or forward to another track by pressing the ◀◀ or ▶▶ button.

4 To perform fast forward or rewind, keep touching ◀◀ or ▶▶.

You can also perform fast rewind/fast forward by keep pressing the ◀◀ or ▶▶ button.

- ☐ When the multi-CD player has performed the preparatory operations, **READY** is displayed.
- ☐ If the multi-CD player does not operate properly, an error message such as **ERROR-11** may be displayed. Refer to the multi-CD player owner's manual.
- ☐ If there are no discs in the multi-CD player magazine, **No Disc** is displayed.

Switching between the detail information display and the list display

You can switch the left side of the basic screen according to your preference.

1 Touch "Detail" (or "List").

Each touch of "**Detail**" (or "**List**") changes the detail information display or list display.

M-CD

Chapter 7

Using the AV Source
(Pioneer AV Equipment)

AV

List display



Detail information display



The marks shown below indicate the current playback status.

and repeat range: Displays the repeat range

Random

Scan


M-CD
Chapter 7

50-disc multi-CD player

Only those functions described in this manual are supported for 50-disc multi-CD players. (But the navigation system can perform the disc list display up to Disc 12 with a 50-disc multi-CD player.)

Advanced multi-CD player operation

Using the AV Source
(Pioneer AV Equipment)

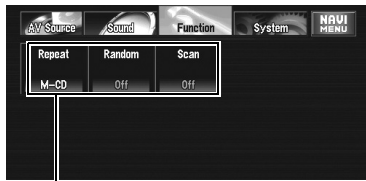

(1)

(1) Function display

➤ How to display the **Function** menu → Page 67

Repeating play

There are three repeat play ranges for the multi-CD player: **M-CD** (multi-CD player repeat), **Track** (one-track repeat) and **Disc** (disc repeat).

1 Touch "Repeat" in the Function menu.

Each touch of "Repeat" changes the settings as follows:

- **M-CD** – Repeat all discs in the multi-CD player
 - **Track** – Repeat just the current track
 - **Disc** – Repeat the current disc
- If you select other discs during repeat play, the repeat play range changes to **M-CD**.
- If you perform track search or fast forward/rewind during **Track**, the repeat play range changes to **Disc**.

Playing tracks in a random order

Random play lets you play back tracks in a random order within the repeat range, **M-CD** or **Disc**.

1 Select the repeat range.

➤ "Repeating play" → Page 84

2 Touch "Random" in the Function menu.

Touching "Random" switches between "On" and "Off".

Tracks will play in a random order within the previously selected **M-CD** or **Disc** ranges.

Scanning CDs and tracks

When the repeat play range is set to **Disc**, the beginning of each track on the selected disc plays for about 10 seconds. When the repeat play range is set to **M-CD**, the beginning of the first track of each disc is played for about 10 seconds.

1 Select the repeat range.

➤ "Repeating play" → Page 84

2 Touch "Scan" in the Function menu.

Touching "Scan" switches between "On" and "Off".


The first 10 seconds of each track of the current disc (or the first track of each disc) is played.

3 When you find the desired track (or disc) touch "Scan" to turn scan play off.

- After track or disc scanning is finished, normal playback of the tracks will begin again.

Hands-free Phoning

Hands-free phoning with mobile phones featuring Bluetooth technology

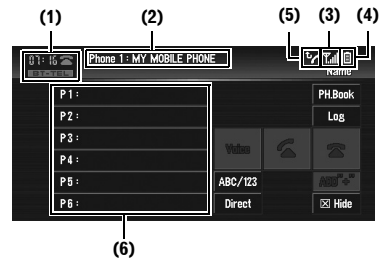

Connected with registered phone screen shown

If you use a Bluetooth adapter (e.g. CD-BTB200), you can connect a mobile phone featuring Bluetooth wireless technology to this unit for hands-free, wireless calls, even while driving. For details concerning operation, refer to the Bluetooth adapter's operation manual. This section provides brief information on the hands-free phoning operations with this unit that slightly differs or is cut short from the operations described in the Bluetooth adapter's operation manual.

- Since this unit is always on standby to connect with your mobile phones via Bluetooth wireless technology, using this unit without running the engine can result in battery drainage.

(1) Source icon

(2) Device name indicator

(3) Signal level indicator

- If the signal is not available, (Tx) is displayed.
- Depending on the mobile phones featuring Bluetooth technology, this indicator may not show on the screen.

(4) Battery strength indicator

- Battery strength indicator may differ from the actual battery strength.
- Depending on the mobile phones featuring Bluetooth technology, this indicator may not show on the screen.

AV

BT-TEL
Chapter 7
Using the AV Source
(Pioneer AV Equipment)

(5) Missed call notice indicator**AV (6) Preset list display**

- This navigation system's phone call reception is always on standby when the ignition switch is set to ACC or ON.
- The line-of-sight distance between this navigation system and your mobile phone must be 10 meters or less when sending and receiving voice and data via Bluetooth technology. However, the transmission distance may become shorter than the estimated distance, depending on the environment in use.
- When **BT-TEL** is selected as a source, equaliser curves are automatically changed to suitable settings for the phone source. When the source is changed or returned to another source, equaliser settings automatically return to the original settings.
- When **BT-TEL** is selected as a source, functions other than **FAD/BAL** are inoperable in the Sound menu.

BT-TEL

Chapter 7Using the AV Source
(Pioneer AV Equipment)**About the telephone source standby mode**

Once connected via Bluetooth wireless technology, this navigation system will remain on telephone source standby in the background while the connection is sustained. This means you can freely use the other functions of this system but still be ready to receive a call.

Setting up for hands-free phoning

Before you can use the hands-free phoning function you will need to set up the navigation system for use with your mobile phone. This entails establishing a Bluetooth wireless connection between the system and your phone, registering your phone with the system and adjusting the volume level.

1 Connection

Your phone should already be temporarily connected. However, to make best use of the functions, we recommend you register the phone to the navigation system.

- ☞ "Connecting a mobile phone" → Page 90

2 Registration

Register the phone to take full advantage of the features available with Bluetooth wireless technology.

- ☞ "Registering your mobile phone" → Page 91

3 Adjust the volume level

Adjust the volume on your mobile phone and the navigation system for comfort.

- The caller's voice volume and ring volume may vary depending on the type of the mobile phone.
- If the difference between the ring volume and caller's voice volume is large, the overall volume level may become unstable.
- Before disconnecting mobile phone from this navigation system, make sure to adjust the volume to a proper level.

Making a call by entering phone number

The most basic way to make a call is to simply dial the number.

1 Touch "BT-TEL" in the AV Source screen to select the mobile phone source.


- ☞ "Selecting an AV source" → Page 25

2 Touch "Direct".

The direct dial screen appears.

3 Touch the number keys to enter the phone number.

The input phone number is displayed below the device name.

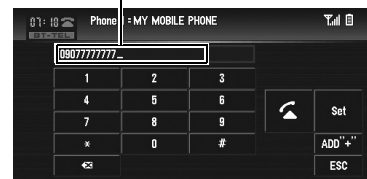Input number**"ADD "+"**

Adds or deletes + before the phone number.



The input number is deleted letter by letter from the end of the number. Continuing to press deletes all of the numbers.

“Set”:

Change to the preset dial list screen. You can assign the input number to the preset dial list.


- ▷ “Registering phone numbers to the preset dial list” → Page 87

“ESC”:

Return to the previous screen.

4 Touch  to make a call.

- The estimated call time appears in the display.
- The estimated call time in the display may differ from the actual call time.

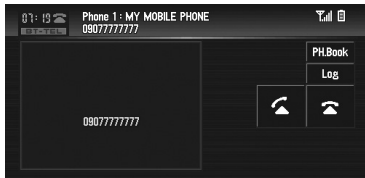

- The name (if registered on the phone book) and phone number are displayed.

5 Touch  to end the call.**Making a call from the history list**



The most recent calls made (dialed), received and missed are stored in the call history list. You can browse the call history list and call numbers from it.

- Up to 12 calls are stored in each list.
- The call history is stored only when the registered phone is connected to this navigation system.

1 Touch “Log”.

The history list screen appears.

2 Touch “Log” to change the list.

- Each touch of “Log” changes the lists as follows:
Missed calls list – Dialed calls list – Received calls list
- Touching  or  switches to the next or previous page in the list.

3 Touch the desired phone number.

- Touching “ADD ”+” adds or deletes + before the phone number.
- Each touch of “ABC/123” changes the display on the list between the name and the phone number.
- If the name is not registered in the phone book “No Name” will be displayed.
- If an incoming call number is not available to display, “-” will be appear instead of the number.

4 Touch  to make a call.

- The estimated call time appears in the display.
- The estimated call time in the display may differ from the actual call time.

5 Touch  to end the call.**Making a call from the preset dial list**

You can easily store up to 6 phone numbers and later recall them with the touch of a preset key.

Registering phone numbers to the preset dial list**1 Select or input a phone number you want to assign to the preset dial list.**

- ▷ Input the number directory → Page 86
- ▷ Use the call history list → Page 87
- ▷ Use the phone book → Page 88

2 Touch and hold one of preset keys P1 to P6 until the beep sounds.

The selected phone number is stored in memory. The next time you touch the same preset keys, the phone number is recalled from memory.

- If a phone number other than registered in the phone book is stored in the preset, “No Name” will be displayed.
- If a phone book entry is edited after the entry is stored in the preset dial list, the edit will not be reflected to the list.

AV

BT-TEL

Chapter 7

Using the AV Source
(Pioneer AV Equipment)

AV

Calling a number in the preset dial list

1 Touch one of preset keys P1 to P6.

The phone number registered to the selected preset key is displayed.

- Touching "ADD "+"+" adds or deletes + before the phone number.
- Each touch of "ABC/123" changes the display on the list between the name and the phone number.

2 Touch to make a call.

- The estimated call time appears in the display.
- The estimated call time in the display may differ from the actual call time.

3 Touch to end the call.


Calling a number in the phone book



After finding the entry in the phone book you want to call, you can select the number and make the call.

- Before using this function, you need to transfer the phone book in your mobile phone to this navigation system.
- ☞ "Transferring the phone book" → Page 92

1 Touch "PH.Book".

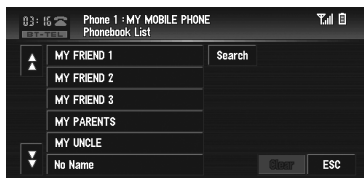The phone book list screen appears.



- Touching  or  switches to the next or previous page in the list.
- You can search the phone book entry by alphabet.
- ☞ "Searching the phone book entry by alphabet" → Page 88

2 Touch a phone book entry you want to call.

The detailed list of the selected entry appears.

3 Touch a number you want to call.

- Touching "ADD "+"+" adds or deletes + before the phone number.

4 Touch to make a call.

- The estimated call time appears in the display.
- The estimated call time in the display may differ from the actual call time.

5 Touch to end the call.

Searching the phone book entry by alphabet

If there are many entries in the phone book list, it can be useful to display them in the alphabetical order for easier searching.

1 Touch "PH.Book".

The phone book list screen appears.

2 Touch "Search".

The phone book search screen appears.



3 Input the first letter of the entry in the phone book list you want to search, then touch "OK".

The phone book list screen reappears. The search result is reflected, and the matched entry in the phone book list is displayed.

- If no entry is found by the search, "No Data" is displayed and "OK" is inactive.
- Touching "Clear" resets the search result and displays the original phone book list.

The characters contained in "Next" in the phone book edit screen are treated in the same way as other alphabets when searching. For example, when you use such as "A", "a" or "Å" the result to come out is the same.

BT-TEL

Chapter 7

Using the AV Source
(Pioneer AV Equipment)

Making a call via voice recognition

If your mobile phone features voice recognition technology, you can make a call by voice commands.

- This function is available only if your mobile phone features voice recognition function.
- Operation varies depending on the type of your mobile phone. For more details concerning operation, refer to the instruction manual of your mobile phone.
- This function can be operated only when the connection is established by HFP (Hands Free Profile).

1 Touch "Voice".

Voice recognition function of the mobile phone is now ready.

- If your mobile phone does not feature voice recognition function, No voice dial appears in the display and operation is not available.

2 Pronounce the name of your contact.

For more details concerning the voice recognition operation, refer to your mobile phone's instruction manual.

Taking a phone call

Answering an incoming call

Even when a source other than **BT-TEL** is selected, you can still answer an incoming call.

1 When a call comes in, touch .

The estimated call time appears in the display.

- The estimated call time in the display may differ from the actual call time.
- If a phone call comes in while in the navigation map screen, the message will appear on the bottom of the display.
- You can set this navigation system to automatically answering incoming calls.
- "Setting the automatic answering" → Page 94

2 To end the call, touch .

- You may hear a noise when you disconnect the phone.

Answering call waiting

If a call comes in while you are talking on the phone, the number of the new caller appears in the display to signal that you have call waiting. You can put the first caller on hold while you answer the call waiting.

1 Touch to answer call waiting.

2 Touching switches between callers on hold.

3 Touch to end the call(s).

- Depending on the mobile phone that is connected to this navigation system via Bluetooth technology, the first caller will be kept on hold.

Rejecting call waiting

If you would rather not interrupt your current call to answer call waiting, you can reject it and have the number added to the missed call history list.

1 Touch to reject call waiting.

Rejecting an incoming call

You can reject an incoming call.

- If you want to set this navigation system to automatically rejecting all incoming calls, refer to "Setting the automatic rejecting" → Page 94

1 When a call comes in, touch .

The call is rejected.

- The rejected call is recorded in missed call history list.
- "Making a call from the history list" → Page 87

AV

BT-TEL

Chapter 7

Using the AV Source
(Pioneer AV Equipment)

AV Advanced hands-free phoning operation



(1)

(1) Function display

- ☞ How to display the **Function** menu → Page 67
- ☐ When your mobile phone is not connected, you cannot select "**Phonebook Transfer**" or "**Clear Memory**".
- ☐ You can only select "**Echo Cancel**" while transmitting or receiving a call, or during conversation.

Connecting a mobile phone

To use a phone wirelessly with the navigation system, it is necessary first to establish a connection using Bluetooth wireless technology. There are several ways you can do this.

- ☐ Connection is normally established by HFP (Hands Free Profile), which gives you full control of functions available on the telephone source. However, in some cases when you make connection from your mobile phone, the connection may be made by HSP (Head Set Profile) and several functions may not be available.
- ☐ A phone may be connected via Bluetooth wireless technology but not yet registered with the navigation system. In this case it is said to be temporarily connected, and the available features are limited. To take full advantage of all the features available, we recommend you register your phone with this navigation system. The limited features are;
 - Preset dial list
 - Call history list
 - Phone book

☞ "Registering your mobile phone" → Page 91


- ☐ If "**Auto Connect**" is set to "**On**", mobile phone that has already been registered is connected automatically.
- ☞ "Setting the automatic connection" → Page 95

Using a mobile phone to initiate a connection

Putting the navigation system in Connection open mode allows you to establish a Bluetooth wireless connection from your mobile phone.

1 Touch "Phone Connect" in the Function menu.

The phone connection menu screen appears.

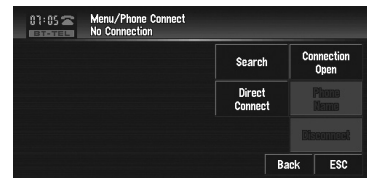

2 Touch "Connection Open".

"Pairing" is flash in the display.

3 Use a mobile phone to connect to the navigation system.

Connection to the mobile phone starts. When the connection is established, the device name of the connected mobile phone is displayed.

- ☐ Operation varies depending on the type of your mobile phone. Refer to the instruction manual that came with your mobile phone for detailed instructions.
- ☐ To complete the connection, please check the device name (**Pioneer BT Unit**) and enter the PIN code (**0000**) on your mobile phone.
- ☞ "Editing the PIN code" → Page 109

Searching for available mobile phones

You can have the navigation system search for any available phones in the area that have Bluetooth wireless technology, then select which one you want to connect to from a list displayed onscreen.

1 Touch "Phone Connect" in the Function menu.

The phone connection menu screen appears.

2 Touch "Search".

When available mobile phones featuring Bluetooth wireless technology are found, device names are displayed.

- While Searching, "Search" is flash in the display.
- If the navigation system fails to find any available mobile phones, **Phone Not Found** is displayed.
- Touching "Phone Name" changes the list between the device name and the BD address.

3 Touch a device name you want to connect.

Connection to the mobile phone starts. When the connection is established, the device name of the connected mobile phone is displayed.

- To complete the connection, you may need to enter the PIN code (**0000**) on your mobile phone.
- ☞ "Editing the PIN code" → Page 109

Connecting to a registered mobile phone

Once your phone is registered with the navigation system, it is a simple matter to establish a Bluetooth wireless connection when a registered phone is within range.

1 Touch "Phone Connect" in the Function menu.

The phone connection menu screen appears.

2 Touch "Direct Connect".

The registered phone list is displayed.

3 Touch a device name you want to connect.


Connection to the mobile phone starts. When the connection is established, the device name of the connected mobile phone is displayed.

Registering your mobile phone

You can register a phone that is temporarily connected to the navigation system in order to take full advantage of the features available with Bluetooth wireless technology. A total of five phones can be registered: three user mobile phones and two guest phones. When registered as a user phone, all the possible functions are available for use. When registered as a guest phone, some functions are limited.

1 Touch "Phone Register" in the Function menu.

The phone register screen appears.

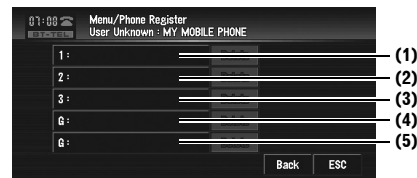

(1) 1: User phone 1

(2) 2: User phone 2

(3) 3: User phone 3

(4) G: Guest phone 1

(5) G: Guest phone 2

2 Touch and hold "1:" – "3:" or "G:".

When the registration is completed, the device name is displayed.

Displaying BD (Bluetooth Device) address

Each device featuring Bluetooth technology is allocated a unique 48-bit device address. It consists of a 12-digit of hexadecimal string. This navigation system can display the BD address of your registered mobile phone featuring Bluetooth technology.

1 Touch "Phone Connect" in the Function menu.

The phone connection menu screen appears.

AV

BT-TEL

Chapter 7

Using the AV Source
(Pioneer AV Equipment)

2 Touch "Phone Name".

The 12-digit hexadecimal string is displayed.

- Without connecting, you cannot select "**Phone Name**". Connect your mobile phone first.
- ⇒ "Connecting a mobile phone" → Page 90

Disconnecting a mobile phone

When you are done using your phone with the navigation system, you can close the Bluetooth wireless connection.

1 Touch "Phone Connect" in the Function menu.

The phone connection menu screen appears.

2 Touch "Disconnect".

After the disconnection is completed, **No connection** is displayed.

Deleting a registered phone

If you no longer need to use a registered phone with the navigation system, you can delete it from the registration assignment to free it for another phone.

- If a registered phone is deleted, all the phone book entries and call history lists correspond to the phone will be also cleared.

1 Touch "Phone Register" in the Function menu.

The phone register screen appears.

2 Touch "Delete" on the right-hand side of the device name of the mobile phone you want to delete.

The deletion confirmation message appears.

3 Touch "Yes".

The registered phone is deleted.

- When not deleting a registered phone, select "**No**".

Transferring the phone book

You can transfer the numbers in a registered user phone's address book into the phone book.

- If a guest phone is connected to this navigation system via Bluetooth technology, this function cannot be selected.

- With some mobile phones, it may not be possible to transfer the entire phone book at once. In this case, transfer addresses one at a time from your phone book using your mobile phone.
- The phone book can hold a total of 500 entries;
 - User phone 1: 300 entries
 - User phone 2: 150 entries
 - User phone 3: 50 entries
- Each entry can hold up to 5 phone numbers.
- Depending on the mobile phone that is connected to this navigation system via Bluetooth technology, this navigation system may not be able to display the phone book correctly. (Some characters may be garbled.)
- If the phone book in the mobile phone contains image data, phone book may not be correctly transferred.


1 Touch "Phonebook Transfer" in the Function menu.

The phonebook transfer screen appears.

- Hands-free phoning connection is disconnected to establish the connection for phone book transfer. The navigation system now ready to be transferred the phone book from the phone.

2 Use mobile phone to perform phone book transfer.

The phone book in the mobile phone is transferred to the navigation system. Transfer progress is displayed.

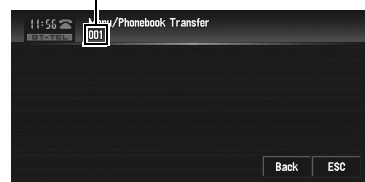Number of completed transfers

Completed is displayed when the phone book transfer is finished.

- If all the phone book entries are not transferred at a time, repeat Step 2 to transfer the phone book entries one by one.

Changing the phone book display order

You can choose to display the phone book sorted alphabetically by first name or family name.

- This function is available while the registered phone is connected.

1 Touch "Phonebook Name View" in the Function menu.

Touching "Phonebook Name View" switches between "Invert" and "Original".




- If a phone book entry is edited, the display order of first name and family name will not be changed.
- With some mobile phones, this feature may not be possible.

Editing the phone book

You can edit the phone numbers or names registered in the phone book.

1 Touch "PH.Book".


The phone book list screen appears.

- Touching  or  switches to the next or previous page in the list.
- You can search the phone book alphabetically.
-  "Searching the phone book entry by alphabet" → Page 88

2 Touch a phone book entry you want to edit.

The detailed list of the selected entry appears.

3 Touch "Edit" on the right-hand side of the phone number or the name of the information you want to edit.

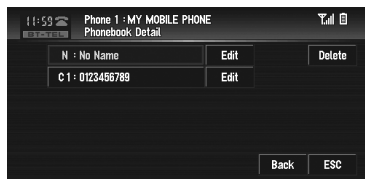

The phone number edit screen or the name edit screen appears.

4 Input the text or number.

Phone number edit screen

You can input numbers.



"ADD "+"

Adds or deletes + before the phone number.

The input number is deleted letter by letter from the end of the numbers. Continuing to press deletes all of the numbers.

"OK":

The change is fixed, and the phone book edit screen reappears.

Name edit screen

You can input letters or numbers.



"Next":

Each touch of the "Next" changes the characters that can be input as follows:

Upper case letters – lower case letters – upper case symbols – lower case symbols

The input text is deleted letter by letter from the end of the text. Continuing to press deletes all of the text.

"OK":

The change is fixed and the phone book edit screen reappears.

- Each name can be input 16 characters long.

AV

BT-TEL

Chapter 7

Using the AV Source
(Pioneer AV Equipment)

AV


Clearing memory

You can clear the memory of each item that corresponds to the connected mobile phone: phone book, dialled/received/missed call history list and preset dials.

1 Touch "Clear Memory" in the Function menu.

The clear memory screen appears.

2 Touch "Clear" on the right-hand side of the item that you want to clear memory for.

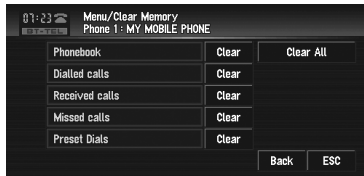

On this screen, you can select the following items:

Phonebook:

You can clear the registered phone book.

Dialled Calls:

You can clear the dialled call history list.

Received Calls:

You can clear the received call history list.

Missed Calls:

You can clear the missed call history list.

Preset Dials:

You can clear the registered preset dials.

- Touching "**Clear**" displays the confirmation message for clearing the memory.
- Touching "**Clear All**" clears all the data that correspond to the connected mobile phone.

3 Touch "Yes".

Data on the selected item is cleared from this navigation system's memory.

- If you do not want to clear memory that you have selected, touch "**No**".

Setting the automatic answering

If you set the automatic answering function on, the navigation system automatically answers all incoming calls.

1 Touch "Auto Answer" in the Function menu.

Touching "**Auto Answer**" switches between "**On**" and "**Off**".

Setting the automatic rejecting

If this function is on, the navigation system automatically rejects all incoming calls.

1 Touch "Refuse All Calls" in the Function menu.

Touching "**Refuse All Calls**" switches between "**On**" and "**Off**".

- If both the automatic reject and automatic answer functions are set to **On**, automatic reject is prioritised and all incoming calls are automatically rejected.
- If the "**Refuse All Calls**" is set to **On**, rejected incoming calls will not be stored in the missed call list.

Setting a ring tone

The navigation system offers to turn the ring tone for incoming calls on or off.

- The ring tone you select for this navigation system has no effect on the ring tone used by your phone. If you do not want your phone and this navigation system to ring at the same time, we recommend you turn the ring tone off for one or the other.

1 Touch "Ring Tone" in the Function menu.

Touching "**Ring Tone**" switches between "**On**" and "**Off**".

BT-TEL

Chapter 7

Using the AV Source
(Pioneer AV Equipment)

Setting the automatic connection

When automatic connection is active the navigation system will automatically establish a connection with a registered phone when it comes into range. Using this feature will release you from all of the processes for establishing a connection.

- With some mobile phones, it may not be possible to perform automatic connection.

1 Touch "Auto Connect" in the Function menu.

Touching "Auto Connect" switches between "On" and "Off".

- Automatic connection is performed in the registration number order.

Echo cancelling and noise reduction

When you are operating hands-free phoning in the vehicle, you may hear an undesired echo. This function reduces the undesired echo and noise while you are doing hands-free phoning, and maintains a certain sound quality.


1 Touch "Echo Cancel".

Touching "Echo Cancel" switches between "On" and "Off".

iPod

Operating the iPod

Music

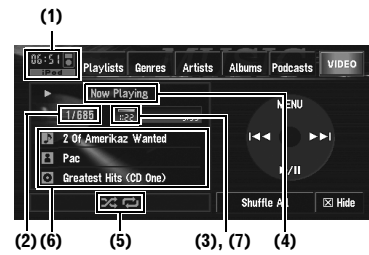

You can control an iPod by combining the iPod cable (CD-I200) (sold separately) to the navigation system. For details concerning operation, refer to the iPod's owner's manual. This section provides information on iPod operations with the navigation system that differ from those described in the iPod's owner's manual.

- ▷ "Advanced iPod operation" → Page 97
- Some functions cannot be reproduced depending on the generation of the iPod.

(1) Source icon

(2) Track number indicator

(3) Play time indicator

(4) Play/pause indicator

(5) Repeat/Shuffle indicator

The marks shown below indicate the current playback status.

- : All-tracks repeat
- : One-track repeat
- : Shuffle

(6) Song title, Artist name and Album title indicator

Displays the song title, artist name and album title.

- : Song title
- : Artist name
- : Album title

(7) Play time bar

1 Touch "iPod" in the AV Source screen to select the iPod.

- ▷ "Selecting an AV source" → Page 25

AV

iPod

Chapter 7

Using the AV Source
(Pioneer AV Equipment)



AV

2 To skip backward or forward to another track, touch ◀◀ or ▶▶.

Touching ▶▶ skips to the start of the next track. Touching ◀◀ once skips to the start of the current track. Touching again will skip to the previous track. You can also skip backward or forward to another track by pressing the ◀◀ or ▶▶ button.

3 To perform fast backward or forward, keep touching ◀◀ or ▶▶.

You can also perform fast backward/fast forward by keep pressing the ◀◀ or ▶▶ button.

Pausing track playback

Pause lets you temporarily stop track playback.

1 Touch ▶||.

Play of the current track pauses.


- To resume playback at the same point that you turned pause on, touch ▶|| again.

Browsing for a song

The operations of this navigation system for controlling an iPod are designed to imitate iPod operation. This allows you to search and play songs as you would with an iPod.

1 Touch one of the categories in which you want to search for a song.

- **Playlists** (playlists)
- **Genres** (genres)
- **Artists** (artists)
- **Albums** (albums)
- **Podcasts** (podcasts)

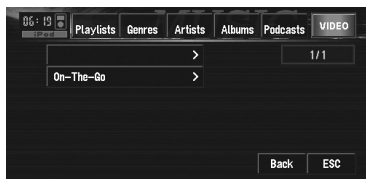

The search screen is displayed.

- When connected to an iPod that can handle podcasts, you can search by podcast.
- When you select **Artists**, **Albums**, or **Genres** keep touching one of the list in the category makes the songs in the list as a playlist and start playing.

2 Touch the item you want to refine.

- Refine the item until the track title is displayed on the list.

3 From the track list, touch the track you want to play.

- To go to the next track list, touch ▾.
- To return to the previous track list, touch ▲.
- When the iPod operation screen appears after selecting a song, touch **"MENU"** to display the track list in step 3.

Performing random play with one touch

All of the selected songs can be played at random by only touching one key.

1 Touch "Shuffle All".

To cancel the random play, switch **"Shuffle"** to **"Off"** in the **Function** menu.

Playing video

This navigation system can play video if an iPod with video capabilities is connected. However, only the following touch keys can be used for operation: ▶||, ◀◀ and ▶▶. Use the iPod to operate other functions.

- Change the video setting on the iPod so that the iPod can output the video to an external device, before you display the video screen.
- For details concerning setting and operation, refer to the iPod's owner's manual.

1 Touch "VIDEO".

Touch **"Music"** in step 2 to return to the music operation screen.


2 Touch the screen to display to touch panel keys.



iPod

Chapter 7

 Using the AV Source (Pioneer AV Equipment)



3 To skip back or forward to another video, touch ◀◀ or ▶▶.

Touching ▶▶ skips to the start of the next video. Touching ◀◀ once skips to the start of the current video. Touching again will skip to the previous video. You can also skip back or forward to another track by pressing the ◀◀ or ▶▶ button.

4 To perform fast forward or rewind, keep touching ◀◀ or ▶▶.

You can also perform fast rewind/fast forward by keep pressing the ◀◀ or ▶▶ button.

Pausing video playback


Pause lets you temporarily stop video playback.

1 Touch ▶||.

Play of the current video pauses.

- To resume playback at the same point that you turned pause on, touch ▶|| again.

Advanced iPod operation

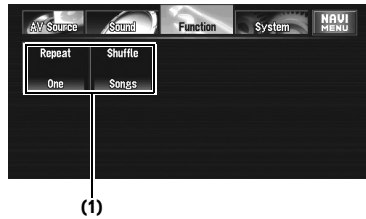

(1) Function display

☞ How to display the **Function** menu → Page 67

Repeating play

There are two repeat play types for the iPod: **One** (one-track repeat) and **All** (all-tracks repeat).

1 Touch "Repeat" in the Function menu.

Each touch of "**Repeat**" changes the settings as follows:

- **One** – Repeat just the current track
- **All** – Repeat all tracks in the selected list

Shuffle play

This function shuffles tracks or albums and plays them in random order.

1 Touch "Shuffle" in the Function menu.

Each touch of "**Shuffle**" changes the settings as follows:

- **Off** – Does not shuffle.
- **Songs** – Shuffles tracks.
- **Albums** – Shuffles albums.
- When you set "**Albums**", the albums are shuffled but the tracks in the album will not be shuffled (The tracks in the album will be played from the first track).

Turning on or off charging for the iPod

The iPod charging setting can be turned on or off. If the video from an iPod with video capabilities seems fuzzy, turning off the charging setting may improve the video quality.

1 Touch "iPod Charge" in the Function menu.

Touching "**iPod Charge**" switches between "**On**" or "**Off**".

AV

iPod

Chapter 7

Using the AV Source
(Pioneer AV Equipment)

Bluetooth Audio

Listening to songs on BT Audio (Bluetooth audio player)



If you connect a Bluetooth adapter (e.g. CD-BTB200) to this unit, you can control a Bluetooth audio player via Bluetooth wireless technology. For details concerning operation, refer to the Bluetooth adapter's operation manual. This section provides brief information on Bluetooth audio player operations with this unit that slightly differs or is cut short from the operations described in the Bluetooth adapter's operation manual.

- ❑ Even if your audio player does not contain a Bluetooth module, you can still control it from this unit via Bluetooth wireless technology. To control your audio player by using this unit, connect a product featuring Bluetooth wireless technology (available on the market) to your audio player and connect Bluetooth adapter (e.g. CD-BTB200) to this unit.
- ❑ Depending on the Bluetooth audio player connected to this navigation system, the available operations with this navigation system are limited to the following two levels:
 - Lower level: Only playing back songs on your audio player is possible.
 - Higher level: Playing back, pausing, selecting songs, etc., are possible (all the operations illustrated in this manual).
- ❑ Since there are a number of Bluetooth audio players available on the market, operations with your Bluetooth audio player using this navigation system vary greatly in range. Please refer to the instruction manual that came with your Bluetooth audio player as well as this manual while operating your player on this navigation system.

- ❑ Information about songs (e.g. the elapsed playing time, song title, song index, etc.) cannot be displayed on this navigation system.
- ❑ While you are listening to songs on your Bluetooth audio player, please refrain from operating your mobile phone as much as possible. If you try operating on your mobile phone, the signal from your mobile phone may cause a noise on the song playback.
- ❑ When you are talking on the mobile phone connected to this navigation system via Bluetooth wireless technology, the song playback from your Bluetooth audio player connected to this navigation system is muted.
- ❑ Even if you switch to another source while listening to a song on your Bluetooth audio player, the playback of song continues to elapse.
- ❑ Depending on the Bluetooth audio player you connected to this navigation system, operations on this navigation system to control the player may differ from those explained in this manual.

(1) Source icon

(2) Device name

Touching "Name" switches between equipment name and BD address.

1 Touch "BT-AUDIO" in the AV Source screen to select the Bluetooth audio source.

➤ "Selecting an AV source" → Page 25

- ❑ For this navigation system to control your Bluetooth audio player it needs to establish a Bluetooth wireless connection. (Refer to "Connecting a Bluetooth audio player" on page 99.)

2 Touch ►.

Playback starts.

3 To skip back or forward to another track, touch ◀◀ or ▶▶.

Touching ▶▶ skips to the start of the next track. Touching ◀◀ once skips to the start of the current track. Touching it again will skip to the previous track.

4 To perform fast forward or reverse, keep touching ◀◀ or ▶▶.

5 To stop playback, touch ■.

Pausing track playback


Pause lets you temporarily stop track playback.

1 Touch ■.

Play of the current track pauses.

- ☐ To resume playback at the same point that you turned pause on, touch ■ again.

Advanced BT-Audio operation

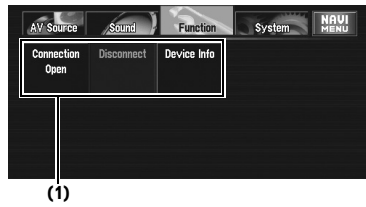

(1) Function display

- ☞ How to display the **Function** menu → Page 67

Connecting a Bluetooth audio player

1 Touch “**Connection Open**” in the **Function** menu to turn the connection open on.

Pairing is displayed. This navigation system is now on standby for connection from Bluetooth audio player.

If your Bluetooth audio player is set ready for Bluetooth wireless connection, the connection to this navigation system will be automatically established.

- ☐ Before you can use audio players you may need to enter the PIN code into this navigation system. If your player requires a PIN code to establish a connection, look for the code on the player or in its accompanying documentation. Enter the PIN code referring to page 90.

Disconnecting a Bluetooth audio player

1 Touch “**Disconnect**” in the **Function** menu.

After the disconnection is completed, **No Connection** is displayed.

Displaying BD (Bluetooth Device) address

1 Touch “**Device Info**” in the **Function** menu to display the **BD** address.

Various information regarding the bluetooth wireless technology are displayed.

- **BD ADDRESS** (system address)
- **SYSTEM NAME** (system name)
- **SYSTEM VER.** (version)
- **BT MODULE VER.** (Bluetooth module version)

AV

BT-AUDIO


Chapter 7

Using the AV Source
(Pioneer AV Equipment)

External Unit

AV

Operating the external unit

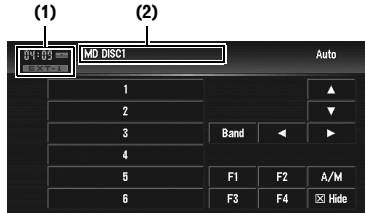

The term "external unit" refers to a Pioneer product (such as one available in the future) that, although incompatible as a source, enables control of basic functions by the navigation system. Two external units can be controlled by the navigation system. When two external units are connected, the navigation system allocates them to external unit 1 or external unit 2.

For details concerning operation, refer to the external unit's operation manual. This section provides information on external unit operations with the navigation system that differ from those described in the external unit's operation manual.

- Operation varies depending on the external unit connected. (In some cases, the external unit may not respond.)

(1) Source icon

(2) External unit indicator

1 Touch "EXT-1" or "EXT-2" in the AV Source screen to select the external unit.

☞ "Selecting an AV source" → Page 25

2 Touch any touch panel key to operate the external unit.

Operate the external unit by using 1 KEY – 6 KEY

The external unit can be operated by transmitting the operating commands set to **1 KEY – 6 KEY**.

- Operation varies depending on the external unit connected. (In some cases, the external unit may not respond.)

1 Touch desired key ("1 KEY" – "6 KEY") to operate the external unit.

Operate the external unit by using F1 – F4

The external unit can be operated by transmitting the operating commands set to **F1 – F4**.

- The operating commands set to **F1 – F4** vary depending on the external unit.
- Some functions may not be used until you touch and hold the key.

1 Touch "F1" – "F4".

The operation command is transmitted to the external unit.

Switching the automatic and manual function

You can turn automatic and manual function on or off.

You can switch between **Auto** and **Manual** functions of the external unit connected.

Initially, this function is set to **Auto**.

- Operating commands set for **Auto** and **Manual** operations vary depending on the external unit connected.

1 Touch "A / M".

Touching "**A / M**" switches between "**Auto**" and "**Manual**".

EXT

Chapter 7

Using the AV Source
(Pioneer AV Equipment)



AV Input (AV)

CAUTION



- **For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, you must stop in a safe place and put on the handbrake before setting your route (see page 10 Interlock for details).**

Selecting AV as the source

1 Touch "AV-1" or "AV-2" in the AV Source screen to select AV as the source.

When the source icon is not displayed, you can display it by touching the screen.

  - ↳ "Selecting an AV source" → Page 25
- If you want to switch AV source, select **"Video"** in **"AV1 Input"** or **"AV2 Input"**.
- ↳ "Setting the video input" → Page 110






AV

AV


Chapter 7

   Using the AV Source
(Pioneer AV Equipment)







AV

 

AV

Chapter 7

  Using the AV Source
(Pioneer AV Equipment)




Customising the Audio Source Setting

AV

Various settings are available with the audio source according to your audiovisual requests. This chapter describes the methods of changing the various settings and how to set of the LCD panel.

Audio Adjustments

Introduction to audio adjustments

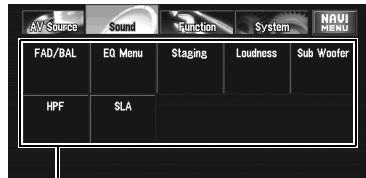

(1)

(1) Sound display

☞ How to display the **Sound** menu → Page 67

Only when the subwoofer controller setting is **Preout Full, Non Fading** will be displayed instead of **Sub Woofer**.

☞ "Setting the rear output and subwoofer controller" → Page 109

When selecting the FM tuner as the source, you cannot switch to "SLA".

Using the equaliser

The equaliser lets you adjust the equalisation to match vehicle interior acoustic characteristics as desired.

Recalling equaliser curves

There are seven stored equaliser curves which you can easily recall at any time. Here is a list of the equaliser curves:

Equaliser curve

S.Bass

S.Bass is a curve in which only low-pitched sound is boosted.

Powerful

Powerful is a curve in which low-pitched and high-pitched sounds are boosted.

Natural

Natural is a curve in which low-pitched and high-pitched sounds are slightly boosted.

Vocal

Vocal is a curve in which the midrange, which is the human vocal range, is boosted.

Flat

Flat is a flat curve in which nothing is boosted.

Custom1

Custom1 is an adjusted equaliser curve that you create.

Custom2

Custom2 is an adjusted equaliser curve that you create.

1 Touch "EQ Menu" in the Sound menu.

2 Select the desired equaliser curve.

- Custom1** and **Custom2** are adjusted equaliser curves.
- When **Flat** is selected, no supplement or correction is made to the sound. This is useful to check the effect of the equaliser curves by switching alternatively between **Flat** and a set equaliser curve.

Using balance adjustment

You can select a fader/balance setting that provides an ideal listening environment in all occupied seats.

1 Touch "FAD/BAL" in the Sound menu.

When the rear output setting is **Rear SP Sub. W. Balance** will be displayed instead of **FAD/BAL**.

- ☞ "Setting the rear output and subwoofer controller" → Page 109

AV

2 Touch ▲ or ▼ to adjust front/rear speaker balance.

Each time you touch ▲ or ▼ moves the front/rear speaker balance towards the front or the rear.

Front:15 to **Rear:15** is displayed as the front/rear speaker balance moves from front to rear. Both **Front:0** and **Rear:0** are the proper setting when only two speakers are used.

When the rear output setting is **Rear SP Sub. W**, you cannot adjust front/rear speaker balance.

☞ "Setting the rear output and subwoofer controller" → Page 109

3 Touch ◀ or ▶ to adjust left/right speaker balance.


Each time you touch ◀ or ▶ moves the left/right speaker balance towards the left or the right.

Left:9 to **Right:9** is displayed as the left/right speaker balance moves from left to right.

Adjusting equaliser curves

You can adjust the currently selected equaliser curve setting as desired. Adjusted equaliser curve settings are memorised in **Custom1**.

- If you make **Custom2** adjustments, **Custom2** curve is updated.
- You can adjust the centre frequency, level and the Q factor (curve characteristics) of each currently selected curve band (**Low/Mid/High**).

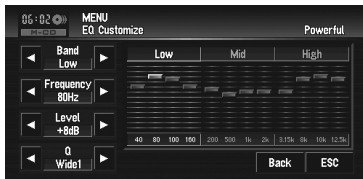

- **Band:**
You can select the equaliser band.
- **Frequency:**
You can select which frequency to be set as the centre frequency.
- **Level:**
You can select the decibel (dB) level of the selected EQ.
- **Q:**
You can select the details of the curve characteristics.

1 Touch "EQ Menu" in the Sound menu.

2 Touch "Customize".

3 Touch ◀ or ▶ to select the equaliser band to adjust.

Each time you touch ◀ or ▶ selects equaliser bands in the following order:

Low – Mid – High

4 Touch ◀ or ▶ to select the desired frequency.

Touch ◀ or ▶ until the desired frequency appears in the display.

Low: 40 – 80 – 100 – 160 (Hz)

Mid: 200 – 500 – 1K – 2K (Hz)

High: 3.15K – 8K – 10K – 12.5K (Hz)

5 Touch ◀ or ▶ to adjust the level of the equaliser band.

Each time you touch ◀ or ▶ increases or decreases the level of the equalisation band.

+12 to **-12** is displayed as the level is increased or decreased.

6 Touch ◀ or ▶ to select the desired Q factor.

Touch ◀ or ▶ until the desired Q factor appears in the display.

Wide2 – Wide1 – Narrow1 – Narrow2

- ☐ If you make adjustments, **Custom1** curve is updated.

Setting the simulated sound stage

You can select the desired effect from various simulated sound stage, such as Music Studio or Dynamic Theatre. You can also adjust a listener positioning effect.

Setting a stage that fits your image

1 Touch "Staging" in the Sound menu.

2 Touch the desired stage setting.

- ☐ The "**Living Room**" setting that emphasises midrange sound hardly has any effect near the maximum volume level.
- ☐ When you set staging other than "**Off**", the high pass filter (**HPF**) setting turns "**Off**".

☞ "Using the high pass filter" → Page 105

Audio Adjustments

Chapter 8

Customising the Audio Source Setting

Adjusting a position effect

You can select a listener position that you want to make as the centre of sound effects.

- 1 Touch **"Staging"** in the **Sound** menu.
- 2 Touch **"Position"**.
- 3 Touch the desired position.

Adjusting loudness

Loudness compensates for deficiencies in the low- and high-sound ranges at low volume.

- 1 Touch **"Loudness"** in the **Sound** menu.
- 2 Touch **"On"** to turn loudness on.
To turn loudness off, touch **"Off"**.
- 3 Touch **◀** or **▶** to select a desired level.
Each time you touch **◀** or **▶** selects level in the following order:
Low – Mid – High

Using subwoofer output

This navigation system is equipped with a subwoofer output which can be turned on or off.

- When the subwoofer output is on, you can adjust the cut-off frequency, the output level and the phase of the subwoofer.

- 1 Touch **"Sub Woofer"** in the **Sound** menu.
When **Preout** (the subwoofer controller setting in **Initial** menu) is **Full**, you cannot select **"Sub Woofer"**.
☞ "Setting the rear output and subwoofer controller" → Page 109
- 2 Touch **"On"** to turn subwoofer output on.
To turn subwoofer output off, touch **"Off"**.
- 3 Touch **"Reverse"** or **"Normal"** to select the phase of subwoofer output.
- 4 Touch **+** or **-** to adjust the output level of the subwoofer.
+6 to **-6** is displayed as the level is increased or decreased.

5 Touch **◀** or **▶** to select cut-off frequency.

Each time you touch **◀** or **▶** selects cut-off frequencies in the following order:

50 – 80 – 125 (Hz)

Only frequencies lower than those in the selected range are output from the subwoofer.

Using non fading output

When the non fading output setting is on, the audio signal does not pass through navigation system's low pass filter (for the subwoofer), but is output through the RCA output.

- 1 Touch **"Non Fading"** in the **Sound** menu.
Only when **Preout** (the subwoofer controller setting in **Initial** menu) is **Full**, you can select **"Non Fading"**.
☞ "Setting the rear output and subwoofer controller" → Page 109
- 2 Touch **"On"** to turn non fading output on.
To turn non fading output off, touch **"Off"**.
- 3 Touch **+** or **-** to adjust the output level of the non fading.
+6 to **-6** is displayed as the level is increased or decreased.

Using the high pass filter

When you do not want low sounds from the subwoofer output frequency range to play from the front or rear speakers, turn the **HPF** (high pass filter) on. Only frequencies higher than those in the selected range are output from the front or rear speakers.

- 1 Touch **"HPF"** in the **Sound** menu.
- 2 Touch **"On"** to turn high pass filter on.
To turn high pass filter off, touch **"Off"**.
- 3 Touch **◀** or **▶** to select cut-off frequency.
Each time you touch **◀** or **▶** selects cut-off frequencies in the following order:
50 – 80 – 125 (Hz)
When **Preout** (the subwoofer controller setting in **Initial** menu) is **Sub. W**, the **HPF** function is effective for front speakers only.

AV

Audio Adjustments

Chapter 8

Customising the Audio Source Setting

Adjusting source levels

AV

SLA (source level adjustment) lets you adjust the volume level of each source to prevent radical changes in volume when switching between sources.

- Settings are based on the FM tuner volume level, which remains unchanged.

1 Compare the FM tuner volume level with the level of the source you wish to adjust.

2 Touch “SLA” in the Sound menu.

3 Touch “+” or “-” to adjust the source volume.

+4 to -4 is displayed as the source volume is increased or decreased.


Sources are set to same source level adjustment volume automatically.

- FM tuner (RADIO) and MW/LW tuner (RADIO)
- CD, ROM and DivX
- **EXT-1** and **EXT-2**
- **AV-1** and **AV-2**

Setting Up the DVD/DivX Player

Configure the DVD/DivX player.

DVD/DivX setup adjustments

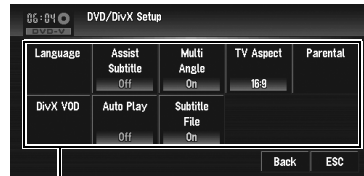

(1)

(1) DVD/DivX setup menu display

1 Touch the source icon and then touch “DVD” or “DivX” in the AV Source screen.

2 Press the MENU button to change to the AV MENU.

3 Touch “Function”.

4 Touch “DVD/DivX setup”.

5 Touch the desired function.

Setting the language

You can set a desired subtitle, audio and menu language. If the selected language is recorded on the Disc, subtitles, audio and menu are displayed in that language.

1 Touch “Language” and then touch “Subtitle Language”, “Audio Language” or “Menu Language”.

Each language menu is displayed and the currently set language is selected.

2 Touch the desired language.

When you select “Others”, a language code input display is shown. Input the four digit code of the desired language then touch “Enter”.

➤ “Language Code Chart for DVD” →
Page 114

- If the selected language is not recorded on the disc, the default language specified on the disc is output and displayed.

- You can also switch the subtitle and audio language by touching "**S.Title**" or "**Audio**" during playback.
- "Changing the subtitle language during playback (Multi-subtitle)" → Page 75
- Changing audio language during playback (Multi-audio) → Page 75
- Even if you use "**S.Title**" or "**Audio**" to switch the subtitle or audio language, this does not affect the settings here.

Setting assist subtitles on or off

Assist subtitles offer explanations for the aurally impaired. However, they are only displayed if they are recorded on the DVD.

You can turn assist subtitles on or off as desired.

1 Touch "Assist Subtitle".

Touching "**Assist Subtitle**" switches between "**On**" and "**Off**".

Setting angle icon display

You can set to display the angle icon on scenes where the angle can be switched.

1 Touch "Multi Angle".

Touching "**Multi Angle**" switches between "**On**" and "**Off**".

Setting the aspect ratio

There are two kinds of display. A wide screen display has a width-to-height ratio (TV aspect) of 16:9, while a regular display has a TV aspect of 4:3. Be sure to select the correct TV aspect for the display connected to REAR OUT.

- When using a regular display, select either **Letter Box** or **Panscan**. Selecting **16:9** may result in an unnatural picture.
- If you select the TV aspect, navigation system's display changes to the same setting.

1 Touch "TV Aspect".

Each touch of the TV ASPECT changes the settings as follows:

- **16:9** – Wide screen picture (16:9) is displayed as it is (initial setting)
- **Letter Box** – The picture is in the shape of a letter box with black bands at the top and bottom of the screen

- **Panscan** – The picture is cut short at the right and left of the screen
- When playing discs that do not specify **Panscan**, playback is with **Letter Box** even if you select the **Panscan** setting. Confirm whether the disc package bears the **16:9 LB** mark. (See "What the Marks on DVDs Indicate" on page 16.)
- Some discs do not enable changing of the TV aspect. For details, refer to the disc's instructions.

Setting the parental lock

Some DVD-Video discs let you use parental lock to restrict the viewing of violent and adult oriented scenes by children. You can set the parental lock level in steps as desired.

- When you set a parental lock level and then play a disc featuring parental lock, code number input indications may be displayed. In this case, playback will begin when the correct code number is input.

Setting the code number and level

When you first use this function, register your code number. If you do not register a code number, parental lock will not operate.

1 Touch "Parental".

2 Touch "Parental".

3 Touch 0 – 9 to input a four digit code number.

4 While the input number is displayed, touch "Enter".

The code number is registered, and you can now set the level.

5 Touch any of 1 – 8 to select the desired level.

The parental lock level is set.

- **Level 8** – Playback of the entire disc is possible (initial setting)
- **Level 7 – Level 2** – Playback of discs for children and non-adult oriented discs is possible
- **Level 1** – Playback of discs for children only is possible
- If you want to change the parental level, enter the registered code number in the Step 2.

AV

Setting Up the DVD/DivX Player

Chapter 8

Customising the Audio Source Setting

AV

- ❑ We recommend to keep a record of your code number in case you forget it.
- ❑ The parental lock level is recorded on the disc. You can confirm it by looking at the disc package, included literature or on the disc itself. With discs that do not feature a recorded parental lock level, you cannot use parental lock.
- ❑ With some discs, parental lock operates to skip certain scenes only, after which normal playback resumes. For details, refer to the disc's instructions.
- ❑ If you forget the registered code number, touch "**Clear**" 10 times on the screen in the Step 2. The registered code number is cancelled, letting you register a new one.

Displaying your DivX® VOD registration code

In order to play DivX VOD (video on demand) content on this navigation system, you first need to register the unit with your DivX VOD content provider. You do this by generating a DivX VOD registration code, which you submit to your provider.

1 Touch "DivX VOD".

- Your 8-digit registration code is displayed.
- ❑ Make a note of the code as you will need it when you register with a DivX VOD provider.

Setting the Auto Play

After inserting a disc into the disc loading slot, the source can automatically switch to the built-in DVD player and begin playback. When set to "**Off**", the disc stops at the DISC menu.

1 Touch "Auto Play".

Touching "**Auto Play**" switches between "**On**" and "**Off**".

Setting the Subtitle File

A DivX subtitle file can be turned on or off.

1 Touch "Subtitle File".

Touching "**Subtitle File**" switches between "**On**" and "**Off**".

- Up to 42 characters can be displayed on one line. If more than 42 characters are set, the line breaks and the characters are displayed on the next line.
- Up to 126 characters can be displayed on one screen. If more than 126 characters are set, the excess characters will not be displayed.
- The DivX subtitles will be displayed even when the subtitle file setting is on if no corresponding subtitle files exist.
- Up to three lines can be displayed at once.

Initial Settings

Adjusting initial settings



(1)

Initial settings lets you perform initial set up of different settings for navigation system.

(1) Function display

1 Touch the source icon and then touch "OFF" to turn source off.

When the source icon is not displayed, you can display it by touching the screen.

2 Press the MENU button to change to the AV MENU.

3 Touch "Initial".

Setting the FM tuning step

Normally the FM tuning step employed by seek tuning is 50 kHz. When AF or TA is on, the tuning step automatically changes to 100 kHz. It may be preferable to set the tuning step to 50 kHz when AF is on.

Initial Settings

Chapter 8

Customising the Audio Source Setting

1 Touch “FM Step” in the Initial menu.

Each time you touch “**FM Step**” will switch the FM tuning step between 50 kHz and 100 kHz while AF or TA is on.

- The tuning step remains at 50 kHz during manual tuning.

Switching Auto PI seek

The unit can automatically search for a different station with the same programming, even during preset recall.

1 Touch “Auto PI” in the Initial menu.

Touching “**Auto PI**” switches between “**On**” and “**Off**”.

Setting the rear output and subwoofer controller

This navigation system’s rear output (rear speaker leads output and RCA rear output) can be used for full-range speaker (**Rear SP Full**) or subwoofer (**Rear SP Sub. W**) connection. If you switch the rear output setting to the **Rear SP Sub. W**, you can connect a rear speaker lead directly to a subwoofer without using an auxiliary amp. Initially, the navigation system is set for rear full-range speaker connection (**Rear SP Full**). When rear output is connected to full range speakers (when **Rear SP Full** is selected), you can connect the RCA subwoofer output to a subwoofer. In this case, you can select whether to use the subwoofer controller’s (low pass filter, phase) built-in **Preout Sub. W** or the auxiliary **Preout Full**.

1 Touch “Rear SP” in the Initial menu.

2 Touch “Rear SP” to switch the rear output setting.

When no subwoofer is connected to the rear output, select **Full**.

When a subwoofer is connected to the rear output, select **Sub. W**.

- When the rear output setting is **Sub. W**, you cannot change the subwoofer controller.

3 Touch “Preout” to switch the subwoofer output or non fading output.


- Even if you change this setting, there is no output unless you turn “**Non Fading**” or “**Sub Woofer**” in the **Sound** menu “**On**”.
- ▷ “Using non fading output” → Page 105
- ▷ “Using subwoofer output” → Page 105
- If you change the subwoofer controller (**Rear SP**), the subwoofer output (**Sub Woofer**) and non fading output (**Non Fading**) in the **Sound** menu return to the factory settings.
- Both rear speaker leads output and RCA rear output are switched simultaneously in this setting.

Editing the PIN code

You can edit the PIN code you like. Use this function when you need to change the PIN code from the default setting.

1 Touch “PIN Edit” in the Initial menu.

2 Touch number key to enter the new PIN code.

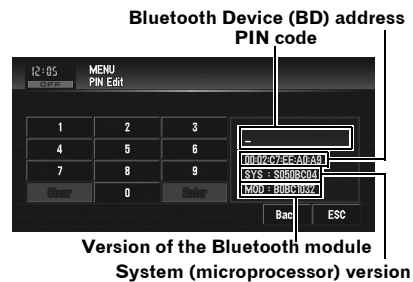

3 Touch “Enter” to fix the new PIN code.

- The default setting of the PIN code is **0000**.
- When a mobile phone finds the device which can be connected by the Bluetooth technology, “**Pioneer BT unit**” will appear in the mobile phone’s display.



AV

Switching the sound muting/attenuation

Sound from this system is muted, attenuated or mixed automatically in the following cases:

- When a call is made or received using a mobile phone connected to navigation system.
 - When the voice guidance is output.
- The sound muting/attenuation function does not work when you use a mobile phone connected to the navigation system via Bluetooth wireless technology.

1 Touch "Mute Input/Guide" in the Initial menu.

Each touch of the "Mute Input/Guide" changes the settings as follows:

- **Mute** – Muting
 - **ATT** – Attenuation
 - **Normal** – Volume does not change
- Operation returns to normal when the phone connection (the mute signal on the yellow/black lead) is ended or when the navigation guidance is ended.
- Even when you receive a phone call, navigation voice guidance cannot be attenuated or muted. Use **Hardware Volume** to control the navigation voice guidance volume.

Other Functions

Chapter 8

Customising the Audio Source Setting

Adjusting a blurry or low contrast screen

If the screen is blurry or the contrast is low, these problems can be improved by adjusting the dot clock.

- 1 Touch "Pixel Align" in the Initial menu.
- 2 Touch ◀ or ▶ to adjust the setting.




Adjust the value so that the dashed lines appear correctly as three separate lines.

- Adjust the value between **0** and **7**.

Other Functions

Setup adjustments

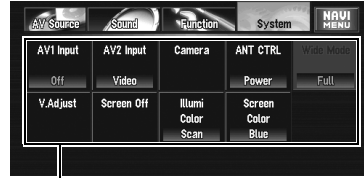

(1)

(1) System menu display

➤ How to display the **System** menu → Page 67

Setting the video input

You can switch the setting according to the connected component.

- Select "**Video**" to watch video of a connected component as **AV-1** or **AV-2** source.

1 Touch "AV1 Input" or "AV2 Input" in the System menu.

Each touch of the "AV1 Input" or "AV2 Input" changes the settings as follows:

AV1 Input:

- **Off** – No video component is connected
- **Video** – External video component
- **EXT** – Pioneer external unit connected with RCA video cable

AV2 Input:

- **Off** – No video component is connected
 - **Video** – External video component
- When a Pioneer external unit is connected with an IP-BUS cable, select **EXT**. When the audio source is **EXT**, the "Video image" of the Pioneer external unit can be displayed.
- Use **AV2 Input** when connecting CD-RM10 (sold separately) through the external video component.

Setting for rear view camera

The navigation system features a function that automatically switches to the rear camera image (REAR VIEW CAMERA IN jack) when a rear view camera is installed on your vehicle. When the gearstick is in REVERSE (R) position, the screen automatically switches to a rear view camera. (For more details, consult with your dealer.) You can also use the camera as a rear view camera (**Rear View**). In this case, you can see the image of the rear view camera during normal driving.

CAUTION

- **Pioneer recommends the use of a camera which outputs mirror reversed images, otherwise screen image may appear reversed.**

- Immediately confirm whether the display changes to a rear view camera image when the gearstick is moved to REVERSE (R) from another position.
- When the whole screen changes to a rear view camera image during normal driving, switch to another setting.

Initially, this function is set to **Off**.

1 Touch "Camera" in the System menu.

2 Touch "Camera" to turn rear view camera setting on.

Touching "Camera" switches between "On" and "Off".

- Unless this setting is "On", you cannot switch to Rear View mode.

3 Touch "Polarity" to select an appropriate setting for polarity.

Each time you touch "Polarity" switches between the following polarity:

- **Battery** – When the polarity of the connected lead is positive while the gearstick is in the REVERSE (R) position
- **GND** – When the polarity of the connected lead is negative while the gearstick is in the REVERSE (R) position

Switching the auto aerial setting

If the blue lead of the navigation system is connected to the auto aerial of the vehicle, select either of the following settings.

- **Tuner** – Extends the aerial only for the Radio source. The aerial is stored when the source is switched to another source.
- **Power** – Extends the aerial when the ignition switch is turned on. The aerial is stored when the ignition switch is turned off.

1 Touch "ANT CTRL" in the System menu.

Touching "ANT CTRL" switches between "Tuner" and "Power".

- Regardless of whether "Tuner" or "Power" is selected, turning off the ignition switch will cause the aerial to automatically retract.

Setting the illumination colour

The illumination colour can be selected from 11 different colours. Furthermore, the illumination colour can switch between the 11 colours in order.

1 Touch "Illumi Color" in the System menu.

2 Touch desired colour.

- **White/Light Green/Green/Light Blue/Blue/Yellow/Amber/Red**
- **Memory1/Memory2/Memory3** – Colours registered in the memory
- **Scan** – Shifts between the eight default colours in sequence
- "Creating a favourite colour and registering it to memory" → Page 112

AV

Other Functions

Chapter 8

Customising the Audio Source Setting

AV

Creating a favourite colour and registering it to memory

You can create a favourite colour and set it as the illumination colour.

- 1 Touch "Illumi Color" in the System menu.
- 2 Touch "Custom".
 - If **Scan** is set, **Custom** cannot be selected.
- 3 Touch "+" or "-" to adjust the values for Red, Green and Blue to create a favourite colour.

Watch the illumination while adjusting the colour with the buttons.

 - An entry cannot be registered with all of the values set to 0.
- 4 Touch "Memory1", "Memory2" or "Memory3" to register the illumination colour.

Setting the screen colour

You can select one of five colours as the screen colour.

- 1 Touch "Screen Color" in the System menu.
- 2 Touch desired colour.
 - White/Blue/Yellow/Red/Green

Changing the Wide Screen Mode

CAUTION

- For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, you must stop in a safe place and put on the handbrake before setting your route (see page 11 Interlock for details).

1 Touch "Wide Mode" in the System menu to select the desired setting.

Touch "Wide Mode" repeatedly to switch between the following settings:

Full (full) – **Just** (just) – **Cinema** (cinema) – **Zoom** (zoom) – **Normal** (normal)

Full (full)

A 4:3 picture is enlarged in the horizontal direction only, enabling you to enjoy a 4:3 TV picture (normal picture) without any omissions.

Just (just)

The picture is enlarged slightly at the centre and the amount of enlargement increases horizontally toward the ends of the picture, enabling you to enjoy a 4:3 picture without sensing any disparity even on a wide screen.

Cinema (cinema)

A picture is enlarged by the same proportion as **Just** in the horizontal direction and by an intermediate proportion between **Full** and **Zoom** in the vertical direction; ideal for a cinema-sized picture (wide screen picture) where captions lie outside the frame.

Zoom (zoom)

A 4:3 picture is enlarged in the same proportion both vertically and horizontally; ideal for a cinema-sized picture (wide screen picture).

Normal (normal)

A 4:3 picture is displayed as it is, giving you no sense of disparity since its proportions are the same as that of the normal picture.

- Different settings can be memorised for each video source.
- When video is viewed in a wide screen mode that does not match its original aspect ratio, it may appear differently.
- Remember that use of this system for commercial or public viewing purposes may constitute an infringement on the author's rights protected by the Copyright Law.
- Video will appear grainy when viewed in **Cinema** or **Zoom** mode.
- The navigation map and the rear view camera picture is always **Full**.

Changing the Wide Screen Mode

Chapter 8

Customising the Audio Source Setting

Operating the Picture Adjustment


CAUTION

- For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, you must stop in a safe place and put on the handbrake before setting your route (see page 11 Interlock for details).

1 Touch "V.Adjust" in the System menu.

2 Select the desired item you want to adjust.

- **Camera** – Switch to the picture adjustment display for the rear view camera
- **Source** – Switch to the picture adjustment display for the source screen
- **Map** – Switch to the picture adjustment display for the map screen
- When the display is already on the screen, a message to that effect appears.

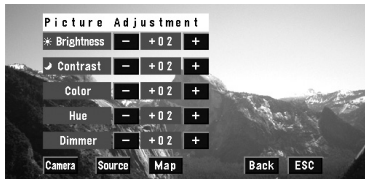

Brightness – Adjust the black intensity

Contrast – Adjust the contrast

Color – Adjust the colour saturation

Hue – Adjust the tone of colour (red is emphasised or green is emphasised)

Dimmer – Adjust the brightness of display

- Touching "**Source**" while adjusting the rear view camera image returns you to the previous screen.
- The adjustments of **Brightness**, **Contrast** and **Dimmer** are stored separately when your vehicle's headlights are off (daytime) and when your vehicle's headlights are on (nighttime). These are switched automatically depending on the vehicle's headlights are on or off.
- You cannot adjust **Color** and **Hue** for the source without video and navigation map display.

- Hue** cannot be adjusted for PAL video sources.
- If you select "**Source**", sources without video and sources with video are saved separately in the memory.
- The picture adjustment may not be able to be used with some rear view cameras.
- The same setting is selected for the normal background picture and the navigation map display.
- Because of the LCD screen characteristics, you may not be able to adjust the screen at low temperatures.

3 Touch "+" or "-" to adjust the selected item.

Each time you touch "+" or "-" increases or decreases the level of selected item. **+24** to **-24** is displayed as the level is increased or decreased.

- Adjust the **Dimmer** in the range of **+1** to **+48**.

4 Touch "ESC" to return to the previous screen.

Switching the backlight On/Off

By turning off the backlight of the LCD screen, you can turn off the screen display without turning off the voice guidance.

1 Touch "Screen Off" in the System menu.

The backlight turns off, and the screen turns off.

- To turn on the backlight, touch the screen again.

AV

Operating the Picture Adjustment

Chapter 8

Customising the Audio Source Setting

AV

Language Code Chart for DVD

Language (code), input code	Language (code), input code	Language (code), input code
Japanese (ja), 1001	Guarani (gn), 0714	Pashto, Pushto (ps), 1619
English (en), 0514	Gujarati (gu), 0721	Quechua (qu), 1721
French (fr), 0618	Hausa (ha), 0801	Rhaeto-Romance (rm), 1813
Spanish (es), 0519	Hindi (hi), 0809	Kirundi (rn), 1814
German (de), 0405	Croatian (hr), 0818	Rumanian (ro), 1815
Italian (it), 0920	Hungarian (hu), 0821	Kinyarwanda (rw), 1823
Chinese (zh), 2608	Armenian (hy), 0825	Sanskrit (sa), 1901
Dutch (nl), 1412	Interlingua (ia), 0901	Sindhi (sd), 1904
Portuguese (pt), 1620	Interlingue (ie), 0905	Sango (sg), 1907
Swedish (sv), 1922	Inupiak (ik), 0911	Serbo-Croatian (sh), 1908
Russian (ru), 1821	Indonesian (in), 0914	Shinghalese (si), 1909
Korean (ko), 1115	Icelandic (is), 0919	Slovak (sk), 1911
Greek (el), 0512	Hebrew (iw), 0923	Slovenian (sl), 1912
Afar (aa), 0101	Yiddish (ji), 1009	Samoan (sm), 1913
Abkhazian (ab), 0102	Javanese (jw), 1023	Shona (sn), 1914
Afrikaans (af), 0106	Georgian (ka), 1101	Somali (so), 1915
Amharic (am), 0113	Kazakh (kk), 1111	Albanian (sq), 1917
Arabic (ar), 0118	Greenlandic (kl), 1112	Serbian (sr), 1918
Assamese (as), 0119	Cambodian (km), 1113	Siswati (ss), 1919
Aymara (ay), 0125	Kannada (kn), 1114	Sesotho (st), 1920
Azerbaijani (az), 0126	Kashmiri (ks), 1119	Sundanese (su), 1921
Bashkir (ba), 0201	Kurdish (ku), 1121	Swahili (sw), 1923
Belorussian (be), 0205	Kirghiz (ky), 1125	Tamil (ta), 2001
Bulgarian (bg), 0207	Latin (la), 1201	Telugu (te), 2005
Bihari (bh), 0208	Lingala (ln), 1214	Tajik (tg), 2007
Bislama (bi), 0209	Laotian (lo), 1215	Thai (th), 2008
Bengali, Bangla (bn), 0214	Lithuanian (lt), 1220	Tigrinya (ti), 2009
Tibetan (bo), 0215	Latvian, Lettish (lv), 1222	Turkmen (tk), 2011
Breton (br), 0218	Malagasy (mg), 1307	Tagalog (tl), 2012
Catalan (ca), 0301	Maori (mi), 1309	Setswana (tn), 2014
Corsican (co), 0315	Macedonian (mk), 1311	Tongan (to), 2015
Czech (cs), 0319	Malayalam (ml), 1312	Turkish (tr), 2018
Welsh (cy), 0325	Mongolian (mn), 1314	Tsonga (ts), 2019
Danish (da), 0401	Moldavian (mo), 1315	Tatar (tt), 2020
Bhutani (dz), 0426	Marathi (mr), 1318	Twi (tw), 2023
Esperanto (eo), 0515	Malay (ms), 1319	Ukrainian (uk), 2111
Estonian (et), 0520	Maltese (mt), 1320	Urdu (ur), 2118
Basque (eu), 0521	Burmese (my), 1325	Uzbek (uz), 2126
Persian (fa), 0601	Nauru (na), 1401	Vietnamese (vi), 2209
Finnish (fi), 0609	Nepali (ne), 1405	Volapu`k (vo), 2215
Fiji (fj), 0610	Norwegian (no), 1415	Wolof (wo), 2315
Faroese (fo), 0615	Occitan (oc), 1503	Xhosa (xh), 2408
Frisian (fy), 0625	(Afan) Oromo (om), 1513	Yoruba (yo), 2515
Irish (ga), 0701	Oriya (or), 1518	Zulu (zu), 2621
Scottish Gaelic (gd), 0704	Punjabi (pa), 1601	
Galician (gl), 0712	Polish (pl), 1612	

Operating the Picture Adjustment

Chapter 8

Customising the Audio Source Setting

Appendix

NAVI/AV

Appendix

Anti-theft function


You can set a password for the navigation system. If the back-up lead is cut or **RESET** button is pressed after the password is set, the navigation system prompts for the password next boot-up.

If the incorrect password is entered, the navigation and AV functions cannot be performed.



Setting the password

Set both the password and a hint phrase at the same time. Set a password based on the hint phrase. The hint phrase will remind you of the password in case you forget it.

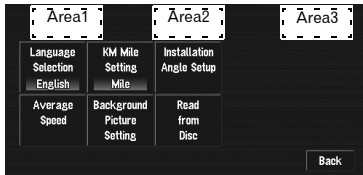- 1 With the map displayed, press the **MENU** button.
- 2 Touch **"Settings"** in the **NAVI MENU**.
- 3 Touch **"System Options"**.
- 4 Touch **Area1**, followed by **Area2**, and then touch and hold **Area3**.



The password setting screen appears.

- 5 Touch **"Set password"**.
- 6 Select a hint phrase.
 - Touching  or  switches to the next or previous page in the list.
- 7 Touch **"OK"**.
- 8 Enter the password you want to set.
 - Five to sixteen characters can be entered for a password.

- 9 Touch **"OK"**.

- 10 Reenter the password in step 7 to confirm the setting.

- 11 Touch **"OK"**.
The password is set.

Enter the password

In password input screen, you must enter the current password. If you enter the incorrect password three times, the navigation system is locked.

- 1 Enter the password.
- 2 Touch **"OK"**.
The password mode is cancelled.

Delete the password

The current password can be deleted.

- 1 With the map displayed, press the **MENU** button.
- 2 Touch **"Settings"** in the **NAVI MENU**.
- 3 Touch **"System Options"**.
- 4 Touch **Area1**, followed by **Area2**, and then touch and hold **Area3**.
The password setting screen appears.
- 5 Touch **"Clear password"**.
- 6 Enter the current password.
- 7 Touch **"OK"**.
- 8 Touch **"Yes"**.
The current password is deleted.

If the password is forgotten

Contact the nearest authorised Pioneer Service Station.



NAVI/AV

Installing the Programme

The programme is installed to the navigation system using the application disc.

This is not necessary if your dealer already performed the installation.

When installing the programme, you carry out the following operations. When all the setup procedures are completed, you can use the navigation system.

- 1 **Insert the disc while the vehicle is parked.**
- 2 **Select the language used for the navigation system.**
- 3 **Set the time difference.**

Appendix

1 Park your vehicle in a safe place.

Leave the engine on, and make sure that the handbrake is applied.


2 Insert the Pioneer DVD Map Disc into the disc loading slot of the navigation system.

When the upgraded programme has been found, installation of the programme starts immediately.

- Do not insert anything other than a disc into the disc loading slot.
- If you cannot insert a disc completely or if an inserted disc is not recognised, check that the label side of the disc is up. Press the **EJECT** button to eject the disc, and check the disc for damage before inserting the disc again.

CAUTION

- **Once the installation of the programme starts, do not stop the engine of your vehicle nor switch off the navigation system until the installation is completed and the following Audio screen appears.**

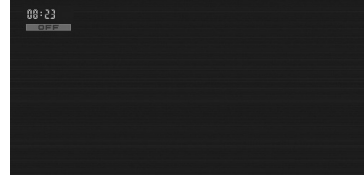


3 Touch "Yes/Oui/Ja".

When you start the navigation system for the first time, you will see a confirmation message asking if you wish to select another language. English is the default language of the navigation system. If desired, you can select another language as shown.


- To keep English, touch "**No/Non/Nein**". After this, proceed to Step 7.
- When you want to select another language, touch "**Yes/Oui/Ja**", and proceed to the next step.

4 Select the language from the list.

Touch the language you want to use.

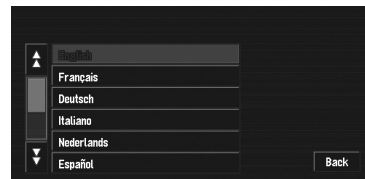

- The language selected here is reflected for the Navigation functions (e.g., Destination search, etc.) only.
 - To change the language → Page 62
- Installation of the programme begins in the language that you chose.

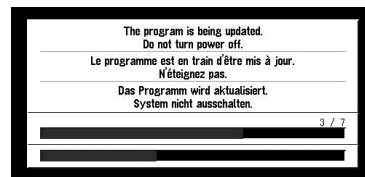


When the installation is complete, the opening display appears.






- 5 Press the MAP button to change to the navigation screen.**
Some time is needed until navigation is ready.
- 6 Check the details of the cautionary message and touch "OK".**
- 7 To set the time difference, touch "+" or "-".**

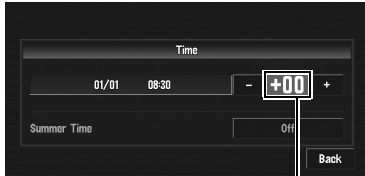


Time difference

The time difference between the time originally set in the navigation system (Central European Time) and the current location of your vehicle is shown. If necessary, adjust the time difference. Touching "+" or "-" changes the time difference display in one-hour increments. The time difference can be set from +3 to -3 hours.

- 8 If necessary, set to summer time.**
Summer time is off by default. Touch "Off" to change the time if you are in the summer time period. This turns the display below summer time "On".

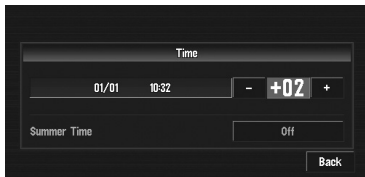

- 9 To complete the setting, touch "Back".**

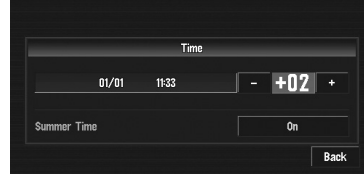

The map of your surroundings appears.

This completes the setup of your navigation system. Chapter 1 explains the basic operation of your navigation system.


➤ To change the time later → Page 65

Adjusting the Response Positions of the Touch Panels (Touch Panel Calibration)

If you feel that the touch keys on the screen deviate from the actual positions that respond to your touch, adjust the response positions of the touch panel. There are two adjustment methods: 4-point adjustment, in which you touch four corners of the screen, and 16-point adjustment, in which you make fine-adjustments on the entire screen.

- Make sure to use the supplied stylus for adjustment and gently touch the screen. If you press the touch panel forcefully, the touch panel may be damaged. Do not use a sharp pointed tool such as a ballpoint pen or a mechanical pen. Otherwise the screen is damaged.

Stylus (supplied with navigation system)

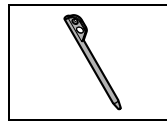

- 1 Press the VOLUME knob to switch to the Audio operation screen.**
- 2 Press the MENU button to change to the AV Source screen.**
- 3 Press and hold the MENU button for two seconds or more.**

The 4-point touch panel adjustment screen appears.

NAVI/AV

Appendix

4 Touch and hold the arrows that point to the corners of the LCD screen with the stylus.

The red arrow indicates the order.



5 Press the MENU button.

The adjusted position data is saved.

- Do not turn off the engine while saving the adjusted position data.
- Press the **MENU** button to complete the 4-point adjustment.
- To cancel the adjustment, press and hold the **MENU** button.

6 Press the MENU button.

The 16-point touch panel adjustment screen appears.

7 Gently touch the centre of the + mark displayed on the screen with the touch panel adjustment pen.

After you touch all marks, the adjusted position data is saved.

- Do not turn off the engine while saving the adjusted position data.
- Press the **MENU** button to return to the previous adjustment position.

8 Press and hold the MENU button.

The adjustment is complete.

- If touch panel adjustment cannot be performed properly, consult your local Pioneer dealer.

Memory Navi Mode

While the DVD Map Disc is inserted, you can store the data on the DVD Map Disc into the memory of the navigation system. If the DVD Map Disc is removed from the navigation system after the data is stored, navigation is performed using the data in the memory (memory navi mode). In the memory navi mode, you can play a music CD

or DVD-Video on the navigation system while navigation is taking place.

The operation is automatically switched to the memory navi mode when the DVD Map Disc is removed from the navigation system.

Navigation in the memory navi mode

During the memory navi mode, navigation is performed only using the data read into the memory. Therefore, some functions are restricted compared with navigation using the DVD Map Disc (DVD navi mode). These function buttons, which cannot be used in the memory navi mode, are indicated in light grey. (If you want to use these functions, please insert the DVD Map Disc again.) In addition, you may need to insert the DVD Map Disc and store new data in the memory during navigation operation, such as when the destination is far away.

The memory navi mode uses the following map data to perform navigation.

The following are collectively known as Memory Data:

- Manually downloaded memory area data in "Map in Memory" of the Settings menu (Manual downloaded Memory Area)
- Automatically downloaded memory data of the surrounding areas during the route search (Auto downloaded Memory Area)

➤ Setting of the memory area → Page 64

What is the manual downloaded memory area?

Memory area is the area of the map data that the user voluntarily read into the memory for the memory navi mode. Normal guidance is available if the memory area is stored and you drive within the stored area.

What is the auto downloaded memory area?

This is the zone around the route in the map area that is automatically stored in the memory when the route is set. When the route distance is 120 km (74.5 mi) or shorter, a zone with a width of approximately 17.5 km (10.9 mi) around the route is stored. When the route distance is longer than 120 km, a zone with a width of approximately 10.6 km (6.6 mi) around the route is recorded.

This data is transmitted to the memory as you set the route. When a new route is entered, the memorised data is deleted.

The data read into the memory will not be deleted even when the vehicle's engine is turned off.

The memorised area may be deleted in the following circumstances:

- Yellow lead of the navigation system or the vehicle battery is disconnected.
- The **RESET** button is pressed.
- Navigation software is updated.
- System language is changed.

Navigation operation during the memory navi mode

- ✓ :Operation possible
- U :Operation restricted
- – :Operation not possible

NAVI MENU	
Destination menu	
Address Search	–
Return Home	–
Go to	–
POI Search	–
Vicinity Search	–
Address Book	–
Destination History	–
Motorway Search	–
Postal Code Search	–
Cancel Route	✓
Traffic/Info menu	
All Traffic	–
Traffic On Route	–
Overlay POI	–
Traffic Settings	✓
Manual Station Search	✓
Route Options menu	
Edit Current Route	–
View Current Route	△
Recalculate	–
Route No.	✓
Route Condition	✓
Avoid Motorway	✓
Avoid Ferry	✓
Avoid Toll Road	✓
Areas to Avoid	–
Settings menu	
Volume	✓
System Options	△

NAVI MENU	
Short-Cut Selection	✓
Map Display Options	✓
Defined Locations	–
Demo Mode	–
Time	✓
Modify Current Location	✓
Hardware Info	△*
Restore Factory Settings	✓

Shortcut menu	
: Destination	–
: Change Route	△
: Registration	✓
: Vicinity Search	–
: Volume Setting	–
: Whole Route Overview	✓
: Overlay POI	–
: Address Book	–
: Route Options	△
: Edit Current Route	–
: Traffic On Route	–

*: Product Number in the **Service Info Screen** is not displayed.

About the icon for the memory navi mode

When new route guidance starts, the route data from the DVD Map Disc is read into the memory of the navigation system. The status of the memory navi mode is indicated by the following icons on the lower right of the map screen.

(Green flashes): Reading the data

(Green is lit): Operated in memory navi mode

(Red flashes): Operated in memory navi mode, but the remaining distance for guidance is less than 20 km.

- Where the navigation guidance is impossible, the icon is lit in red. In that case, reinsert the DVD Map Disc.

When disappears, memory navi mode is ready. You can now remove the DVD Map Disc.

NAVI/AV

Appendix

- If you want to remove the DVD Map Disc while preparing for the memory navi mode, press the **EJECT** button more than 2 seconds. When the DVD Map Disc is removed, data cannot be read any more and preparation for memory navi mode will be cancelled accordingly. (Since the reading of the map data used in the memory navi mode is not complete, the map scale may switch to a larger scale. In this case, route guidance will continue up to the location already memorised.)

In memory navi mode, you will be notified in three cases: when the distance to the edge of the memorised area is 20 km (12 mi), 10 km (6 mi) and 5 km (3 mi) respectively.

Preparation for memory navi mode will have to be repeated if the vehicle enters an unrecorded area, then returns to an area stored in the disc. (Preparation for the memory navi mode starts from the location where the vehicle re-entered the area stored on the disc.)

Major restrictions during the memory navi mode

- The scale cannot be zoomed freely.
- A detailed city map cannot be displayed.
- If a route was set to your destination in memory navi mode, inserting the DVD Map Disc automatically starts recalculation of another route. (You cannot cancel this reroute operation. If the route calculation fails for some reason, a message will appear asking you to either recalculate a route (Reroute) or delete the current route (Delete route). In this case, drive for a while before touching either "Reroute" or "Delete route" to delete the current route, then reset the destination.)
- In some cases, you may not be able to use map display mode during DVD navi mode. If the map display mode is not changed during memory navi mode, the display will return to the map display mode used during the DVD navi mode when the DVD Map Disc is set again.
- In memory navi mode, map scale data that cannot be read in the memory cannot be displayed. Accordingly, the edge of the map will appear cut off along the point it was not read into memory. This simply indicates the edge of the map data, and is not a malfunction.



- If you keep driving or scrolling the map to a point where the map can no longer be displayed, the scale automatically switches to a range possible to display. If you would like to continue driving or scrolling the map at the same scale, set the DVD Map Disc in the navigation system.
- You cannot reroute to avoid traffic jam or closure.
- If you continue to drive outside the route for a while, you may not be able to perform map matching.
- If you deviate from the route during memory navi mode, the set route will be rerouted, but only to return you to the original route calculated within the memorised area.
- Although an enlarged map of the intersection will be displayed, no special motorway illustration (illustration of motorway junctions) will be displayed.

Cautions relating to auto reroute in memory navi mode


Auto rerouting in memory navi mode is designed to return you to your original route wherever possible.

 
In memory navi mode, persistently deviating from the route may result in one of the following:

- A clearly circuitous route
- Leaving a toll road and returning to the toll road from where you left it.

In the above case, if the set route seems unsuitable, insert the DVD Map Disc. Setting the DVD Map Disc to navigation automatically resets the route from your current location to your destination.

TMC icon during the memory navi mode

- TMC-related data for only one country can be memorised. Therefore, if  appears on the screen when crossing an international border, you will need to insert the disc to use the

RDS-TMC function. Touching  allows you to check the locations of the traffic information along the route. However, you cannot perform rerouting.

Operation outside the memorised area

When the vehicle leaves the memorised area, the functions will be limited.

- The auto reroute function does not work.
- You can only display a larger scale map. The map display will automatically change to a 50 km (or 100 km) scale.
- The map matching function will not be available. Therefore, the position of your vehicle may be misaligned.
- The navigation guidance will only be available when arriving at your destination. Other guidance is not possible (this includes no display of direction arrows).

To cancel these limitations, insert the DVD Map Disc to the navigation system.


Positioning Technology

The navigation system accurately measures your current location by combining the positioning by GPS and by Dead Reckoning.

Positioning by GPS

The Global Positioning System (GPS) uses a network of satellites orbiting the Earth. Each of the satellites, which orbit at a height of 21 000 km, continually broadcasts radio signals giving time and position information. This ensures that signals from at least three can be picked up from any open area on the earth's surface.

The accuracy of the GPS information depends on how good the reception is. When the signals are strong and reception is good, GPS can determine latitude, longitude and altitude for accurate positioning in three dimensions. But if signal quality is poor, only two dimensions, latitude and longitude, can be obtained and positioning errors are somewhat greater.

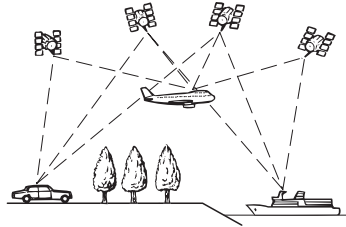

Positioning by dead reckoning

The 3D Hybrid Sensor in the navigation system also calculates your position. The current location is measured by detecting driving distance with the speed pulse, the turning direction with the Gyrosensor and inclination of the road with the G sensor.

The 3D Hybrid Sensor can even calculate changes of altitude, and corrects for discrepancies in the distance travelled caused by driving along winding roads or up slopes. Also, the navigation system learns the driving conditions and stores information in the memory. Thus, as you drive more, the precision of the positioning becomes more accurate.

The method of positioning changes as follows depending on whether the speed pulse of your vehicle is detected or not:

3D hybrid mode

This is active when the speed pulse is detected. Inclination of a road can be detected.

Simple hybrid mode

When the speed pulse is not detected, positioning is performed in this mode. Only horizontal movement is detected, so it becomes less accurate. Also, when the positioning by GPS is not available, such as when your vehicle enters a long tunnel, the discrepancy between your actual and calculated position may become bigger.

NAV/AV

Appendix

- The speed pulse data comes from the speed sensing circuit. The location of this speed sensing circuit depends on your vehicle model. In some cases, it is impossible to make a connection to it, and in such a case we recommend that the ND-PG1 speed pulse generator (sold separately) be used.

How do GPS and dead reckoning work together?

For maximum accuracy, your navigation system continually compares GPS data with your estimated position as calculated from the data of 3D Hybrid Sensor. However, if only the data from the 3D Hybrid Sensor is available for a long period, positioning errors are gradually compounded until the estimated position becomes unreliable. For this reason, whenever GPS signals are available, they are matched with the data of the 3D Hybrid Sensor and used to correct it for improved accuracy.


To ensure maximum accuracy, the dead reckoning system learns with experience. By comparing the position it estimates with your actual position as obtained using GPS, it can correct for various types of error, such as tyre wear and the rolling motion of your vehicle. As you drive, the dead reckoning system gradually gathers more data, learns more, and the accuracy of its estimates gradually increases. So, after you have driven some distance, you can expect your position as shown on the map to show fewer errors.

- If you use chains on your wheels for winter driving or put on the spare wheel, errors may suddenly increase because of difference in wheel diameter. The system detects the fact that the tyre diameter has changed, and automatically replaces the value for calculating distance.
- If the ND-PG1 is used or if your vehicle is operating in Simple hybrid mode, the distance calculation value cannot be replaced automatically.


Map matching

As mentioned, the GPS and dead reckoning systems used by this navigation system are susceptible to certain errors. Their calculations may, on

occasion, place you in a location on the map where no road exists. In this situation, the processing system understands that vehicles travel only on roads, and can correct your position by adjusting it to a nearby road. This is called map matching.

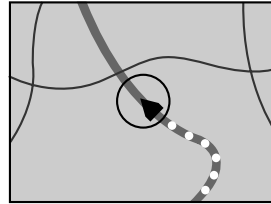

With map matching

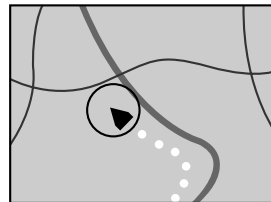

Without map matching

Handling Large Errors


Positioning errors are kept to a minimum by combining GPS, Dead Reckoning and map matching. However, in some situations, these functions may not work properly, and the error may become bigger.

When the positioning by GPS is impossible


- If signals cannot be received from more than two GPS satellites, GPS positioning does not take place.
- In some driving conditions, signals from GPS satellites may not reach your vehicle. In this case, it is impossible for the system to use GPS positioning.



In tunnels or enclosed parking garages

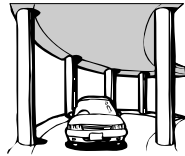

Under elevated roads or similar structures

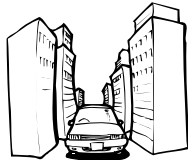

When driving among high buildings



When driving through a dense forest or tall trees

- If a car phone or mobile phone is used near the GPS aerial, GPS reception may be lost temporarily.
- Do not cover the GPS aerial with spray paint or car wax, because this may block the reception of GPS signals. Snow buildup can also degrade the signals, so keep the aerial clear.
- If, for any reason, GPS signals cannot be received, learning and error correction are not possible. If GPS positioning has been operating for only a short time, your vehicle's actual position and the current location mark on the map may diverge considerably. Once GPS reception is restored, accuracy will be recovered.


Vehicles that Cannot Obtain Speed Pulse Data

- The speed pulse data comes from the speed sensing circuit. The location of this speed sensing circuit depends on your vehicle model. In some cases, it is impossible to make a connection to it, and in such a case we recommend that the ND-PG1 speed pulse generator (sold separately) be used.


Conditions Likely to Cause Noticeable Positioning Errors

For various reasons such as the state of the road you are travelling on and the state of reception of the GPS signal, the actual position of your vehicle may differ from the position displayed on the map screen.


- If you make a slight turn.

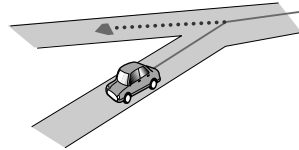


- If there is a parallel road.

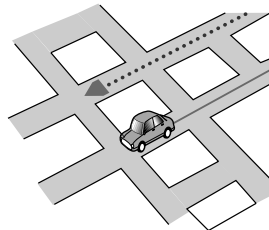


- If there is another road very nearby, such as in the case of an elevated motorway.

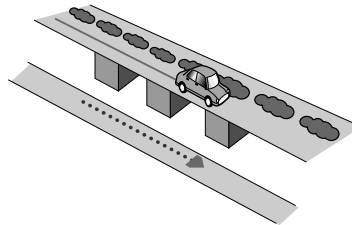

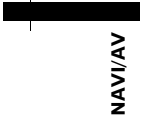


NAVI/AV


- If you take a recently opened road that is not on the map.

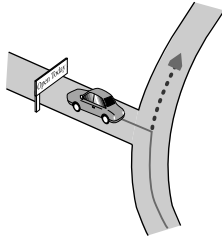



- If you are driving on a long, straight road or a gently curving road.

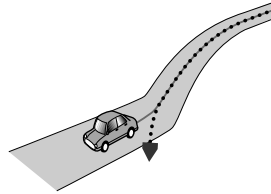

- If you drive in zig-zags.

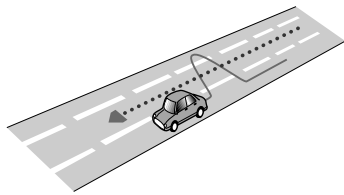


 - If you are on a steep mountain road with many height changes.

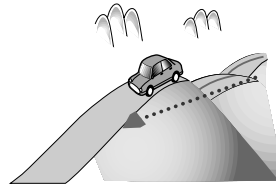


Appendix


- If the road has connected hairpin bends.

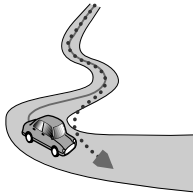


- If you enter or exit a multi-storey car park or similar structure with a spiral layout.

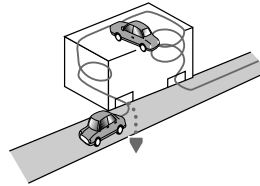


- If there is a loop or similar road configuration.

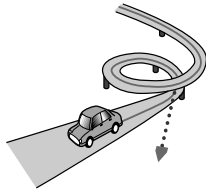



- If your vehicle is turned on a turntable or similar structure.

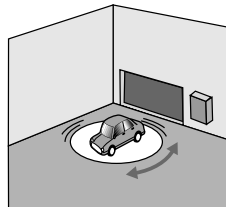


- If you take a ferry.

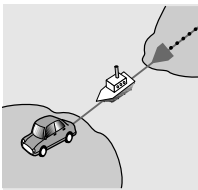

  
- If your vehicle's wheels spin, such as on a rough track or in snow.




- If you put on chains, or change your tyres for ones with a different size.

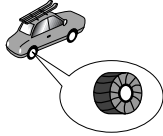


- If trees or other obstacles block the GPS signals for a considerable period.

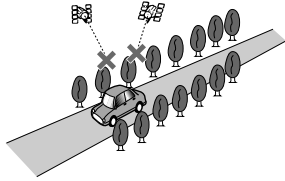


- If you drive very slowly, or in a start-and-stop manner, as in a traffic jam.

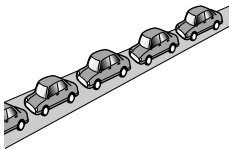

- If you join the road after driving around a large vehicle park.

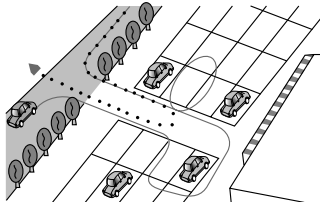

- When you go round a roundabout.

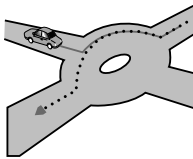

- When starting driving immediately after starting the engine.
- If you insert the disc and turn your navigation system on while driving.

Some types of vehicles may not output a speed signal while driving at just a few kilometres per

hour. In such a case, the current location of your vehicle may not be displayed correctly while in a traffic jam or in a vehicle park.

About the Data being Deleted

The information is erased by pushing the **RESET** button or disconnect yellow lead from battery (or remove the battery itself), except for the following items.

- Sensor learning status and driving status
- Memory area memorised manually
- Area to avoid
- Registered Locations in "**Address Book**"

Limitation of Functions for Areas not Stored on the Disc

For areas not stored on the disc, the functions will operate as follows:

Displaying the map

- Maps with a scale of between 25 m and 200 m cannot be displayed. (If the scale was set to between 25 m and 200 m, it is automatically switched to 500 m.)
- When driving with **Mixed Mode**, **St.List Mode** or **Driver's View**, upon entering an area not stored on the disc the display automatically switches to **MAP Mode**. (When the vehicle reenters an area stored on the disc, the display returns to the previous map mode except for **Driver's View**.)

Destination search

- You cannot search a destination in an area not stored on the disc using **Address Search** or **Postal Code Search**.
- In case of **POI Search** and **Vicinity Search**, only "**City Centre**" search is possible.
- If you cannot search in a currently selected country, the system may forcibly switch to the country selection screen.
- A **Motorway Search** covers all areas, regardless of the disc on which the information is stored.



 
 
NAVI/AV

- If a **Vicinity Search** is performed on the border of an area not stored on the disc, the system will not necessarily select the nearest facility. (The search will take place only within the range of areas stored on the disc.)

Guidance

- When your vehicle approaches an area not stored on the disc, you will be notified three times: when the distance to the area not stored on the disc is 20 km (12 mi), 10 km (6 mi) and 5 km (3 mi) respectively. When your vehicle enters that area, a caution is given.
- In the areas not stored on the disc, only guidance for reaching the destination is provided. No other guidance is given.
- If a route calculation is operated within an area not stored on the disc, the route might not be set from the streets you are currently driving. Also, if you set the destination in an area not stored on the disc of the disc, the system may not be able to set the route up to the destination.
- If the vehicle deviates from the set route in an area not stored on the disc, the Auto Reroute function will not work.
- Even if "**Close-up of Junction**" is "**On**", the display will not switch to an enlarged map of the junction.
- Even if you drive on the motorway, lane information, motorway exit numbers and motorway signs will not be displayed.

Appendix




Memory mode

- Only data for areas stored on the disc can be memorised. (Data for areas not stored on the disc cannot be memorised.)
- If the vehicle enters an area not stored on the disc, preparation for memory navi mode will have to be redone after the vehicle returns to an area stored in the disc. (Preparation for the memory navi mode starts from the location where the vehicle re-entered the area stored on the disc.)

Avoid area

 - An area not stored on the disc cannot be set as an **Areas to Avoid**.
- A set **Areas to Avoid** may be deleted when the software is updated. If this happens, the system will automatically try to recover the deleted information, but data can be recovered only for areas stored on the disc. For items that could not be recovered, a recovery process will begin when you set another disc.




Route information

- If the set route goes through an area not stored on the disc, no route profile for that area will be displayed. (If the set route traverses both an area not stored on the disc and area stored on the disc, only the route profile within the area stored on the disc will be displayed.)
- Route scrolling for an area not stored on the disc is possible only with a map scale of 500 m or above.

Other function limitations

Overlay POI

 - Only display "**City Centre**" is available in an area not stored on the disc.




Troubleshooting

If you have problems operating your navigation system, refer to this section. The most common problems are listed below, along with likely causes and solutions. While this list is not comprehensive, it should answer your most common problems. If a solution to your problem cannot be found here, contact your dealer or the nearest authorised Pioneer service facility.

Problems in the navigation screen

Symptom	Cause	Action (See)
Power doesn't turn on. The unit doesn't operate.	Leads and connectors are incorrectly connected.	Confirm once more that all connections are correct.
	The fuse is blown.	Rectify the reason for the fuse blowing, then replace the fuse. Be very sure to install a correct fuse with the same rate.
	Noise and other factors are causing the built-in microprocessor to operate incorrectly.	Press the RESET button. (→ Refer to page 125 in this manual.)
When the ignition switch is turned ON (or turned to ACC), the motor sounds.	The navigation system confirms whether a disc is loaded or not.	This is a normal operation.
You cannot position your vehicle on the map or the positioning error is large.	The quality of signals from the GPS satellites is poor, causing reduced positioning accuracy. Such a loss of signal quality may happen for the following reasons: <ul style="list-style-type: none"> • The GPS aerial is in an unsuitable location. • Obstacles are blocking signals from the satellites. • The position of satellites relative to your vehicle is bad. • Signals from the GPS satellites have been modified to reduce accuracy. (GPS satellites are operated by the US Department of Defense, and the US government reserves the right to distort positioning data for military reasons. This may lead to greater positioning errors.) • If a vehicle phone or mobile phone is used near the GPS aerial, GPS reception may be lost temporarily. 	Check the GPS signal reception (→ Page 59) and the position of the GPS aerial if necessary, or continue driving until reception improves. Keep the aerial clear.
	Something covers the GPS aerial.	Do not cover the GPS aerial with spray paint or vehicle wax, because this may block the reception of GPS signals. Snow buildup can also degrade the signals.
	Signals from the vehicle's speed pulse are not being picked up properly.	Check that the cables are properly connected. If necessary, consult the dealer that installed the system.
	The navigation system may not be mounted securely in your vehicle.	Check that the navigation system is securely mounted and, if necessary, consult the dealer that installed the system.
	Your vehicle is operating in Simple hybrid mode.	Connect the speed signal input (pink lead wire) of the power cable correctly, and reset the 3D Hybrid Sensor memory (" Learning Status ").

Symptom	Cause	Action (See)
	The navigation system is installed with an extreme angle exceeding the limitation of the installation angle.	Confirm the installation angle. (The navigation system must be installed within the allowed installation angle. For details, refer to "Installation Manual".)
	Indication of the position of your vehicle is misaligned after a U-turn or reversing.	Check whether or not the reverse gear signal input lead (purple) is connected properly. (The navigation system works properly without the lead connected, but positioning accuracy will be adversely affected.)
The map continually reorients itself.	The travelling direction is set to Heading Up.	Touch  on the screen and change the map display.
Tracking marks are not displayed.	The " Tracking Display " is turned off.	Check the " Tracking Display " settings (→ Page 63) and make sure " Always " or " This Trip " is selected.
The daylight display is used even when the vehicle lights are on.	" Daytime " is set to " Day/Night Display ".	Check the " Day/Night Display " setting (→ Page 64) and make sure " Illuminated " is selected.
	The orange/white lead is not connected.	Check the connection.
The system will not switch on or will not operate.	Installation or connection has been carried out incorrectly.	Check with your dealer.
The display is very dim.	The vehicle's light is turned ON, and " Illuminated " is selected on " Day/Night Display ".	Read about the " Day/Night Display " setting (→ Page 64) and, if desired, select " Daytime ".
	The vehicle cabin temperature is extremely low.	A Liquid Crystal Display (LCD) is used, and such displays tend to darken when cold. Wait for the vehicle to warm up.
	Picture quality adjustment of the display is not correct.	Refer to "Operating the Picture Adjustment" to adjust the picture quality.
No sounds are heard.	The volume level is low.	Adjust the volume level.
The volume level will not rise.	The attenuator or mute is on.	Turn the attenuator or mute off.
	The speaker lead is disconnected.	Check the connection.
Adjusting the volume of navigation guidance and beeps is not possible.	You cannot adjust them with the VOLUME knob.	Turn the volume up or down according to " Volume " (→ Page 61) in the " Settings " menu.
A strange sound is heard when the vehicle comes close to a certain place. (E.g. Dog barking)	The sound for the entry of " Address Book " is set.	Set the sound setting of that entry to " No Sound ". (→ Page 50)
Slope is not displayed on the Vehicle Dynamics screen.	The speed pulse lead is not connected.	Connect the speed pulse lead.
Inclination does not move on the 3D Calibration Status screen.		
The person on the other end of the phone call cannot hear the conversation due to an echo.	The voice from the person on the other end of the phone call is output from the speakers and then picked up by the microphone again, creating an echo.	Use the following methods to reduce the echo. <ul style="list-style-type: none"> - Lower the volume on the receiver - Have both speakers pause slightly before speaking

When the screen is frozen...

Park your vehicle in a safe place, and cut off the engine. Turn the ignition key back to "Acc off". Then start the engine again, and turn the power to the navigation system back on. If this does not solve the problem, press the **RESET** button on the navigation system.

Symptom	Cause	Action (See)
Playback is not possible.	The disc is dirty.	Clean disc.
	The loaded disc is a type this unit cannot play.	Check what type the disc is.
	A non-compatible video system disc is loaded.	Change to a disc compatible to your video system.
There's no picture.	The handbrake cord is not connected.	Connect the handbrake cord, and apply the handbrake.
	The handbrake is not applied.	Connect the handbrake cord, and apply the handbrake.
The audio and video skip.	This unit is not firmly secured.	Secure this unit firmly.
Rear display picture disappears.	The source disc being listened to in the navigation system has been ejected.	Before ejecting the disc, switch the source. This problem may occur when certain connection methods are used.
	There was a problem with the rear display or a faulty wiring connection.	Check the rear display and its connection.
	Rear View is selected on the screen.	Select view mode other than Rear View.
Nothing is displayed and the touch panel keys cannot be used.	The setting for the rear view camera is incorrect.	Connect a rear view camera correctly.
	The gearstick was placed in [R] when the rear view camera was not connected.	Press the MAP button to return to the source display and then select the correct setting for Camera . ↪ About Camera setting → Page 111


NAV/AV

Appendix

Problems in the audio screen (during DVD-Video playback)

Symptom	Cause	Action (See)
CD or DVD playback is not possible.	The disc is inserted upside down.	Insert the disc with the label upward.
	The disc is dirty.	Clean disc.
	The disc is cracked or otherwise damaged.	Insert a normal, round disc.
	The files on the CD are an irregular file format.	Check the file format.
	The CD format cannot be played back.	Replace disc.
	The loaded disc is a type this system cannot play.	Check what type the disc is. (Also see "Handling and Care of the Disc" for more cautions about handling each type of media.)
No picture.	The handbrake lead is not connected or applied.	Connect a handbrake lead correctly, and apply the handbrake.
	Handbrake interlock is activated.	Park your vehicle in a safe place and apply the handbrake. ↪ "Handbrake interlock" → Page 11
	The " AV1 Input " or " AV2 Input " setting is incorrect.	Please read the following page and set the setting correctly. → Page 110
The audio skips.	The navigation system is not firmly secured.	Secure the navigation system firmly.
"Rear display" picture disappears.	There was a problem with the "Rear display" or a faulty wiring connection, for example.	Check the "Rear display" and its connection.
	"DVD/DivX Setup" is carried out	You can not display the video image to "Rear display" during " DVD/DivX Setup " menu.

NAVI/AV

Symptom	Cause	Action (See)
Nothing is displayed and the touch panel keys cannot be used.	The setting for the rear view camera is incorrect.	Connect a rear view camera correctly.
	The gearstick was placed in [R] when the rear view camera was not connected.	Press the VOLUME knob to return to the source display and then select the correct polarity setting for "Camera" . ➤ About "Camera" setting → Page 111
	The back light of the LCD panel is turned off.	Turn on the back light. → Page 113
Touch panel key is not respond or a different key is responding.	Touch keys deviate from the actual positions that respond to your touch for some reason.	Perform the touch panel calibration. "Adjusting the Response Positions of the Touch Panels (Touch Panel Calibration)" → Page 117
No sounds are heard. The volume level will not rise.	Cables are not connected correctly.	Connect the cables correctly.
	The system is performing still, slow motion, or frame-by-frame playback with DVD-Video.	There is no sound during still, slow motion, or frame-by-frame playback with DVD-Video.
	The system is paused or performing, fast rewind or forward during the MP3/WMA/AAC disc playback.	For an MP3/WMA/AAC, there is no sound on fast rewind or forward.
The icon  is displayed, and operation is not possible.	The operation is not compatible with the DVD's configuration.	This operation is not possible. (For example, the DVD playing does not feature that angle, audio system, subtitle language, etc.)
The picture stops (pauses) and the unit cannot be operated.	Reading of data has become impossible during DVD playback.	After touching g once, start playback once more.
The picture is stretched, the aspect is incorrect.	The aspect setting is incorrect for the display.	Select the appropriate setting for that image. ➤ "Changing the Wide Screen Mode" → Page 112 ➤ "Setting the aspect ratio" → Page 107
A parental lock message is displayed and DVD playback is not possible.	Parental lock is on.	Turn parental lock off or change the level (→ Page 107).
Parental lock for DVD playback cannot be cancelled.	The code number is incorrect.	Input the correct code number. (→ Page 107).
Playback is not with the audio language and subtitle language settings selected in "DVD/DivX Setup" .	The DVD playing does not feature dialogue or subtitles in the language selected in "DVD/DivX Setup" .	Switching to a selected language is not possible if the language selected in "DVD/DivX Setup" is not recorded on the disc.
The picture is extremely unclear/distorted and dark during playback.	The disc features a signal to prohibit copying. (Some discs may have this.)	Since the navigation system is compatible with the copy guard analog copy protect system, when playing a disc that has a signal prohibiting copying, the picture may suffer from horizontal stripes or other imperfections when viewed on some displays. This does not mean this unit is malfunctioning.

Appendix

Problems in the audio screen (during iPod playback)

Symptom	Cause	Action (See)
Cannot be operated.	The iPod is frozen.	Reconnect the iPod with the interface cable for iPod® (sold separately).

Messages and how to react to them

The following messages may be displayed by your navigation system.

- There are occasions when you may see error messages other than those shown here. In such a case, follow the instructions given on the display.

Message	When	What to do
Please insert the appropriate disc.	If you try to use a disc which is incompatible with this system.	Insert a suitable disc.
This is not the appropriate disc. Please insert the appropriate disc.	If you insert a disc upside down.	Insert the disc with the label upward.
	If the disc is dirty.	Clean the disc.
	If the disc is cracked or otherwise damaged.	Insert a normal, round disc.
Irregular speed pulse signal is detected. Please turn system power off and check the installation. After checking, please re-boot the system and press "OK".	If the Navigation system does not receive the vehicle speed pulse.	Consult your Pioneer dealer.
Speed pulse wire is not connected. Please be sure to connect the system to the speed pulse wire. Accuracy is not fully ensured without speed pulse.	The speed signal input (pink lead wire) of the power cable is not connected.	To operate with 3D hybrid mode, connect the speed signal input (pink lead wire) of the power cable correctly. Although it can be operated with Simple hybrid mode without connecting the speed signal input, the precision of the positioning will be less accurate.
Vibration is detected. Please turn system power off and check the installation. After checking, please re-boot the system and press "OK".	The navigation unit is installed in a place where it may be affected by a large vibration.	Re-install the navigation unit in a place where the unit will not be affected by vibration.
Direction of G sensor is not correct. Please turn system power off and check the installation. After checking, please re-boot the system and press "OK".	Direction of G sensor is set incorrectly.	See the "Installation Manual" and set the direction of the navigation unit correctly.
Gyro Sensor is not working properly. Please consult your dealer or Pioneer service centre.	Abnormal output is detected from the Gyrosensor.	Note down the error code shown on the screen. Turn off the power, and then contact your nearest Pioneer service facility.
This function is not available now.	The screen cannot be displayed with Vehicle Dynamics Display. Because the sensor has not been taught so the sensor information cannot be acquired.	If the sensor learning status reaches the Sensor Initialising status, the system is ready to be used.
System detected that the vertical angle of the installation has been changed. Learning status for Gyro Sensor has been initialised.	If the mounting angle of the navigation unit has been changed.	The system initialises the sensor in order to operate it with the maximum performance and automatically starts re-learning.
System detected that the vertical angle of the installation exceeds the permission level. Please install the navigation unit correctly.	The navigation system is installed with an extreme angle exceeding the limitation of the installation angle.	Confirm the installation angle. (The navigation system must be installed within the allowed installation angle. For details refer to Installation Manual.)
Route calculation was not possible.	Route calculation has failed because of a malfunction of map data, software, hardware or disc.	<ul style="list-style-type: none"> • Change the destination. • Clean the disc. • Consult the Pioneer Local dealer if this message persists.
Route calculation was not possible because the destination is too far.	The destination is too far.	<ul style="list-style-type: none"> • Set a destination closer to the starting point. • Set one or more way points.

NAVI/AV

Message	When	What to do
Route calculation was not possible because the destination is too near.	The destination or way point(s) are too close.	Set a destination or way point(s) farther from the starting point.
Route calculation was not possible due to traffic regulations.	<ul style="list-style-type: none"> The destination or way point(s) are in a Control Traffic Zone (CTR) and the route calculation is hampered. Your vehicle is currently in a Control Traffic Zone (CTR) and the route calculation is hampered. 	<ul style="list-style-type: none"> Set a destination and way point(s) outside the CTR if you know where the restricted area is. Try a destination or way point(s) away from the currently set points to some extent. Drive your vehicle to an unrestricted area and reset the destination and way point(s).
Route calculation was not possible because no guidance can be provided around the destination or the starting point.	The destination, way point(s) or starting point are in an area where no road exists (e.g. a mountain) and the route calculation is impossible.	<ul style="list-style-type: none"> Set a destination and way point(s) on roads. Reset the destination after you drive the vehicle to any road.
There is no route to the destination.	The destination or way point(s) are on an isolated island, etc. without a ferry and the route calculation is impossible.	Change the destination.
Your journey can not avoid the specified area.	If route setting cannot avoid specified Areas to Avoid .	If the current route is not desired, set a destination or way point(s) that do not pass through the Areas to Avoid .
The route could not avoid the specified area.	If the route to the destination or way point(s) cannot be established by bypassing toll roads (including toll areas) and Areas to Avoid .	If the current route is not desired, set a destination or way point(s) that do not pass through toll roads (including toll areas) and Areas to Avoid .
Toll road has not been avoided.	Ferry has not been avoided.	If the current route is not desired, set a destination or way point(s) that do not pass through a ferry route.
Ferry has not been avoided.	In case a ferry route was included in the route to the destination or way point(s) even though " Avoid Ferry " was set to On .	If the current route is not desired, set a destination or way point(s) that do not pass through a ferry route.
Toll road has not been avoided.	If the route to the destination or way point(s) cannot be established by bypassing toll roads (including toll areas).	If the current route is not desired, set a destination or way point(s) that do not pass through toll roads (including toll areas).
There is no applicable data for the selected city. Automatically returning to list.	If the history data of the city could not be used (for example, if the history data of the city that was used in the POI Search cannot be found in the Address Search .)	Once the search is performed to specify the city, the result is saved as a history. The data of the specified city, however, may not be hit by the different search criteria. In this case, try another search method or change the destination.
There is no Motorway in this area.	If no motorway was found in the selected country.	Set the destination or way points using another search method or change the location of the destination or way point(s).
This area does not contain any POI's of the selected type.	Vicinity Search cannot be performed because the searched location is in areas not stored on the DVD Map Disc.	Replace the DVD Map Disc and perform the Vicinity Search again.
Facilities of the selected category do not exist in the surrounding areas.	Use another search method or move to another location and perform the Vicinity Search again.	Use another search method or move to another location and perform the Vicinity Search again.
Only City Centre can be searched.	If POI Search was performed on areas not stored on the DVD Map Disc.	Only the City Centre can be searched. If you want to search other categories in areas not stored on the disc, replace the DVD Map Disc and perform the POI Search again. Set the areas stored on the DVD Map Disc to destination or way points.

Appendix

Message	When	What to do
This country is not available on the disc. Please insert an appropriate disc.	When countries not stored on the DVD Map Disc are included in the search.	Set the destination or way point(s) in the countries stored on the DVD Map Disc, or replace the DVD Map Disc and perform the search again.
Failed to make the route profile.	Failed to generate the route profile because the set route passes through areas not stored on the DVD Map Disc.	Insert the DVD Map Disc and retry.
The maximum number of registrations has been completed. Please clear existing registered items and re-register current item.	If there are already 300 items when you attempt to register an item in the Address Book .	Delete unnecessary data and try to register again.
Memory is full.	When a total of 300 registered points are in the CD-R and Address Book , you attempt moving an item to the Address Book from CD-R.	Delete unnecessary data on the system and try to register again or reduce currently selected items.
Irregular character strings. Please input again.	A symbol that cannot be pronounced was entered.	Enter a word that can be pronounced.
There is no /PICTURES/ folder. Please create /PICTURES/ folder and store JPEG files in that Folder.	Cannot load the image because the PICTURES folder is not found in the inserted disc.	Use the appropriate data after reading "Changing Background Picture" on page 56.
There is no Disc. Please insert a Disc with JPEG files stored in the /PICTURES/ folder.	The disc in which the background picture is stored is not correctly inserted.	Insert the disc that contains the background pictures.
Data read error. Change is cancelled.	Failed to read the data because the CD-R is damaged or dirty. Or, the pick-up lens of the DVD drive is dirty.	Try re-reading the data by inserting a clean CD-R. Clean the pick-up lens with a commercially available cleaning kit for DVD, then try to reading again.
JPEG file is corrupt. Change is cancelled.	The data is damaged or an attempt was made to set a JPEG image that does not conform to specifications as the background picture.	Use the appropriate data after reading "Changing Background Picture" on page 56.
Data Read error. Back to Original Background. Please do not turn power off.	Failed to read the data because the CD-R is damaged or dirty. Or, the pick-up lens of the DVD drive is dirty.	Try re-reading the data by inserting a clean CD-R. Clean the pick-up lens with a commercially available cleaning kit for DVD, then try to reading again.
There are no files available in /PICTURES/ folder.	The PICTURES folder exists on the CD-R but no data in JPEG format exists.	Use the appropriate data after reading "Changing Background Picture" on page 56.
Please insert the appropriate disc. Route calculation was not possible.	In the memory navi mode, if the Auto-reroute does not function for some reason.	Insert the DVD Map Disc.
No route data can be stored. You should insert the disc that contains the map data of the current position.	The area to be set for "Map in Memory" is "areas not stored on the DVD Map Disc".	<ul style="list-style-type: none"> • Change the memory area to be set to "areas stored on the DVD Map Disc". • Insert the DVD Map Disc containing that area.
<ul style="list-style-type: none"> • Scaling down. • Scaling up. 	In the memory navi mode, if the DVD Map Disc is inserted without changing the scale (only when the point is stored on the DVD Map Disc).	The scale automatically returns to the scale that was set in the DVD navi mode before being changed to the memory navi mode.

NAVI/AV

Appendix

NAVI/AV

Message	When	What to do
<ul style="list-style-type: none"> No map data available on this scale. Scaling up. No map data available on this scale. Scaling down. 	When the scale that had been previously displayed cannot be displayed for the following reasons: <ul style="list-style-type: none"> The disc was ejected and the system was changed to the memory navi mode. In the memory navi mode, the map was scrolled to outside the memory area. Or, the vehicle moved outside of the memory area. The map was scrolled to areas not stored on the DVD Map Disc. Or, the vehicle moved to unrecorded areas. The map was scrolled from unrecorded areas to the memory area. Or, the vehicle moved from unrecorded areas to the memory area. 	If the desired scale cannot be selected, insert the DVD Map Disc that contains that area and then change the scale.
Failure in the memory recovery process. Memory navigation is presently not possible.	Failed to complete the recovery of the memory area because the disc could not be read for some reason, resulting in deletion of the memory.	<ul style="list-style-type: none"> Clean the disc. Clean the DVD drive. Consult the Pioneer Local dealer if this message persists.
The map data could not be stored. Previous setting will be kept.	Recovery was performed for the memory area after failing to read the disc data for some reason (The memory area that was previously set will be recovered).	<ul style="list-style-type: none"> Clean the disc. Clean the DVD drive. Consult the Pioneer Local dealer if this message persists.
This function is not available with the current map disc.	The current position is "areas not stored on the DVD Map Disc" and an attempt was made to zoom in to make the scale 500 m or more.	Zoom in again after the vehicle moves into an area stored on the DVD Map Disc. Or, replace the DVD Map Disc and try to zoom in again.
Failed to save to memory. Please re-enter setting.	The settings could not be saved for some reason.	<ul style="list-style-type: none"> Retry. Consult the Pioneer Local dealer if this message persists.

Appendix

Error Messages

When problems occur with disc playback, an error message appears on the display. Refer to the table below to identify the problem, then take the suggested corrective action. If the error persists, contact your dealer or your nearest PIONEER Service Centre. The messages in "()" will appear on the "Rear display".

Message	Cause	Action (See)
Reading error (ERROR-02-XX)	Dirty	Clean disc.
	Scratched disc	Replace disc.
	The disc is loaded upside down	Check that the disc is loaded correctly.
Mechanism error	Electrical or mechanical	Press the RESET button. (Refer to page 125 in this manual.)
Region code error (DIFFERENT REGION DISC)	The disc does not have the same region number as the navigation system	Replace the DVD-Video with one bearing the correct region number.
NON PLAYABLE DISC	This type of disc cannot be played by the navigation system	Replace the disc with one the navigation system can play.
Thermal error (THERMAL PROTECTION IN MOTION)	The temperature of the navigation system is outside of the normal operating range	Wait until the unit's temperature returns to within normal operating limits.
Non-playable tracks are skipped. (FILE SKIPPED)	Files that are protected by digital rights management.	The protected files are skipped.

Message	Cause	Action (See)
Impossible to play all tracks. (PROTECTED DISC.DRM Protected)	All the files on the inserted disc are secured by DRM.	Replace disc.
Flash writing error. Impossible to write on the flash. (CAN NOT SAVE DATA)	The playback history for VOD contents cannot be saved for some reason.	<ul style="list-style-type: none"> • Try saving again. • If the message appears frequently, consult your dealer.
Authorization Error (AUTHORIZATION ERROR)	The device does not match the device registered with the VOD provider. VOD contents cannot be played back.	Check whether this device has been registered with the VOD provider.
NON-PLAYABLE FILE	VOD rental contents file error	<ul style="list-style-type: none"> • Try saving again. • If the message appears frequently, consult your dealer.
	Played back a disc with incompatible format.	Playback a disc with compatible format.
ERROR-11	Connected an iPod with no charge.	<ul style="list-style-type: none"> • Turn "iPod Charge" is "On" and reconnect the iPod. • Connect a charged iPod.
ERROR-21	The iPod version is not compatible.	Use an iPod with a compatible version.

NAV/AV

Handling and Care of the Disc

 
Some basic precautions are necessary when handling your discs.

DVD Map Discs

- Do not use discs other than those intended for this product. Use only discs approved by Pioneer.
 - If you wish to use other DVD Map Discs, first check that they are compatible with this equipment and approved by Pioneer.

DVD drive and care

- Use only normal, round discs. If you insert irregular, non-round shaped discs they may jam in the DVD drive or not play properly.



- Check all discs for cracks, scratches or warpage before playing. Discs that have cracks or scratches, or those that are warped may not play properly. Do not use such discs.
- Avoid touching the recorded (non-printed side) surface when handling the disc.
- Store discs in their cases when not in use.
- Keep discs out of direct sunlight and do not expose the discs to high temperatures.
- Do not attach labels to, write on or apply chemicals to the surface of the discs.

- To clean dirt from a disc, wipe the disc with a soft cloth outward from the centre of the disc.



- If the heater is used in cold weather, condensation may form on components inside the DVD drive. Condensation may cause the DVD drive to operate incorrectly. If you think that condensation is a problem, turn off the DVD drive for an hour or so to allow the DVD drive to dry out, and wipe any damp discs with a soft cloth to remove the moisture.
- Road shocks may interrupt disc playback.

DVD-Video

- With some DVD-Video discs, it may not be possible to use certain functions.
- It may not be possible to play back some DVD-Video discs.

DVD-R/-RW and CD-R/-RW

- Playback is possible only for discs which have been finalised.
- Playback of discs finalised on a personal computer may not be possible depending on the application settings and the environment. Please finalised with the correct format. (For details, contact the manufacturer of the application.)

Appendix

- It may not be possible to playback discs recorded on a music CD recorder, DVD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of this product.
- Playback of discs may become impossible in case of direct exposure to sunlight, high temperatures, or the storage conditions in the vehicle.
- Titles and other text information recorded on a disc may not be displayed by this product.
- If you insert a CD-RW/DVD-RW disc into this product, time to playback will be longer than when you insert a conventional CD/DVD or CD-R/DVD-R disc.
- Read the precautions with the package of discs before using them.
- When DVD-R/DVD-RW discs are used, playback is possible only for discs which have been recorded with the Video format (video mode). It is not possible to play back DVD-R/RW discs which have been recorded with the Video Recording format (VR mode).
- It may not be possible to play back DVD-R/DVD-RW discs which have been recorded with the Video format (video mode), because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of this product.
- It is not possible to read DVD-ROM discs other than Pioneer DVD map discs or DVD-ROMs with MP3, WMA, AAC, or DivX files burned to it.
- This product can play back the disc that finalised with ISO9660 level 1 and level 2, Romeo and Joliet / UDF1.02 file system.
- When you burn a CD-R/RW and DVD-R/RW, make sure the total data size of the CD-R/RW and DVD-R/RW is greater than the amount noted below by storing dummy data or other filler information. Otherwise, the disc may not be recognised by the built-in DVD drive.
 - CD-R/RW: 1.8 MB
 - DVD-R/RW: 170 MB

MP3, WMA and AAC files

- WMA data can be encoded by using Windows Media Player version 7 or later.
- This unit may not operate correctly depending on the application used to encode WMA files.
- Depending on the version of Windows Media Player used to encode WMA files, album names and other text information may not be correctly displayed.
- There may be a slight delay when starting playback of WMA/AAC files encoded with image data.
- It is possible to play back multi-session compatible recorded discs.
- MP3/WMA/AAC files are not compatible with packet write data transfer.
- The maximum number of characters which can be displayed for a file name, including the extension (.mp3, .wma or .m4a), is 64, from the first character.
- The maximum number of characters which can be displayed for a folder name is 64.
- In case of files recorded according to the Romeo file system, only the first 64 characters can be displayed.
- The folder selection sequence for playback and other operations becomes the writing sequence used by the writing software. For this reason, the expected sequence at the time of playback may not coincide with the actual playback sequence. However, there also is some writing software which permits setting of the playback order.
- Some audio CDs contain tracks that merge into one another without a pause. When these discs are converted to MP3/WMA/AAC files and burned to a disc, the files will be played back on this player with a short pause between each one, regardless of the length of the pause between tracks on the original audio CD.
- The sound quality of MP3/WMA/AAC files generally becomes better with an increased bit rate. In order to be able to enjoy sound of a certain quality, we recommend using discs recorded with a higher bit rate.
- This unit plays back files with the filename extension (.mp3, .wma or .m4a) as an MP3/WMA/AAC file. To prevent noise and malfunctions, do not use these extensions for files other than MP3/WMA/AAC files.

MP3 additional information

- Files are compatible with the ID3 Tag Ver. 1.0, 1.1, 2.2 and 2.3 formats for display of album (disc title), track (track title), artist (track artist) and comments. Ver. 2.x of ID3 Tag is given priority when both Ver. 1.x and Ver. 2.x exist.
- You can play back MP3 files in the frequencies from 8 kHz to 48 kHz.
- This unit is compatible with the emphasis function.
- There is no m3u playlist compatibility.
- There is no compatibility with the MP3i (MP3 interactive) or mp3 PRO formats.
- This unit can play recordings with bit rates from 8 kbps to 320 kbps.

WMA additional information


- This unit plays back WMA files encoded by Windows Media Player version 7, 7.1, 8, 9 and 10.
- You can play back WMA files in the frequencies from 8 kHz to 48 kHz.
- This unit can play recordings with bit rates from 5 kbps to 320 kbps.
- This unit doesn't support the following formats.
 - Windows Media Audio 9 Professional (5.1ch)
 - Windows Media Audio 9 Lossless
 - Windows Media Audio 9 Voice

AAC additional information

- This unit plays back AAC files encoded by iTunes® version 4.6.
- This unit plays back AAC files in the sampling frequencies from 8 kHz to 48 kHz.
- This unit can play recordings with transmission rates from 8 kbps to 320 kbps.

About folders and MP3/WMA/AAC files

- An outline of a disc with MP3/WMA/AAC files on it is shown below. Subfolders are shown as folders in the folder currently selected.
- The following figure is an example of the tier structure in the disc. The numbers in the figure indicate the order in which folder numbers are assigned and the order to be played back.
- Indicates the order in which folder numbers are assigned.
- ♪ Indicates each file. The number is assigned in the order of the track to be played back.

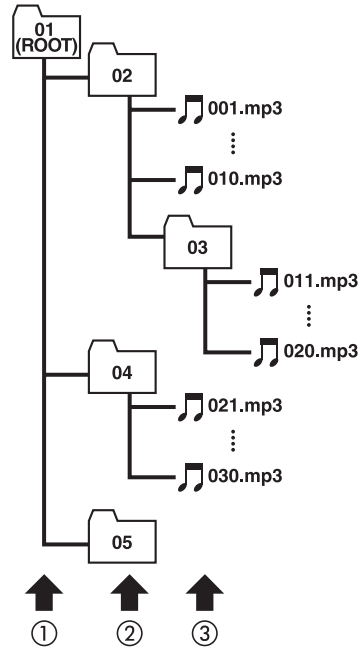

- ① **First tier**
- ② **Second tier**
- ③ **Third tier**

Notes:

- This unit assigns folder numbers. The user cannot assign folder numbers.
- It is not possible to check folders that do not include MP3/WMA/AAC files. (These folders will be skipped without displaying the folder number.)
- It is possible to play back up to 255 folders on one disc.

DivX video files

- This unit corresponds to DivX video format implemented in relation to DivX standards. However, it does not correspond to DivX Ultra standards.
- This unit corresponds to MP3 and AC3 audio codec.
- DivX files without video data cannot be recognised as DivX file.
- Depending on the file information composition such as the number of audio stream, there

NAV/AV

Appendix

may be a slight delay in the start of playback on discs.

- Some special operation may be prohibited because of the composition of DivX files.
- DivX files downloaded only from DivX partner site are guarantee of proper operation. Unauthorised DivX file may not operate properly.
- DRM rental file cannot be operated until starting playing back.
- This unit corresponds to a DivX file display up to 1 590 minutes 43 seconds. Also, search operation beyond this time limit is prohibited.
- This unit corresponds to media with a maximum image size of 720X576 pixels.
- If a file contains more than 4 GB, playback is stopped on the way.
- Files with high transfer rates may not be played back correctly. The standard transfer rate is 4 Mbps for CDs and 10.08 Mbps for DVDs.
- DivX VOD file playback requires ID code of this unit to DivX VOD provider. About ID code, refer to Displaying your DivX[®] VOD registration code on page 108.
- Plays all versions of DivX[®] video (including DivX[®] 6) with standard playback of DivX[®] media files
- For more details about DivX, visit the following site:
<http://www.divx.com/>

Important

- When naming a DivX video file, add the corresponding filename extension (.avi or .divx).
- This unit plays back files with the filename extension (.avi or .divx) as a DivX video file. To prevent noise and malfunctions, do not use these extensions for files other than DivX video files.

DivX subtitle files

- Srt format subtitle files with the extension ".srt" can be used.
- Only one subtitle file can be used for each DivX file. Multiple subtitle files cannot be associated.
- Subtitle files that are named with the same character string as the DivX file before the extension are associated with the DivX file. The character strings before the extension must be exactly the same. However, if there is only one DivX file and one subtitle file in a single folder, the files are associated even if the file names are not the same.

- The subtitle file must be stored in the same folder as the DivX file.
- Up to 255 subtitle files may be used. Any more subtitle files will not be recognised.
- Up to 64 characters can be used for the name of the subtitle file, including the extension. If more than 64 characters are used for the file name, the subtitle file may not be recognised.
- The character code for the subtitle file should comply with ISO-8859-1. Using characters other than ISO-8859-1 may cause the characters to be displayed incorrectly.
- The subtitles may not be displayed correctly if the displayed characters in the subtitle file include control code.
- For materials that use a high transfer rate, the subtitles and video may not be completely synchronised.
- If multiple subtitles are programmed to display within a very short time frame, such as 0.1 seconds, the subtitles may not be displayed at the correct time.

Ambient conditions for playing a disc

- At extremely high temperatures, a temperature cutoff protects this product by switching it off automatically.
- Despite our careful design of the product, small scratches that do not affect actual operation may appear on the disc surface as a result of mechanical wear, ambient conditions for use or handling of the disc. This is not a sign of the malfunction of this product. Consider it to be normal wear and tear.

Using the Navigation System Correctly

WARNING

- If liquid or foreign matter should get inside this navigation system, turn off the power immediately and consult your dealer or the nearest authorised PIONEER Service Station. Do not use the navigation system in this condition because doing so may result in a fire, electric shock, or other failure.
- If you notice smoke, a strange noise or smell from the navigation system, or any other abnormal signs on the LCD screen, turn off the power immediately and consult your dealer or the nearest authorised PIONEER Service Station. Using this navigation system in this condition may result in permanent damage to the system.
- Do not disassemble or modify this navigation system, as there are high-voltage components inside which may cause an electric shock. Be sure to consult your dealer or the nearest authorised PIONEER Service Station for internal inspection, adjustments or repairs.

Handling the LCD screen

- When the LCD screen is subjected to direct sunlight for a long period of time, it will become very hot, resulting in possible damage to the LCD screen. When not using this navigation system, avoid exposing it to direct sunlight as much as possible.
- The LCD screen should be used within the temperature ranges shown below.
 - Operating temperature range: -30°C to $+85^{\circ}\text{C}$
 - Storage temperature range: -40°C to $+85^{\circ}\text{C}$
- Do not use the LCD screen at temperatures higher or lower than the operating temperature range because the LCD screen may not operate normally and the LCD screen can be damaged.
- The LCD screen is exposed in order to increase its visibility within the vehicle. Please do not press strongly on it as this may damage it.
- Do not push the LCD screen with excessive force as this may scratch it.

- Never touch the LCD screen with anything besides your finger when operating the Touch Panel functions. The LCD screen can scratch easily. (The stylus is supplied for special calibrations. Do not use the stylus for normal operation.)

Liquid crystal display (LCD) screen

- If the LCD screen is near the vent of an air conditioner, make sure that air from the air conditioner is not blowing on it. Heat from the heater may break the LCD screen, and cool air from the cooler may cause moisture to form inside the navigation unit, resulting in possible damage. Also, if the LCD screen is cooled down by the air conditioner, the LCD screen may become dark or the life span of the small fluorescent tube used in the LCD screen may be shortened.
- Small black dots or white dots (bright dots) may appear on the LCD screen. These are due to the characteristics of the LCD screen and do not indicate a problem with the LCD screen.
- At low temperatures, the LCD screen may be dark for a while after the power is turned on.
- The LCD screen will be difficult to see if it is exposed to direct sunlight.
- When using a mobile phone, keep the aerial of the mobile phone away from the LCD screen to prevent disruption of the video with disturbances such as spots or coloured stripes.

Keeping the LCD screen in good condition

- When removing dust from the LCD screen or cleaning the LCD screen, first turn the system power off, then wipe with a soft dry cloth.
- When wiping the LCD screen, take care not to scratch the surface. Do not use harsh or abrasive chemical cleaners.

Small fluorescent tube

- A small fluorescent tube is used inside the display to illuminate the LCD screen.

NAVI/AV

Appendix



NAVI/AV

- The fluorescent tube should last for approximately 10 000 hours, depending on operating conditions. (Using the navigation unit at low temperatures reduces the service life of the fluorescent tube.)
- When the fluorescent tube reaches the end of its useful life, the LCD screen will be dark and the image will no longer be projected. If this happens, consult your dealer or the nearest authorised Pioneer service station.

Short:

Calculate a route with the shortest distance to your destination as a priority.

Fast:

Calculate a route with the shortest travel time to your destination as a priority.

Condition 2: whether to use motorway or not

Avoid Motorway:

Calculate a route that avoids motorways. (A route using the motorway may be set if your destination is far away.)

Route Setting Information

Route search specifications

Your navigation system sets a route to your destination by applying certain built-in rules to the map data. This section provides some useful information about how a route is set.

Appendix

CAUTION

- **When a route is calculated, the route and voice guidance for the route is automatically set. Also, for day or time traffic regulations, only information about traffic regulations at the time when the route was calculated is shown. One-way streets and street closures may not be taken into consideration. For example, if a street is open during the morning only, but you arrive later, it would be against the traffic regulations so you cannot drive along the set route. When driving, please follow the actual traffic signs. Also, the system may not know some traffic regulations.**

About singular route calculation




When the calculation of only one route is set, you can search a route option by combining the following conditions.

- ☞ How to set the calculation conditions → Page 46

For example, when "Fast" and "Avoid Motorway" ("On") are combined, a route that avoids motorways and has the shortest travel time will be calculated and displayed on the screen.

Condition 1: whether to put priority on distance or time

   - The system assumes that the driver deviated either intentionally or inadvertently from the route and searches for another route (intelligent rerouting). Depending on the situation, the system may search for a new route that does not return to the original one.
- The calculated route is one example of the route to your destination decided by the navigation system while taking the type of streets or traffic regulations into account. It is not necessarily an optimum route. (In some cases, you may not be able to set the streets you want to pass. If you want to pass a certain street, set the way point on that street.)
- The route set by your navigation system is based on the assumption that the driver does not know the area. Thus, streets known to local drivers, such as small streets or special roads, may not be used for the set route.
- Some route options may become the same route. If way points are set, only one route is calculated.
- Route setting is limited to the range of the disc in use.
- The destination is too far, there may be instances where the route cannot be set. (If you want to set a long-distance route going across several areas, set way points along the way.)
- During voice guidance, turns and junctions from the motorway are announced. However, some junctions, turns, and other guide points may not be announced if they are passed in rapid succession.
- It is possible that guidance may direct you off a motorway and then back on again.
- In some cases, the set route may require you to travel in the opposite direction of your current



heading. In such cases, you are instructed to turn around; please do so safely and in accordance with local traffic rules.

- In some cases, guidance may direct you past your destination and then indicate a U-turn to get back to it.
- In some cases, a route may begin on the opposite side of a railway or river from your actual current location. If this happens, drive towards your destination for a while, and try route calculation again.
- In the following cases, a route that passes through an Area to Avoid may be set:
 - when your vehicle is in the Area to Avoid
 - when your destination or way points are in the Area to Avoid
 - when it is not possible to avoid doing so
- If a suitable route cannot be set in compliance with the specified detour distance, or your preference to avoid motorways, toll roads or ferry routes, the setting or parameter may be ignored.
- When there is a traffic jam ahead, if driving through the traffic jam is better than taking the detour, a detour route may not be set.
- There may be instances when the starting point and the destination point are not on the highlighted route.
- The number of roundabout exits displayed on the screen may differ from the actual number of roads.
- If the intersection is approached in a gentle curve, the map displayed may differ from the actual road layout.

Auto Reroute

- Auto Reroute is used when you deviate more than 30m (0.01 mi) from the route.
- The Auto Reroute function does not work in the following cases:
 - when your vehicle is not on a street
 - when you are very close to your destination
 - when your vehicle is on a ferry
 - when driving on a road inside a facility
 - when driving on a roundabout
 - when your vehicle is out of Memory area
 - when the vehicle goes out of the area stored in the disc during DVD navigation mode
 - when the vehicle goes out of the memorised area during memory navi mode
 - when driving on routes described in "Roads not used in calculations"

Route highlighting

- Once set, the route is highlighted in bright green or light blue on the map.
- The immediate vicinity of your starting point and destination may not be highlighted, and neither will areas with particularly complex road layouts. Consequently, the route may appear to be cut off on the display, but voice guidance will continue.

Roads not used in calculations

Even though displayed onscreen, the following roads are not included in route calculations.

- Stubble roads
- Walkways
- Roads for public vehicles only

Tracking

- Your navigation system marks your course on the map in certain increments. This is called tracking. It is handy when you want to check a route travelled without guidance or if returning along a complex route.
 - A maximum of about 230 km (145 miles) is marked and, as you travel beyond this limit, tracking marks are erased, starting with the oldest. The tracking display shows about 200 km of vehicle tracking with white dots.
- ☞ Tracking can also be set to erase automatically whenever the navigation system is switched off → Page 63

About traffic information

- Because traffic information is updated only periodically, it may take time to collect complete information.
- Not all RDS stations provide traffic information.
- Instead of the broadcasting station name appearing, the name of the service provider or the music being played may be displayed. The information content depends on the sender of the transmission.
- Traffic information is not taken into account in calculating estimated time of arrival or travel time for your destination.

NAVI/AV

Appendix

- The navigation system may not be able to receive traffic information in some areas.

- Pioneer does not bear responsibility for the accuracy of the information transmitted.
- Pioneer does not bear responsibility for changes to information services provided by broadcasting stations or by related companies, such as cancellation of services or changing to pay-services. Also, we do not accept return of the product for this reason.

Types of the Road Stored in the Disc



There are three types of roads marked on the map of this disc.

Roads included in the route guidance and roads not included

Turn by Turn Routable Roads contain full attribute data and can be used for full Route Guidance. Pioneer Navigation will display full route guidance, including turn-by-turn voice directions and arrow icons.

Routable roads (routes displayed and highlighted in purple) have only basic data and can only be used to plot a navigable route. Pioneer Navigation will only display a navigable route on the map (only the arrival guidance for the destination or a way point is available). Please review and obey all local traffic rules along the highlighted route. (For your safety.)

No turn-by-turn directions or arrow icons will be displayed on these roads.

When your vehicle reaches to the entrance of this road, the icon  will be displayed, indicating that guidance is not available for this type of road. The icon  will be indicated for the road with which the guidance is available.

The Close-up of Junction function, Auto Reroute function, Changing the view to Mixed Mode, or St.List Mode are not available.

Non routable roads (pink colour road)

Map display is possible, but it cannot be used for route calculation. Please review and obey all local traffic rules along this route. (For your safety.)

Glossary

This glossary explains some of the terms used in this manual.

3D Hybrid sensor

The built-in sensor which enables the system to estimate your vehicle's position. A learning function increases its accuracy and its learning data can be stored in memory.

AAC

AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG 2 and MPEG 4.

Address Book

A list of locations registered manually.

Aspect ratio

This is the width-to-height ratio of a TV screen. A regular display has an aspect ratio of 4:3. Wide screen displays have an aspect ratio of 16:9, providing a bigger picture for exceptional presence and atmosphere.

Bit rate

This expresses data volume per second, or bps units (bits per second). The higher the rate, the more information is available to reproduce the sound. Using the same encoding method (such as MP3), the higher the rate, the better the sound.

Chapter

DVD titles are divided into chapters which are numbered in the same way as the chapters of a book. With DVD-Video discs featuring chapters, you can quickly find a desired scene with chapter search.

Current location

The present location of your vehicle; your current location is shown on the map by a red triangle.

Default setting

A factory setting which applies when you first switch on the system; you can change default settings to suit your own needs in the Route Options menu or the Settings menu.

Destination

A location you choose as the end point of your journey.

DivX

DivX is a popular media technology created by DivX, Inc. DivX media files contain highly compressed video with high visual quality that maintains a relatively small file size. DivX files can also include advanced media features like menus, subtitles, and alternate audio tracks. Many DivX media files are available for download online, and you can create your own using your personal content and easy-to-use tools from DivX.com.

DivX Certified

DivX Certified products are officially tested by the creators of DivX and guaranteed to play all versions of DivX video, including DivX 6.

Dolby Digital

Dolby Digital provides multi-channel audio from up to 5.1 independent channels. This is the same as the Dolby Digital surround sound system used in theaters.

DRM

This technology preserves the copyrights for digital data by limiting the number of copies that can be made for audio and video files.

DVD Map Discs

The DVD-ROM discs contain Pioneer navigation software. Map data is also recorded on the discs.

Favourite location

A frequently visited location (such as your workplace or a relative's home) that you can register to allow easy routing.

GPS

Global Positioning System. A network of satellites that provides navigation signals for a variety of purposes.

Guidance mode

The mode in which guidance is given as you drive to your destination; the system automatically switches to this mode as soon as a route has been set.

Guidance point

These are important landmarks along your route, generally intersections. The next guidance point along your route is indicated on the map by the yellow flag icon.

Home location

Your registered home location.

ID3 tag

This is a method of embedding track-related information in a MP3 file. This embedded information can include the track title, the artist's name, the album title, the music genre, the year of production, comments and other data. The contents can be freely edited using software with ID3 Tag editing functions. Although the tags are restricted to the number of characters, the information can be viewed when the track is played back.

ISO9660 format

This is the international standard for the format logic of DVD/CD-ROM folders and files. For the ISO9660 format, there are regulations for the following two levels.

Level 1:

The file name is in 8.3 format (the name consists of up to 8 characters, half-byte English capital letters, half-byte numerals and the "_" sign, with a file-extension of three characters.)

Level 2:

The file name can have up to 31 characters (including the separation mark "." and a file extension). Each folder contains less than 8 hierarchies.

Extended formats

Joliet:

File names can have up to 64 characters.

Romeo:

File names can have up to 128 characters.

JPEG

This stands for Joint Photographic Experts Group, and is an international still image compression standard.

Linear PCM (LPCM)/Pulse code modulation

This stands for linear pulse code modulation, which is the signal recording system used for music CDs and DVDs. Generally, DVDs are recorded with higher sampling frequency and bit rate than CDs. Therefore, DVDs can provide higher sound quality.

m3u

Playlists created using the "WINAMP" software have a playlist file extension (.m3u).

MP3

MP3 is short for MPEG Audio Layer 3. It is an audio compression standard set by a working group (MPEG) of the ISO (International Standards Organisation). MP3 is able to compress audio data to about 1/10th the size of a conventional disc.

MPEG

This stands for Moving Pictures Experts Group, and is an international video image compression standard. Some DVDs feature digital audio compressed and recorded using this system.

Multi-angle

With regular TV programmes, although multiple cameras are used to simultaneously shoot scenes, only images from one camera at a time are transmitted to your TV. Some DVDs feature scenes shot from multiple angles, letting you choose your viewing angle as desired.

Multi-audio (Multilingual dialogue)

Some DVDs feature dialogue recorded in multiple languages. Dialogue in up to 8 languages can be recorded on a single disc, letting you choose as desired.

Multi-session

 
Multi-session is a recording method that allows additional data to be recorded later. When recording data on a CD-ROM, etc., all data from beginning to end is treated as a single unit or session. Multi-session is a method of recording more than 2 sessions on one disc.

Multi-subtitle

Subtitles in up to 32 languages can be recorded on a single DVD, letting you choose as desired.

NAV/AV

Appendix



NAVI/AV

Packet write

This is a general term for a method of writing on CD-R, etc. at the time required for a file, just as is done with files on floppy or hard discs.

Parental lock

Some DVD-Video discs with violent or adult-oriented scenes feature parental lock which prevents children from viewing such scenes. With this kind of disc, if you set the unit's parental lock level, playback of scenes inappropriate for children will be disabled, or these scenes will be skipped.

Point of Interest (POI)

Point Of Interest; any of a range of locations stored in the data, such as railway stations, shops, restaurants, and amusement parks.

Region number

DVD players and DVD discs feature region numbers indicating the area in which they were purchased. Playback of a DVD is not possible unless it features the same region number as the DVD player.

RDS-TMC

A communication system for informing drivers of the latest traffic information using FM multiplex broadcast. Information such as traffic jams or accidents can be checked on the display.

Route setting

The process of determining the ideal route to a specific location; route setting is done automatically by the system when you specify a destination.

Set route

The route marked out by the system to your destination. It is highlighted on the map.

Title

DVD-Video discs have a high data capacity, enabling recording of multiple movies on a single disc. If, for example, one disc contains three separate movies, they are divided into title 1, title 2 and title 3. This lets you enjoy the convenience of title search and other functions.

Tracking

Dots on the map indicating the route you have travelled.

VBR

VBR is short for variable bit rate. Generally speaking CBR (constant bit rate) is more widely used. But by flexibly adjusting the bit rate according to the needs of the audio compression, it is possible to achieve compression with a priority on sound quality.

Voice guidance

The giving of directions by a recorded voice in guidance mode.

Way Point

A location that you choose to visit before your destination; a journey can be built up from multiple way points and the destination.



WMA

WMA is short for Windows Media™ Audio and refers to an audio compression technology that is developed by Microsoft Corporation.

WMA data can be encoded by using Windows Media Player version 7 or later.

Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

  Appendix



Specifications

General

Rated power source	14.4 V DC (allowable voltage range: 12.0 V to 14.4 V DC)
Earthing system	Negative type
Maximum current consumption	10.0 A
Display unit:	
Dimensions (W X H X D):	
DIN	
Chassis	178 X 100 X 160 mm
Nose	188 X 118 X 13 mm
D	
Chassis	178 X 100 X 165 mm
Nose	170 X 97 X 8 mm
Weight	2.2 kg

Navigation

GPS Receiver:	
System	L1, C/Acode GPS SPS (Standard Positioning Service)
Reception system	8-channel multi-channel reception system
Reception frequency ...	1 575.42 MHz
Sensitivity	-130 dBm
Position update frequency	Approx. once per second
GPS aerial:	
Aerial	Micro strip flat aerial/right- handed helical polarisation
Aerial cable	5.0 m
Dimensions (W X H X D)	
.....	33 X 14 X 36 mm
Weight	105 g

Display

Screen size/aspect ratio	6.1 inch wide/17:9 (effective display area: 136 X 72 mm)
Pixels	336 960 (480 X 234 X 3)
Type	TFT active matrix, transmis- sive type
Colour system	NTSC/PAL compatible
Operating temperature range	-30 °C to +85 °C
Storage temperature range	-40 °C to +85 °C

Audio

Maximum power output	50 W X 4 50 W X 2 ch/4 Ω + 70 W X 1 ch/2 Ω (for subwoofer)
Continuous power output ...	22 W X 4 (DIN 45324, +B=14.4 V)
Load impedance	4 Ω (4 Ω to 8 Ω [2 Ω for 1 ch] allowable)
Preout max output level/output impedance	1.7 V/1 kΩ

Equaliser (3-Band Parametric Equaliser):

Low	
Frequency	40/80/100/160 Hz
Q Factor	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain	±12dB
Mid	
Frequency	200/500/1 k/2 kHz
Q Factor	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain	±12dB
High	
Frequency	3.15 k/8 k/10 k/12.5 kHz
Q Factor	0.35/0.59/0.95/1.15 (+6 dB when boosted)
Gain	±12dB
Loudness contour:	
Low	+3.5 dB (100 Hz), +3 dB (10 kHz)
Mid	+10 dB (100 Hz), +6.5 dB (10 kHz)
High	+11 dB (100 Hz), +11 dB (10 kHz) (volume: -30 dB)

Tone controls:

Bass	
Frequency	40/63/100/160 Hz
Gain	±12dB
Treble	
Frequency	2.5 k/4 k/6.3 k/10 kHz
Gain	±12dB

HPF:

Frequency	50/80/125 Hz
Slope	-12 dB/oct

Subwoofer:

Frequency	50/80/125 Hz
Slope	-18 dB/oct
Gain	±12dB
Phase	Normal/Reverse

DVD Drive

System	DVD-Video, Compact disc audio, MP3, WMA, AAC, DivX system
Usable discs	DVD-Video, Compact disc, MP3, WMA, AAC, DivX
Region number	2
Signal format:	
Sampling frequency ...	44.1/48/96 kHz
Number of quantisation bits	16/20/24; linear
Frequency response	5 Hz to 44 000 Hz (with DVD, at sampling frequency 96 kHz)
Signal-to-noise ratio	97 dB (1 kHz) (IEC-A net- work) (CD: 96 dB (1 kHz) (IEC-A network))
Dynamic range	95 dB (1 kHz) (CD: 94 dB (1 kHz))
Distortion	0.008 % (1 kHz)

NAV/AV

Appendix

NAVI/AV

Output level:

Video 1.0 Vp-p/75 Ω (± 0.2 V)
Audio 1.4 V (1 kHz, 0 dB)

Number of channels 2 (stereo)

MP3 decoding format MPEG-1 & 2 Audio Layer 3

WMA decoding format Ver.9.0 L3

AAC decoding format MPEG-4 AAC (only encoded
by iTunes
: .m4a

DivX decoding format Home Theater Ver.3, Ver.4,
Ver.5.2
: .avi, .divx

FM tuner

Frequency range 87.5 MHz to 108.0 MHz

Usable sensitivity 8 dBf (0.7 μ V/75 Ω , mono, S/
N: 30 dB)

Signal-to-noise ratio 75 dB (IEC-A network)

Distortion 0.3 % (at 65 dBf, 1 kHz,
stereo)
0.1 % (at 65 dBf, 1 kHz,
mono)

Frequency response 30 Hz to 15 000 Hz (± 3 dB)

Stereo separation 45 dB (at 65 dBf, 1 kHz)

Appendix

MW tuner

Frequency range 531 kHz to 1 602 kHz (9 kHz)

Usable sensitivity 18 μ V (S/N: 20 dB)

Signal-to-noise ratio 65 dB (IEC-A network)

LW tuner

Frequency range 153 kHz to 281 kHz (9 kHz)

Usable sensitivity 30 μ V (S/N: 20 dB)

Signal-to-noise ratio 65 dB (IEC-A network)

Note:

- Specifications and design are subject to possible modifications without notice due to improvements.

Display Information

*1: If you touch "**Restore Factory Settings**", the registered POI Shortcuts return to the default or factory settings.

*2: If you touch "**Restore Factory Settings**", the setting value return to the default or factory settings.

NAVI MENU

Destination


- Address Search ▶ P. 22
- Return Home ▶ P. 40, 49
- Go to ▶ P. 40, 49
- POI Search ▶ P. 37
- Vicinity Search*1 ▶ P. 38
- Address Book ▶ P. 40, 50
- Destination History ▶ P. 40, 50
- Motorway Search ▶ P. 39
- Postal Code Search ▶ P. 39
- Cancel Route ▶ P. 40

Route Options

- Edit Current Route ▶ P. 43, 46
- View Current Route ▶ P. 42, 46
- Recalculate ▶ P. 46
- Route No.*2 ▶ P. 46
- Route Condition*2 ▶ P. 46
- Avoid Motorway*2 ▶ P. 47
- Avoid Ferry*2 ▶ P. 47
- Avoid Toll Road*2 ▶ P. 47
- Areas to Avoid ▶ P. 44


Traffic/Info

- All Traffic ▶ P. 53
- Traffic On Route ▶ P. 53
- Overlay POI*1 ▶ P. 45
- Traffic Settings*2 ▶ P. 55
- Manual Station Search ▶ P. 56

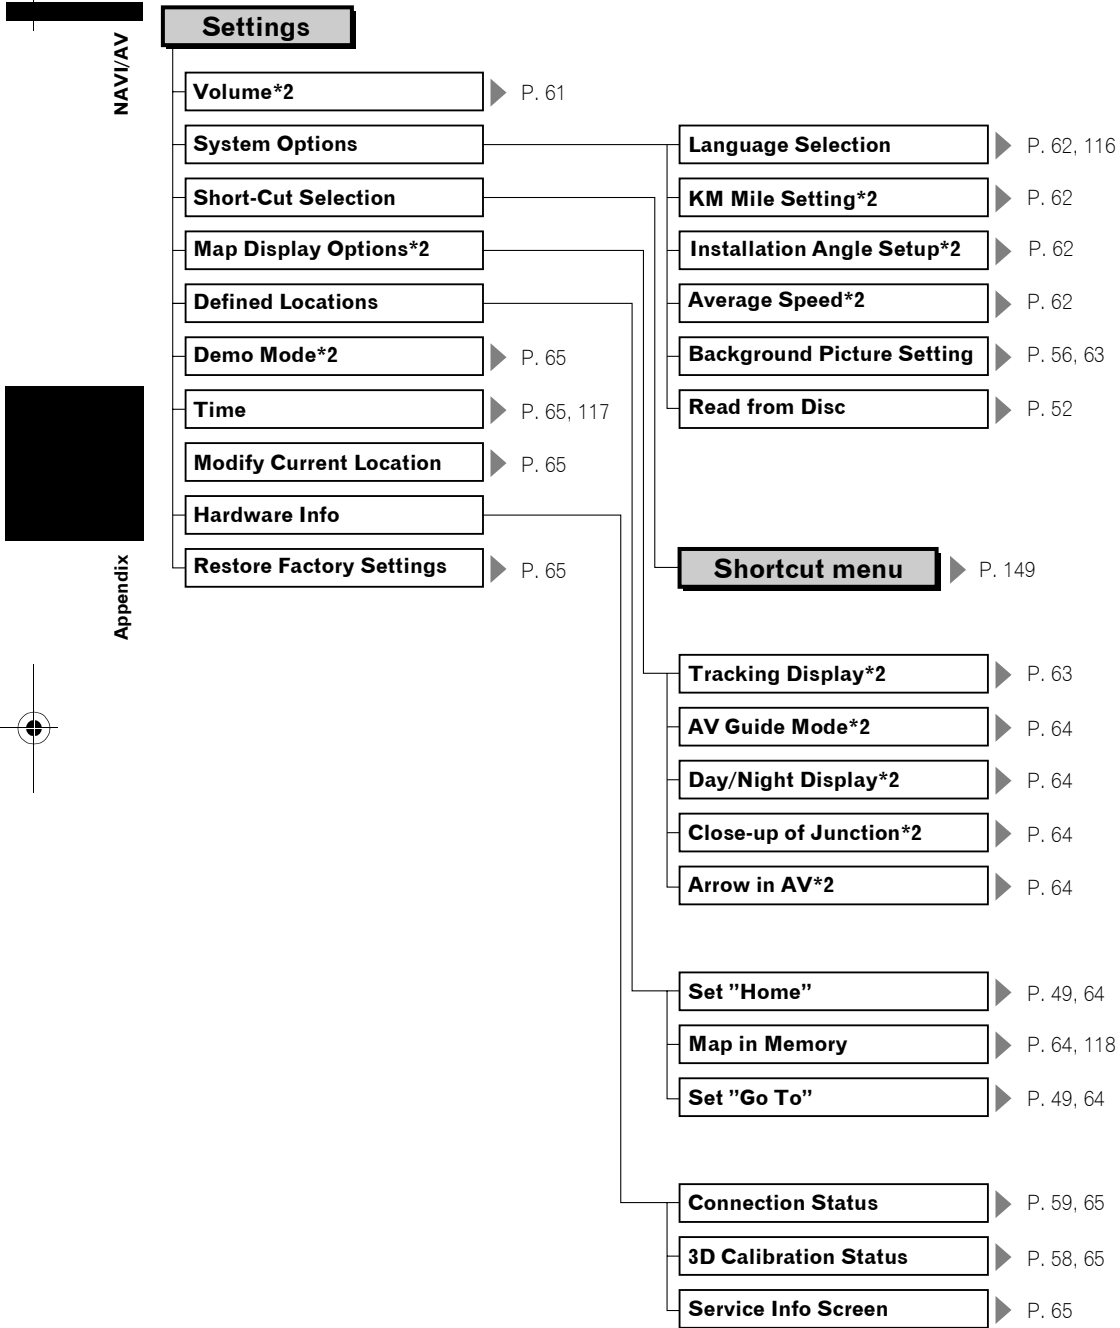

Shortcut menu

- The shortcuts displayed onscreen can be changed. The shortcuts described here are those that can be selected with the system as default setting.
- Items marked with an asterisk (*3) cannot be removed from the shortcut menu.
- Changing a shortcut → Page 63

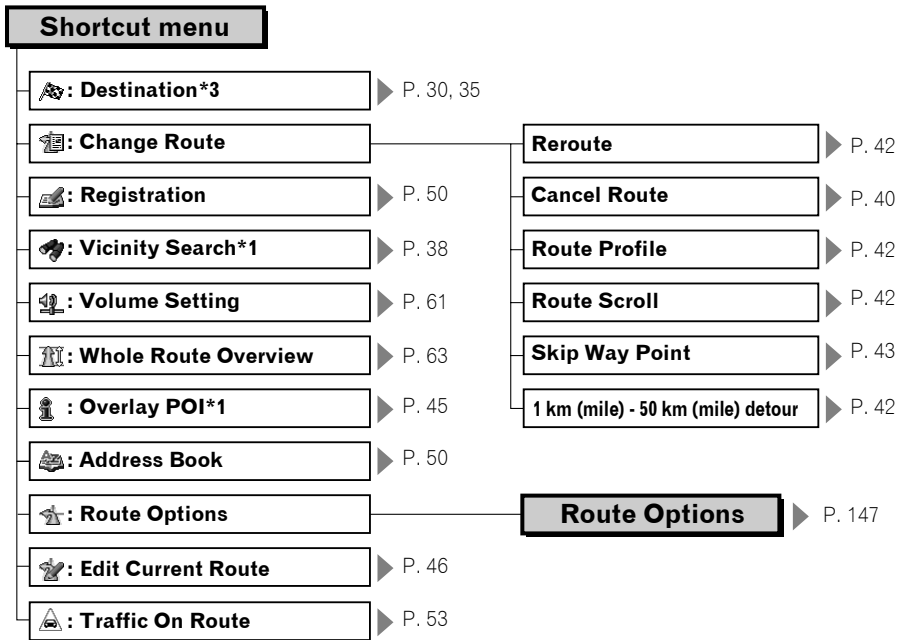



NAVI/AV

Menu in the Audio Screen

Sound menu

Sound

 
- FAD/BAL (Balance) ▶ P. 103
- EQ Menu ▶ P. 104
- Staging ▶ P. 104
- Loudness ▶ P. 105
- Sub Woofer (Non Fading) ▶ P. 105
- HPF ▶ P. 105
- SLA ▶ P. 106

Appendix


Initial menu

Initial

- FM Step ▶ P. 108
 - Auto PI ▶ P. 109
 - Rear SP ▶ P. 109
 - PIN Edit ▶ P. 109
 - Mute Input/Guide ▶ P. 110
 - Pixel Align ▶ P. 110
- Rear SP ▶ P. 109
 - Preout ▶ P. 109



System menu

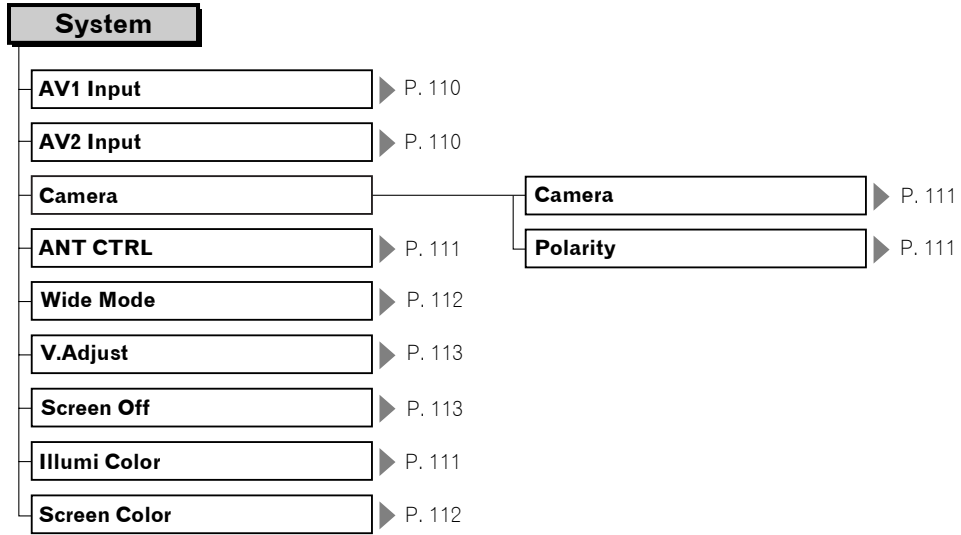

NAV/AV

Appendix

NAVI/AV

Function menu

DISC [DVD-Video, CD, MP3, DivX]

Function

- Repeat ▶ P. 72
- Random ▶ P. 72
- Scan ▶ P. 72

RADIO

Function

- BSM ▶ P. 78
- Regional ▶ P. 79
- Local ▶ P. 78
- PTY ▶ P. 80
- TA ▶ P. 79
- AF ▶ P. 79
- News ▶ P. 80

Appendix

M-CD

Function

- Repeat ▶ P. 84
- Random ▶ P. 84
- Scan ▶ P. 84

BT-TEL

Function

- Phone Connect ▶ P. 90
- Phone Register ▶ P. 91
- Phonebook Transfer ▶ P. 92
- Phonebook Name View ▶ P. 93
- Clear Memory ▶ P. 94
- Auto Answer ▶ P. 94
- Refuse All Calls ▶ P. 94
- Ring Tone ▶ P. 94
- Auto Connect ▶ P. 95
- Echo Cancel ▶ P. 95

iPod

Function


- Repeat ▶ P. 97
- Shuffle ▶ P. 97
- iPod Charge ▶ P. 97

BT-AUDIO

Function


- Connection Open ▶ P. 99
- Disconnect ▶ P. 99
- Device Info ▶ P. 99

DVD/DivX Setup menu

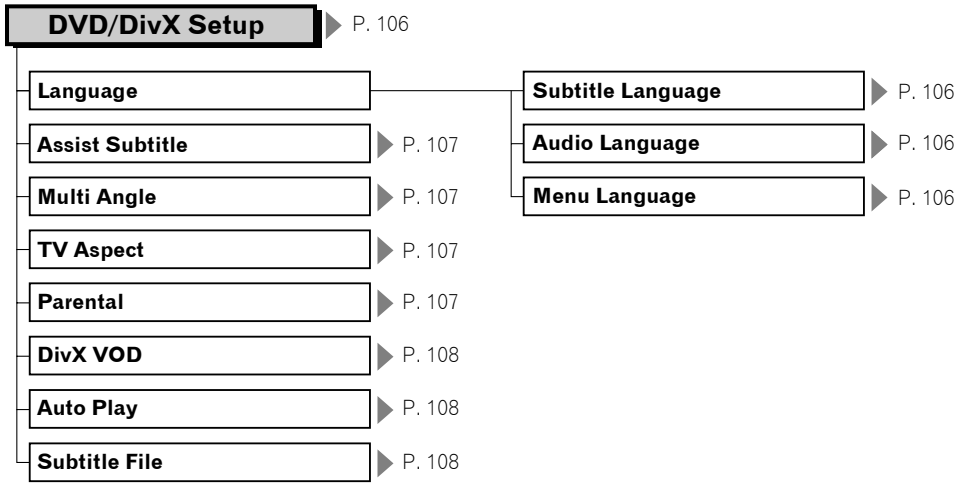


NAV/AV






 
Appendix








NAVI/AV

 


Appendix

      

    

 

www.pioneer.co.uk

 

PIONEER CORPORATION

4-1, MEGURO 1-CHOME, MEGURO-KU, TOKYO 153-8654, JAPAN

PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.
TEL: (800) 421-1404

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium
TEL: (0) 3/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

253 Alexandra Road, #04-01, Singapore 159936
TEL: 65-6472-7555

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

178-184 Boundary Road, Braeside, Victoria 3195, Australia
TEL: (03) 9586-6300

PIONEER ELECTRONICS OF CANADA, INC.

300 Allstate Parkway, Markham, Ontario L3R 0P2, Canada
TEL: 1-877-283-5901

PIONEER ELECTRONICS DE MEXICO, S.A. de C.V.

Bld. Manuel Avila Camacho 138 10 piso
Col. Lomas de Chapultepec, Mexico, D.F. 11000
TEL: 55-9178-4270

先鋒股份有限公司

 
總公司: 台北市中山北路二段44號13樓

電話: (02) 2521-3588

先鋒電子(香港)有限公司

香港九龍尖沙咀海港城世界商業中心9樓901-6室

電話: (0852) 2848-6488



www.pioneer.eu

Published by Pioneer Corporation.
Copyright © 2007 by Pioneer Corporation.
All rights reserved.

Printed in Belgium
<CRB2329-A> EW
MAN-AVIC-D3-EN

