

Pioneer

Owner's Manual

DVD RDS AV RECEIVER

AVH-P3400DVD AVH-2400BT AVH-1400DVD



DX



Made for



iPod



iPhone



Bluetooth®

English

Declaration of Conformity with regard to the R&TTE Directive 1999/5/EC

Manufacturer:

Pioneer Corporation

1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,
Kanagawa 212-0031, JAPAN

EU Representative's:

Pioneer Europe NV

Haven 1087, Keetberglaan 1,
B-9120 Melsele, Belgium/Belgique
<http://www.pioneer.eu>



English:

Hereby, Pioneer, declares that this AVH-2400BT is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Suomi:

Pioneer vakuuttaa täten että AVH-2400BT tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Nederlands:

Hierbij verklaart Pioneer dat het toestel AVH-2400BT in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG

Français:

Par la présente Pioneer déclare que l'appareil AVH-2400BT est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE

Svenska:

Härmed intygar Pioneer att denna AVH-2400BT står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Dansk:

Undertegnede Pioneer erklærer herved, at følgende udstyr AVH-2400BT overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF

Deutsch:

Hiermit erkläre Pioneer, dass sich dieses AVH-2400BT in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet". (BMW)

Ελληνικά:

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Pioneer ΔΗΛΩΝΕΙ ΟΤΙ ΑVH-2400BT ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ

Italiano:

Con la presente Pioneer dichiara che questo AVH-2400BT è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Español:

Por medio de la presente Pioneer declara que el AVH-2400BT cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE

Português:

Pioneer declara que este AVH-2400BT está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Čeština:

Pioneer tímto prohlašuje, že tento AVH-2400BT je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES

Eesti:

Käesolevaga kinnitab Pioneer seadme AVH-2400BT vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Magyar:

Alulírott, Pioneer nyilatkozom, hogy a AVH-2400BT megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

Latviešu valoda:

Ar šo Pioneer deklarē, ka AVH-2400BT atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Lietuvių kalba:

Šiuo Pioneer deklaruoją, kad šis AVH-2400BT atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Malti:

Hawnhekk, Pioneer jiddikjara li dan AVH-2400BT jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Direttiva 1999/5/EC

Slovenčina:

Pioneer týmto vyhlasuje, že AVH-2400BT spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

Slovenščina:

Pioneer izjavlja, da je ta AVH-2400BT v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Română:

Prin prezenta, Pioneer declara ca acest AVH-2400BT este in conformitate cu cerintele esentiale si alte prevederi ale Directivei 1999/5/EU.

Български:

С настоящето, Pioneer декларира, че този AVH-2400BT отговаря на основните изисквания и други съответни постановления на Директива 1999/5/EC.

Polski:

Niniejszym Pioneer oświadcza, że AVH-2400BT jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC

Norsk:

Pioneer erklærer herved at utstyret AVH-2400BT er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

Íslenska:

Hér með lýsir Pioneer yfir því að AVH-2400BT er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC

Thank you for purchasing this PIONEER product.

To ensure proper use, please read through this manual before using this product. It is especially important that you read and observe **WARNING**s and **CAUTION**s in this manual. *Please keep the manual in a safe and accessible place for future reference.*

Be sure to read this

- DVD video disc region numbers 7
- Handling guidelines 98

01 Precautions

IMPORTANT SAFEGUARDS 5

To ensure safe driving 5

To avoid battery exhaustion 6

02 Before you start

About this unit 7

Operating environment 7

In case of trouble 8

Demo mode 8

Adjusting the response positions of the touch panels (Touch Panel Calibration) 8

03 What's what

Head unit 9

Optional remote control 9

04 Basic operations

Basic operations 10

Operating the scroll icon and the scrubber bar 11

Activating the touch panel keys 12

Common operations for menu settings/lists 12

Adjusting the LCD panel angle 13

Ejecting a disc 13

Ejecting a disc 13

Setting the clock 13

05 Tuner

Introduction of tuner operations 14

Introduction of TV tuner operations 15

06 Playing moving images

Introduction of video playback operations 16

07 Playing audio

Introduction of sound playback operations 19

08 Playing still images

Introduction of still image playback operations 22

Introduction of still image playback as a slideshow operations 23

09 Bluetooth telephone

Introduction of Bluetooth telephone operations 24

10 Using Bluetooth wireless technology

Introduction of Bluetooth telephone operations 26

Bluetooth audio operations 27

11 Detailed instructions

Storing and recalling stations 29

Displaying radio text 29

Storing and recalling radio text 29

Storing the strongest stations 29

Tuning in to strong signals 29

Receiving traffic announcements 30

Using PTY functions 30

Switching the media file type 31

Operating the DVD menu 31

Operating this unit's iPod function from your iPod 31

Random play (shuffle) 32

Repeating playback 32

Playing videos from your iPod 32

Browsing for a video/music on the iPod 33

Resume playback (Bookmark) 34

Frame-by-frame playback 34

Slow motion playback 34

Searching for the part you want to play 34

Changing audio language during playback (Multi-audio) 34

- Changing the subtitle language during playback (Multi-subtitle) **35**
- Changing the viewing angle during playback (Multi-angle) **35**
- Return to the specified scene **35**
- Selecting audio output **35**
- PBC playback **35**
- Selecting tracks from the track title list **36**
- Selecting files from the file name list **36**
- Using sound retriever **36**
- Changing audiobook speed **36**
- Displaying lists related to the currently playing song (Link Search) **36**
- Playing DivX® VOD content **37**
- Capture an image in JPEG files **37**
- Changing the wide screen mode **37**
- Calling a number in the phone book **38**
- Selecting a number by alphabet search mode **38**
- Inverting names in phone book **39**
- Using the missed, received and dialed call lists **39**
- Using the missed, received and dialed call lists on the optional Bluetooth adapter **39**
- Setting automatic answering **40**
- Adjusting the other party's listening volume **40**
- Switching the ring tone **40**
- Using the preset dial lists **40**
- Making a call by entering phone number **41**
- Setting the private mode **41**
- Using a cellular phone to initiate a connection **41**
- Registering a connected cellular phone **41**
- Voice recognition **42**
- Connecting a Bluetooth audio player **42**
- Connecting to a Bluetooth device automatically **42**
- Displaying Bluetooth Device address **42**
- 12 Menu operations**
 - Introduction of menu operations **43**
 - Audio adjustments **44**
 - Digital Signal Processor **47**
 - Setting up the DVD player **57**
 - System settings **61**
 - Favorite menu **68**
 - Introduction of Bluetooth connection menu operations **68**
 - Introduction of Theme setting menu operations **71**
- 13 Other functions**
 - Adjusting the response positions of the touch panels (Touch Panel Calibration) **72**
 - Using an AUX source **72**
 - Using an external unit **72**
- 14 Installation**
 - Connecting the units **74**
 - Installation **86**
- Additional information**
 - Troubleshooting **90**
 - Error messages **92**
 - Understanding auto EQ error messages **95**
 - Understanding messages **96**
 - Indicator list **96**
 - Handling guidelines **98**
 - Compressed file compatibility (disc, USB) **100**
 - iPod compatibility **102**
 - Sequence of audio files **102**
 - Using the display correctly **103**
 - Bluetooth profiles **104**
 - Copyright and trademark **104**
 - Language code chart for DVD **106**
 - Specifications **107**

Precautions

IMPORTANT SAFEGUARDS

Please read all of these instructions regarding your display and retain them for future reference.

- 1 **Read this manual fully and carefully before operating your display.**
- 2 **Keep this manual handy as a reference for operating procedures and safety information.**
- 3 **Pay close attention to all warnings in this manual and follow the instructions carefully.**
- 4 **Do not allow other persons to use this system until they have read and understood the operating instructions.**
- 5 **Do not install the display where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags, hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.**
- 6 **Do not operate this display if doing so in any way will divert your attention from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating the system or reading the display, park your vehicle in a safe location and make necessary adjustments.**
- 7 **Please remember to wear your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled.**
- 8 **Never use headphones while driving.**
- 9 **To promote safety, certain functions are disabled unless the parking brake is on, and the vehicle is not in motion.**
- 10 **Never set the volume of your display so high that you cannot hear outside traffic and emergency vehicles.**



WARNING

Do not attempt to install or service your display by yourself. Installation or servicing of the display by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock or other hazards. ■

To ensure safe driving



WARNING

- **LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE PARKING BRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE.**
- To avoid the risk of damage and injury and the potential violation of applicable laws, this unit is not for use with a video screen that is visible to the driver.
- To avoid the risk of accident and the potential violation of applicable laws, no viewing of front seat video should ever occur while the vehicle is being driven. Also, rear displays should not be in a location where they are visibly distracting to the driver.
- In some countries or states the viewing of images on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed and this unit's DVD features should not be used.

When you attempt to watch a video image while driving, the warning "**Viewing of front seat video source while driving is strictly prohibited.**" will appear on the front display. To watch a video image on the front display, park your vehicle in a safe place and apply the parking brake.

When using a display connected to V OUT

Passengers in the rear seat can also watch DVDs or the TV if you connect this unit to a display using the **V OUT**.



WARNING

NEVER install the rear display in a location where the driver can watch a DVD or TV while driving.

When using the rear view camera

With an optional rear view camera, this unit can be used as an aid to keep an eye on trailers, or when backing into a tight parking spot.




WARNING

- **SCREEN IMAGE MAY APPEAR REVERSED.**
- **USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.**




CAUTION

- The rear view camera function is to be used as an aid to keep an eye on trailers, or while backing up. Do not use for entertainment purposes.
- Please note that the edges of the rear view camera images may differ slightly according to whether full screen images are displayed when backing up, and whether the images are used for checking the rear when the vehicle is moving forward. 

turns to its initial condition. We recommend that you transcribe the audio adjustment data.



WARNING

Do not use with vehicles that do not feature an ACC position. 

To avoid battery exhaustion

Keep the vehicle engine running when using this unit to avoid draining the battery power.

- When no power is supplied to this unit, such as when the vehicle battery is being replaced, the microcomputer of this unit re-

Before you start



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

For countries not mentioned above, please contact your local authorities for the correct method of disposal.

By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. ▣

About this unit

The tuner frequencies on this unit are allocated for use in Western Europe, Asia, the Middle East, Africa and Oceania. Use in other areas may result in poor reception. The RDS (radio data system) function only operates in areas with broadcasting RDS signals for FM stations.

CAUTION

This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.

CLASS 1 LASER PRODUCT

CAUTION—CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN, DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

⚠ CAUTION

- Do not allow this unit to come into contact with liquids. Electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids.
- Keep this manual handy for future reference.
- Always keep the volume low enough to hear outside sounds.
- Avoid exposure to moisture.
- If the battery is disconnected or discharged, any preset memory will be erased.

DVD video disc region numbers


Only DVD video discs with compatible region numbers can be played on this player. You can find the region number of the player on the bottom of this unit and in this manual (refer to *Specifications* on page 107). ▣

Operating environment

This unit should be used within the temperature ranges shown below.

Operating temperature range: -10°C to $+60^{\circ}\text{C}$
 EN300328 ETC test temperature: -20°C and $+55^{\circ}\text{C}$ ▣


In case of trouble

Should this product fail to operate properly, please contact your dealer or nearest authorized Pioneer Service Station. 


Demo mode

The feature demo automatically starts when you select **Off** for the source and continues while the ignition switch is set to ACC or ON. To cancel the feature demo, press and hold **MUTE**. Press and hold **MUTE** again to restart. Operating the feature demo while the car engine is turned off it may drain the battery power.

Important

Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain. 


Adjusting the response positions of the touch panels (Touch Panel Calibration)

If you feel that the touch panel keys on the screen deviate from the actual positions that respond to your touch, adjust the response positions of the touch panel. Refer to *Adjusting the response positions of the touch panels (Touch Panel Calibration)* on page 72. 


What's what

Head unit


(AVH-P3400DVD)

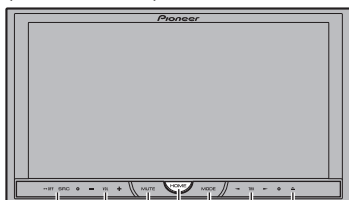

① ② ③ ④ ⑤ ⑥ ⑦

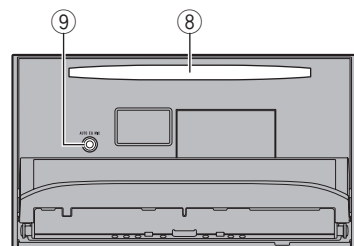

(AVH-2400BT/AVH-1400DVD)

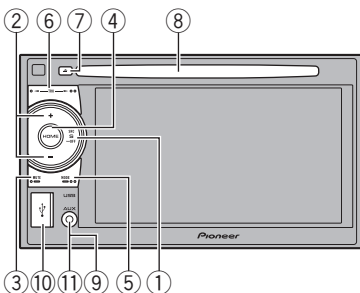

② ⑥ ⑦ ④ ⑧
③ ⑩ ⑪ ⑨ ⑤ ①

| Part | Part |
|---|--|
| ① SRC/OFF | ⑦ ▲ (eject) |
| ② +/- (VOLUME/VOL) | ⑧ Disc loading slot |
| ③ MUTE | ⑨ Auto EQ microphone input jack Use to connect an auto EQ microphone. |
| ④ HOME Displaying the home display. | ⑩ USB port When connecting, open the USB connector lid. |

Part

Part

⑤ **MODE**
Turning the information display off.

⑪ AUX input jack (3.5 mm stereo/video jack)
Use to connect an auxiliary device.

⑥ ◀▶ (TRK)

⚠ CAUTION

- (AVH-2400BT/AVH-1400DVD)
Use an optional Pioneer USB cable (CD-U50E) to connect the USB audio player/USB memory as any device connected directly to the unit will protrude out from the unit and may be dangerous.
- Do not use unauthorized products.

Notes


- When the navigation system is connected, press **MODE** to switch to the navigation display. Press **MODE** and hold to turn the display off. Press **MODE** again to turn the display on.
- For details on how to operate a navigation system from this unit, refer to its operation manual. ▣

Optional remote control


The remote control CD-R33 is sold separately. For details concerning operations, see the remote control manual. ▣

Basic operations


HOME display

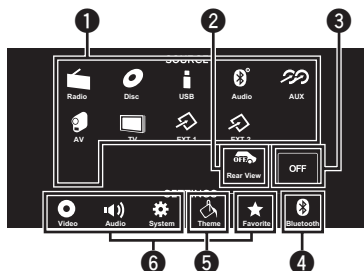


Source off display

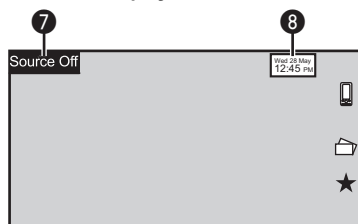


Source on display

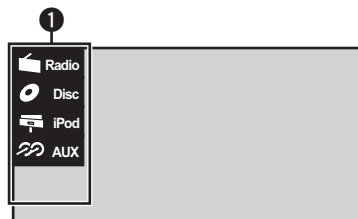

Touch panel keys


- 1  Radio
Source icon
Selecting a favorite source.
When the source icon is not displayed, it can be displayed by touching the screen.


- 2  Rear View
Displaying the rear view image by turning the rear view image on.
When the rear view image is displayed, you can switch to the source display by touching the display. You can operate from the source display temporarily at this time. If you do not perform any operations within a few seconds, the display will return to the rear view image.


- To turn off the rear view image, press **HOME** to return to the **HOME** display and then press the touch key again.

This unit can be setup to display the rear view image automatically when you move the shift lever to the **REVERSE (R)** position. For details about the settings, refer to *Setting the rear view camera (back up camera)* on page 63.

- 3  OFF
Turning the source off.

 
- 4  Bluetooth
Displaying the Bluetooth connection menu.
Refer to *Introduction of Bluetooth connection menu operations* on page 68.

- 5  Theme
Displaying the **Theme** menu.
Refer to *Introduction of Theme setting menu operations* on page 71.

- 6  VIDEO
Displaying the menu.
Refer to *Menu operations* on page 43.

Basic operations

- 7 **Source Off** Displaying the source menu.

- 8  Wed 28 May 12:45 PM Switching to clock adjustment display. Refer to *Setting the clock* on page 13.

Switching to **HOME** display

- 1 Press **HOME** when you want to switch the display.

Turning the source on using the buttons

- 1 Press **SRC/OFF** to turn the source on.

Turning the source off using the buttons

- 1 Press **SRC/OFF** and hold until the source turns off.

Selecting a source using the buttons

- 1 Press **SRC/OFF** to cycle through the sources listed below:

Selecting a source using the touch panel keys


- 1 Touch the source icon and then touch the desired source name.

- **Radio** – Radio
- **TV** – Television
(Function of AVH-P3400DVD)
- **Disc** – Built-in DVD player
- **USB/iPod** – USB/iPod
- **TEL/Audio** – Bluetooth telephone/audio
(Function of AVH-P3400DVD)
- **Audio** – Built-in Bluetooth audio
(Function of AVH-2400BT)
- **AUX** – AUX
- **AV** – AV input
- **EXT 1** – External unit 1
(Function of AVH-P3400DVD)
- **EXT 2** – External unit 2
(Function of AVH-P3400DVD)
- When the source icon is not displayed, it can be displayed by touching the screen.
- While operating the menu, you cannot select a source by touching the source icon.



Adjusting the volume

- 1 Press **+/- (VOLUME/VOL)** to adjust the volume.

Notes

- In this manual, iPod and iPhone will be referred to as “iPod”.
- The **USB/iPod** icon will change as follows:
 - **USB** is displayed when a USB storage device is connected.
 - **iPod** is displayed when an iPod is connected.
 - **USB/iPod** is displayed when no device is connected.
- An external unit refers to a Pioneer product, such as those which will be available in the future. Although incompatible as a source, the basic functions of up to two external units can be controlled with this unit. When two external units are connected, the external units are automatically allocated to external unit 1 or external unit 2. 

Operating the scroll icon and the scrubber bar

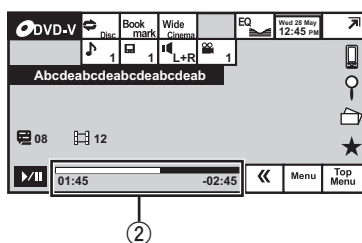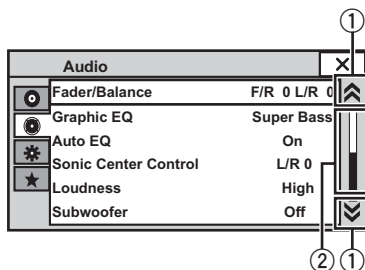

- 1 Scroll icon
Appears when selectable items are hidden.
- 2 Scrubber bar
Appears when items cannot be displayed on a single page only.

Viewing the hidden items


- 1 Touch the scroll icon or drag the scrubber bar to view any hidden items.
 - Also, you can drag the list to view any hidden items.

Specifying the playback point


- 1 Drag the scrubber bar on the screen. (Not available when the scrubber bar is grayed out.)



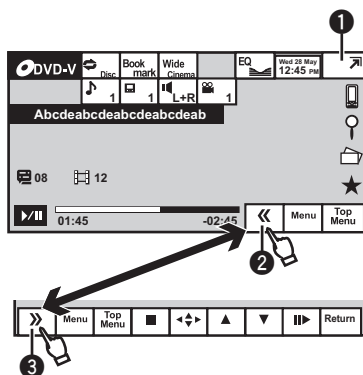

Activating the touch panel keys



Touch panel keys

- 

Turning the display to simplified display.
Returning to the normal display by touching the screen anytime.
Returning to the normal display by touching same icon when playing audio.
- 

Viewing the hidden touch panel keys.
- 

Shorten the touch panel area.



Common operations for menu settings/lists



(AVH-2400BT)
Starting the Bluetooth telephone menu.
Refer to *Introduction of Bluetooth telephone operations* on page 24.



Displaying the list menu.
Starting the search function.

Basic operations



Displaying still images as a slideshow when listening to another source.
You cannot view slideshows when DVD or USB source is selected. Viewing slideshows. Refer to *Introduction of still image playback as a slideshow operations* on page 23.



Displaying the Favorite menu. Refer to *Favorite menu* on page 68.



Returning to the previous display. Returning to the previous list/category. (the folder/category one level higher.)



CAUTION

Keep hands and fingers clear of the unit when opening, closing, or adjusting the LCD panel. Be especially cautious of children's hands and fingers.

1 Press ▲(eject) to display the ejecting menu.

2 Eject a disc.



Ejecting a disc.



Adjusting the LCD panel angle

(Function of AVH-P3400DVD)

CAUTION

Keep hands and fingers clear of the unit when opening, closing, or adjusting the LCD panel. Be especially cautious of children's hands and fingers.

1 Press ▲(eject) to display the ejecting menu.


2 Adjust the LCD panel to an easily viewable angle.



Laying the panel down.



Returning the panel to the upright position.

■ As the set angle is saved, the LCD panel will automatically be adjusted to the same position the next time the LCD panel is opened. 

Ejecting a disc


(AVH-2400BT/AVH-1400DVD)

● Press ▲ (eject). 

Setting the clock

1 Switch to Clock Adjustment display.
Refer to *Basic operations* on page 10.


2 Select the item to set.

3 Touch ▲ or ▼ to set the correct date and time. 

Ejecting a disc

(AVH-P3400DVD)

Introduction of tuner operations

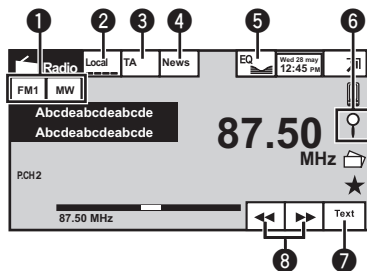

Touch panel keys

- 1 **FM1**
MW
- Selecting a band (**FM1**, **FM2** or **FM3**) by touching the left icon. Switching to the **MW/LW** band by touching the right icon. The icon for the selected band is highlighted.

- 2 **Local**
- Turning local seek tuning on and off. Refer to *Tuning in to strong signals* on page 29.

- 3 **TA**
- Turning TA (traffic announcement standby) on and off. Refer to *Receiving traffic announcements* on page 30.

- 4 **News**
- Turning news program interruption on and off. Refer to *Using news program interruption* on page 30.

- 5 **EQ**
- Switching the equalizer curves. Refer to *Using the equalizer* on page 44. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to *Using the auto-equalizer* on page 45.

 
- 6
- Displaying the preset channel list. Refer to *Storing and recalling stations* on page 29. Refer to *Storing the strongest stations* on page 29. Refer to *Using PTY functions* on page 30.

7

Text

Displaying radio text
Refer to *Displaying radio text* on page 29.
Storing and recalling radio text.
Refer to *Storing and recalling radio text* on page 29.

8

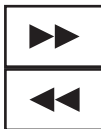

Tuning up or down manually. Touch and hold for more than two seconds to skip stations. Seek tuning starts as soon as you release. Touch again to cancel seek tuning.

Switching preset channels using the buttons

- 1 Press ◀ or ▶ (**TRK**).

Seek tuning using the buttons


- 1 Press and hold ◀ or ▶ (**TRK**).

Notes

- Noise may be generated when listening to MW/LW radio while charging an iPod with this unit. In such cases, disconnect the iPod from the unit.
- Touch panel keys not listed under *Introduction of tuner operations* may appear on the display. Refer to *Indicator list* on page 96.

Tuner



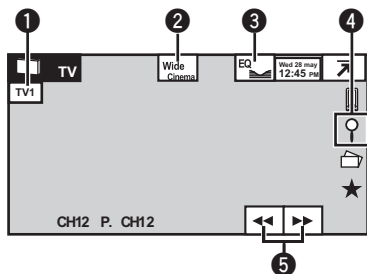


Introduction of TV tuner operations



You can use this unit to control a TV tuner, such as the GEX-P5700TVP (sold separately).

For details concerning operation, refer to the TV tuner's operation manual. This section provides information on TV operations with this unit, which differs from that described in the TV tuner's operation manual.

Touch panel keys
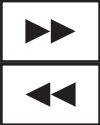
| | | |
|---|---|---|
| 1 |  | Selecting a band. |
| 2 |  | Changing the screen mode. Refer to <i>Changing the wide screen mode</i> on page 37. |
| 3 |  | Switching the equalizer curves. Refer to <i>Using the equalizer</i> on page 44. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to <i>Using the auto-equalizer</i> on page 45. |
| 4 |  | Displaying the preset screen. Refer to <i>Storing and recalling stations</i> on page 29. Refer to <i>Storing the strongest stations</i> on page 29. |
| 5 |  | Tuning up or down manually. Touch and hold for more than two seconds to skip stations. Seek tuning starts as soon as you release. Touch again to cancel seek tuning. |

Switching preset channels using the buttons

1 Press ◀ or ▶ (TRK).

Seek tuning using the buttons

1 Press and hold ◀ or ▶ (TRK).

Notes


- Refer to *Setting the video signal* on page 64 to set the TV signal.
- Refer to *Selecting the area group* on page 64 to select the area group.
- Touch panel keys not listed under *Introduction of TV tuner operations* may appear on the display. Refer to *Indicator list* on page 96. ◻

Introduction of video playback operations


You can view DVD/DVD-R/DVD-RW/CD/CD-R/CD-RW/USB/iPod.

- (AVH-P3400DVD)
Depending on your iPod, there may not be any output unless you use CD-IU201V (sold separately). Be sure to use CD-IU201V to connect your iPod.
- (AVH-2400BT/AVH-1400DVD)
Depending on your iPod, there may not be any output unless you use CD-IU51V/CD-IU201V (sold separately). Be sure to use CD-IU51V/CD-IU201V to connect your iPod.


DVD video

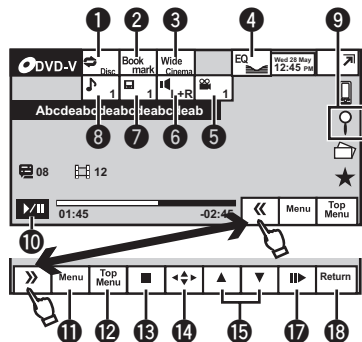


Video CD

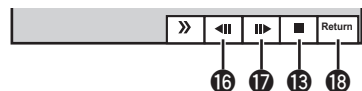 


iPod video

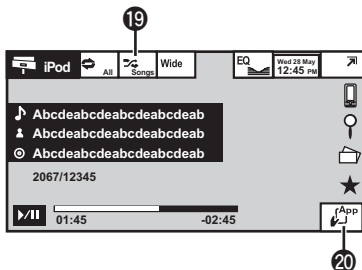

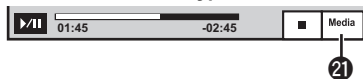 

When playing a disc containing a mixture of various media file types





Touch panel keys


- 


Selecting the repeat range. Refer to *Repeating playback* on page 32.
- 


During playback, touch the point at which you want to resume playback the next time the disc is loaded. Refer to *Resume playback (Bookmark)* on page 34.
- 

Changing the screen mode. Refer to *Changing the wide screen mode* on page 37.
- 

Switching the equalizer curves. Refer to *Using the equalizer* on page 44. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to *Using the auto-equalizer* on page 45.
- 










Switching among viewing angles during playback. Refer to *Changing the viewing angle during playback (Multi-angle)* on page 35.
- 





Switching the audio output, when playing video discs recorded with LPCM audio. Refer to *Selecting audio output* on page 35. Switching between stereo and monaural audio output, when playing Video CD discs.
- 

Switching between subtitle languages during playback. Refer to *Changing the subtitle language during playback (Multi-subtitle)* on page 35.
- 

Switching between audio languages during playback. Refer to *Changing audio language during playback (Multi-audio)* on page 34.

Playing moving images

| | |
|---|--|
| <p>9</p>  | <p>Starting the search function. Refer to <i>Searching for the part you want to play</i> on page 34. Refer to <i>Selecting files from the file name list</i> on page 36. Displaying iPod menus. Refer to <i>Playing videos from your iPod</i> on page 32 and <i>Browsing for a video/music on the iPod</i> on page 33.</p> |
| <p>10</p>  | <p>Pausing playback. Returning to normal playback during paused, slow motion, or frame-by-frame playback.</p> |
| <p>11</p>  | <p>Displaying the DVD menu during DVD playback. Refer to <i>Operating the DVD menu</i> on page 31.</p> |
| <p>12</p>  | <p>Returning to the top menu during DVD playback.</p> |
| <p>13</p>  | <p>Stopping playback. If you resume playback, playback will start from the point where you stopped. Touch the key again to stop playback completely.</p> |
| <p>14</p>  | <p>Displaying arrow keys to operate the DVD menu. Refer to <i>Using the arrow keys</i> on page 31.</p> |
| <p>15</p>  | <p>Skipping to another title. Selecting a folder during DivX/MPEG-1/MPEG-2/ MPEG-4 file playback.</p> |
| <p>16</p>  | <p>Speeding down the playback speed in four steps, during slow motion playback on DVD video/Video CD.</p> |
| <p>17</p>  | <p>Moving ahead one frame at a time during playback. Refer to <i>Frame-by-frame playback</i> on page 34. Touch and hold for more than two seconds to slow down playback speed. Speeding up the playback speed in four steps during slow motion playback on DVD video/Video CD.</p> |

| | |
|---|---|
| <p>18</p>  | <p>Returning to the specified scene to which the DVD currently being played has been preprogrammed to return. Refer to <i>Return to the specified scene</i> on page 35.</p> |
| <p>19</p>  | <p>Playing the video on your iPod in a random order. Refer to <i>Random play (shuffle)</i> on page 32.</p> |
| <p>20</p>  | <p>Conducting operation from your iPod and listening to it using your car's speakers. Refer to <i>Operating this unit's iPod function from your iPod</i> on page 31.</p> |
| <p>21</p>  | <p>Switching between media file types. Refer to <i>Switching the media file type</i> on page 31.</p> |

Playing back videos

- 1 Insert the disc into the disc loading slot with the label side up. Playback will automatically start.
 - If you are playing a DVD or Video CD, a menu may appear. Refer to *Operating the DVD menu* on page 31 and *PBC playback* on page 35.
 - When the automatic playback function is on, the unit will skip the DVD menu and automatically start playback from the first chapter of the first title. Refer to *Automatic playback of DVDs* on page 60.
 - While an iPod is connected to this unit, **PIONEER, Accessory Attached** or ✓ (check mark) is displayed on the iPod.
 - When the source icon is not displayed, it can be displayed by touching the screen.
 - Disconnect headphones from the iPod before connecting it to this unit.
 - Depending on the iPod model and the amount of data stored in the iPod, it may take some time for playback to begin.
 - Use the touch panel keys to select the iPod after connecting it to this unit.
 - **No Device** is displayed when disconnecting the iPod.
 - If a message is displayed after loading a disc containing DivX VOD content, touch **Play**. Refer to *Playing DivX® VOD content* on page 37.

Ejecting a disc

- Refer to *Ejecting a disc* on page 13.

Selecting a chapter using the buttons



 Press ◀ or ▶ (TRK).

Fast forwarding or reversing using the buttons

 Press and hold ◀ or ▶ (TRK).

- Fast forward/fast reverse may not always be possible on some discs. In such cases, normal playback will automatically resume.
- The fast forward/fast reverse speed depends on the length of time you press and hold down ◀ or ▶ (TRK). This function is not available for Video CD.

Notes


- This DVD player can play back a DivX file recorded on CD-R/RW, DVD-R/RW, or MPEG-1/MPEG-2/MPEG-4. (Please see the following section for files that can be played back. Refer to *DivX video files* on page 100.)
- Do not insert anything other than a DVD-R/RW or CD-R/RW into the disc loading slot.
- If the bookmark function is on, DVD playback resumes from the selected point. For more details, refer to *Resume playback (Bookmark)* on page 34.
- Some operations may not be available while watching a media due to the programming of the disc. In such cases, the  icon appears on the screen.
- To ensure proper operation, connect the dock connector cable from the iPod directly to this unit.
- While the iPod is connected to this unit, the iPod cannot be turned on or off.
- Touch panel keys not listed under *Introduction of video playback operations* may appear on the display.
Refer to *Indicator list* on page 96. 

Playing audio


Introduction of sound playback operations

You can listen to DVD-R/DVD-RW/CD/CD-R/CD-RW/USB/iPod sound files.


Audio CD

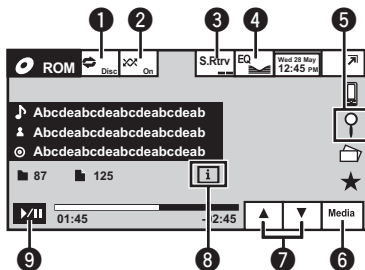

iPod audio (Control Audio)

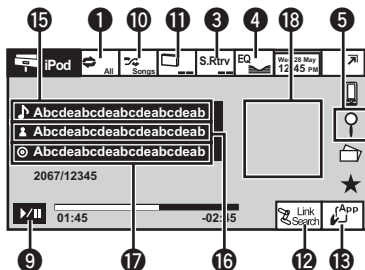


iPod audio (App Mode)

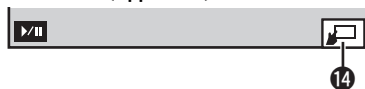 

- (AVH-P3400DVD)
Depending on your iPod, there may not be any output unless you use CD-IU201V (sold separately). Be sure to use CD-IU201V to connect your iPod.
- (AVH-2400BT/AVH-1400DVD)
Depending on your iPod, there may not be any output unless you use CD-IU51V/CD-IU201V (sold separately). Be sure to use CD-IU51V/CD-IU201V to connect your iPod.

Bluetooth Audio

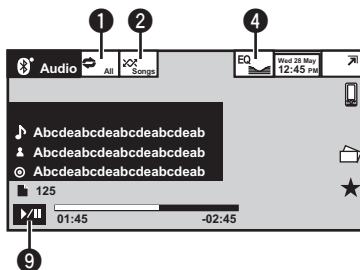

- Depending on the Bluetooth audio player connected to this unit, the available operations will be limited to the following two levels:
 - A2DP profile (Advanced Audio Distribution Profile): You can only playback songs on your audio player.
 - AVRCP profile (Audio/Video Remote Control Profile): You can perform playback, pause playback, select songs, etc.
- Since there are a number of Bluetooth audio players available on the market, available operations will vary extensively. When operating your player with this unit, refer to the instruction manual that came with your Bluetooth audio player as well as this manual.
- As the signal from your cellular phone may cause noise, avoid using it when you are listening to songs on your Bluetooth audio player.
- When a call is in progress on the cellular phone connected to this unit via Bluetooth wireless technology, the sound of the Bluetooth audio player connected to this unit is muted.
- The play time may not display correctly.
- Depending on the type of Bluetooth audio player you have connected to this unit, operation and information display may not be available for some functions.

Playing audio

Touch panel keys

- | | | | | | |
|---|--|--|---|--|--|
| ① | | Selecting the repeat range. Refer to <i>Repeating playback</i> on page 32. | ⑧ | | Switching the text information to display on this unit when playing MP3/WMA/AAC files. |
| ② | | Playing songs in random order. Refer to <i>Random play (shuffle)</i> on page 32. | ⑨ | | Pausing and starting playback. |
| ③ | | Switching the S.Rtrv (sound retriever) function setting when playing audio. Refer to <i>Using sound retriever</i> on page 36. | ⑩ | | Playing songs on the iPod in random order. Refer to <i>Random play (shuffle)</i> on page 32. |
| ④ | | Switching the equalizer curves. Refer to <i>Using the equalizer</i> on page 44. Touch and hold for more than two seconds to turn the auto-equalizer on or off. Refer to <i>Using the auto-equalizer</i> on page 45. | ⑪ | | Changing the speed of audiobook playback on the iPod. Refer to <i>Changing audiobook speed</i> on page 36. |
| ⑤ | | Displaying a list of track titles/file names to select songs on a CD. Refer to <i>Selecting tracks from the track title list</i> on page 36. Displaying the file name list to select the files. Refer to <i>Selecting files from the file name list</i> on page 36. Displaying iPod menus. Refer to <i>Browsing for a video/music on the iPod</i> on page 33. | ⑫ | | Switching to Link Search mode to play songs related to the currently playing song on the iPod. Refer to <i>Displaying lists related to the currently playing song (Link Search)</i> on page 36. |
| ⑥ | | Switching between media file types on a DVD/CD/USB. Refer to <i>Switching the media file type</i> on page 31. | ⑬ | | Conducting operation from your iPod and listening to it using your car's speakers. Refer to <i>Operating this unit's iPod function from your iPod</i> on page 31. |
| ⑦ | | Selecting a folder. | ⑭ | | Performing operations from this unit and listening to the music on your iPod using your car's speakers. |

Playing audio

Text information

15



Displaying the **Songs** list on the iPod.
Refer to *Searching for a video/music by category* on page 33.

16



Displaying the **Artists** list on the iPod.
Refer to *Searching for a video/music by category* on page 33.

17



Displaying the **Albums** list on the iPod.
Refer to *Searching for a video/music by category* on page 33.

Artwork display

18

Starting **Album Link Search** on your iPod when you touch the artwork display.
Refer to *Displaying lists related to the currently playing song (Link Search)* on page 36.

Playing back sound

- 1 Insert the disc into the disc loading slot with the label side up.
Playback will automatically start.
- While an iPod is connected to this unit, **PIONEER, Accessory Attached** or ✓ (check mark) is displayed on the iPod.
 - When the source icon is not displayed, it can be displayed by touching the screen.
 - Disconnect headphones from the iPod before connecting it to this unit.
 - Depending on the iPod model and the amount of data stored in the iPod, it may take some time for playback to begin.
 - Use the touch panel keys to select the iPod after connecting it to this unit.
 - **No Device** is displayed when disconnecting the iPod.

Ejecting a disc

- Refer to *Ejecting a disc* on page 13.

Selecting a track using the buttons

- 1 Press ◀ or ▶ (TRK).

Fast forwarding or reversing using the buttons

- 1 Press and hold ◀ or ▶ (TRK).

Note

Touch panel keys not listed under *Introduction of sound playback operations* may appear on the display.

Refer to *Indicator list* on page 96.

Setting up for Bluetooth audio

Before you can use the Bluetooth audio function you must set up the unit for use with your Bluetooth audio player. This entails establishing a Bluetooth wireless connection between this unit and your Bluetooth audio player, and pairing your Bluetooth audio player with this unit.

- 1 Connection
First, you need to connect a Bluetooth audio to this unit.
Refer to *Introduction of Bluetooth connection menu operations* on page 68.


Notes

- When playing back files recorded as VBR (variable bit rate) files, the play time will not be correctly displayed if fast forward or reverse operations are used.
- To ensure proper operation, connect the dock connector cable from the iPod directly to this unit.
- While the iPod is connected to this unit, the iPod cannot be turned on or off.
- If the characters recorded on the disc are not compatible with this unit, those characters will not be displayed.
- Text information may not be correctly displayed depending on the recorded environment.
- Disconnect the USB portable audio player/USB memory when you are done using it.
- When you select **Clock** or **Speana** on *Selecting the background display* on page 71, the artwork is not displayed. ■

Introduction of still image playback operations

You can view still images saved in CD-R/CD-RW/USB.

Still image

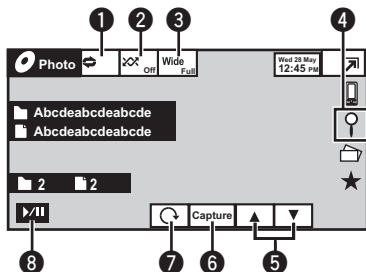

When playing a disc containing a mixture of various media file types



When loading a CD-R/RW or USB containing JPEG picture files, this unit starts a slideshow from the first folder/picture on the disc/device. The table below shows the controls for viewing a slideshow.

Touch panel keys

| | | |
|---|-------------|---|
| ① | | Selecting the repeat range. Refer to <i>Repeating playback</i> on page 32. |
| ② | | Playing files in a random order. Refer to <i>Random play (shuffle)</i> on page 32. |
| ③ | Wide | Changing the screen mode. Refer to <i>Changing the wide screen mode</i> on page 37. |
| ④ | | Displaying the file name list to select the files. Refer to <i>Selecting files from the file name list</i> on page 36. |

| | | |
|---|----------------|---|
| ⑤ | | Selecting a folder. |
| ⑥ | Capture | Capturing an image in JPEG files. Refer to <i>Capture an image in JPEG files</i> on page 37. |
| ⑦ | | Rotating the displayed picture 90° clockwise. |
| ⑧ | | Starting or pausing the slideshow. |
| ⑨ | Media | Switching between media file types when there is more than one media file type saved to the CD-R/RW or USB device. This key does not appear if there is only one media file type saved to the CD-R/RW or USB device. Refer to <i>Switching the media file type</i> on page 31. |

Playing still images

- Insert the disc into the disc loading slot with the label side up.
Playback will automatically start.
 - When the source icon is not displayed, it can be displayed by touching the screen.

Ejecting a disc.

- Refer to *Ejecting a disc* on page 13.

Selecting a file using the buttons

- Press ◀ or ▶ (**TRK**).

Fast file searching

- Press and hold ◀ or ▶ (**TRK**).
- You can search 10 JPEG files at a time.


Notes

- Files are played back in file number order and folders are skipped if they contain no files. (If folder **1** (ROOT) contains no files, playback commences with folder **2**.)
- Touch panel keys not listed under *Introduction of still image playback operations* may appear on the display.
Refer to *Indicator list* on page 96.

Playing still images

Introduction of still image playback as a slideshow operations

You can view still images saved in CD-R/CD-RW/USB as a slideshow when listening to another source.

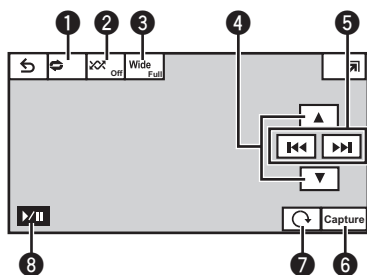

The table below shows the controls for viewing a slideshow.

Touch panel keys

| | | |
|---|---------|--|
| ① | | Selecting the repeat range. Refer to <i>Repeating playback</i> on page 32. |
| ② | | Playing files in a random order. Refer to <i>Random play (shuffle)</i> on page 32. |
| ③ | Wide | Changing the screen mode. Refer to <i>Changing the wide screen mode</i> on page 37. |
| ④ | | Selecting a folder. |
| ⑤ | | Selecting a file. |
| ⑥ | Capture | Capturing an image in JPEG files. Refer to <i>Capture an image in JPEG files</i> on page 37. |

| | | |
|---|--|---|
| ⑦ | | Rotating the displayed picture 90° clockwise. |
| ⑧ | | Starting or pausing the slideshow. |

1 Start slideshow when listening to another source.

Refer to *Common operations for menu settings/lists* on page 12.



Displaying still images as a slideshow.

2 Select the device containing the files that you want to display.

- **Disc** – Built-in DVD player
- **USB/iPod** – USB/iPod
- To cancel searching, touch **Cancel**.


Notes

- This unit cannot be used to view still images on disc or by USB/iPod as a slideshow when the corresponding source, **Disc** or **USB/iPod**, is selected.
- Touch panel keys not listed under *Introduction of still image playback as a slideshow operations* may appear on the display. Refer to *Indicator list* on page 96.


Introduction of Bluetooth telephone operations

You can use Bluetooth telephone (AVH-2400BT only).

Telephone standby display

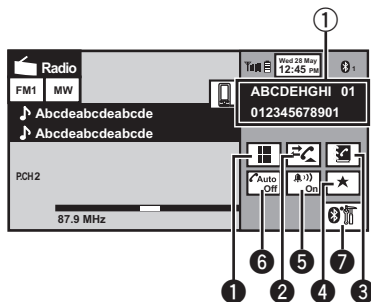

When switching to the entering phone number mode

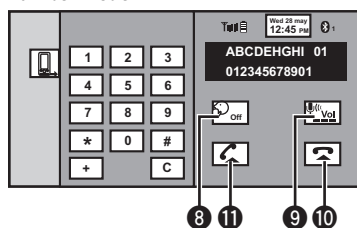

Important

- Since this unit is on standby to connect with your cellular phone via Bluetooth wireless technology, using it without the engine running can drain the battery power.
- Advanced operations that require attention such as dialing numbers on the monitor, etc., are prohibited while driving. Park your vehicle in a safe place when using these advanced operations.
- Operations available may be limited depending on the cellular phone connected to this unit.
- Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation.

- If you are unable to complete the connection using this unit, use the device to connect to the unit.
- If you connect more than one device at a time, connected device may not operate properly. Connecting one device at a time is recommended.

① Incoming call notice





Indicates that an incoming call has been received and has not been checked yet.

- Not displayed for calls made when your cellular phone is disconnected from this unit.

Touch panel keys

- | | | |
|---|--|---|
| ① | | Switching the mode to enter the phone number directly. Refer to <i>Making a call by entering phone number</i> on page 41. |
| ② | | Switching to the call history list. Refer to <i>Using the missed, received and dialed call lists</i> on page 39. |
| ③ | | Switching to the phone book mode. Refer to <i>Calling a number in the phone book</i> on page 38. Refer to <i>Selecting a number by alphabet search mode</i> on page 38. |
| ④ | | Displaying the preset dial screen. Refer to <i>Using the preset dial lists</i> on page 40. |
| ⑤ | | Turning the ring tone for incoming calls on or off. Refer to <i>Switching the ring tone</i> on page 40. |
| ⑥ | | Turning automatic answering on or off. Refer to <i>Setting automatic answering</i> on page 40. |
| ⑦ | | Displaying the Bluetooth connection menu. Refer to the instructions from page 68 to page 70. |

Bluetooth telephone

| | | |
|----|---|---|
| 8 |  | Turning private mode on or off. Refer to <i>Setting the private mode</i> on page 41. |
| 9 |  | Adjusting the other party's listening volume. Refer to <i>Adjusting the other party's listening volume</i> on page 40. |
| 10 |  | Ending a call. Rejecting an incoming call. Canceling call waiting. |
| 11 |  | Accepting an incoming call. Making a phone call, when selecting a phone number. Switching between callers on hold. |

Notes

- Private mode can only be operated while you are talking on the phone.
- To end the call, both you and the other caller must hang up your phones.
- Touch panel keys not listed under *Introduction of Bluetooth telephone operations* may appear on the display.
Refer to *Indicator list* on page 96.

Setting up for hands-free phoning

Before you can use the hands-free phoning function you must set up the unit for use with your cellular phone. This entails establishing a Bluetooth wireless connection between this unit and your phone, registering your phone with this unit, and adjusting the volume level.


- 1 Connection
First, you need to connect a Bluetooth telephone to this unit.
For detailed instructions on connecting your phone to this unit via Bluetooth wireless technology, see following section. *Using a Bluetooth device to pair* on page 69 and *Pairing from this unit* on page 68.
- 2 Volume adjustment
Adjust the earpiece volume of your cellular phone to your preference. The unit will record the adjusted volume level as the default setting.
 - The volume of the caller's voice and ring tone may vary depending on the type of cellular phone.
 - If there is a large volume difference between the ring tone and caller's voice, the overall volume level may become unstable.
 - Make sure to adjust the volume to a proper level before disconnecting the cellular phone from the unit. If the volume is muted (zero level) on your cellular phone, the volume level of your cellular phone remains muted even after the cellular phone is disconnected.




Introduction of Bluetooth telephone operations

You can use Bluetooth wireless technology (AVH-P3400DVD).

During a call

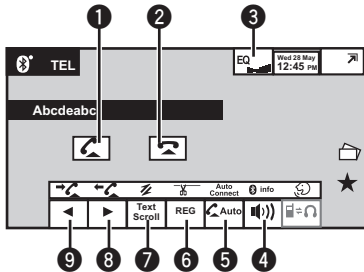

Except during a call

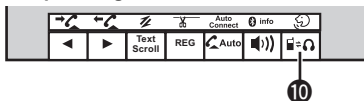 

When you connect a Bluetooth adapter (e.g. CD-BTB200)(sold separately) to AVH-P3400DVD, you can control Bluetooth telephone.

But the available features are limited.

Important

- In some countries, CD-BTB200 is not sold on the market.
- Since this unit is on standby to connect with your cellular phone via Bluetooth wireless technology, using it without the engine running can drain the battery power.
- Advanced operations that require attention such as dialing numbers on the monitor, etc., are prohibited while driving. Park your vehicle in a safe place when using these advanced operations.
- Operations available may be limited depending on the cellular phone connected to this unit.

Touch panel keys

1



Accepting an incoming call.
Making a phone call, when selecting a phone number from the dialed and received call history.

2



Ending a call.
Rejecting an incoming call.
Canceling call waiting.

3



 
Switching the equalizer curves.
Refer to *Using the equalizer* on page 44.
Touch and hold for more than two seconds to turn the auto-equalizer on or off.
Refer to *Using the auto-equalizer* on page 45.

4




Turning the ring tone for incoming calls on or off.
Refer to *Switching the ring tone* on page 40.
Touch and hold for more than two seconds to display the Bluetooth device address of your cellular phone and the Bluetooth adapter.
Refer to *Displaying Bluetooth Device address* on page 42.

5

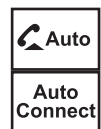

Turning automatic answering on or off.
Refer to *Setting automatic answering* on page 40.
Touch and hold for more than two seconds to connect to a Bluetooth telephone automatically.
Refer to *Connecting to a Bluetooth device automatically* on page 42.

 6

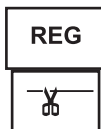

Registering connected cellular phone to take full advantage of the features available with Bluetooth wireless technology.
Refer to *Registering a connected cellular phone* on page 41.
Touch and hold for more than two seconds to terminate the Bluetooth wireless connection.

Using Bluetooth wireless technology

7



Scrolling the phone number. Touch and hold for more than two seconds to activate connection mode on this unit and establish a Bluetooth wireless connection from your phone. Refer to *Using a cellular phone to initiate a connection* on page 41.

8



Displaying the dialed call history. Selecting a phone number from the call history. Refer to *Using the missed, received and dialed call lists on the optional Bluetooth adapter* on page 39.

9



Displaying the received/missed call history. Selecting a phone number from the call history. Refer to *Using the missed, received and dialed call lists on the optional Bluetooth adapter* on page 39.

10



Switching between Bluetooth telephone and Bluetooth audio. Touch and hold for more than two seconds to start voice recognition. Refer to *Voice recognition* on page 42.

Note

Touch panel keys not listed under *Introduction of Bluetooth telephone operations* may appear on the display. Refer to *Indicator list* on page 96.

Setting up for hands-free phoning

Before you can use the hands-free phoning function you must set up the unit for use with your cellular phone. This entails establishing a Bluetooth wireless connection between this unit and your phone, registering your phone with this unit, and adjusting the volume level.

1 Connection

First, you need to connect a Bluetooth telephone to this unit.

For detailed instructions on connecting your phone to this unit via Bluetooth wireless technology, see following section. *Using a cellular phone to initiate a connection* on page 41 and *Registering a connected cellular phone* on page 41.

2 Volume adjustment

Adjust the earpiece volume of your cellular phone to your preference. The unit will record the adjusted volume level as the default setting.

- The volume of the caller's voice and ring tone may vary depending on the type of cellular phone.
- If there is a large volume difference between the ring tone and caller's voice, the overall volume level may become unstable.
- Make sure to adjust the volume to a proper level before disconnecting the cellular phone from the unit. If the volume is muted (zero level) on your cellular phone, the volume level of your cellular phone remains muted even after the cellular phone is disconnected.

Bluetooth audio operations

When you connect a Bluetooth adapter (e.g. CD-BTB200)(sold separately) to AVH-P3400DVD, you can control Bluetooth audio.

Important

- Depending on the Bluetooth audio player connected to this unit, the available operations will be limited to the following two levels:
 - A2DP profile (Advanced Audio Distribution Profile): You can only playback songs on your audio player.
 - AVRCP profile (Audio/Video Remote Control Profile): You can perform playback, pause playback, select songs, etc.
- Since there are a number of Bluetooth audio players available on the market, available operations will vary extensively. When operating your player with this unit, refer to the instruction manual that came with your Bluetooth audio player as well as this manual.

 
Using Bluetooth wireless technology

- Information related to a song (such as the elapsed playing time, song title, song index, etc.) cannot be displayed on this unit.
- As the signal from your cellular phone may cause noise, avoid using it when you are listening to songs on your Bluetooth audio player.
- When a call is in progress on the cellular phone connected to this unit via Bluetooth wireless technology, the sound of the Bluetooth audio player connected to this unit is muted.
- When the Bluetooth audio player is in use, you cannot connect to a Bluetooth telephone automatically.
- Playback continues even if you switch from your Bluetooth audio player to another source while listening to a song.


Touch panel keys




Switching between Bluetooth telephone and Bluetooth audio.

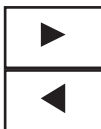

 
Skipping back or forward to another track when **Auto** is set for the auto/manual setting.
Performing fast forward or reverse when **Manual** is set for the auto/manual setting.

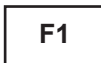

 Pausing a song.
Touch and hold for more than two seconds to activate connection mode on this unit and establish a Bluetooth wireless connection from your player.
Refer to *Connecting a Bluetooth audio player* on page 42.

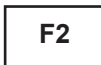

 Playback starts.
Touch and hold for more than two seconds to terminate the Bluetooth wireless connection.

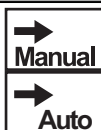

Setting the action for ◀ and ▶ icons.



Switching the equalizer curves.
Refer to *Using the equalizer* on page 44.
Touch and hold for more than two seconds to turn the auto-equalizer on or off.
Refer to *Using the auto-equalizer* on page 45.

Note

Touch panel keys not listed under *Bluetooth audio operations* may appear on the display.
Refer to *Indicator list* on page 96.

Setting up for Bluetooth audio

Before you can use the Bluetooth audio function you must set up the unit for use with your Bluetooth audio player. This entails establishing a Bluetooth wireless connection between this unit and your Bluetooth audio player, and pairing your Bluetooth audio player with this unit.


- 1 Connection
First, you need to connect a Bluetooth audio to this unit.
For detailed instructions on connecting your Bluetooth audio to this unit via Bluetooth wireless technology, see *Connecting a Bluetooth audio player* on page 42.



Receiving traffic announcements


Regardless of the source you are listening to, you can receive traffic announcements automatically with TA (traffic announcement standby).

1 Tune in to a TP or enhanced other network's TP station.

 indicator lights up.

2 Turn Traffic announcement on.

Refer to *Introduction of tuner operations* on page 14.


- If the TA function is turned on when you are not tuned in to a TP or enhanced other network's TP station, the  indicator lights up dimly.

3 Press +/- (VOLUME/VOL) to adjust the TA volume when a traffic announcement begins.

The newly set volume is stored in the memory and will be recalled for subsequent traffic announcements.

4 Turn off the announcement while a traffic announcement is being received.

Refer to *Introduction of tuner operations* on page 14.

The tuner returns to the original source but remains in the TA function standby mode until the icon is touched again. .

Using PTY functions

You can tune in to a station using PTY (program type) information.

Searching for an RDS station by PTY information

You can search for general types of broadcasting programs, such as those listed in the following section. Refer to this page.

1 Display the preset screen.

Refer to *Introduction of tuner operations* on page 14.

2 Touch PTY.

3 Touch ▲ or ▼ to select a program type.

There are four program types:

News&Info—Popular—Classics—Others

4 Touch Start to begin the search.

The unit searches for a station broadcasting that type of program. When a station is found, its program service name is displayed.

PTY (program type ID code) information is listed in the following section. Refer to this page.

- To cancel the search, touch **Cancel**.
- The program of some stations may differ from that indicated by the transmitted PTY.
- If no station is broadcasting the type of program you searched for, **Not Found** is displayed for about two seconds and then the tuner returns to the original station.

Using news program interruption

When a news program is broadcast from a PTY code news station, the unit can switch from any station to the news broadcast station. When the news program ends, reception of the previous program resumes.

PTY list

News&Info

News (News), **Affairs** (Current affairs), **Info** (Information), **Sport** (Sports), **Weather** (Weather), **Finance** (Finance)

Popular

Pop Mus (Popular music), **Rock Mus** (Rock music), **Easy Mus** (Easy listening), **Oth Mus** (Other music), **Jazz** (Jazz), **Country** (Country music), **Nat Mus** (National music), **Oldies** (Oldies music), **Folk Mus** (Folk music)

Classics

L.Class (Light classical), **Classic** (Classical)

Detailed instructions

Others

Educate (Education), **Drama** (Drama), **Culture** (Culture), **Science** (Science), **Varied** (Varied), **Children** (Children's), **Social** (Social affairs), **Religion** (Religion), **Phone In** (Phone in), **Touring** (Travel), **Leisure** (Leisure), **Document** (Documentaries)



Switching the media file type

When playing a disc containing a mixture of various media file types, such as DivX, MPEG-1, MPEG-2, MPEG-4 and MP3, you can switch between media file types to play.

Audio data (CD-DA) and JPEG picture files on DVD-R/RW/ROM cannot be played back on this unit.

CD (audio data (CD-DA))—**Music/ROM** (compressed audio)—**Video** (DivX, MPEG-1, MPEG-2, MPEG-4 video files)—**Photo** (JPEG picture files)

Operating the DVD menu

(Function for DVD video)

Some DVDs allow you to make a selection from the disc contents using a menu.

Using the arrow keys

1 Display arrow keys to operate the DVD menu.

Refer to *Playing moving images* on page 16.

2 Select the desired menu item.



Selecting the desired menu item.



Starting playback from the selected menu item.



Operating the DVD menu by directly touching the menu item.

- When operating the DVD menu by directly touching the menu item, touch the icon to operate.



Returning to the normal DVD video display.



Displaying arrow keys.

- Ways to display the menu will differ depending on the disc.
- Depending on the contents of the DVD disc, this function may not work properly. In such cases, use the touch panel keys to operate the DVD menu.

Operating this unit's iPod function from your iPod

You can listen to the sound from your iPod applications using your car's speakers, when **App Mode** is selected.

This function is not compatible with the following iPod models.

- iPod nano 1st generation
- iPod with video

Detailed instructions

- While this function is in use, the iPod will not turn off even if the ignition key is turned off. Operate the iPod to turn off the power.

1 Switch the control mode to App Mode.

Refer to *Introduction of video playback operations* on page 16.

Refer to *Introduction of sound playback operations* on page 19.

2 Operate the connected iPod to select a video/song and play.

Notes

- The following functions are still accessible from the unit even if the control mode is set to **App Mode**.

However, the operation will depend on your applications.

— Playing/pausing

— Fast forwarding/reversing

— Tracking up/down

— Moving to a chapter up/down

- **App Mode** is compatible with the following iPod models.

— iPod touch 4th generation

— iPod touch 3rd generation

— iPod touch 2nd generation

— iPod touch 1st generation

— iPod classic 160GB

— iPod classic 120GB

— iPod classic

— iPod nano 6th generation

— iPod nano 5th generation

— iPod nano 4th generation

— iPod nano 3rd generation

— iPod nano 2nd generation

— iPhone 4

— iPhone 3GS


— iPhone 3G

— iPhone 


Random play (shuffle)

iPod-videos/songs can be played back in random order.

- **Songs** – Play back videos/songs in the selected list in random order.
- **Albums** – Play back videos/songs from a randomly selected album in order.

- **Folder** – Play back songs/tracks in the selected folder in random order.
- **Disc** – Play back songs/tracks in the selected disc in random order.
- **On** – Play back files in random order within the repeat range, **Folder** and **Disc**.
- **Off** – Cancel random play. 

Repeating playback

- **Disc** – Play through the current disc
 - **Chapter** – Repeat the current chapter
 - **Title** – Repeat the current title
 - **Track** – Repeat the current track
 - **File** – Repeat the current file
 - **Folder** – Repeat the current folder
 - **One** – Repeat just the current video/song
 - **All** – Repeat all videos/songs in the selected list on the iPod
- This function cannot be operated during Video CD playback featuring PBC (playback control).
 - If you perform chapter search, fast forward/reverse, frame-by-frame playback or slow motion playback, the repeat play will stop.
 - When playing discs with compressed audio and audio data (CD-DA), playback is repeated within the type of data currently playing even if **Disc** is selected.
 - If you select another folder during repeat play, the repeat play range changes to **Disc**. If you select USB source, the repeat play range changes to **All**.
 - If you perform track search or fast forward/reverse during **File**, the repeat play range changes to **Folder**.
 - If you perform title/chapter search or fast forward/reverse during **Chapter**, the repeat play is set to off automatically.
 - If you perform track search or fast forward/reverse during **Track**, the repeat play range changes to **Disc**.
 - When **Folder** is selected, it is not possible to play back a subfolder of that folder. 

Playing videos from your iPod

(Function for iPod)

Detailed instructions


Videos can be played on this unit if an iPod with video capabilities is connected.

- This unit can play back "Movies", "Music videos", "Video Podcast" and "TV show" which are downloaded from the iTunes store.

1 Display the iPod menus.

Refer to *Playing moving images* on page 16.

2 Switch to iPod video mode.

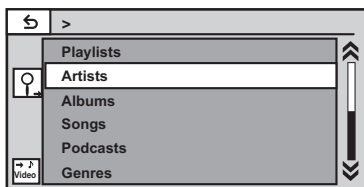


- If you want to switch to iPod video mode, touch the icon.



Switching to iPod video mode.

3 Play the video from the iPod.

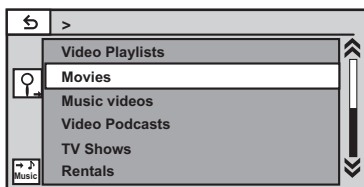

- If you want to switch to iPod music mode, touch the icon.



Switching to iPod music mode.



Browsing for a video/music on the iPod

(Function for iPod)

To make operating and searching easy, operations to control an iPod with this unit are designed to be as similar to the iPod as possible.

Searching for a video/music by category

1 Display the iPod menus.

Refer to *Playing moving images* on page 16. Refer to *Playing audio* on page 19.

2 Touch one of the categories in which you want to search for a video/music.

- **Video Playlists** (video playlists)
- **Movies** (movies)
- **Music Videos** (music videos)
- **Video Podcasts** (video podcasts)
- **TV Shows** (TV shows)
- **Rentals** (rentals)
- **Playlists** (playlists)
- **Artists** (artists)
- **Albums** (albums)
- **Songs** (songs)
- **Podcasts** (podcasts)
- **Genres** (genres)
- **Composers** (composers)
- **Audiobooks** (audiobooks)

3 Touch the title of the list that you want to play.

Repeat this operation until you find the desired video/music.

Notes

- You can play playlists created with the PC application (MusicSphere). The application will be available on our website.
- Playlists that you created with the PC application (MusicSphere) are displayed in abbreviated form.

Searching the list by alphabet

(Function for iPod)

1 Select a category.

Refer to *Searching for a video/music by category* on this page.

2 Switch to alphabet search mode.



Switching to alphabet search mode.

Alphabet search mode is displayed.

3 Touch the first letter of the title of the video/song you are looking for.

While searching, touch panel key operation is not available.

- To refine the search with a different letter, touch **Cancel**.

4 Touch the title of the list that you want to play.


Repeat this operation until you find the desired song/video. 

Resume playback (Bookmark)

(Function for DVD video)

By using the Bookmark function, you can re-sum playback from a selected scene the next time the disc is loaded.

The selected scene will be bookmarked so that playback resumes from that point next time.

- To clear the bookmark on a disc, touch and hold the key during playback.
- The oldest bookmark is replaced by the new one. 

Frame-by-frame playback


(Function for DVD video/video CD/DivX file/MPEG-1/MPEG-2/MPEG-4)

Note

Images during frame-by-frame playback may be unclear for some discs. 

Slow motion playback

Notes

- There is no sound during slow motion playback.
- Images during slow motion playback may be unclear for some discs.
- Reverse slow motion playback is not available. 

Searching for the part you want to play

You can use the search function to find the part you want to play.

For DVD videos, you can select **Title** (title), **Chapter** (chapter) or **10key** (numeric keypad). For video CDs, you can select **Track** (track) or **10key** (numeric keypad).

- Chapter search is not available when disc playback is stopped.
- This function cannot be operated during some DVD videos or Video CD playback featuring PBC (playback control).

1 Start the search function.

Refer to *Playing moving images* on page 16.

2 Touch the desired search option (e.g., Chapter).

3 Touch 0 to 9 to input the desired number.

- To cancel the entered numbers, touch **C**.


4 Start playback from the selected part.



Registering the numbers and starting playback.

Note

With discs featuring a menu, you can also use the DVD menu to make your selection.

Refer to *Playing moving images* on page 16. 


Changing audio language during playback (Multi-audio)

With DVDs/DivX files that provides audio playback in different languages and different audio systems (Dolby Digital, DTS, etc.), you can switch between languages/audio systems during playback.

Notes

- With some DVDs, switching between languages/audio systems may only be possible using a menu display.


Detailed instructions

- You can also switch between languages/audio systems using **Video Setup** menu. For details, refer to *Setting the audio language* on page 57.
- Depending on the setting, the video may not be played back with the audio system used to record the DVD.
- You will return to normal playback if you change the **Audio** during fast forward/fast reverse, pause or slow motion playback. 

Changing the subtitle language during playback (Multi-subtitle)

With DVDs/DivX files featuring multi-subtitle recordings, you can switch between subtitle languages during playback.

Notes


- With some DVDs, switching between subtitle languages may only be possible using a menu display.
- You can also switch between subtitle languages using **Video Setup** menu. For details, refer to *Setting the subtitle language* on page 57.
- You will return to normal playback if you change the **Subtitle** during fast forward/fast reverse, pause or slow motion playback. 

Changing the viewing angle during playback (Multi-angle)

With DVDs featuring multi-angle (scenes shot from multiple angles) recordings, you can switch among viewing angles during playback.


- During playback of a scene shot from multiple angles, the angle icon is displayed. Use the **Video Setup** menu to turn the angle icon display on or off. For details, refer to *Setting the multi-angle DVD display* on page 58.

Note

You will return to normal playback if you change the viewing angle during fast forward/fast reverse, pause or slow motion playback. 

Return to the specified scene

(Function for DVD video)


This function cannot be used if a specified scene has not been preprogrammed on the DVD disc. 

Selecting audio output

When playing DVD video discs recorded with LPCM audio, you can switch the audio output. When playing video CDs, you can switch between stereo and monaural audio output.

- This function is not available when disc playback is stopped.
- **L+R** – Left and right
- **Left** – Left
- **Right** – Right
- **Mix** – Mixing left and right

Note

You may not be able to select or use this function depending on the disc and the playback location. 

PBC playback

(Function for Video CDs)

During playback of Video CDs featuring PBC (playback control), **PBC On** is displayed.

1 Start the search function.

Refer to *Playing moving images* on page 16.

2 Touch 10key to display the numeric keypad.

3 Touch 0 to 9 corresponding to a menu number.


4 Start playback from the selected part.



Registering the numbers and starting playback.

Notes

- You can display the menu by touching **Return** during PBC playback. For details, refer to the instructions provided with the disc.

- PBC playback of a Video CD cannot be canceled.
- During playback of Video CDs featuring PBC (playback control), you cannot select the repeat play range or use the search function. 


Selecting tracks from the track title list

You can select tracks to playback using the track title list which is a list of the tracks recorded on a disc.

1 Display the track title list.

Refer to *Playing audio* on page 19.

2 Touch your favorite track title.

Playback begins. 

Selecting files from the file name list

(Function for compressed audio/DivX/JPEG/MPEG-1/MPEG-2/MPEG-4)

File name list is a list of file names (or folder names) from which you can select a file (or folder) to playback.

1 Display the file (or folder) name list.


Refer to *Playing audio* on page 19.

Refer to *Introduction of still image playback operations* on page 22.

2 Touch your favorite file (or folder) name.

- When you have selected a folder, a list of the names of the files (or the folders) in it can be viewed. Repeat this operation to select the desired file name.
- If folder **1** (ROOT) contains no files, playback commences with folder **2**.

Note

If part of the recorded information does not display, a scroll key appears on the right side of list. Touch the scroll key to scroll. 

Using sound retriever








Automatically enhances compressed audio and restores rich sound.

Off —  —  — 

-   is more effective than . 

Changing audiobook speed

(Function for iPod)

-    — Playback at a speed faster than normal
-   — Playback at normal speed
-  — Playback at a speed slower than normal 

Displaying lists related to the currently playing song (Link Search)

(Function for iPod)

1 Start Link Search.


Refer to *Introduction of sound playback operations* on page 19.

2 Touch one of the categories in which you want to play.

- **Artist** — Displays an album list of the artist currently being played.
- **Album** — Displays a song list from the album currently being played.
- **Genre** — Displays an album list from the genre currently being played.
- To cancel searching, touch **Cancel**.

3 Touch the title of the list that you want to play.

Note

If part of the recorded information does not display, a scroll key appears on the right side of list. Touch the scroll key to scroll. 

Detailed instructions

Playing DivX® VOD content

Some DivX video on demand (VOD) content may only be playable a fixed number of times. When you load a disc containing this type of content, the number of times it has been played will be shown on-screen. You can then decide whether or not to play the disc.

- If there is no limit to the number of times the DivX VOD content can be viewed, then you may load the disc into your player and play the content as often as you like, and no message will be displayed.
- You can confirm the number of times that the content can be played by checking the number displayed after **This DivX rental has used** **out of** **views..**

Important

- In order to play DivX VOD contents on this unit, you first need to register the unit with your DivX VOD contents provider. For details on your registration code, refer to *Displaying the DivX® VOD registration code* on page 60.
- DivX VOD content is protected by a DRM (Digital Rights Management) system. This restricts playback of content to specific, registered devices.
- **If a message is displayed after loading a disc containing DivX VOD content, touch Play.**
Playback of the DivX VOD content will start.
 - To skip to the next file, touch **Next Play**.
 - If you do not want to play the DivX VOD content, touch **Stop**.

Capture an image in JPEG files

You can capture image data and use it as wallpaper. Images can be stored and recalled easily in this unit.

- Only one image can be stored on this unit. Old image is overwritten with the new one.

1 Pause the slideshow when the desired image is displayed.

Refer to *Introduction of still image playback operations* on page 22.

Refer to *Introduction of still image playback as a slideshow operations* on page 23.

2 Capture the image.

Refer to *Introduction of still image playback operations* on page 22.

Refer to *Introduction of still image playback as a slideshow operations* on page 23.

3 When "Do you save this image?" is displayed, touch Yes.

While storing the image to this unit, "Saving the image. Don't switch off the battery." is displayed. When the process is finished, "Image saved." is displayed.

- To cancel the storage process, touch **No**.

Changing the wide screen mode

You can select a desired mode for enlarging a 4:3 picture to a 16:9 picture.

1 Display the screen mode.

Refer to *Introduction of video playback operations* on page 16.

Refer to *Introduction of still image playback operations* on page 22.

Refer to *Introduction of still image playback as a slideshow operations* on page 23.

2 Touch the desired wide mode setting.

Full (full screen)

The 4:3 picture is enlarged in the horizontal direction only, giving you a 4:3 TV picture (normal picture) without any omissions.

Just (just)

The picture is enlarged slightly at the center and the amount of enlargement increases horizontally toward the edges of the screen, enabling you to enjoy a 4:3 picture without sensing any disparity even when viewing on a wide screen.

Cinema (cinema)

The picture is enlarged by the same proportion as **Full** or **Zoom** in the horizontal direction and by an intermediate proportion between **Full** and **Zoom** in the vertical direction; ideal for a cinema-sized picture (wide screen picture) where captions lie outside the picture.

Detailed instructions


Zoom (zoom)

The 4:3 picture is enlarged in the same proportion both vertically and horizontally; ideal for a cinema sized picture (wide screen picture).

Normal (normal)

The 4:3 picture is displayed as it is, giving you no sense of disparity since its proportions are the same as that of the normal picture.

Notes

- You cannot operate this function while driving.
- Different settings can be stored for each video source.
- When a video is viewed in a wide screen mode that does not match its original aspect ratio, it may appear different.
- Remember that using the wide mode feature of this system for commercial or public viewing purposes may constitute an infringement on the author's rights protected by the Copyright Law.
- The video image will appear coarser when viewed in **Cinema** or **Zoom** mode. 

Calling a number in the phone book

(Function of AVH-2400BT)

The phone book in your cellular phone will be transferred automatically when the phone is connected to this unit.

After finding the number you want to call in the phone book, you can select the entry and make the call.

1 Switch to phone book mode.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

The phone book display appears.

2 Select the phone number list.

The detailed phone number list of the selected entry is displayed.

3 Select the phone number.

- If you want to store the phone number, touch and hold the list.


4 Make the call.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

5 End the call.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

Note

Depending on the cellular phone, the phone book may not be transferred automatically. In this case, operate your cellular phone to transfer the phone book. The visibility of this unit should be on. Refer to *Switching visible unit* on page 70. 

Selecting a number by alphabet search mode

(Function of AVH-2400BT)

If a lot of numbers are registered in the phone book, you can search for the phone number by alphabet search mode.

1 Switch to phone book mode.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

The phone book display appears.

2 Touch ABC to switch to alphabet search mode.

3 Touch the first letter of the entry you are looking for.

The Phone Book entries starting with that letter (e.g. "Ben", "Brian" and "Burt" when "B" is selected) will be displayed.

- If you want to change the character to Russian, touch the icon. To return to English, touch the icon again.



Changing the character to Russian.

- The order of the first name and last name may be different from that of the cellular phone.

4 Touch the list to display the phone number list of the selected entry.

- If several phone numbers are included in an entry, select one by touching the list.

Detailed instructions

- If you want to switch to the call history list, touch the icon.



Switching to the call history list.

5 Make the call.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

6 End the call.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

Inverting names in phone book

(Function of AVH-P3400DVD/AVH-2400BT/AVH-1400DVD)

When your cellular phone is connected to this unit, the first and last names of your contacts may be registered to the phone book in reverse order. You can use this function to change the order back.

(Inverting the names in the phone book)

1 Switch to phone book mode.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

The phone book display appears.

2 Invert names in phone books.



Inverting names in phone books.

3 "Would you like to invert all names?" appears. Touch Yes to continue.

While the names are inverted, is displayed.

- If the inversion fails, "Invert Name Error" appears. In such cases, try again from the beginning.

Note

Inverting the names of your contacts from this unit does not affect the data on your Bluetooth device.

Using the missed, received and dialed call lists

(Function of AVH-2400BT)

The 80 most recent calls dialed, received, and missed are stored in the memory. You can browse them and call numbers from these lists.

1 Switch to the call history list.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

2 Select Missed Calls, Dialed Calls or Received Calls.



Displaying the received call list.



Displaying the dialed call list.



Displaying the missed call list.

3 Touch the list number to select a phone number.

Name and phone number are displayed in the detailed list.

- If you want to store the phone number, touch and hold the list.

4 Make the call.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

5 End the call.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

Using the missed, received and dialed call lists on the optional Bluetooth adapter

(Function of AVH-P3400DVD)

The 80 most recent calls dialed, received, and missed are stored in the memory. You can browse them and call numbers from these lists.

1 Switch to the call history list.

Refer to *Introduction of Bluetooth telephone operations* on page 26.

2 Touch a phone number or name (if entered) you want to call.**3 Make the call.**

Refer to *Introduction of Bluetooth telephone operations* on page 26.

4 End the call.

Refer to *Introduction of Bluetooth telephone operations* on page 26. 

Setting automatic answering

(Function of AVH-2400BT)

If this function is on, this unit automatically answers all incoming calls.

● Turn automatic answering on or off.

(AVH-P3400DVD)

Refer to *Introduction of Bluetooth telephone operations* on page 26.

(AVH-2400BT)

Refer to *Introduction of Bluetooth telephone operations* on page 24. 

Adjusting the other party's listening volume


(Function of AVH-2400BT)

To maintain the good sound quality, this unit can adjust the other party's listening volume. If the volume is not loud enough for the other party, use this function.

● Select Far-End VOL.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

1—2—3

- This function can be performed even while talking on the phone.
- Settings can be stored for each device. 

Switching the ring tone

You can select whether or not to use this unit's ring tone. If this function is set to on, the ring tone for this unit will sound.

1 Connect your cellular phone to this unit.**2 Turn ring tone on or off.**

(AVH-P3400DVD)

Refer to *Introduction of Bluetooth telephone operations* on page 26.

(AVH-2400BT)

Refer to *Introduction of Bluetooth telephone operations* on page 24. 

Using the preset dial lists

(Function of AVH-2400BT)

You can easily store up to six phone numbers as presets.

1 Display the preset screen.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

2 Touch one of preset dial keys to select the desired phone number.

- If you want to delete a preset phone number, touch and hold the preset dial key.

3 Make the call.

Refer to *Introduction of Bluetooth telephone operations* on page 24.


4 End the call.

Refer to *Introduction of Bluetooth telephone operations* on page 24. 

Detailed instructions

Making a call by entering phone number

(Function of AVH-2400BT)

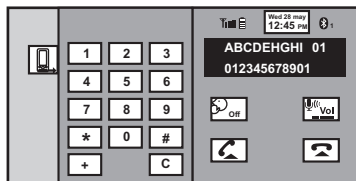

Important

Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation.

1 Switch to the entering phone number mode.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

2 Touch the number icons to input the numbers.

- Up to 24 digits can be entered.

3 Make the call.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

4 End the call.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

Note

Entering phone number mode cannot be operated unless a Bluetooth telephone is connected to this unit.

Setting the private mode

(Function of AVH-2400BT)

During a conversation, you can switch to private mode (talk directly on your cellular phone).

Refer to *Introduction of Bluetooth telephone operations* on page 24.

Using a cellular phone to initiate a connection

(Function of AVH-P3400DVD)

A Bluetooth wireless connection can be established from your phone by putting the unit into initiating a connection mode.

You may need to refer to the operation manual that came with your phone if you are unsure how to initiate a connection from your phone.

1 Put the unit in initiating a connection mode.

Refer to *Introduction of Bluetooth telephone operations* on page 26.

2 Use a cellular phone to connect to this unit.

- Operation varies depending on the type of cellular phone.
- You may need to enter the link code on your cellular phone to complete the connection.

Registering a connected cellular phone

(Function of AVH-P3400DVD)

You can register a phone that is temporarily connected to this unit in order to take full advantage of the features available with Bluetooth wireless technology. Only one cellular phone can be registered.

1 Start registering a connected cellular phone.

Refer to *Introduction of Bluetooth telephone operations* on page 26.

2 Use cellular phone to register to this unit.

If registration is successful, the device name of the connected phone is displayed in the selected assignment.

- If the assignment is already taken, the device name will be displayed. To replace an assignment with a new phone, first delete the current assignment.
- If registration failed, the device name of the connected phone will not be displayed in the selected assignment. In such cases, return to step 1 and try again.

Voice recognition

(Function of AVH-P3400DVD)

If your cellular phone features voice recognition technology, you can make a call by voice commands.

- Operation varies depending on the type of cellular phone. Refer to the instruction manual that came with your cellular phone for detailed instructions.

1 Start voice recognition.

Refer to *Introduction of Bluetooth telephone operations* on page 26.

2 Say the name of your contact aloud.

Connecting a Bluetooth audio player


(Function of AVH-P3400DVD)

A Bluetooth wireless connection can be established by putting the unit into initiating a connection mode.

● Put the unit in initiating a connection mode.

Refer to *Bluetooth audio operations* on page 27.

This unit is now on standby for connection from Bluetooth audio player.

If your Bluetooth audio player is set ready for Bluetooth wireless connection, connection to this unit is automatically established. 

Connecting to a Bluetooth device automatically

(Function of AVH-P3400DVD)

If this function is set to on, a connection between your Bluetooth device and this unit will take place automatically as soon as the two devices are less than a few meters apart.

Initially, this function is set to on.

1 Touch Auto Connect to turn automatic connection on.

Refer to *Introduction of Bluetooth telephone operations* on page 26.

If your Bluetooth device is ready for a Bluetooth wireless connection, a connection to this unit will automatically be established.

- To turn automatic connection off, touch **Auto Connect** again.

2 Once you turn your vehicle's ACC switch on again, a connection is established automatically.


Displaying Bluetooth Device address

(Function of AVH-P3400DVD)

This unit displays its Bluetooth Device address.


● Touch Device Information to display device information.

Refer to *Introduction of Bluetooth telephone operations* on page 26.

The Bluetooth Device address is displayed. 

Menu operations

Introduction of menu operations

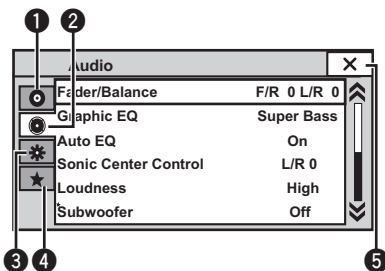

- You cannot display the Audio function menu when the mute function is on or a JPEG file is playing.

1 Display menus.

Refer to *Basic operations* on page 10.

2 Touch any of the following touch panel keys to select the menu to be adjusted.

Touch panel keys

| | | |
|---|--|--|
| 1 | | Video Setup menu Refer to <i>Setting up the DVD player</i> on page 57. |
| 2 | | Audio function menu Refer to <i>Audio adjustments</i> on the next page. DSP function menu Refer to <i>Introduction of DSP adjustments</i> on page 47. |
| 3 | | System menu Refer to <i>System settings</i> on page 61. |
| 4 | | Favorite menu You can choose menus within each menu (Audio function menu, etc.) and register them to this favorite menu. Refer to <i>Favorite menu</i> on page 68. |
| 5 | | Returning to the current source display |

Notes

- You can display the **Video Setup** menu when a **Disc** or **USB** source is selected.
- If you start the **Video Setup** menu, playback is stopped.

Audio adjustments

Using fader/balance adjustment

You can change the fader/balance setting to provide an ideal listening environment for all of the occupied seats.

1 Display the audio function menu.

Refer to *Introduction of menu operations* on the previous page.

2 Touch Fader/Balance on the audio function menu.

3 Touch ▲ or ▼ to adjust the front/rear speaker balance.

Range: **Front 15** to **Rear 15**

- Select **F/R 0 L/R 0** when only using two speakers.
- The front/rear speaker balance cannot be adjusted when the rear output setting is **Subwoofer**. Refer to *Setting the rear output and subwoofer controller* on page 61.

4 Touch ◀ or ▶ to adjust the left/right speaker balance.

Range: **Left 15** to **Right 15**

Using the equalizer

You can adjust the equalization to match the car's interior acoustic characteristics as desired.

Recalling equalizer curves

There are seven stored equalizer curves which you can easily recall at any time. Here is a list of the equalizer curves.

| Display | Equalizer curve |
|----------|-----------------|
| Powerful | Powerful |
| Natural | Natural |
| Vocal | Vocal |
| Flat | Flat |
| Custom1 | Custom 1 |

| Display | Equalizer curve |
|------------|-----------------|
| Custom2 | Custom 2 |
| Super Bass | Super bass |

- The equalizer curves for **Custom1** and **Custom2** can be adjusted.
- You cannot select **Custom1** and **Custom2** when using the auto-equalizer.
- When **Flat**, no changes are made to the sound. You can check the effects of the equalizer curves by switching alternatively between **Flat** and another equalizer curve.

1 Display the audio function menu.

Refer to *Introduction of menu operations* on the previous page.

2 Touch Graphic EQ on the audio function menu.

- You can select **Graphic EQ** when **Auto EQ** function is off.

3 Touch ◀ or ▶ to select the desired item. Powerful—Natural—Vocal—Flat—Custom1—Custom2—Super Bass

Adjusting the 8-band graphic equalizer

You can adjust the level of each band for the equalizer curves.

- A separate **Custom1** curve can be created for each source. If you make adjustments when a curve other than **Custom2** is selected, the equalizer curve settings will be stored in **Custom1**.
- A **Custom2** curve that is common for all sources can be created. If you make adjustments when the **Custom2** curve is selected, the **Custom2** curve will be updated.

1 Display the audio function menu.

Refer to *Introduction of menu operations* on the previous page.

2 Touch Graphic EQ on the audio function menu.

Menu operations

3 Touch ◀ or ▶ to select the desired item.
Powerful—Natural—Vocal—Flat—Custom1
—Custom2—Super Bass

4 Touch the Equalizer band to adjust.

5 Touch ▲ or ▼ to adjust the level of the equalizer band.

Range: **+12dB to -12dB**

- You can then select another band and adjust the level.

Using the auto-equalizer

The auto-equalizer is an equalizer curve created by auto EQ (refer to *Auto EQ (auto-equalizing)* on page 65).

You can turn the auto-equalizer on or off.

If you connect an optional microphone to this unit, you can use this function.

1 Display the audio function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Auto EQ to turn the auto-equalizer on or off.

- You cannot use this function if auto EQ has not been carried out.

Using sonic center control

Sound that is suited for the listening position can easily be created with this function.

1 Display the audio function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Sonic Center Control on the audio function menu.

3 Touch ◀ or ▶ to select a listening position.

Range: **Left 7 to Right 7**

Adjusting loudness

Loudness compensates for deficiencies in the low-frequency and high-frequency ranges at low volume.

1 Display the audio function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Loudness on the audio function menu.

3 Touch ◀ or ▶ to select a desired level.

Off (off)—Low (low)—Mid (mid)—High (high)

Using subwoofer output

This unit is equipped with a subwoofer output which can be turned on or off.

- The cut-off frequency and output level can be adjusted when the subwoofer output is on.

1 Display the audio function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Subwoofer on the audio function menu.

3 Touch On or Off next to Subwoofer to turn the subwoofer output on or off.

4 Touch Normal or Reverse next to Phase to select the phase of subwoofer output.

5 Touch ◀ or ▶ next to Level to adjust the output level of the subwoofer.

Range: **+6 to -24**

6 Touch ◀ or ▶ next to Frequency to select the cut-off frequency.

50Hz—63Hz—80Hz—100Hz—125Hz

Only frequencies lower than those in the selected range are outputted from the subwoofer.

Boosting the bass

You can boost the bass level.

1 Display the audio function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch ◀ or ▶ to select a desired level.

Range: **0** to **+6**

Using the high pass filter

When you do not want low sounds from the subwoofer output frequency range to play from the front or rear speakers, turn on the HPF (high pass filter). Only frequencies higher than those in the selected range are output from the front or rear speakers.

1 Display the audio function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch ◀ or ▶ next to the frequency to select cut-off frequency.

Off (off)—**50Hz**—**63Hz**—**80Hz**—**100Hz**—**125Hz**

Only frequencies higher than those in the selected range are output from the front or rear speakers.

Adjusting source levels

With SLA (source level adjustment), the volume levels of each source can be adjusted to prevent significant differences between sources.

- Settings are based on the FM volume level, which remains unchanged.

1 Display the audio function menu.

Refer to *Introduction of menu operations* on page 43.


2 Compare the FM volume level with the level of the source you wish to adjust.

3 Touch Source Level Adjuster on the audio function menu.

4 Touch ▲ or ▼ to adjust the source volume.

Range: **+4** to **-4**

Notes

- When selecting FM as the source, you cannot switch to **Source Level Adjuster**.
- The MW/LW volume level can also be adjusted with this function.
- Video CD, CD, compressed audio, DivX, MPEG-1, MPEG-2 and MPEG-4 are automatically set to the same source level adjustment volume.
- iPod and USB storage device are automatically set to the same source level adjustment volume.
- External unit 1 and external unit 2 are automatically set to the same source level adjustment volume. 

Menu operations

Digital Signal Processor

(Function of AVH-P3400DVD)

Introduction of DSP adjustments

You can use this unit to control a DEQ-P6600 multi-channel processor (sold separately).

By carrying out the following settings/adjustments in the order shown, you can effortlessly create a finely-tuned sound field.

- 1 *Setting the speaker setting*
- 2 *Using the position selector*
- 3 *Auto TA and EQ (auto-time alignment and auto-equalizing)*
- 4 *Adjusting time alignment*
- 5 *Adjusting the speaker output levels using a test tone*
- 6 *Selecting a cross-over frequency*
- 7 *Adjusting the speaker output levels*
- 8 *Adjusting the 3-band parametric equalizer*

Notes

- You cannot use the audio functions when playing discs recorded at a sampling frequency higher than 96 kHz. The equalizer curve setting, **Position**, **Auto EQ** and **Auto TA** will also be canceled.
- Sound is only emitted from front speakers when playing discs recorded at a sampling frequency higher than 96 kHz.
- When selecting FM as the source, you cannot switch to **Source Level Adjuster**.
- You can only switch to **Dynamic Range Control** when you are playing DVD discs.
- You can only switch to **Time Alignment** when either **Front-L** or **Front-R** is selected in **Position**.
- When the speaker setting for both the center and rear speakers are set to OFF, you cannot switch to **Dolby Pro Logic II**.
- When the multi-channel processor (DEQ-P6600) is connected to this unit, you cannot use **MUTE** function.

Using the position selector

One way to assure a more natural sound is to optimize the stereo image and place you right in the center of the sound field. With the position selector function, you can automatically adjust the speaker output levels and insert a delay time to match the number and position of the occupied seats. When used in conjunction with the SFC, this feature will make the sound image more natural and offer a panoramic sound that envelops you.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Position on the DSP function menu.

3 Touch ◀/▶/▲/▼ to select a listening position.

| Key | Display | Position |
|-----|---------|------------------|
| ◀ | Front-L | Left front seat |
| ▶ | Front-R | Right front seat |
| ▲ | Front | Front seats |
| ▼ | All | All seats |

- To cancel the selected position, touch the same key again.

Note

When adjustments are made to the listening position, the speaker outputs are automatically set to the appropriate levels. To tailor the levels more precisely, refer to *Adjusting the speaker output levels using a test tone* on page 52 or *Adjusting the speaker output levels* on page 51.

Using fader/balance adjustment

You can change the fader/balance setting to provide an ideal listening environment for all of the occupied seats.

Menu operations

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Fader/Balance on the DSP function menu.

3 Touch ▲ or ▼ to adjust the front/rear speaker balance.

Range: **Front 25 to Rear 25**

- Select **F/R 0 L/R 0** when only using two speakers.

4 Touch ◀ or ▶ to adjust the left/right speaker balance.

Range: **Left 25 to Right 25**

Using sound field control

The SFC function creates the sensation of a live performance.

- The acoustics of performance spaces differ depending on the extent and contour of space through which sound waves can move and on how the created sounds bounce off the stage, walls, floors and ceilings. At a live performance you hear music in three stages: direct sound, early reflections, and late reflections, or reverberations. These factors are programmed into the SFC circuitry to recreate the acoustics of various performance settings.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch SFC on the DSP function menu to select the setting.

Musical(Musical)—**Drama**(Drama)—**Action**(Action)—**Jazz**(Jazz)—**Hall**(Hall)—**Club**(Club)—**Off**(Off)

Note

If the source is a 2-channel LPCM or Dolby Digital audio source, we recommend turning Dolby Pro Logic II on when selecting SFC effects that are most suitable for 5.1-channel audio sources

(such as **Musical**, **Drama** or **Action**).

On the other hand, when selecting SFC effects that are suitable for 2-channel audio sources (such as **Jazz**, **Hall** or **Club**), we recommend turning Dolby Pro Logic II off.

Adjusting source levels

With SLA (source level adjustment), the volume levels of each source can be adjusted to prevent significant differences between sources.

- Settings are based on the FM volume level, which remains unchanged.

1 Compare the FM volume level with the level of the source you wish to adjust.

2 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

3 Touch Source Level Adjuster on the DSP function menu.

4 Touch ▲ or ▼ to adjust the source volume.

Notes

- The AM volume level can also be adjusted with this function.
- Video CD, CD, compressed audio and DivX are automatically set to the same source level adjustment volume.
- External unit 1 and external unit 2 are automatically set to the same source level adjustment volume.

Menu operations

Using dynamic range control

The dynamic range refers to the difference between the smallest and largest sounds emitted. Dynamic range control compresses this difference so that the sounds can be heard clearly even at low volume levels.

- The dynamic range control is only effective for Dolby Digital sound.
- You can only switch to **Dynamic Range Control** when you are playing DVD discs.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Dynamic Range Control on the DSP function menu.

3 Touch ► to turn dynamic range control on.

- To turn dynamic range control off, touch ◀.

Using the down-mix function

Multi-channel audio can be played back in 2-channels with the down-mix function.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Down Mix on the DSP function menu.

3 Touch ◀ or ► to select the desired level.

- **Lo/Ro** – Stereo mixing the original audio data that does not contain channel modes such as surround sound components.
- **Lt/Rt** – Down mixing so that the surround sound components can be restored (decoded).

Using direct control

You can override the audio settings to check their effectiveness.

- When direct control is on, all audio functions except **VOLUME/VOL** and **Dolby Pro Logic II** are locked.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Digital Direct on the DSP function menu.

3 Touch ► to turn the direct control on.

- To turn direct control off, touch ◀.

Using Dolby Pro Logic II

Dolby Pro Logic II creates five full-bandwidth output channels from two-channel sources to achieve high-purity matrix surround sound.

- Dolby Pro Logic II supports stereo sources with a sampling rate of up to 48 kHz and has no effect on other types of sources.
- When the speaker setting for both the center and rear speakers are set to OFF, you cannot switch to **Dolby Pro Logic II**.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Dolby Pro Logic II.

3 Touch any of the following touch panel keys to select the desired mode.

- **Movie** – Suitable for movie playback
- **Music** – Suitable for music playback
- **Matrix** – Suitable when FM radio reception is weak
- **Music Adjust** – Enables adjusting the Music mode
- **Off** – Turns Dolby Pro Logic II off
 - You can only operate **Music Adjust** when **Music** has been selected.

Adjusting the music mode

You can adjust the music mode with the following three controls.

Menu operations

- Panorama (**Panorama**) extends the front stereo image to include the surround speakers for an exciting “wraparound” effect.
- Dimension (**Dimension**) gradually adjusts the sound field either towards the front or rear.
- Center width control (**Center Width**) positions center-channel sounds between the center, left and right speakers. It improves the left-center-right stage presentation for both the driver and front passenger.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Dolby Pro Logic II.

3 Touch Music and then touch Music Adjust.

- You can only operate **Music Adjust** when **Music** has been selected.

4 Touch ▲ or ▼ to select Panorama (panorama).

Panorama (panorama)—**Dimension** (dimension)—**Center Width** (center width)

5 Touch ► to turn panorama control on.

- To turn panorama control off, touch ◀.

6 Touch ▼ to select Dimension and then touch ◀ or ► to adjust the front/rear speaker balance.

Range: +3 to -3

7 Touch ▼ to select Center Width and then touch ◀ or ► to adjust the center image.

Range: 0 to 7

The default setting is **3** and is recommended for most recordings. When set to **0**, all center sound is placed in the center speaker. When set to **7**, center sound is equally placed in the left and right speakers.

Setting the speaker setting

Be sure to adjust the speaker settings, such as size (bass capacity), according to the speakers installed. Set the size to **Large** (large) if the speaker is capable of reproducing sounds of about 100 Hz and below. Otherwise, select **Small** (small).

- Low frequency sound is not emitted if the subwoofer is set to **Off** and the front and rear speakers are set to **Small** or **Off**.
- It is imperative that speakers that are not installed be set to **Off**.
- Set the front or rear speaker to **Large** if the speaker is capable of reproducing bass content, or if no subwoofer is installed.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Speaker Setting.

3 Touch ▲ or ▼ to select the speaker to be adjusted.

Front (front speakers)—**Center** (center speaker)—**Rear** (rear speakers)—**Subwoofer** (subwoofer)—**Phase** (subwoofer setting)

- You can only switch to **Phase** when the subwoofer has been set to **On**.

4 Touch ◀ or ► to select the correct size for the selected speaker.

Off (off)—**Small** (small)—**Large** (large)

- You cannot select **Off** when **Front** (front speakers) has been selected.
- You can select **On** or **Off** when **Subwoofer** (subwoofer) has been selected.
- You can switch **Reverse** (reverse phase) or **Normal** (normal phase) when **Phase** (subwoofer setting) has been selected.

Correcting the subwoofer's phase

If boosting the bass output from the subwoofer is not effective or you feel that the bass is becoming less clear, the subwoofer output and bass content emitted from the other speakers may be canceling each other out.

Menu operations

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Speaker Setting.

3 Touch ▲ or ▼ to select Subwoofer (subwoofer).

Front (front speakers)—**Center** (center speaker)—**Rear** (rear speakers)—**Subwoofer** (subwoofer)—**Phase** (subwoofer setting)

4 Touch ► to turn subwoofer output on.

- To turn subwoofer output off, touch ◀.

5 Touch ▼ and then touch ◀ or ► to select the phase of subwoofer output.

Reverse—**Normal**

Note

When playing a 2-channel mono source with Dolby Pro Logic II turned on:

- No sound is emitted if the center speaker setting is **Small** or **Large** and no center speaker is installed.
- Sound is only emitted through the center speaker if it is installed and set to **Small** or **Large**.

Adjusting the speaker output levels

Fine adjustments of the speaker output level can be made by listening to audio output. First, use the test tone to adjust the speaker to an approximate level, and then use this function to make fine adjustments.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Speaker Level.

3 Touch ▲ or ▼ to select the speaker to be adjusted.

Front-L (left front speaker)—**Center** (center speaker)—**Front-R** (right front speaker)—

Rear-R (right rear speaker)—**Rear-L** (left rear speaker)—**Subwoofer** (subwoofer)

- Speakers with the size set to **Off** cannot be selected. (Refer to *Setting the speaker setting* on the previous page.)

4 Touch ◀ or ► to adjust the speaker output level.

Range: **+10** to **-10**

Note

You will get the same results whether you adjust the speaker output levels with this mode or with **Test Tone**.

Selecting a cross-over frequency

The frequency under which sounds are reproduced through a subwoofer can be selected. For example, if the size of one of the installed speakers is set to **Small**, you can select the frequency under which sounds will be reproduced through a speaker set to **Large** or a subwoofer.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Cross Over.

3 Touch ▲ or ▼ to select the speaker to be adjusted.

Front (front speakers)—**Center** (center speaker)—**Rear** (rear speakers)—**Subwoofer** (subwoofer)

4 Touch ◀ or ► to select the cross-over frequency.

63Hz—**80Hz**—**100Hz**—**125Hz**—**160Hz**—**200Hz**

Note

When you select a cross-over frequency, you are setting the cross-over frequency for the subwoofer's LPF (low-pass filter) and the **Small** speaker's HPF (high-pass filter). The cross-over frequency setting has no effect if the subwoofer is set to **Off** and other speakers are set to **Large** or **Off**.

Adjusting the speaker output levels using a test tone

You can easily get the right overall balance among the speakers with this function.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Test Tone.**3 Touch Start to start test tone output.**

The test tone is emitted from each speaker in the following sequence at intervals of about two seconds. The current settings for the speaker emitting the test tone will be shown on the display.

Front-L (left front speaker)—**Center** (center speaker)—**Front-R** (right front speaker)—**Rear-R** (right rear speaker)—**Rear-L** (left rear speaker)—**Subwoofer** (subwoofer)

Check each speaker output level. If no adjustments are needed, perform step 5 to stop the test tone.

- The settings for speakers with the size set to **Off** will not be displayed. (Refer to *Setting the speaker setting* on page 50.)

4 Touch ◀ or ▶ to adjust the speaker output level.

Range: **+10** to **-10**

- The test tone will be emitted from the next speaker after about two seconds after the last operation.

5 Touch Stop to end test tone output.**Notes**

- If necessary, select speakers and adjust their 'absolute' output levels. (Refer to *Adjusting the speaker output levels* on the previous page.)
- You will get the same results whether you adjust the speaker output levels with this mode or with **Speaker Level**.

Using time alignment

The distance between the listening position and each speaker can be adjusted with this function.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Time Alignment.**3 Touch any of the following touch panel keys to select the time alignment.**

- **Initial** – Initial time alignment (factory setting)
- **Auto TA** – Time alignment created by auto TA and EQ. (Refer to *Auto TA and EQ (auto-time alignment and auto-equalizing)* on page 54.)
- **Custom** – Adjusted time alignment that you can create
- **Adjustment** – Enables adjusting the time alignment as desired
- **Off** – Turns Time Alignment off
- You cannot select **Auto TA** if auto TA and EQ have not been carried out.
- **Adjustment** can only be selected when either **Front-L** or **Front-R** is selected in **Position**.

Adjusting time alignment

The distance between the selected position and each speaker can be adjusted.

- The adjusted time alignment is stored in **Custom**.

Menu operations

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Time Alignment and then touch Adjustment.

▪ **Adjustment** can only be selected when either **Front-L** or **Front-R** is selected in **Position**.

3 Touch ▲ or ▼ to select the speaker to be adjusted.

Front-L (left front speaker)—**Center** (center speaker)—**Front-R** (right front speaker)—**Rear-R** (right rear speaker)—**Rear-L** (left rear speaker)—**Subwoofer** (subwoofer)

▪ Speakers with the size set to **Off** cannot be selected. (Refer to *Setting the speaker setting* on page 50.)

4 Touch ◀ or ▶ to adjust the distance between the selected speaker and the listening position.

Range: **0.0cm** to **500.0cm**

Using the equalizer

You can adjust the equalization to match the car's interior acoustic characteristics as desired.

Recalling equalizer curves

There are seven stored equalizer curves which you can easily recall at any time. Here is a list of the equalizer curves.

| Display | Equalizer curve |
|------------|-----------------|
| Powerful | Powerful |
| Natural | Natural |
| Vocal | Vocal |
| Flat | Flat |
| Custom1 | Custom 1 |
| Custom2 | Custom 2 |
| Super Bass | Super bass |

- The equalizer curves for **Custom1** and **Custom2** can be adjusted.
- When **Flat**, no changes are made to the sound. You can check the effects of the equalizer curves by switching alternatively between **Flat** and another equalizer curve.
- When **Digital Direct** is on, the equalizer curve is fixed to **Flat**.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Parametric EQ.

3 Touch ▲ or ▼ to select the EQ (equalizer).

4 Touch ▶ to select the equalizer.

Powerful—**Natural**—**Vocal**—**Flat**—**Custom1**—**Custom2**—**Super Bass**

Adjusting the 3-band parametric equalizer

For **Custom1** and **Custom2** equalizer curves, you can adjust the front, rear and center equalizer curves separately by selecting a center frequency, an equalizer level and a Q factor for each band.

- A separate **Custom1** curve can be created for each source.
- A **Custom2** curve that is common for all sources can be created.
- The center speaker largely determines the sound image and getting the balance right is not easy. We recommend that you first adjust the balance among all of the speakers except the center speaker, by playing 2-channel audio (a CD, for example). Then, play 5.1-channel audio (Dolby Digital or DTS) and adjust the center speaker output to match the balance already created among the other speakers.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Parametric EQ.

3 Touch ▲ or ▼ to select the desired item.
EQ (equalizer)—**SP-Select** (speakers)—**Band**
 (bands)—**Frequency** (center frequency)—
Level (equalizer level)—**Q.Factor** (Q factor)

4 Touch ► to select the equalizer.
Powerful—**Natural**—**Vocal**—**Flat**—**Custom1**
 —**Custom2**—**Super Bass**

5 Touch ▼ and then touch ◀ or ▶ to select the speaker to be adjusted.
Rear (rear speakers)—**Center** (center speaker)
 —**Front** (front speakers)

- Speakers with the size set to **Off** cannot be selected. (Refer to *Setting the speaker setting* on page 50.)

6 Touch ▼ and then touch ◀ or ▶ to select the equalizer band to be adjusted.
Low (low)—**Mid** (mid)—**High** (high)

7 Touch ▼ and then touch ◀ or ▶ to select the center frequency of selected band.
40Hz—**50Hz**—**63Hz**—**80Hz**—**100Hz**—**125Hz**
 —**160Hz**—**200Hz**—**250Hz**—**315Hz**—**400Hz**
 —**500Hz**—**630Hz**—**800Hz**—**1kHz**—**1.25kHz**
 —**1.6kHz**—**2kHz**—**2.5kHz**—**3.15kHz**—**4kHz**
 —**5kHz**—**6.3kHz**—**8kHz**—**10kHz**—**12.5kHz**

8 Touch ▼ and then touch ◀ or ▶ to adjust the equalizer level.
 Range: **+12** to **-12**

9 Touch ▼ and then touch ◀ or ▶ to select the desired Q factor.
Narrow (narrow)—**Wide** (wide)

- Adjust the parameters of each band for the other speakers in the same way.

Note

A center frequency can be selected for each band and can be changed in 1/3-octave steps. However, the interval between the selected center frequencies cannot be shorter than 1 octave.

Using the auto-equalizer

The auto-equalizer is the equalizer curve created by auto TA and EQ (refer to *Auto TA and EQ (auto-time alignment and auto-equalizing)* on this page).

You can turn the auto-equalizer on or off.

1 Display the DSP function menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Auto EQ.

- You cannot use this function if auto TA and EQ have not been carried out.

3 Touch ► to turn the auto-equalizer on.

- To turn the auto-equalizer off, touch ◀.

Auto TA and EQ (auto-time alignment and auto-equalizing)

Auto-time alignment automatically adjusts the time alignment according to the distance between the listening position and each speaker. The auto-equalizer automatically measures the car's interior acoustic characteristics, and then creates an auto-equalizer curve based on that information.

**WARNING**

As a loud tone (noise) may be emitted from the speakers when measuring the car's interior acoustic characteristics, never perform auto TA or auto EQ while driving.

**CAUTION**

- Thoroughly check the conditions before performing auto TA and EQ as the speakers may be damaged if these functions are performed when:
 - The speakers are incorrectly connected. (For example, when a rear speaker is connected as a subwoofer output.)
 - A speaker is connected to a power amp delivering output higher than the speaker's maximum input power capability.

Menu operations

- If the microphone is placed in an unsuitable position the measurement tone may become loud and measurement may take a long time, resulting in battery drainage. Be sure to place the microphone in the specified location.

Before operating the auto TA and EQ function

- Perform auto TA and EQ in a quiet place, with both the car engine and air conditioning switched off. Also turn off any car phones or portable telephones in the car, or remove them from the car. Sounds other than the measurement tone (such as surrounding sounds, engine sound, telephones ringing) may prevent correct measurement of the car's interior acoustic characteristics.
- Be sure to perform auto TA and EQ using the optional microphone. Using another microphone may prevent measurement, or result in incorrect measurement of the car's interior acoustic characteristics.
- In order to perform auto TA and EQ, the front speaker must be connected.
- When this unit is connected to a power amp with input level control, auto TA and EQ may not be possible if the power amp's input level is set below the standard level.
- When this unit is connected to a power amp with an LPF, turn this LPF off before performing auto TA and EQ. Also set the cut-off frequency for the built-in LPF of an active subwoofer to the highest frequency.
- The time alignment value resulting from auto TA and EQ has been calculated by a computer and is the optimum delay time that will give accurate results. Be sure to use the resulting value although it may differ from the actual distance when:
 - The reflected sound within the car is strong and delays occur.
 - The LPF on active subwoofers or external amps delay the lower sounds.
- Auto TA and EQ changes the audio settings as follows:

- The fader/balance settings return to the center position. (Refer to *Using fader/balance adjustment* on page 47.)
- The equalizer curve switches to **Flat**. (Refer to *Recalling equalizer curves* on page 44.)
- The front, center and rear speakers will automatically be adjusted to a high pass filter setting.

- Previous settings for auto TA and EQ will be overwritten.

Performing auto TA and EQ


For details concerning operation, refer to the operation manual for the multi-channel processor.

1 Stop the car in a place that is quiet, close all the doors, windows and sun roof, and then turn the engine off.

If the engine is left running, engine noise may prevent correct auto EQ.

2 Fix the optional microphone in the center of the headrest of the driver's seat, facing forward.

The auto EQ may differ depending on where you place the microphone. If desired, place the microphone on the front passenger seat to carry out auto EQ.

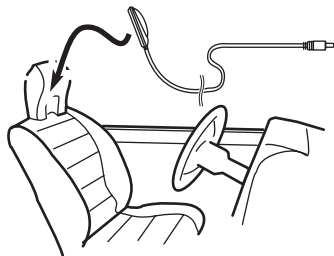

3 Turn the ignition switch to ON or ACC.

If the car's air conditioner or heater is turned on, turn it off. Noise from the fan in the air conditioner or heater may prevent correct auto EQ.

Menu operations

- If this unit is turned off, press **SRC/OFF** to turn the source on.

4 Select the position for the seat on which the microphone is placed.

Refer to *Using the position selector* on page 47.

- If no position is selected before you start auto EQ, **Front-L** is selected automatically.

5 Turn the unit off.


Refer to *Basic operations* on page 10.

6 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

7 Touch Auto EQ&TA Measurement to enter auto EQ and TA measurement mode.

8 Plug the microphone into the microphone input jack.

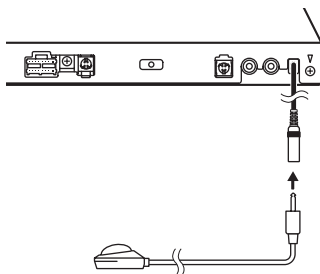

9 Touch Start to start auto EQ.

10 When the 10-second countdown starts, get out of the car and close the door within 10 seconds.

A measurement tone (noise) is emitted from the speakers, and auto EQ measurement begins.

When auto EQ is completed, **Complete** is displayed.

When the car's interior acoustic characteristics cannot be measured correctly, an error message will be displayed. (Refer to *Understanding auto EQ error messages* on page 95.)

- It takes about nine minutes for auto EQ measurement to be completed when all the speakers are connected.

- To stop auto EQ, touch **Stop**.
- To cancel auto EQ measurement mode during this procedure, touch the following touch panel key.



Canceling auto EQ measurement mode.

11 Store the microphone carefully in the glove compartment or another safe place.

If the microphone is subjected to direct sunlight for an extended period, high temperatures may cause distortion, color change or malfunction. ■

Menu operations

Setting up the DVD player

Setting the subtitle language

You can set a desired subtitle language. When available, the subtitles will be displayed in the selected language.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Subtitle Language on the Video Setup menu.

A subtitle language menu is displayed.

3 Touch the desired language.

The subtitle language is set.

- If you have selected **Others**, refer to *When you select Others* on this page.

Notes

- If the selected language is not available, the language specified on the disc is displayed.
- You can also switch the subtitle language by touching the icon during playback. (Refer to *Playing moving images* on page 16.)
- The setting made here will not be affected even if the subtitle language is switched during playback using **Subtitle**.

When you select Others

A language code input display is shown when **Others** is selected. Refer to *Language code chart for DVD* on page 106.

● Touch 0 to 9 to input the language code.

- To cancel the entered numbers, touch **C**.
- To register the code, touch the following touch panel key.



Registering the code.

Setting the audio language

You can set the preferred audio language.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Audio Language on the Video Setup menu.

An audio language menu is displayed.

3 Touch the desired language.

The audio language is set.

- If you have selected **Others**, refer to *When you select Others* on this page.

Notes

- If the selected language is not available, the language specified on the disc is used.
- You can also switch the audio language by touching **Audio** during playback. (Refer to *Playing moving images* on page 16.)
- The setting made here will not be affected even if the audio language is switched during playback using **Audio**.

Setting the menu language

You can set the preferred language in which the menus recorded on a disc are displayed.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Menu Language on the Video Setup menu.

A menu language menu is displayed.

3 Touch the desired language.

The menu language is set.

- If you have selected **Others**, refer to *When you select Others* on this page.

Note

If the selected language is not available, the language specified on the disc is displayed.

Setting the multi-angle DVD display

The angle icon can be set so it appears on scenes where the angle can be switched.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Multi Angle on the Video Setup menu to turn angle icon display on or off.

Setting the aspect ratio

There are two kinds of display: a wide screen display that has a width-to-height ratio (TV aspect ratio) of 16:9, and regular display that has a TV aspect of 4:3. Be sure to select the correct TV aspect for the display connected to **V OUT**.

- When using regular display, select either **Letter Box** or **Pan Scan**. Selecting **16:9** may result in an unnatural picture.
- If you select the TV aspect ratio, the unit's display will change to the same setting.

1 Display the Video Setup menu.

 
Refer to *Introduction of menu operations* on page 43.

2 Touch TV Aspect on the Video Setup menu to select the TV aspect ratio.

Touch **TV Aspect** repeatedly until the desired aspect ratio appears.

- **16:9** – Wide screen picture (16:9) is displayed as is (initial setting)
- **Letter Box** – The picture is the shape of a letterbox with black bands on the top and bottom of the screen
- **Pan Scan** – The picture is cut short on the right and left sides of the screen

Notes

- When playing discs that do not specify **Pan Scan**, the disc is played back in **Letter Box** display even if you select the **Pan Scan** setting. Confirm whether the disc package bears the  mark.

- The TV aspect ratio cannot be changed for some discs. For details, refer to the disc's instructions.

Setting the slideshow interval

JPEG files can be viewed as a slideshow on this unit. In this setting, the interval between each image can be set.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Time Per Photo Slide on the Video Setup menu to select the slideshow interval.

Touch **Time Per Photo Slide** repeatedly until the desired setting appears.

- **5sec** – JPEG images switch at intervals of 5 seconds
- **10sec** – JPEG images switch at intervals of 10 seconds
- **15sec** – JPEG images switch at intervals of 15 seconds
- **Manual** – JPEG images can be switched manually

Setting parental lock

Some DVD video discs let you use parental lock to restrict children from viewing violent and adult-oriented scenes. You can set parental lock to the desired level.

- When you have a parental lock level set and play a disc featuring parental lock, code number input indications may be displayed. In such cases, playback will begin when the correct code number is entered.

Setting the code number and level

A code number must be registered in order to play back discs with parental lock.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

Menu operations

2 Touch Parental on the Video Setup menu.

3 Touch 0 to 9 to input a four digit code number.

- To cancel the entered numbers, touch **C**.
- To register the code, touch the following touch panel key.



Registering the code.

The code number is set, and the level can now be set.

4 Touch 1 to 8 to select the desired level.

5 Touch Enter.

The parental lock level is set.

- **8** – Playback of the entire disc is possible (initial setting)
- **7 to 2** – Playback of discs for children and non-adult-oriented discs is possible
- **1** – Playback of discs for children only is possible

Notes

- We recommend to keep a record of your code number in case you forget it.
- The parental lock level is stored on the disc. Look for the level indication written on the disc package, included literature or on the disc itself. Parental lock of this unit is not possible if a parental lock level is not stored on the disc.
- With some discs, the parental lock may be active only for certain levels of scenes. The playback of those scenes will be skipped. For details, refer to the instruction manual that came with the disc.

Changing the level

You can change the set parental lock level.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Parental on the Video Setup menu.


3 Touch 0 to 9 to input the registered code number.

- To register the code, touch the following touch panel key.



Registering the code.

This sets the code number, and the level can now be changed.

- If you enter an incorrect code number, the  icon is displayed. Touch **C** and enter the correct code number.

4 Touch 1 to 8 to select the desired level.

5 Touch Enter.

The new parental lock level is set.

- If you forget your code number, touch **C** 10 times.

Setting the DivX subtitle file

You can select whether or not to display DivX external subtitles.

- The DivX subtitles will be displayed even when **Custom** is selected if no DivX external subtitle files exist.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch DivX® Subtitle on the Video Setup menu to select the desired subtitle setting.

- **Original** – Display the DivX subtitles
- **Custom** – Display the DivX external subtitles

Notes

- Up to 42 characters can be displayed on one line. If more than 42 characters are set, the line breaks and the characters are displayed on the next line.

- Up to 126 characters can be displayed on one screen. If more than 126 characters are set, the excess characters will not be displayed.

Displaying the DivX® VOD registration code

In order to play DivX VOD (video on demand) contents on this unit, the unit must first be registered with a DivX VOD contents provider. For registration, generate a DivX VOD registration code and submit it to your provider.

- Keep a record of the code as you will need it when you register your unit to the DivX VOD provider.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch DivX® VOD on the Video Setup menu.

Registration Code and **Deregistration Code** appear.

3 Touch Registration Code.

Your registration code is displayed.

Displaying the deregistration code

If your device is already registered, deregister it by entering the deregistration code.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch DivX® VOD on the Video Setup menu.

3 Touch Deregistration Code.

- To cancel deregistration, touch **Cancel**.

4 Touch OK.

The deregistration is complete.

Setting for digital output

(Function of AVH-P3400DVD)

Audio which is outputted from digital output of this unit can be selected. Normally, set to **Stream**. If this unit's digital output is not used, there is no need to change settings.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Digital Output on the Video setup menu to select the desired digital output setting.

- **Stream** – The Dolby Digital/DTS signal is output as it is (initial setting)
- **Linear PCM** – The Dolby Digital/DTS signal is converted to and output as a linear PCM signal

Automatic playback of DVDs


When a DVD disc with a DVD menu is inserted, this unit will cancel the menu automatically and start playback from the first chapter of the first title.

- Some DVDs may not operate properly. If this function is not fully operated, turn this function off and start playback.

1 Display the Video Setup menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch DVD Auto Play to turn automatic playback on.

- To turn automatic playback off, touch **DVD Auto Play** again. 

Menu operations

System settings

Switching the auxiliary setting

Activate this setting when using an auxiliary device connected to this unit.

1 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch AUX Input on the system menu to turn AUX Input on or off.

Setting AV input

Activate this setting when using an external video component connected to this unit.

1 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch AV Input on the system menu to turn AV Input on or off.

Setting the rear output and subwoofer controller

This unit's rear output (rear speaker leads output and RCA rear output) can be used for full-range speaker (**Full**) or subwoofer (**Subwoofer**) connection. If you switch the rear output setting to **Subwoofer**, you can connect a rear speaker lead directly to a subwoofer without using an auxiliary amp. Initially, the unit is set for a rear full-range speaker connection (**Full**).

1 Turn the unit off.

Refer to *Basic operations* on page 10.

2 Press HOME to switch to the HOME display.

3 Touch System key.

System menu is displayed.

4 Touch Rear Speaker on the system menu to switch the subwoofer output or full-range speaker.

- When no subwoofer is connected to the rear output, select **Full** (full-range speaker).
- When a subwoofer is connected to the rear output, select **Subwoofer** (subwoofer).

Notes

- Even if you change this setting, there will be no output unless you turn the subwoofer output on (refer to *Using subwoofer output* on page 45).
- Both rear speaker lead outputs and RCA rear output are switched simultaneously in this setting.

Setting the FM tuning step

- The tuning step remains at 50 kHz during manual tuning.

1 Turn the unit off.

Refer to *Basic operations* on page 10.

2 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

3 Touch FM Step on the system menu to select the FM tuning step.

Touching **FM Step** will switch the FM tuning step between 50 kHz and 100 kHz. The selected FM tuning step will appear.

Switching sound muting/attenuation

Sound from this system is automatically muted or attenuated when a signal from equipment with a mute function is received.

- Sound from this system returns to normal when the muting or attenuation is canceled.

1 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

Menu operations

2 Touch Mute/ATT until the desired setting appears.

Touch **Mute/ATT** until the desired setting appears in the display.

- **Mute** – Muting
- **ATT –20dB** – Attenuation (**ATT –20dB** has a stronger effect than **ATT –10dB**)
- **ATT –10dB** – Attenuation
- **Off** – Turns the sound muting/attenuation off

Notes

- When **Mute** is displayed, the sound is turned off and no audio adjustments can be made.
- When **ATT** is displayed, the sound is attenuated and only the volume can be adjusted. (No other audio adjustments can be made.)
- Operation returns to normal when the phone connection is ended.

Selecting the system language

The system language can be selected from nine languages.

If text information such as the title name, artist name or a comment is embedded in a European language, they can also be displayed on this unit.

- The language can be changed for the following:
 - System menu
 - On-screen display (English and Russian only)
 - Multi language setting for DivX (English and Russian only)
 - Language for cautions

Some operations on this unit are prohibited from use while driving or require careful attention when operated. In such cases, a caution will appear on the display. You can change the language for caution messages with this setting.
- If the embedded language and the selected language setting are not the same, text information may not display properly.
- Some characters may not be displayed properly.

1 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch System Language on the system menu to select the desired language.

3 Touch the desired language.

English (English)—**Français** (French)—**Deutsch** (German)—**Español** (Spanish)—**Русский** (Russian)—**Português** (Portuguese)—**العربية** (Arabic)—**فارسی** (Persian)—**עברית** (Hebrew)

Setting the ever scroll

When ever scroll is set to **On**, recorded text information scrolls continuously in the display. Set to **Off** if you prefer the information to scroll just once.

1 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Ever Scroll on the system menu to turn ever scroll on or off.

Setting the Bluetooth audio

(Function of AVH-2400BT)

You need to activate the **Audio** source in order to use a Bluetooth audio player.

1 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Bluetooth Audio on the system menu to turn Bluetooth audio on or off.

Clearing Bluetooth memory

(Function of AVH-2400BT)

Important

Never turn the unit off while the Bluetooth memory is being cleared.

Menu operations

1 Turn the unit off.

Refer to *Basic operations* on page 10.

2 Press HOME to switch to the HOME display.

3 Touch System key.

System menu is displayed.

4 Touch Bluetooth Memory Clear on the system menu.

5 Touch Clear.

After selecting a desired item, a confirmation display appears. Touch **OK** to delete the memory.

- If you do not want to clear the memory, touch **Cancel**.

Updating Bluetooth connection software

(Function of AVH-2400BT)

This function is used to update this unit with the latest software. For information on the software and updating, refer to our website.

Important

Never turn the unit off and never disconnect the phone while the software is being updated.

1 Turn the unit off.

Refer to *Basic operations* on page 10.

2 Press HOME to switch to the HOME display.

3 Touch System key.

System menu is displayed.

4 Touch Bluetooth Software Update.

5 Touch Start to display the data transfer mode.

- Follow the on-screen instructions to finish updating the software.

Displaying the Bluetooth system version

(Function of AVH-2400BT)

If this unit fails to operate properly, you may need to consult your dealer for repair. In such cases, you may be asked to specify the system version. Perform the following procedure to check the version on this unit.

1 Turn the unit off.

Refer to *Basic operations* on page 10.

2 Press HOME to switch to the HOME display.

3 Touch System key.

System menu is displayed.

4 Touch Bluetooth Version Information to display to the version of the Bluetooth module of this unit.

Setting the rear view camera (back up camera)

CAUTION

Pioneer recommends the use of a camera which outputs mirror-reversed images.

Otherwise, the screen image will appear reversed.

This unit features a function that automatically switches to the rear view camera video (**R.C IN**) when a rear view camera is installed on your car and the shift lever is moved to the **REVERSE (R)** position. (For more details, consult your dealer.)

- After you set up the rear view camera setting, move the shift lever to **REVERSE (R)** and confirm that the rear view camera video is shown on the display.
- Change this setting if the display switches to the rear view camera video by error while you are driving forward.
- To stop watching the rear view camera video and return to the source display, press and hold **MUTE**.

Menu operations

- Touch the **RearView** source icon to display the rear view camera image while driving. Touch the source icon again to turn the rear view camera off. For details, refer to *Selecting a source using the touch panel keys* on page 11.

1 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Camera Polarity on the system menu to select the appropriate setting.

- **Battery** – When the polarity of the connected lead is positive while the shift lever is in **REVERSE (R)** position
- **Ground** – When the polarity of the connected lead is negative while the shift lever is in **REVERSE (R)** position
- **Off** – When a rear view camera is not connected to this unit

Note

You can also switch the rear view image by pressing the touch key, regardless of the **Camera Polarity** setting on the system menu. Refer to *Basic operations* on page 10.

Selecting the video format

You can switch the video output format of **V OUT** between NTSC and PAL.

1 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Video Output Format on the system menu to select the video output format.

NTSC—PAL

Note

You can switch the video output format only for the source from this unit.

Setting the video signal

When you connect this unit to an AV equipment to this unit, select the suitable video signal setting.

- As this function is initially set to **Auto**, the unit will automatically adjust the video signal setting.
- You can operate this function only for the video signal input into the AV input.

1 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

2 Touch Video Signal Setting on the function menu.

Video Signal Setting items are displayed.

- **AV** – Adjusts the AV video signal
- **AUX** – Adjusts the AUX video signal
- **Camera** – Adjusts the rear view camera video signal

3 Touch ◀ or ▶ to select the desired video signal appears.

Auto—PAL—NTSC—PAL-M—PAL-N—SECAM

Selecting the area group

1 Select the TV source.

Refer to *Basic operations* on page 10.

2 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

3 Touch TV Country Group on the function menu.

4 Touch ◀ or ▶ until the desired area group appears.

Country1 (CCIR channel)—**Country2** (IN channel)—**Country3** (CHN channel)—**Country4** (U.K. channel)—**Country5** (OIRT channel)—**Country6** (AUSTRALIA channel)—**Country7** (SAF channel)

Menu operations

Changing the picture adjustment

You can adjust the **Brightness** (brightness), **Contrast** (contrast), **Color** (color), **Hue** (hue), **Dimmer** (dimmer), **Temperature** (temperature), **Black Level** (black level) and **Dot Adjustment** (RGB dot clock adjustment) for each source and rear view camera.

- You cannot adjust **Color**, **Hue**, **Contrast** and **Black Level** for the audio source.

1 Display the system menu.

Refer to *Introduction of menu operations* on page 43.

2 If you are adjusting the Picture Adjustment, select the unit.

NAVI

Adjusting the **Picture Adjustment** for the Navigation system.

Rear View

Adjusting the **Picture Adjustment** for the rear view camera.

Source

Adjusting the **Picture Adjustment** for the source.

3 Touch any of the following touch panel keys to select the function to be adjusted.

Picture Adjustment items are displayed.

- Brightness** – Adjusts the black intensity
- Contrast** – Adjusts the contrast
- Color** – Adjusts the color saturation
- Hue** – Adjusts the tone of color (red or green is emphasized)
- Dimmer** – Adjusts the brightness of the display
- Temperature** – Adjusts the color temperature, resulting in a better white balance
- Black Level** – Emphasizes the dark portions of images making the difference between bright and dark more distinct
- Dot Adjustment** – Adjusts phase shifting by dot clock when a Navigation system is connected

- You cannot adjust the picture adjustment for the rear view camera when **Camera Polarity** is set to **Off**. (Refer to *Setting the rear view camera (back up camera)* on page 63.)
- You can adjust **Hue** only when the color system is set to NTSC.
- With some rear view cameras, picture adjustment may not be possible.

4 Touch ◀ or ▶ to adjust the selected item.

Each time you touch ◀ or ▶, the level of the selected item increases or decreases.

- Dimmer** can be adjusted from **+1** to **+48**.
- Temperature** can be adjusted from **+3** to **-3**.

5 Touch **Black Level** and **Dot Adjustment** to adjust.

- Black Level** can be set on or off.
- Dot Adjustment** can be set to **1** or **2**.

Notes

- You cannot operate this function while driving.
- Different **Brightness/Contrast/Dimmer** settings can be set for when the illumination switch is on and when it is off.

Auto EQ (auto-equalizing)

The auto-equalizer automatically measures the car's interior acoustic characteristics, and then creates an auto-equalizer curve based on that information.

- To perform this function, dedicated microphone (e.g. CD-MC20) is required.



WARNING

As a loud tone (noise) may be emitted from the speakers when measuring the car's interior acoustic characteristics, never perform auto TA or auto EQ while driving.



CAUTION

- Thoroughly check the conditions before performing auto EQ as the speakers may be damaged if these functions are performed when:

Menu operations

- The speakers are incorrectly connected. (For example, when a rear speaker is connected as a subwoofer output.)
- A speaker is connected to a power amp delivering output higher than the speaker's maximum input power capability.
- If the microphone is placed in an unsuitable position the measurement tone may become loud and measurement may take a long time, resulting in battery drainage. Be sure to place the microphone in the specified location.

Before operating the auto EQ function

- Carry out auto EQ in as quiet a place as possible, with the car engine and air conditioning switched off. Also cut power to car phones or portable telephones in the car, or remove them from the car before carrying out auto EQ. Sounds other than the measurement tone (surrounding sounds, engine sound, telephones ringing etc.) may prevent correct measurement of the car interior acoustic characteristics.
- Be sure to carry out auto EQ using the optional microphone. Using another microphone may prevent measurement, or result in incorrect measurement of the car interior acoustic characteristics.
- In order to perform auto EQ, the front speaker must be connected.
- When this unit is connected to a power amp with input level control, auto EQ may not be possible if the power amp's input level is set below the standard level.
- When this unit is connected to a power amp with an LPF, turn this LPF off before performing auto EQ. Also set the cut-off frequency for the built-in LPF of an active subwoofer to the highest frequency.
- The distance has been calculated by computer to be the optimum delay to give accurate results for the circumstances, so please continue to use this value.
 - The reflected sound within the car is strong and delays occur.
 - The LPF on active subwoofers or external amps delay the lower sounds.
- Auto EQ changes the audio settings as follows:
 - The fader/balance settings return to the center position. (Refer to *Using fader/balance adjustment* on page 44.)
 - The equalizer curve switches to **Flat**. (Refer to *Recalling equalizer curves* on page 44.)
 - The front, center and rear speakers will automatically be adjusted to a high pass filter setting.
- Previous settings for auto EQ will be overwritten.


Performing auto EQ

1 Stop the car in a place that is quiet, close all the doors, windows and sun roof, and then turn the engine off.

If the engine is left running, engine noise may prevent correct auto EQ.

2 Fix the optional microphone in the center of the headrest of the driver's seat, facing forward.

The auto EQ may differ depending on where you place the microphone. If desired, place the microphone on the front passenger seat to carry out auto EQ.

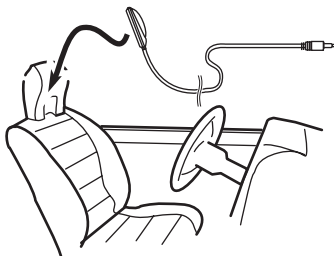

3 Turn the ignition switch to ON or ACC.

If the car's air conditioner or heater is turned on, turn it off. Noise from the fan in the air conditioner or heater may prevent correct auto EQ.

Menu operations


4 Display the system menu.

Refer to *Introduction of menu operations* on page 43.


5 Touch Auto EQ Measurement to enter auto EQ measurement mode.

6 Plug the microphone into the microphone input jack on this unit.

(AVH-2400BT/AVH-1400DVD)

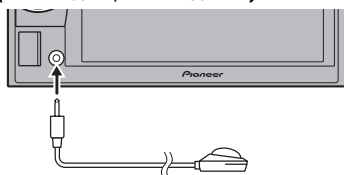

(AVH-P3400DVD)

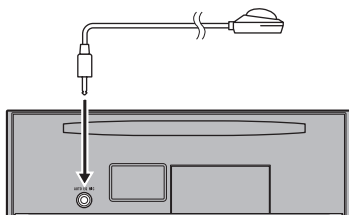

7 Touch Start to start auto EQ.

8 When the 10-second countdown starts, get out of the car and close the door within 10 seconds.

A measurement tone (noise) is emitted from the speakers, and auto EQ measurement begins.

When auto EQ is completed, **Complete** is displayed.

When the car's interior acoustic characteristics cannot be measured correctly, an error message will be displayed. (Refer to *Understanding auto EQ error messages* on page 95.)

- It takes about nine minutes for auto EQ measurement to be completed when all the speakers are connected.
- To stop auto EQ, touch **Stop**.

9 Store the microphone carefully in the glove compartment or another safe place.

If the microphone is subjected to direct sunlight for an extended period, high temperatures may cause distortion, color change or malfunction.

10 Press ▲(eject) to close the panel. (AVH-P3400DVD only)

Favorite menu

1 Display menu columns to register.

Refer to *Introduction of menu operations* on page 43.

- You can customize menus except

Video Setup menu.

2 Touch and hold the menu column to register it.

- To cancel registration, touch and hold the menu column again.

3 Display the favorite menu and choose a registered menu.

Refer to *Introduction of menu operations* on page 43.

Note

You can register up to 12 columns. 


Introduction of Bluetooth connection menu operations

Refer to *Basic operations* on page 10.

If you are using a cellular phone that can be connected via Bluetooth wireless technology, we recommend that you use your phone to search for this unit and establish a connection between it and your phone. The PIN code is set to **0000** as default. The product name for this unit will display on your phone as the device name. For details, refer to *Entering PIN code for Bluetooth wireless connection* on page 70. For further details concerning the procedures for establishing Bluetooth wireless connections, refer to the instruction manual for the phone.

Pairing from this unit

(Function of AVH-2400BT)

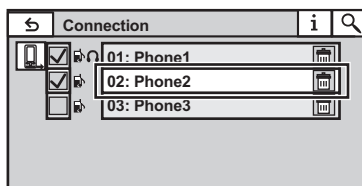

1 Display the Bluetooth Connection Menu.


Refer to *Introduction of Bluetooth telephone operations* on page 24.

2 Touch Connection to select a device.

3 Start to search.



Starting to search.

While searching,  is displayed and when available devices are found, the device names or Bluetooth device addresses (if names cannot be obtained) are displayed.

Menu operations

- If you want to switch between the device names and Bluetooth device addresses, touch the icon.



Switching between the device names and Bluetooth device addresses.

- To cancel searching, touch **Stop**.
- If five devices are already paired, **Memory Full** is displayed and pairing cannot be performed. In such cases, delete a paired device first. Refer to this page.
- If no device can be found, **Not Found** is displayed. In such cases, check the status of the Bluetooth device and search again.

4 Touch a device name to select the device you want to connect to.

While connecting, **Pairing** is displayed. If the connection is established, **Paired** is displayed.

- 6-digit number appears on the display of this unit. Once the connection is established, this number disappears.
- If the connection fails, **Error** is displayed. In such cases, try again from the beginning.
 - The PIN code is set to **0000** as the default, but can be changed. Refer to *Entering PIN code for Bluetooth wireless connection* on the next page.
 - Once the connection is established, the device name is displayed. Touch the device name to disconnect.
 - If you want to delete a paired Bluetooth telephone, display **Delete OK?**. Touch **Yes** to delete the device.



Deleting a paired device.

- Never turn the unit off while the paired Bluetooth telephone is being deleted.

Using a Bluetooth device to pair

(Function of AVH-2400BT)

If you cannot open the connection between your Bluetooth device and this unit from your

Bluetooth device, you can use this function to establish a connection.

1 Display the Bluetooth Connection Menu.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

2 Touch Special Device to select the special device.

- Bluetooth devices that are difficult to establish a connection with are called special devices. If your Bluetooth device is listed as a special device, select the appropriate one.

3 Touch the special device list to open the connection.

This unit is now on standby for a connection with the Bluetooth device.

- If three devices are already paired, **Memory Full** is displayed and pairing cannot be performed. In such cases, delete a paired device first. Refer to this page.

4 Use your Bluetooth device to establish a connection.

The connection method is different depending on the Bluetooth device. Refer to the manual for your Bluetooth device to establish a connection.

While connecting, **Pair your phone** is displayed. If the connection is established, **Paired** is displayed.

- If the connection fails, **Error** is displayed. In such cases, try again from the beginning.
- You may also need to enter a PIN code into this unit. If your telephone requires a PIN code to establish a connection, look for the code on the telephone or in its accompanying documentation.
- The PIN code is set to **0000** as the default, but can be changed. Refer to *Entering PIN code for Bluetooth wireless connection* on the next page.

Connecting to a Bluetooth device automatically

(Function of AVH-2400BT)

If this function is set to on, a connection between your Bluetooth device and this unit will take place automatically as soon as the two devices are less than a few meters apart. Initially, this function is set to on.

1 Display the Bluetooth Connection Menu.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

2 Touch Auto Connect to turn automatic connection on.

If your Bluetooth device is ready for a Bluetooth wireless connection, a connection to this unit will automatically be established.

- To turn automatic connection off, touch **Auto Connect** again.

If connection fails, "**Auto connection failed. Retry?**" appears. Touch **Yes** to reconnect.

3 Once you turn your vehicle's ACC switch on again, a connection is established automatically.

Switching visible unit

(Function of AVH-2400BT)

This function sets whether or not to make this unit visible to the other device. Initially, this function is set to on.

1 Display the Bluetooth Connection Menu.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

2 Touch Visibility to select visibility off.

- To turn visibility on, touch **Visibility** again.

Displaying Bluetooth Device address

(Function of AVH-2400BT)

This unit displays its Bluetooth device address.

1 Display the Bluetooth Connection Menu.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

2 Touch Device Information to display device information.

The Bluetooth device address is displayed.

Entering PIN code for Bluetooth wireless connection

(Function of AVH-2400BT)

To connect your Bluetooth device to this unit via Bluetooth wireless technology, you need to enter a PIN code on your Bluetooth device to verify the connection. The default code is **0000**, but you can change it with this function.

1 Display the Bluetooth Connection Menu.

Refer to *Introduction of Bluetooth telephone operations* on page 24.

2 Touch PIN Code Input to select PIN Code Input.

3 Touch 0 to 9 to input pin code.

4 After inputting PIN code (up to 8 digits), store in this unit.



Storing the PIN code in this unit.



Menu operations

Introduction of Theme setting menu operations

Refer to *Basic operations* on page 10.

Selecting the illumination color

This unit is equipped with multiple-color illumination.

Direct selection from preset illumination colors

You can select an illumination color from the color list.

1 Display the Theme menu.

Refer to *Basic operations* on page 10.

2 Touch Illumination and then touch a color on the list.

Customizing the illumination color

1 Display the Theme menu.

Refer to *Basic operations* on page 10.

2 Touch Illumination and then touch Custom.

3 Display the customizing menu.



Displaying the customizing menu.

4 Touch the color bar to customize the color.

5 Touch ◀ or ▶ to fine-tune the color.

6 Touch the icon and hold to store the customized color in the memory.



Storing the customized color in the memory.

The customized color has been stored in the memory.

The set color will be recalled from the memory the next time you touch the same icon.

Selecting the OSD (on-screen display) color

The OSD color can be changed.

1 Display the Theme menu.

Refer to *Basic operations* on page 10.

2 Touch Screen.

3 Touch one of the colors on the list.

Selecting the background display


You can switch the background that is displayed when listening to a source.

1 Display the Theme menu.

Refer to *Basic operations* on page 10.

2 Touch Background.

3 Touch the desired setting.

- If no JPEG images are stored in this unit, you cannot select photo. To store a JPEG image to this unit, refer to *Capture an image in JPEG files* on page 37. 

Adjusting the response positions of the touch panels (Touch Panel Calibration)

If you feel that the touch panel keys on the screen deviate from the actual positions that respond to your touch, adjust the response positions of the touch panel. There are two adjustment methods: 4-point adjustment, in which you touch four corners of the screen; and 16-point adjustment, in which you make fine-adjustments on the entire screen.

- Touch the screen gently for adjustment. Forcefully pressing the touch panel may damage the touch panel. Do not use a sharp pointed tool such as a ballpoint pen or mechanical pen. Doing so may damage the screen.
- If the touch panel cannot be adjusted properly, consult your local Pioneer dealer.

1 Turn the unit off.

Refer to *Basic operations* on page 10.

2 Press HOME to proceed to 16-point adjustment.

The 16-point touch panel adjustment screen appears.

- To cancel the adjustment, press and hold HOME.

3 Gently touch the center of the + mark displayed on the screen.

After you touch all the marks, the data for the adjusted position is saved.

- Do not turn off the engine while the data is being saved.

4 Press and hold HOME to complete the adjustment.

Using an AUX source

A separately sold auxiliary device such as a VCR or portable device can be connected to this unit. When connected, the auxiliary device

is automatically recognized as an AUX source and is assigned to **AUX**.

About AUX connection methods

You can connect auxiliary devices to this unit.

Mini pin plug cable (AUX)

When connecting an auxiliary device using a mini plug cable

iPods and portable audio/video players can be connected to this unit via mini plug cable.

- If an iPod with video capabilities is connected to this unit via 3.5 mm plug (4 pole) cable (such as the CD-V150M), you can enjoy the video contents of the connected iPod.
- A portable audio/video player can be connected by using a 3.5 mm plug (4 pole) with an RCA cable (sold separately). However, depending on the cable, a reverse connection between the red (right side audio) cable and yellow (video) cable may be required in order for the sound and video image to be reproduced correctly.

● Insert the stereo mini plug into the AUX input jack on this unit.

Refer to *Installation* on page 74.

Refer to *What's what* on page 9. 

Using an external unit

(Function of AVH-P3400DVD)

An external unit refers to a Pioneer product, such as those which will be available in the future. Although incompatible as a source, the basic functions of up to two external units can be controlled with this unit. When two external units are connected, the external units are automatically allocated to external unit 1 or external unit 2.

Other functions

The basic operations of the external unit are explained below. The allocated functions will differ depending on the connected external unit. For details concerning these functions, refer to the owner's manual for the external unit.

Basic operations

The functions allocated to the following operations will differ depending on the connected external unit. For details concerning these functions, refer to the owner's manual for the connected external unit.



Switching to auto or manual.



Switching to video and audio.



Wide

Changing the screen mode.
Refer to *Changing the wide screen mode* on page 37.

EQ

Switching the equalizer curves.
Refer to *Using the equalizer* on page 44.
Touch and hold for more than two seconds to turn the auto-equalizer on or off.
Refer to *Using the auto-equalizer* on page 45.



Actions will differ depending on the connected external unit.



F1

F2

F3

F4

Function 1 to 4
Actions will differ depending on the connected external unit.



Using the functions allocated to 1 to 6 keys.
Actions will differ depending on the connected external unit.



Connecting the units

⚠ WARNING

- To avoid the risk of accident and the potential violation of applicable laws, no viewing of front seat video should ever occur while the vehicle is being driven. Also, rear displays should not be in a location where they are visibly distracting to the driver.
- In some countries or states the viewing of images on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed and this unit's DVD features should not be used.

⚠ CAUTION

- PIONEER does not recommend that you install or service your display unit yourself. Installing or servicing the product may expose you to risk of electric shock or other hazards. Refer all installation and servicing of your display unit to authorized Pioneer service personnel.
- Secure all wiring with cable clamps or electrical tape. Do not allow any bare wiring to remain exposed.
- Do not drill a hole into the engine compartment to connect the yellow cable of the display unit to the vehicle battery. Engine vibration may eventually cause the insulation to fail at the point where the wire passes from the passenger compartment into the engine compartment. Take extra care in securing the wire at this point.
- It is extremely dangerous to allow the microphone lead to become wound around the steering column or shift lever. Be sure to install the unit in such a way that it will not obstruct driving.
- Make sure that cables will not interfere with moving parts of the vehicle, such as the shift lever, parking brake or seat sliding mechanism.
- Do not shorten any cables. If you do, the protection circuit may fail to work properly.

⚠ WARNING

- LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE PARKING BRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE.**

🔧 Important

- This unit cannot be installed in a vehicle without ACC (accessory) position on the ignition switch.



ACC position




No ACC position

- Use of this unit in conditions other than the following could result in fire or malfunction.
 - Vehicles with a 12-volt battery and negative grounding.
 - Speakers with 50 W (output value) and 4 Ω to 8 Ω (impedance value).
- To prevent a short-circuit, overheating or malfunction, be sure to follow the directions below.
 - Disconnect the negative terminal of the battery before installation.
 - Secure the wiring with cable clamps or adhesive tape. Wrap adhesive tape around wiring that comes into contact with metal parts to protect the wiring.
 - Place all cables away from moving parts, such as the shift lever and seat rails.
 - Place all cables away from hot places, such as near the heater outlet.
 - Do not connect the yellow cable to the battery by passing it through the hole to the engine compartment.
 - Cover any disconnected cable connectors with insulating tape.
 - Do not shorten any cables.

Installation

- Never cut the insulation of the power cable of this unit in order to share the power with other devices. The current capacity of the cable is limited.
- Use a fuse of the rating prescribed.
- Never wire the negative speaker cable directly to ground.
- Never band together negative cables of multiple speakers.
- When this unit is on, control signals are sent through the blue/white cable. Connect this cable to the system remote control of an external power amp or the vehicle's auto-antenna relay control terminal (max. 300 mA 12 V DC). If the vehicle is equipped with a glass antenna, connect it to the antenna booster power supply terminal.
- Never connect the blue/white cable to the power terminal of an external power amp. Also, never connect it to the power terminal of the auto antenna. Doing so may result in battery drain or a malfunction.
- IP-BUS connectors are color-coded. Be sure to connect connectors of the same color.
- The black cable is ground. Ground cables for this unit and other equipment (especially, high-current products such as power amps) must be wired separately. If they are not, an accidental detachment may result in a fire or malfunction.


Connecting the power cord

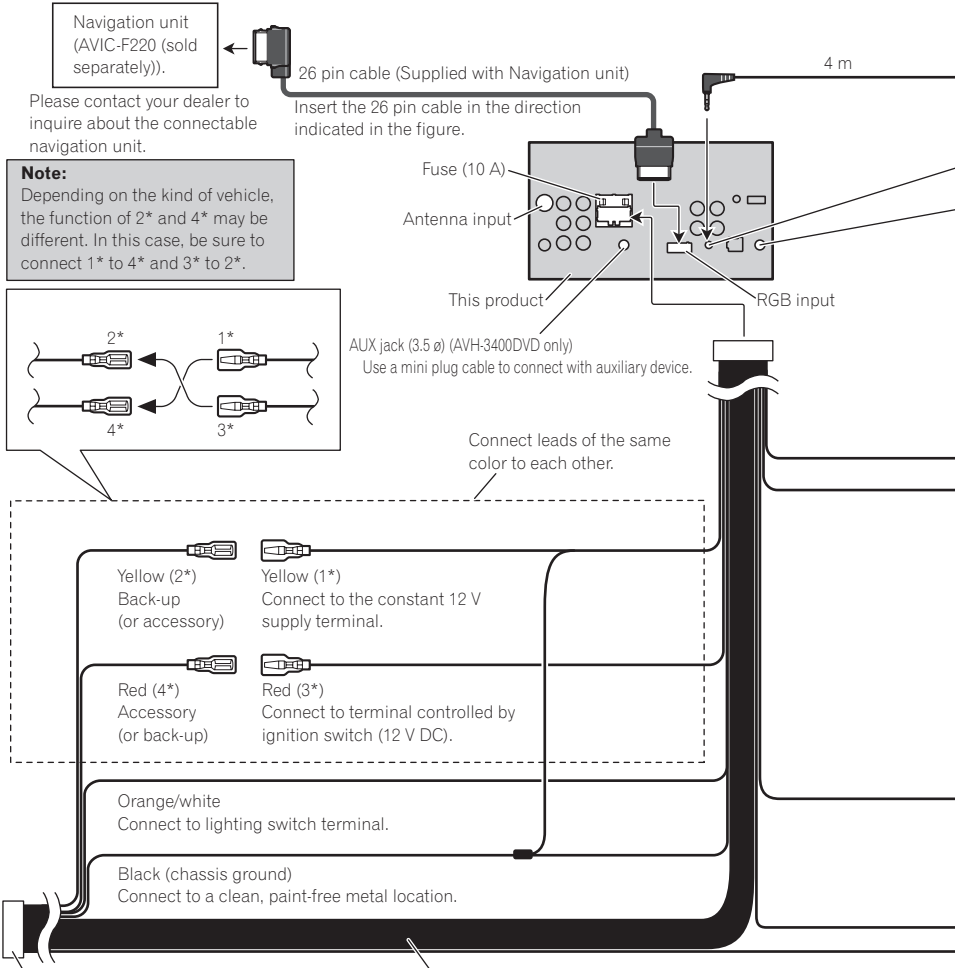

Navigation unit (AVIC-F220 (sold separately)).

Please contact your dealer to inquire about the connectable navigation unit.

Note:
Depending on the kind of vehicle, the function of 2* and 4* may be different. In this case, be sure to connect 1* to 4* and 3* to 2*.

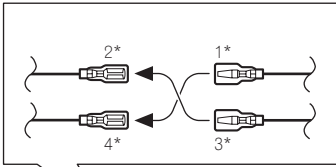

26 pin cable (Supplied with Navigation unit)

Insert the 26 pin cable in the direction indicated in the figure.

4 m

Fuse (10 A)

Antenna input

This product

RGB input

AUX jack (3.5 ϕ) (AVH-3400DVD only)
Use a mini plug cable to connect with auxiliary device.

Connect leads of the same color to each other.

Yellow (2*)
Back-up
(or accessory)

Yellow (1*)
Connect to the constant 12 V supply terminal.

Red (4*)
Accessory
(or back-up)

Red (3*)
Connect to terminal controlled by ignition switch (12 V DC).

Orange/white
Connect to lighting switch terminal.

Black (chassis ground)
Connect to a clean, paint-free metal location.

ISO connector

Note:
In some vehicles, the ISO connector may be divided into two. In this case, be sure to connect to both connectors.

(AVH-P4300DVD only)
When you connect the separately sold multi-channel processor (DEQ-P6600) to this unit, do not connect anything to the speaker leads and system remote control (blue/white).

Speaker leads

- White: Front left \oplus
- White/black: Front left \ominus
- Gray: Front right \oplus
- Gray/black: Front right \ominus
- Green: Rear left \oplus or subwoofer \oplus
- Green/black: Rear left \ominus or subwoofer \ominus
- Violet: Rear right \oplus or subwoofer \oplus
- Violet/black: Rear right \ominus or subwoofer \ominus

Installation



Microphone (AVH-2400BT only)

Microphone input (AVH-2400BT only)

Wired remote input

Hard-wired remote control adaptor can be connected (sold separately).

Violet/white

Of the two lead wires connected to the back lamp, connect the one in which the voltage changes when the gear shift is in the REVERSE (R) position. This connection enables the unit to sense whether the car is moving forwards or backwards.

 
Yellow/black

If you use an equipment with Mute function, wire this lead to the Audio Mute lead on that equipment. If not, keep the Audio Mute lead free of any connections.

Connection method



1. Clamp the lead.

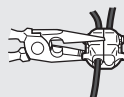

2. Clamp firmly with needle-nosed pliers.

Note:

- The position of the parking brake switch depends on the vehicle model. For details, consult the vehicle Owner's Manual or dealer.

Light green

Used to detect the ON/OFF status of the parking brake. This lead must be connected to the power supply side of the parking brake switch.


Blue/white

Connect to system control terminal of the power amp (max. 300 mA 12 V DC).

Blue/white (5*)

Blue/white (6*)

Connect to auto-antenna relay control terminal (max. 300 mA 12 V DC).

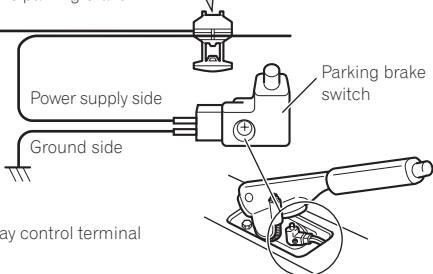


The pin position of the ISO connector will differ depending on the type of vehicle. Connect 5* and 6* when Pin 5 is an antenna control type. In another type of vehicle, never connect 5* and 6*.

Notes:


- Change the initial setting of this unit (refer to the Operation Manual). The subwoofer output of this unit is monaural.
- When using a subwoofer of 70 W (2 Ω), be sure to connect with Violet and Violet/black leads of this unit. Do not connect anything to Green and Green/black leads.


When connecting to separately sold power amp

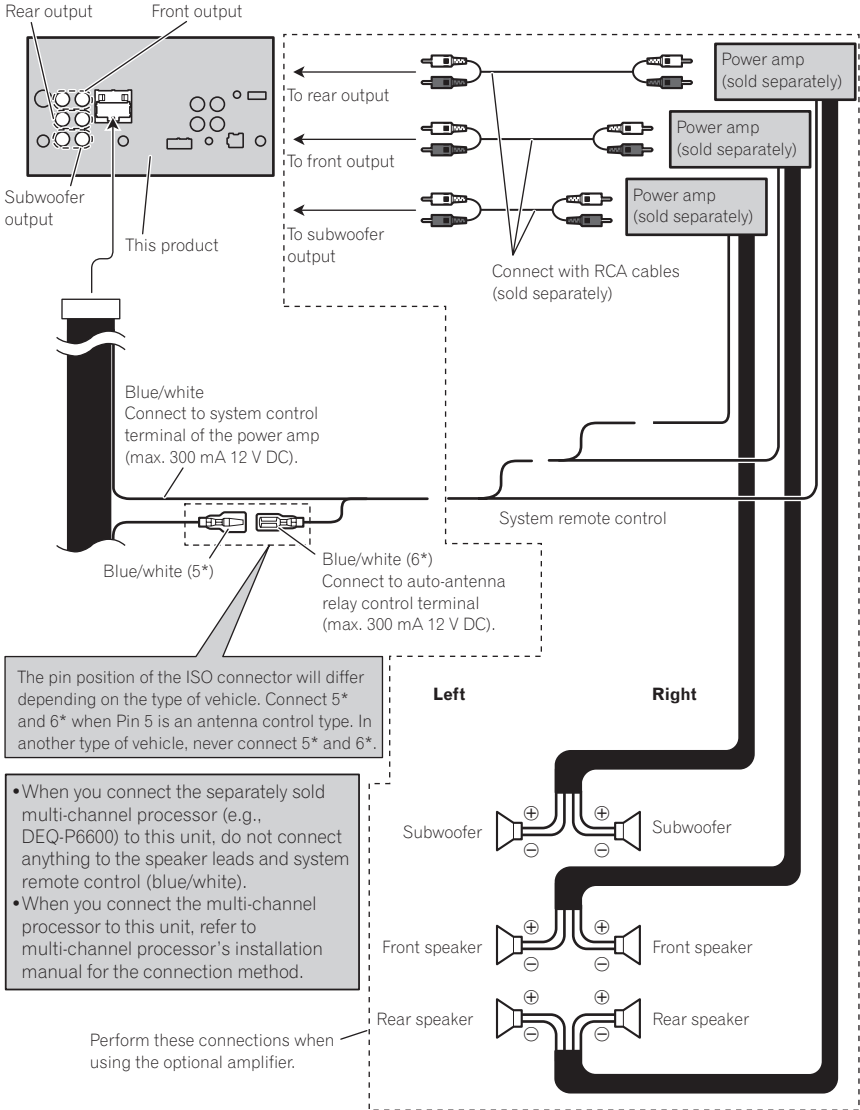

Installation


Connecting the system (AVH-P3400DVD only)

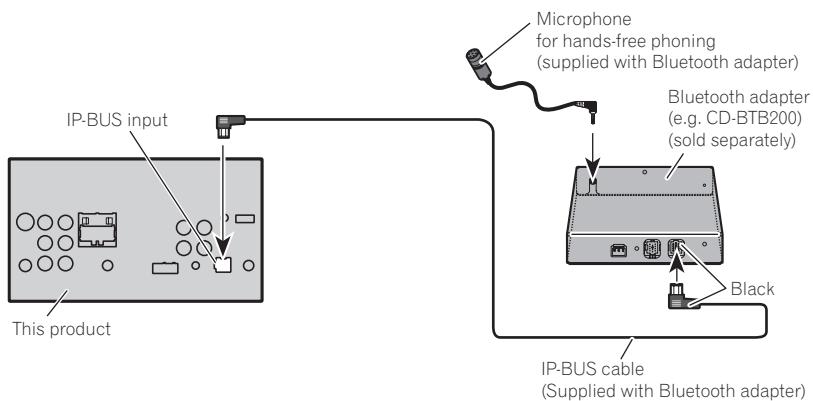

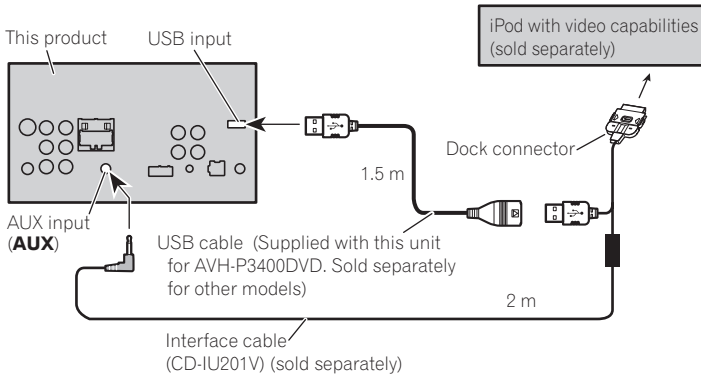
When connecting with optional CD-IU201V cable (AVH-P3400DVD only)

Installation

When connecting with a multi-channel processor (AVH-P3400DVD only)

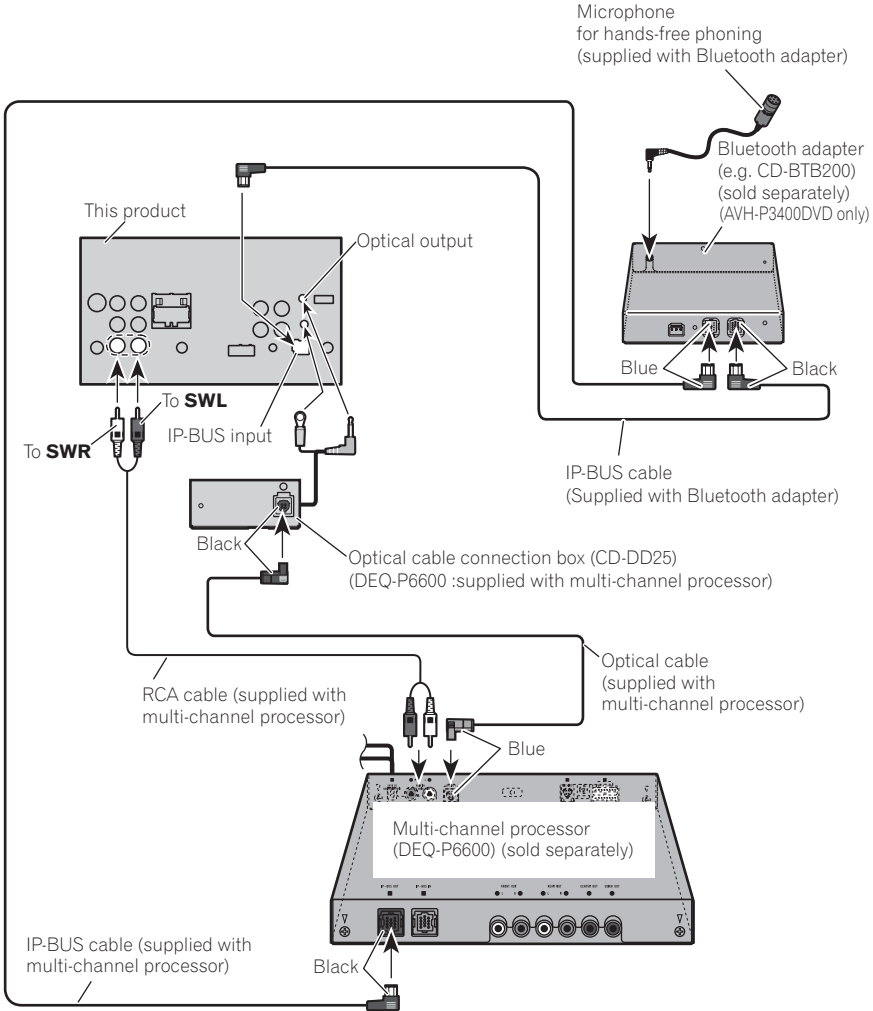

When connecting the external video component and the display

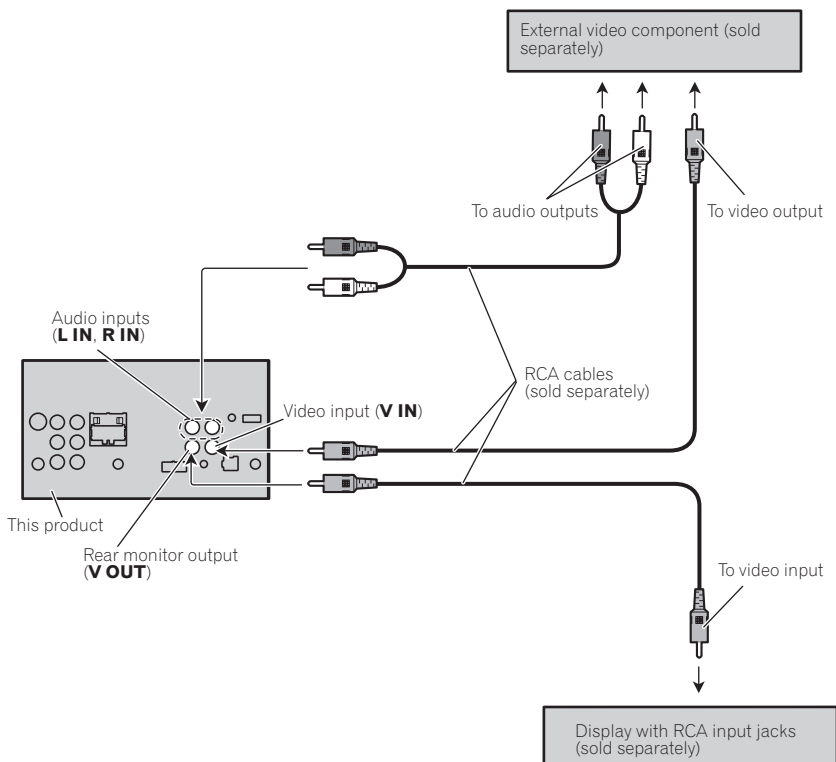

- It is necessary to change **AV Input** in the system menu when connecting the external video component. Refer to *Setting AV input* on page 61.

When using a display connected to rear video output

This product's rear video output and rear audio output are for connection of a display to enable passengers in the rear seats to watch the DVD, etc.

! WARNING

- Never install the display in a location where it is visible to the driver while driving.

Installation

When connecting with a rear view camera


When the shift lever is switched to REVERSE (R), the display on this unit automatically switches to the rear view image. You need to set the **Camera Polarity** properly in the system menu. For details about the settings, refer to *Setting the rear view camera (back up camera)* on page 63.

You can also switch the rear view image by pressing the touch key. For details, refer to *Basic operations* on page 10.

WARNING
USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.

CAUTION

- **You must use a camera which outputs mirror reversed images.**
- The screen image may appear reversed.
- The rear view camera function is to be used as an aid to keep an eye on trailers, or while backing up. Do not use for entertainment purposes.
- Objects in the rear view may appear closer or more distant than they actually are.

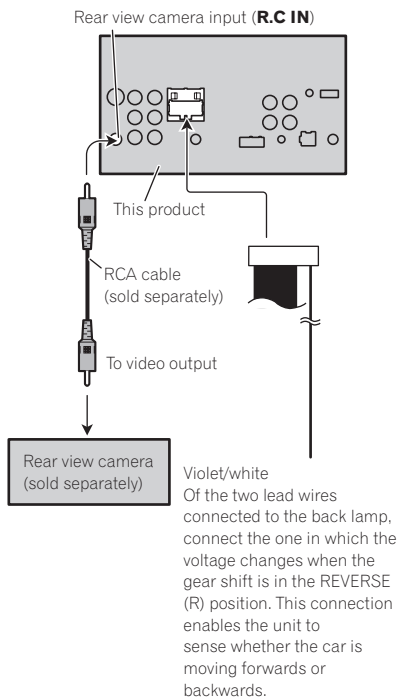

Connecting and installing the optical cable connection box

⚠ WARNING

- Avoid installing the optical cable connection box in locations where the operation of safety devices such as airbags is prevented by this unit. Otherwise, there is a danger of a fatal accident.
- Avoid installing the optical cable connection box in locations where the operation of the brake may be prevented. Otherwise, it may result in a traffic accident.
- Fix the optical cable connection box securely with the hook and loop fastener or lock tie. If the unit is loose, it disturbs driving stability, which may result in a traffic accident.


⚠ CAUTION

- Install this unit using only the parts supplied with this unit. If other parts are used, this unit may be damaged or could dismount itself, which leads to an accident or other problems.
- Do not install this unit near the doors where rainwater is likely to be spilled on the unit. In-cursion of water into the unit may cause smoke or fire.

Connecting the optical cable


1 Connect the optical cable and ground lead to the main unit.

Connect the optical cable so that it does not protrude from the main unit, as shown in the illustration. Fasten the ground lead to the protrusion on the back of the main unit.

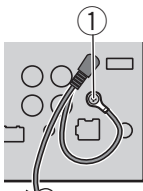

① Screw

2 Connect the optical cable to the optical cable connection box.

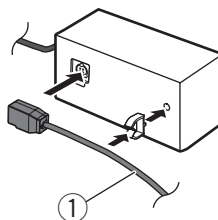


① Optical cable

Installing the optical cable connection box

● When installing the optical cable connection box with the hook and loop fastener.

Install the optical cable connection box using the hook and loop fastener in the ample space of the console box.

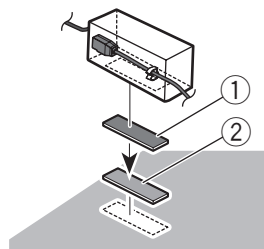


① Hook fastener

② Loop fastener

● When installing the optical cable connection box with the lock tie.

Wrap the optical cable and connection box with the protection tape and fasten with the power code using the lock tie.

Installation

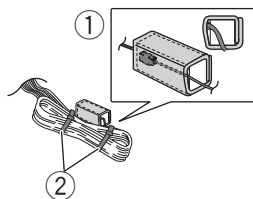


- ① Wrap with the protection tape
- ② Fasten with the lock tie


Installation

Notes

- Check all connections and systems before final installation.
- Do not use unauthorized parts as this may cause malfunctions.
- Consult your dealer if installation requires drilling of holes or other modifications to the vehicle.
- Do not install this unit where:
 - it may interfere with operation of the vehicle.
 - it may cause injury to a passenger as a result of a sudden stop.
- Do not install the display where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags, hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.
- The semiconductor laser will be damaged if it overheats. Install this unit away from hot places such as near the heater outlet.
- Optimum performance is obtained when the unit is installed at an angle of less than 30°.

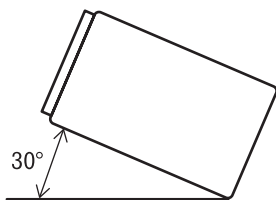


- When installing, to ensure proper heat dispersal when using this unit, make sure you leave ample space behind the rear panel and wrap any loose cables so they are not blocking the vents.

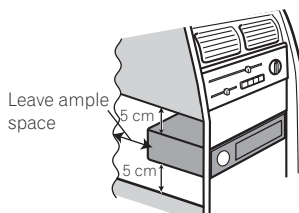

- To some types of vehicles, this unit cannot be properly installed. In such case, use the optional installation kit (ADT-VA133).

Before installing this unit

- **Remove the holder.**

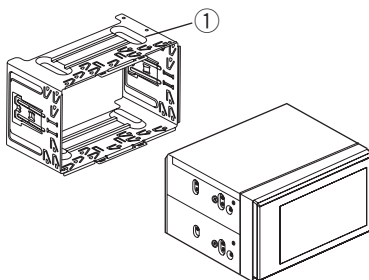


- ① Holder
(factory-supplied part)

Installation with the holder

1 Install the holder into the dashboard.


After inserting the holder into the dashboard, select and bend the tabs appropriate to the thickness of the dashboard material. (Install this unit as firmly as possible using the top and bottom tabs. To secure this unit, bend the tabs 90 degrees.)

Installation

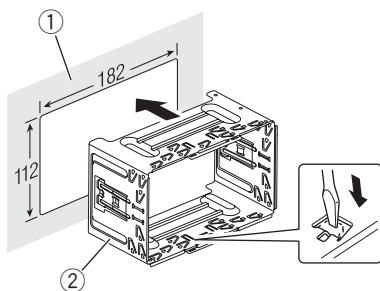

- ① Dashboard
 ② Holder
 (factory-supplied part)



2 Install this unit.

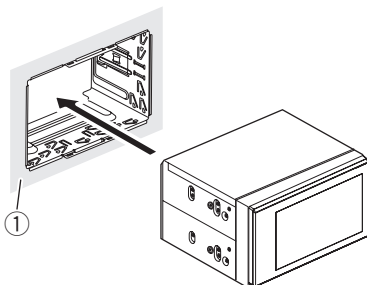

- ① Dashboard

Installation using the screw holes on the side of the unit


- Fastening the unit to the factory radio-mounting bracket.

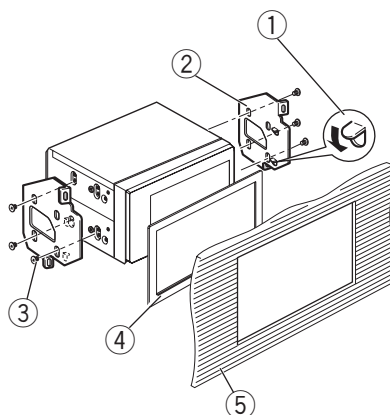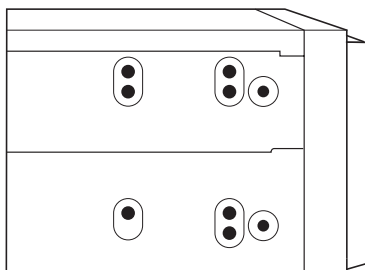

- ① If the pawl gets in the way, bend it down.
 ② Factory radio mounting bracket
 ③ Tapping screw (5 mm × 8 mm)
 ④ Frame
 In some types of vehicles, discrepancy may occur between the unit and the dashboard. If this happens, use the supplied frame to fill the gap.
 ⑤ Dashboard or console

Removing the unit


1 Remove the trim ring.

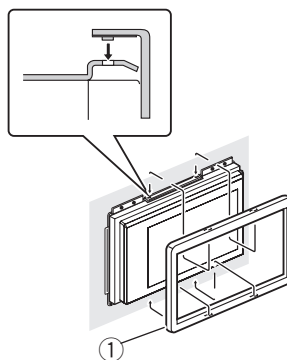

- ① Trim ring
- Releasing the front panel allows easier access to the trim ring.

2 Insert the supplied extraction keys into both sides of the unit until they click into place.

3 Pull the unit out of the dashboard.

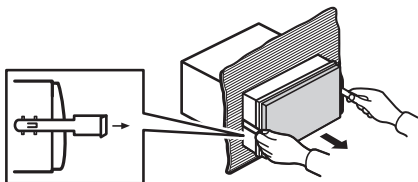

Installing the microphone (AVH-2400BT only)

⚠ CAUTION


It is extremely dangerous to allow the microphone lead to become wound around the steering column or shift lever. Be sure to install the unit in such a way that it will not obstruct driving.

Note

Install the microphone in a position and orientation that will enable it to pick up the voice of the person operating the system.

When installing the microphone on the sun visor

1 Install the microphone on the microphone clip.

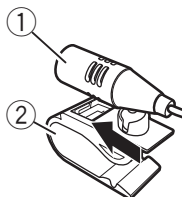


- ① Microphone
- ② Microphone clip

2 Install the microphone clip on the sun visor.

With the sun visor up, install the microphone clip. (Lowering the sun visor reduces the voice recognition rate.)

Installation

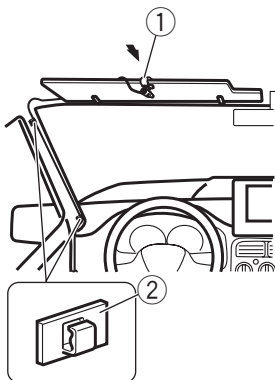


- ① Microphone clip
- ② Clamp

Use separately sold clamps to secure the lead where necessary inside the vehicle.

When installing the microphone on the steering column



1 Install the microphone on the microphone clip.

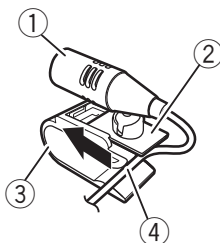

- ① Microphone
- ② Microphone base
- ③ Microphone clip
- ④ Fit the microphone lead into the groove.

Microphone can be installed without using microphone clip. In this case, detach the microphone base from the microphone clip. To detach the microphone base from the microphone clip, slide the microphone base.


2 Install the microphone clip on the rear side of the steering column.

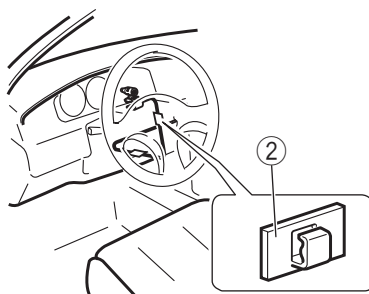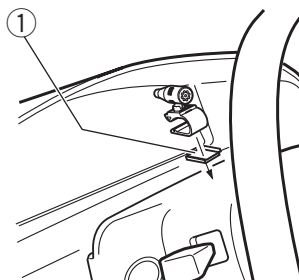

- ① Double-sided tape
- ② Clamp

Use separately sold clamps to secure the lead where necessary inside the vehicle.

Adjusting the microphone angle

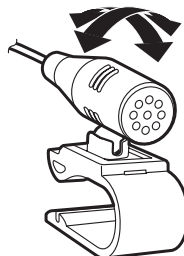


The microphone angle can be adjusted. ▣

Additional information

Troubleshooting

Common

| Symptom | Cause | Action (Reference page) |
|---|---|--|
| The power will not turn on. The unit will not operate. | Leads and connectors are incorrectly connected. | Confirm once more that all connections are correct. |
| | The fuse is blown. | Rectify the cause and then replace the fuse. Be sure to install a fuse with the same rating. |
| Operation with the remote control is not possible. The unit does not operate correctly even when the appropriate remote control buttons are pressed. | Battery power is low. | Load a new battery. |
| | Some operations are prohibited with certain discs. | Try operating with another disc. |
| Playback is not possible. | The disc is dirty. | Clean the disc. |
| | The type of disc loaded cannot be played on this unit. | Check the disc type. |
| | The disc loaded is not compatible with this video system. | Change the disc to one that is compatible with your video system. |
| There is no sound. The volume level will not rise. | Cables are not connected correctly. | Connect the cables correctly. |
| | The unit is performing still, slow motion or frame-by-frame playback. | There is no sound during still, slow motion or frame-by-frame playback. |
| There is no image displayed. | The parking brake cable is not connected. | Connect the parking brake cable, and apply the parking brake. |
| | The parking brake is not applied. | Connect the parking brake cable, and apply the parking brake. |

| Symptom | Cause | Action (Reference page) |
|---|---|---|
| The  icon is displayed, and operation is not possible. | The operation is prohibited for the disc. | This operation is not possible. |
| | The operation is not compatible with the configuration of the disc. | This operation is not possible. |
| The image displayed stops (pauses) and the unit cannot be operated. | The data could no longer be read during playback. | Stop playback once, and start playback again. |
| There is no sound. The volume level is low. | The volume level is low. | Adjust the volume level. |
| | The attenuator is on. | Turn the attenuator off. |
| The sound and video skip. | The unit is not firmly secured. | Firmly secure the unit. |
| | File size and transmission rate are above recommended rates. | Create a DivX file that is within the recommended size and transmission rate. |
| The aspect ratio is incorrect and the image is stretched. | The aspect ratio setting is incorrect for the display. | Select the appropriate setting for your display. (Page 58) |
| The motor sounds when the ignition switch is turned ON (or is turned to ACC). | The unit is confirming whether or not a disc is loaded. | This is a normal operation. |
| Nothing is displayed. The touch panel keys cannot be used. | The rear view camera is not connected. | Connect a rear view camera. |
| | Camera Polarity is at incorrect setting. | Press and hold HOME to return to the source display and then select the correct setting for Camera Polarity . (Page 64) |

Additional information

| Symptom | Cause | Action (Reference page) |
|--|---|--|
| No xxxx appears when a display is changed (No Title, for example). | There is no embedded text information. | Switch the display or play another track/file. |
| Subfolders cannot be played back. | Folder repeat play has been selected. | Select the repeat range again. |
| The repeat range changes automatically. | Another folder was selected during repeat play. | Select the repeat range again. |
| | Track search or fast forward/reverse was performed during file repeat play. | Select the repeat range again. |

DVD

| Symptom | Cause | Action (Reference page) |
|--|---|--|
| Playback is not possible. | The loaded disc has a different region number from this unit. | Replace the disc with one featuring the same region number as this unit. |
| A parental lock message is displayed and playback is not possible. | Parental lock is activated. | Turn parental lock off or change the level. (Page 58) |
| Parental lock cannot be canceled. | The code number is incorrect. | Enter the correct code number. (Page 58) |
| | You have forgotten your code number. | Touch C 10 times to cancel the code number. |
| Dialog language (and subtitle language) cannot be switched. | The DVD being played does not feature multiple language recordings. | The language cannot be switched if they are not recorded on the disc. |
| | You can only switch between items indicated in the disc menu. | Switch the language using the disc menu. |

| Symptom | Cause | Action (Reference page) |
|---|---|---|
| No subtitles are displayed. | The DVD being played does not feature subtitles. | Subtitles are not displayed if they are not recorded on the disc. |
| | You can only switch between items indicated in the disc menu. | Switch the language using the disc menu. |
| Playback is not performed with the audio language and subtitle language settings selected in Video Setup menu. | The DVD being played does not feature dialog or subtitles in the selected language. | The language cannot be switched if the selected language is not recorded on the disc. |
| | The viewing angle cannot be switched. | The DVD being played does not feature scenes shot from multiple angles. |
| | You are trying to switch to multi-angle viewing for a scene that was not recorded from multiple angles. | Switch between multiple angles when watching scenes recorded from multiple angles. |
| The image is extremely unclear/distorted and dark during playback. | Some discs feature a signal to prohibit copying. | Since this unit is compatible with the analog copy generation management system, when playing a disc that has a signal prohibiting copying, horizontal stripes or other imperfections may appear when viewed on some displays. This is not a malfunction. |

Additional information

Video CD

| Symptom | Cause | Action |
|---|---|--|
| The PBC (play-back control) menu cannot be called up. | The Video CD being played does not feature PBC. | This operation is not available for Video CDs that do not feature PBC. |
| Repeat play and track/time search are not possible. | The Video CD being played features PBC. | This operation is not available for Video CDs that feature PBC. |

iPod

| Symptom | Cause | Action |
|--------------------------------------|---|--|
| The iPod does not operate correctly. | The cables are incorrectly connected. | Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. |
| | The iPod version is old. | Update the iPod version. |
| Sound from the iPod cannot be heard. | The audio output direction may switch automatically when the Bluetooth and USB connections are used at the same time. | Use the iPod to change the audio output direction. |

Bluetooth audio/telephone

| Symptom | Cause | Action |
|---|---|--|
| The sound from the Bluetooth audio source is not played back. | There is a call in progress on a Bluetooth connected cellular phone. | The sound will be played back when the call is terminated. |
| | A Bluetooth-connected cellular phone is currently being operated. | Do not operate the cellular phone at this time. |
| | A call was made with a Bluetooth-connected cellular phone and then immediately terminated. As a result, communication between this unit and the cellular phone was not terminated properly. | Reconnect the Bluetooth connection between this unit and the cellular phone. |

Multi-channel processor

| Symptom | Cause | Action (Reference page) |
|--|--|---|
| There is no sound. The volume level will not rise. | The optical cables are not connected correctly. | Connect the cables correctly. |
| Audio output is 2-channel audio even though multi-channel audio is selected. | The digital output setting is set to Linear PCM . | Normally, set the digital output setting to Stream . (Page 60) |



Error messages

When you contact your dealer or your nearest Pioneer Service Center, be sure to note the error message.

Additional information

Tuner

| Message | Cause | Action |
|-------------------------|--|---|
| No Data Provided | This unit cannot receive artist name/song title information. | Move to the desirable location with good reception. |
| No Data | This unit cannot receive program service name information. | Move to the desirable location with good reception. |

DVD

| Message | Cause | Action |
|------------------------------|--|--|
| Different Region Disc | The disc does not have the same region number as this unit. | Replace the DVD with one bearing the correct region number. |
| Error-02-XX/FF-FF | The disc is dirty. | Clean the disc. |
| | The disc is scratched. | Replace the disc. |
| | The disc is loaded upside down. | Check that the disc is loaded correctly. |
| Unplayable Disc | There is an electrical or mechanical error. | Turn your vehicle's ACC switch off and on. |
| | This type of disc cannot be played on this unit. | Replace the disc with one that can be played on this unit. |
| Protect | The inserted disc does not contain any playable files. | Replace the disc. |
| | All the files on the inserted disc are embedded with DRM. | Replace the disc. |
| Skipped | The inserted disc contains DRM protected files. | Play an audio file not embedded with Windows Media DRM 9/10. |
| TEMP | The temperature of the unit is outside the normal operating range. | Wait until the unit returns to a temperature within the normal operating limits. |

| Message | Cause | Action |
|---|--|---|
| Rental expired. | The inserted disc contains expired DivX VOD content. | Select a file that can be played. |
| Video resolution not supported | The inserted disc contains a high definition DivX/MPEG-1/MPEG-2/MPEG-4 file. | Select a file that can be played. |
| It is not possible to write it in the flash. | This unit's flash memory used as the temporary storage area is full. | Select a file that can be played. |
| Your device is not authorized to play this DivX protected video. | This unit's DivX registration code has not been authorized by the DivX VOD contents provider. | Register this unit to the DivX VOD contents provider. |
| Unplayable File | This type of file cannot be played on this unit. | Select a file that can be played. |
| Format Read | Sometimes there is a delay between the start of playback and when you start to hear any sound. | Wait until the message disappears and you hear sound. |
| Video frame rate not supported | DivX file's frame rate is more than 30 fps. | Select a file that can be played. |
| Audio Format not supported | This type of file is not supported on this unit. | Select a file that can be played. |

Additional information

External storage device (USB)

| Message | Cause | Action |
|-------------------------|--|---|
| Unplayable File | This type of file cannot be played on this unit. | Select a file that can be played. |
| | There are no songs. | Transfer the audio files to the USB portable audio player/USB memory and connect. |
| | Security for the connected USB memory is enabled. | Follow the USB memory instructions to disable security. |
| Format Read | Sometimes there is a delay between the start of playback and when you start to hear any sound. | Wait until the message disappears and you hear sound. |
| Skipped | The connected USB portable audio player/USB memory contains WMA files that are protected by Windows Media™ DRM 9/10. | Play an audio file not embedded with Windows Media DRM 9/10. |
| Protect | All the files on the connected USB portable audio player/USB memory are protected by Windows Media DRM 9/10. | Transfer audio files not protected by Windows Media DRM 9/10 to the USB portable audio player/USB memory and connect. |
| Incompatible USB | The USB device connected to is not supported by this unit. | Connect a USB portable audio player or USB memory that is USB Mass Storage Class compliant. |
| | The USB device is not formatted with FAT16 or FAT32. | The connected USB device should be formatted with FAT16 or FAT32. |

| Message | Cause | Action |
|---|--|--|
| Check USB | The USB connector or USB cable has short-circuited. | Check that the USB connector or USB cable is not caught in something or damaged. |
| | The connected USB portable audio player/USB memory consumes more than maximum allowable current. | Disconnect the USB portable audio player/USB memory and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect a compliant USB portable audio player/USB memory. |
| Error-02-9X/-DX | Communication failed. | Perform one of the following operations. –Turn the ignition switch OFF and back ON. –Disconnect the USB portable audio player/USB memory. –Change to a different source. Then, return to the USB portable audio player/USB memory. |
| Rental expired. | The inserted external storage device contains expired DivX VOD content. | Select a file that can be played. |
| Video resolution not supported | The inserted external storage device contains a high definition DivX/MPEG-1/MPEG-2/MPEG-4 file. | Select a file that can be played. |
| It is not possible to write it in the flash. | This unit's flash memory used as the temporary storage area is full. | Select a file that can be played. |

Additional information

| Message | Cause | Action |
|---|--|---|
| Your device is not authorized to play this DivX protected video. | This unit's DivX registration code has not been authorized by the DivX VOD contents provider. | Register this unit to the DivX VOD contents provider. |
| Format Read | Sometimes there is a delay between the start of playback and when you start to hear any sound. | Wait until the message disappears and you hear sound. |
| Video frame rate not supported | DivX file's frame rate is more than 30 fps. | Select a file that can be played. |
| Audio Format not supported | This type of file is not supported on this unit. | Select a file that can be played. |

iPod

| Message | Cause | Action |
|----------------------------|--|--|
| Format Read | Sometimes there is a delay between the start of playback and when you start to hear any sound. | Wait until the message disappears and you hear sound. |
| Error-02-6X/-9X/-DX | Communication failed. | Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. |
| | iPod failure. | Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it. |
| Error-02-67 | The iPod firmware version is old. | Update the iPod version. |
| Stop | There are no songs. | Transfer songs to the iPod. |
| | There are no songs in the current list. | Select a list that contains songs. |

| Message | Cause | Action |
|------------------|-------------------|-----------------------------|
| Not Found | No related songs. | Transfer songs to the iPod. |

Bluetooth

| Message | Cause | Action |
|-----------------|---|---|
| Error-10 | The power failed for the Bluetooth module of this unit. | Turn the ignition switch OFF and then to ACC or ON. If the error message is still displayed after performing the above action, please contact your dealer or an authorized Pioneer Service Station. |

Understanding auto EQ error messages

When correct measurement of the car's interior acoustic characteristics is not possible using auto EQ, an error message may appear on the display. In such cases, refer to the table below to see what the problem is and how it may be corrected. After checking, try again.

| Message | Cause | Action |
|--|--|--|
| Error. Please check MIC. | The microphone is not connected. | Plug the optional microphone securely into the jack. |
| Error. Please check xxxx speaker. | The microphone cannot pick up the measuring tone of a speaker. | <ul style="list-style-type: none"> • Confirm that the speakers are connected correctly. • Correct the input level setting of the power amp connected to the speakers. • Plug the microphone securely into the jack. |

Additional information

| Message | Cause | Action |
|-------------------------------------|--|---|
| Error. Please check noise. | The surrounding noise level is too high. | <ul style="list-style-type: none"> • Stop your car in a place that is quiet, and switch off the engine, air conditioner and heater. • Set the microphone correctly. |
| Error. Please check battery. | Power is not being supplied from the battery to this unit. | <ul style="list-style-type: none"> • Connect the battery correctly. • Check the battery voltage. |



Understanding messages

| Messages | Translation |
|-----------------------------------|---|
| Screen image may appear reversed. | Pioneer recommends the use of a camera which outputs mirror-reversed images. Otherwise, the screen image will appear reversed. |



Indicator list



Area 1



Indicates that the selected frequency is being broadcast in stereo.



Indicates that a Bluetooth telephone is connected.

Dolby D

Indicates that the digital format is Dolby Digital.

MPEG-A

Indicates that the digital format is MPEG Audio.

LPCM

Indicates that the digital format is Linear PCM.

48k16

Indicates the sampling frequency.

DTS

Indicates that the digital format is DTS.

1 ch

1+1ch

2 ch

Mch

Indicates the audio channel.

PBCOn

Indicates that a disc with PBC On is being played.

Additional information



- Indicates that a cellular phone is connected.
- Indicates that an incoming call has been received and has not been checked yet.
- Not displayed for calls made when your cellular phone is disconnected from this unit.

Indicates the battery strength of the cellular phone.



- The level shown on the indicator may differ from the actual battery strength.
- If the battery strength is not available, nothing is displayed in the battery strength indicator area.



Indicates the signal strength of the cellular phone.

AutoEQ

Indicates that Auto EQ is on.



Shows while searching a song/video in alphabet search mode.



Shows which audio language has been selected.



Shows which subtitle language has been selected.



Shows which viewing angle has been selected.



Shows which audio output has been selected.

Area 2



Show the album title when receiving the tag information.
Shows the album title of the song currently being played for MP3/WMA/AAC files.



Shows the song title when receiving the tag information.
Shows the song title of the song currently being played for MP3/WMA/AAC files.



Shows the comment currently being played.



Shows the station name currently tuned in to.



Shows the artist name when receiving the tag information.
Shows the artist name of the artist currently being played for MP3/WMA/AAC files.



Shows cellular phone information.



Shows general phone information.



Shows home phone information.



Shows office phone information.



Shows other phone information.



Shows the category name.



Shows the folder name of the folder containing the MP3/WMA/AAC file currently being played.



Shows the file name of the MP3/WMA/AAC file currently being played.



Shows the preset number of the station currently being tuned in to.



Shows the channel currently being tuned in to.

Area 3



Shows the title number currently being played.



Shows the chapter number currently being played.

Additional information



Shows the replay time currently being played.



Shows the genre of the track/song currently being played.

DEMO

Indicates that the feature demo is on.



Handling guidelines

Discs and player

Use only discs featuring any of following logos.



Use 12-cm discs. Do not use 8-cm discs or an adapter for 8-cm discs.

Use only conventional, fully circular discs. Do not use shaped discs.



Do not insert anything other than a DVD-R/RW or CD-R/RW into the disc loading slot.

Do not use cracked, chipped, warped, or otherwise damaged discs as they may damage the player.

Unfinalized CD-R/RW discs cannot be played back.

Do not touch the recorded surface of the discs.

Store discs in their cases when not in use.

Do not attach labels, write on or apply chemicals to the surface of the discs.

To clean a disc, wipe the disc with a soft cloth outward from the center.

Condensation may temporarily impair the player's performance. Let it rest for about one hour to adjust to a warmer temperature. Also, wipe any damp discs off with a soft cloth.

Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions, and so on.

Road shocks may interrupt disc playback.

Read the precautions for discs before using them.

Additional information

Certain functions may not be available for some DVD video discs.

It may not be possible to play back some DVD video discs.

It is not possible to play back DVD-RAM discs.

This unit is not compatible with discs recorded in AVCHD (Advanced Video Codec High Definition) format. Do not insert AVCHD discs as you may not be able to eject the disc.

When using discs that can be printed on label surfaces, check the instructions and the warnings of the discs. Depending on the discs, inserting and ejecting may not be possible. Using such discs may result in damage to this equipment.

Do not attach commercially available labels or other materials to the discs.

- The discs may warp making the disc unplayable.
- The labels may come off during playback and prevent ejection of the discs, which may result in damage to the equipment.

External storage device (USB)

Depending on the external storage device (USB), the following problems may occur.

- Operations may vary.
- The storage device may not be recognized.
- Files may not be played back properly.

USB storage device

Connections via USB hub are not supported.

Do not connect anything other than a USB storage device.

Firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal.

Depending on the USB storage device, the device may cause noise to occur in the radio.

Copyright protected files that are stored in the USB devices cannot be played back.

You cannot connect a USB portable audio player/USB memory to this unit via USB hub.

Partitioned USB memory is not compatible with this unit.

Depending on the kind of USB portable audio player/USB memory you use, the device may not be recognized or audio files may not be played back properly.

Do not leave the USB portable audio player/USB memory in direct sunlight for extended amounts of time. Doing so may cause the device to malfunction from the extreme rise in temperature.

iPod

To ensure proper operation, connect the dock connector cable from the iPod directly to this unit.

Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal.

About iPod settings

- When an iPod is connected, this unit changes the EQ (equalizer) setting of the iPod to off in order to optimize the acoustics. When you disconnect the iPod, the EQ returns to the original setting.
- You cannot set Repeat to off on the iPod when using this unit. Repeat is automatically changed to All when the iPod is connected to this unit.

Incompatible text saved on the iPod will not be displayed by the unit.

DVD-R/RW discs

Unfinalized DVD-R/RW discs which have been recorded in the Video format (video mode) cannot be played back.

Playback of DVD-R/RW discs may not be possible, due to disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of this unit.

Depending on the application settings and the environment, playback of discs recorded on a personal computer may not be possible. (For details, contact the manufacturer of the application.)

CD-R/RW discs

When CD-R/RW discs are used, playback is possible only for discs which have been finalized.

Playback of CD-R/RW discs recorded on a music CD recorder or a personal computer may not be possible due to disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc., on the lens of this unit.

Additional information

Depending on the application settings and the environment, playback of discs recorded on a personal computer may not be possible. (For details, contact the manufacturer of the application.)

Playback of CD-R/RW discs may become impossible in case of direct exposure to sunlight, high temperatures, or the storage conditions in the vehicle.

Titles and other text information recorded on a CD-R/RW disc may not be displayed by this unit (in the case of audio data (CD-DA)).

DualDiscs

DualDiscs are two-sided discs that have a recordable CD for audio on one side and a recordable DVD for video on the other.

Playback of the DVD side is possible with this unit. However, since the CD side of DualDiscs is not physically compatible with the general CD standard, it may not be possible to play the CD side with this unit.

Frequent loading and ejecting of a DualDisc may result in scratches on the disc. Serious scratches can lead to playback problems on this unit. In some cases, a DualDisc may become stuck in the disc loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this unit. Please refer to the information from the disc manufacturer for more detailed information about DualDiscs.

JPEG picture files

JPEG is short for Joint Photographic Experts Group and refers to a still image compression technology standard.

Files are compatible with Baseline JPEG and EXIF 2.1 still images up to a resolution of 8 192 × 7 680. (EXIF format is used most commonly with digital still cameras.)

Playback of EXIF format files that were processed by a personal computer may not be possible.

There is no progressive JPEG compatibility.

DivX video files

Depending on the composition of the file information, such as the number of audio streams or file size, there may be a slight delay when playing back discs.

Some special operations may be prohibited due to the composition of the DivX files.

Only DivX files downloaded from a DivX partner site are guaranteed for proper operation. Unauthorized DivX files may not operate properly.

DRM rental files cannot be operated until playback is started.

Recommended file size: 2 GB or less with a transmission rate of 2 Mbps or less.


The ID code of this unit must be registered to a DivX VOD provider in order to playback DivX VOD files. For information on ID codes, refer to *Displaying the DivX® VOD registration code* on page 60.

For more details about DivX, visit the following site:
<http://www.divx.com/>

MPEG-1/MPEG-2/MPEG-4 video files

Elapsed playback time may not be displayed correctly.

Important

- When naming a JPEG image file, add the corresponding file name extension (.jpg, .jpeg, .jpe or .jfif).
- This unit plays back files with these file name extensions (.jpg, .jpeg, .jpe or .jfif) as a JPEG image file. To prevent malfunctions, do not use these extensions for files other than JPEG image files. 

Compressed file compatibility (disc, USB)

WMA

File extension: .wma

Bit rate: 5 kbps to 320 kbps (CBR), VBR

Sampling frequency: 8 kHz to 48 kHz

Windows Media Audio Professional, Lossless, Voice/DRM Stream/Stream with video: Not compatible

MP3

File extension: .mp3

Bit rate: 8 kbps to 320 kbps (CBR), VBR

Additional information

Sampling frequency: 8 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)

Compatible ID3 tag version: 1.0, 1.1, 2.2, 2.3 (ID3 tag Version 2.x is given priority over Version 1.x.)

M3u playlist: Not compatible

MP3i (MP3 interactive), mp3 PRO: Not compatible

AAC

Compatible format: AAC encoded by iTunes

File extension: .m4a

Sampling frequency: 8 kHz to 44.1 kHz

Bit rate: 8 kbps to 320 kbps

Apple Lossless: Not compatible

AAC file bought from the iTunes Store (.m4p file extension): Not compatible

DivX compatibility

Compatible format: DivX video format implemented in relation to DivX standards

File extensions: .avi or .divx

DivX Ultra format: Not compatible

DivX HD format: Not compatible

DivX files without video data: Not compatible

DivX plus: Not compatible

Compatible audio codec: MP2, MP3, Dolby Digital

LPCM: Not compatible

Bit rate: 8 kbps to 320 kbps (CBR), VBR

Sampling frequency: 8 kHz to 48 kHz

Compatible external subtitle file extension: .srt

MPEG-1/MPEG-2/MPEG-4 video

File extensions: .wpg or .mpeg (MPEG-1/MPEG-2), .avi (MPEG-4)

Compatible audio codec: MP2 (MPEG-1/MPEG-2), MP2, MP3, Dolby Digital (MPEG-4)

H.264 (MPEG-4AVC): Not compatible

LPCM: Not compatible

Bit rate: 8 kbps to 320 kbps (CBR), VBR

Sampling frequency: 8 kHz to 48 kHz

Supplemental information

Some characters in a file name (including the file extension) or a folder name may not be displayed.

This unit may not operate correctly depending on the application used to encode WMA files.

There may be a slight delay at the start of playback of audio files embedded with image data or audio files stored on a USB storage device that has numerous folder hierarchies.

Disc

Playable folders: up to 700

Playable files: up to 999 for CD-R/RW

Playable files: up to 3 500 for DVD-R/RW

File system: ISO 9660 Level 1 and 2, Romeo, Joliet, UDF 1.02 (DVD-R/RW)

Multi-session playback: Compatible

Packet write data transfer: Not compatible

Regardless of the length of blank sections between the songs from the original recording, compressed audio discs play with a short pause between songs.

External storage device (USB)

Playable folders: up to 6 000 (up to 700 for DivX/MPEG-1/MPEG-2/MPEG-4)

Playable files: up to 65 535, up to 1 000 for one folder

Playback of copyright-protected files: Not compatible


Partitioned external storage device (USB): Only the first playable partition can be played.

There is no compatibility for Multi Media Cards (MMC).

CAUTION

- Pioneer accepts no responsibility for data lost on the USB memory/USB portable audio player even if that data is lost while using this unit.

Additional information

- Pioneer cannot guarantee compatibility with all USB mass storage devices and assumes no responsibility for any loss of data on media players, smart phones, or other devices while using this product.
- Do not leave the discs/external storage device (USB) or iPod in places with high temperatures. 

iPod compatibility

This unit supports only the following iPod models. Supported iPod software versions are shown below. Older versions may not be supported.

Made for

- iPod touch 4th generation (software version 4.3.1)
- iPod touch 3rd generation (software version 4.0)
- iPod touch 2nd generation (software version 4.0)
- iPod touch 1st generation (software version 3.1.3)
- iPod classic 160GB (software version 2.0.4)
- iPod classic 120GB (software version 2.0.1)
- iPod classic (software version 1.1.2)
- iPod with video (software version 1.3)
- iPod nano 6th generation (software version 1.0)
- iPod nano 5th generation (software version 1.0.2)
- iPod nano 4th generation (software version 1.0.4)
- iPod nano 3rd generation (software version 1.1.3)
- iPod nano 2nd generation (software version 1.1.3)
- iPod nano 1st generation (software version 1.3.1)
- iPhone 4 (software version 4.1)
- iPhone 3GS (software version 4.1)
- iPhone 3G (software version 4.1)
- iPhone (software version 3.1.3)

Depending on the generation or version of the iPod, some functions may not be available.

Operations may vary depending on the software version of iPod.

When using an iPod, an iPod Dock Connector to USB Cable is required.


When you use Pioneer CD-IU51V/CD-IU201V/CD-IU201V interface cable, consult your dealer for details.

When you use Pioneer CD-IU51V/CD-IU201V interface cable, consult your dealer for details.

About the file/format compatibility, refer to the iPod manuals.

Audiobook, Podcast: Compatible


CAUTION

Pioneer accepts no responsibility for data lost on the iPod, even if that data is lost while this unit is used. 

Sequence of audio files

The user cannot assign folder numbers and specify playback sequences with this unit.

Example of a hierarchy

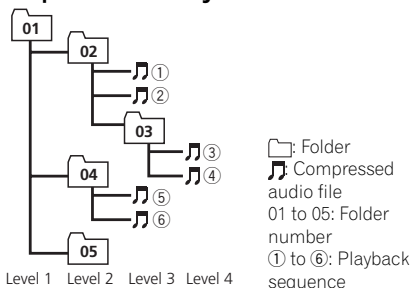

Disc

Folder selection sequence or other operation may differ depending on the encoding or writing software.


External storage device (USB)

The playback sequence is the same as the recorded sequence in the external storage device (USB).

To specify the playback sequence, the following method is recommended.

- 1 Create a file name that includes numbers that specify the playback sequence (e.g., 001xxx.mp3 and 099yyy.mp3).
- 2 Put those files into a folder.
- 3 Save the folder that contains the files to the external storage device (USB).

However, depending on the system environment, you may not be able to specify the playback sequence.

For USB portable audio players, the sequence is different and depends on the player. 

Additional information

Using the display correctly

CAUTION

- If liquid or foreign matter should get inside this unit, turn off the power immediately and consult your dealer or the nearest authorized PIONEER Service Station. Do not use the unit in this condition because doing so may result in fire, electric shock, or other failure.
- If you notice smoke, a strange noise or smell, or any other abnormal signs from the display, turn off the power immediately and consult your dealer or the nearest authorized PIONEER Service Station. Using this unit in this condition may result in permanent damage to the system.
- Do not disassemble or modify this unit, as there are high-voltage components inside which may cause electric shock. Be sure to consult your dealer or the nearest authorized PIONEER Service Station for internal inspection, adjustments, or repairs.

Handling the display

- Never touch the screen with anything besides your finger when operating the touch panel function. The screen can scratch easily.
- When the display is subjected to direct sunlight for a long period of time, it will become very hot resulting in possible damage to the LCD screen. You should avoid exposing the display unit to direct sunlight as much as possible.
- The display should be used within the temperature range of -10°C to $+60^{\circ}\text{C}$. At temperatures higher or lower than this operating temperature range, the display may not operate normally.
- The LCD screen is exposed in order to increase its visibility within the vehicle. Do not press it strongly on it as this may damage it.
- Do not push the LCD screen forcefully as this may scratch it.


Liquid crystal display (LCD) screen

- Heat from the heater may damage the LCD screen, and cool air from the cooler may cause moisture to form inside the display resulting in possible damage.
- Small black dots or white dots (bright dots) may appear on the LCD screen. These are due to the characteristics of the LCD screen and do not indicate a malfunction.
- When using a cellular phone, keep the antenna away from the display to prevent disruption of the video image by the appearance of spots, colored stripes, etc.

LED (light-emitting diode) backlight

- At low temperatures, using the LED backlight may increase image lag and degrade the image quality due to the characteristics of the LCD screen. Image quality will improve with an increase in temperature.
- To protect the LED backlight, the display will darken in the following environments:
 - In the direct sunlight
 - Near the heater vent
- The product lifetime of the LED backlight is more than 10 000 hours. However, it may decrease if used in high temperatures.
- If the LED backlight reaches the end of its product lifetime, the screen will become dark and the image will no longer be projected. In such cases, please consult your dealer or the nearest authorized PIONEER Service Station.


Keeping the display in good condition

- When removing dust from the screen or cleaning the display, first turn the system power off, then wipe with a soft dry cloth.
- When wiping the screen, take care not to scratch the surface. Do not use harsh or abrasive chemical cleaners. 

Additional information

Bluetooth profiles

In order to use Bluetooth wireless technology, devices must be able to interpret certain profiles. This unit is compatible with the following profiles.

- GAP (Generic Access Profile)
- SDP (Service Discovery Protocol)
- OPP (Object Push Profile)
- HFP (Hands Free Profile)
- HSP (Head Set Profile)
- PBAP (Phone Book Access Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (Audio/Video Remote Control Profile) 1.3 

Copyright and trademark

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Bluetooth

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by PIONEER CORPORATION is under license. Other trademarks and trade names are those of their respective owners.

- Bluetooth is a short-range wireless radio connectivity technology that is developed as a cable replacement for mobile phones, handheld PCs and other devices. Bluetooth operates in 2.4 GHz frequency range and transmits voice and data at speeds up to 1 megabit per second. Bluetooth was launched by a special interest group (SIG) that comprises of Ericsson Inc., Intel Corp., Nokia Corp., Toshiba and IBM in 1998, and it is currently developed by nearly 2000 companies worldwide.

DVD video

DVD is a trademark of DVD Format/Logo Licensing Corporation.

iTunes

Apple and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.

MP3

Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>.

WMA

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

iPod & iPhone

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

Additional information

Dolby Pro Logic II

Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic”, and the double-D symbol are trademarks of Dolby Laboratories.

DivX

DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in *Menu operations*. Go to vod.divx.com for more information on how to complete your registration.

Additional information

Language code chart for DVD

Language (code), input code

| | | | |
|-----------------------------------|-----------------------------------|------------------------------------|-----------------------------------|
| Japanese (ja), 1001 | Dzongkha (dz), 0426 | Kurdish (ku), 1121 | Kinyarwanda (rw), 1823 |
| English (en), 0514 | Ewe (ee), 0505 | Komi (kv), 1122 | Sanskrit (sa), 1901 |
| French (fr), 0618 | Esperanto (eo), 0515 | Cornish (kw), 1123 | Sardinian (sc), 1903 |
| Spanish (es), 0519 | Estonian (et), 0520 | Kirghiz, Kyrgyz (ky), 1125 | Sindhi (sd), 1904 |
| German (de), 0405 | Basque (eu), 0521 | Latin (la), 1201 | Northern Sami (se), 1905 |
| Italian (it), 0920 | Persian (fa), 0601 | Luxembourghish (lb), 1202 | Sangho (sg), 1907 |
| Chinese (zh), 2608 | Fulah (ff), 0606 | Ganda (lg), 1207 | Sinhala (si), 1909 |
| Dutch, Flemish (nl), 1412 | Finnish (fi), 0609 | Limburgan (li), 1209 | Slovak (sk), 1911 |
| Portuguese (pt), 1620 | Fijian (fj), 0610 | Lingala (ln), 1214 | Slovenian (sl), 1912 |
| Swedish (sv), 1922 | Faroese (fo), 0615 | Lao (lo), 1215 | Samoan (sm), 1913 |
| Russian (ru), 1821 | Western Frisian (fy), 0625 | Lithuanian (lt), 1220 | Shona (sn), 1914 |
| Korean (ko), 1115 | Irish (ga), 0701 | Luba-Katanga (lu), 1221 | Somali (so), 1915 |
| Greek (el), 0512 | Gaelic (gd), 0704 | Latvian (lv), 1222 | Albanian (sq), 1917 |
| Afar (aa), 0101 | Galician (gl), 0712 | Malagasy (mg), 1307 | Serbian (sr), 1918 |
| Abkhazian (ab), 0102 | Guarani (gn), 0714 | Marshallese (mh), 1308 | Swati (ss), 1919 |
| Avestan (ae), 0105 | Gujarati (gu), 0721 | Maori (mi), 1309 | Sotho, Southern (st), 1920 |
| Afrikaans (af), 0106 | Manx (gv), 0722 | Macedonian (mk), 1311 | Sundanese (su), 1921 |
| Akan (ak), 0111 | Hausa (ha), 0801 | Malayalam (ml), 1312 | Swahili (sw), 1923 |
| Amharic (am), 0113 | Hebrew (he), 0805 | Mongolian (mn), 1314 | Tamil (ta), 2001 |
| Aragonese (an), 0114 | Hindi (hi), 0809 | Marathi (mr), 1318 | Telugu (te), 2005 |
| Arabic (ar), 0118 | Hiri Motu (ho), 0815 | Malay (ms), 1319 | Tajik (tg), 2007 |
| Assamese (as), 0119 | Croatian (hr), 0818 | Maltese (mt), 1320 | Thai (th), 2008 |
| Avaric (av), 0122 | Haitian (ht), 0820 | Burmese (my), 1325 | Tigrinya (ti), 2009 |
| Aymara (ay), 0125 | Hungarian (hu), 0821 | Nauru (na), 1401 | Turkmen (tk), 2011 |
| Azerbaijani (az), 0126 | Armenian (hy), 0825 | Bokmal (nb), 1402 | Tagalog (tl), 2012 |
| Bashkir (ba), 0201 | Herero (hz), 0826 | Ndebele, North (nd), 1404 | Tswana (tn), 2014 |
| Belarusian (be), 0205 | Interlingua (ia), 0901 | Nepali (ne), 1405 | Tonga (to), 2015 |
| Bulgarian (bg), 0207 | Indonesian (id), 0904 | Ndonga (ng), 1407 | Turkish (tr), 2018 |
| Bihari (bh), 0208 | Interlingue (ie), 0905 | Nynorsk (nn), 1414 | Tsonga (ts), 2019 |
| Bislama (bi), 0209 | Igbo (ig), 0907 | Norwegian (no), 1415 | Tatar (tt), 2020 |
| Bambara (bm), 0213 | Sichuan Yi (ii), 0909 | Ndebele, South (nr), 1418 | Twi (tw), 2023 |
| Bengali (bn), 0214 | Inupiaq (ik), 0911 | Navajo, Navaho (nv), 1422 | Tahitian (ty), 2025 |
| Tibetan (bo), 0215 | Ido (io), 0915 | Chichewa (ny), 1425 | Uighur, Uygghur (ug), 2107 |
| Breton (br), 0218 | Icelandic (is), 0919 | Occitan (oc), 1503 | Ukrainian (uk), 2111 |
| Bosnian (bs), 0219 | Inuktitut (iu), 0921 | Ojibwa (oj), 1510 | Urdu (ur), 2118 |
| Catalan (ca), 0301 | Javanese (jv), 1022 | Oromo (om), 1513 | Uzbek (uz), 2126 |
| Chechen (ce), 0305 | Georgian (ka), 1101 | Oriya (or), 1518 | Venda (ve), 2205 |
| Chamorro (ch), 0308 | Kongo (kg), 1107 | Ossetian (os), 1519 | Vietnamese (vi), 2209 |
| Corsican (co), 0315 | Kikuyu, Gikuyu (ki), 1109 | Panjabi, Punjabi (pa), 1601 | Volapük (vo), 2215 |
| Cree (cr), 0318 | Kuanyama (kj), 1110 | Pali (pi), 1609 | Walloon (wa), 2301 |
| Czech (cs), 0319 | Kazakh (kk), 1111 | Polish (pl), 1612 | Wolof (wo), 2315 |
| Church Slavonic (cu), 0321 | Kalaallisut (kl), 1112 | Pashto, Pushto (ps), 1619 | Xhosa (xh), 2408 |
| Chuvash (cv), 0322 | Central Khmer (km), 1113 | Quechua (qu), 1721 | Yiddish (yi), 2509 |
| Welsh (cy), 0325 | Kannada (kn), 1114 | Romansh (rm), 1813 | Yoruba (yo), 2515 |
| Danish (da), 0401 | Kanuri (kr), 1118 | Rundi (rn), 1814 | Zhuang, Chuang (za), 2601 |
| Divehi (dv), 0422 | Kashmiri (ks), 1119 | Romanian (ro), 1815 | Zulu (zu), 2621 |



Additional information

Specifications

General

| | |
|-----------------------------------|--|
| Rated power source | 14.4 V DC (allowable voltage range: 10.8 V to 15.1 V DC) |
| Grounding system | Negative type |
| Maximum current consumption | 10.0 A |
| Dimensions (W × H × D): DIN | |
| Chassis | 178 mm × 100 mm × 157 mm |
| Nose | 188 mm × 118 mm × 26 mm |
| (AVH-P3400DVD) | |
| Nose | 188 mm × 118 mm × 17 mm |
| (AVH-2400BT/AVH-1400DVD) | |
| D | |
| Chassis | 178 mm × 100 mm × 165 mm |
| Nose | 171 mm × 97 mm × 18 mm (AVH-P3400DVD) |
| Nose | 171 mm × 97 mm × 9 mm (AVH-2400BT/AVH-1400DVD) |
| Weight | 2.0 kg (AVH-P3400DVD) |
| Weight | 1.7 kg (AVH-2400BT/AVH-1400DVD) |

Display

| | |
|--|--|
| Screen size/aspect ratio | 6.95 inch wide/16:9 (effective display area: 156.4 mm × 81.7 mm) |
| (AVH-P3400DVD) | |
| Screen size/aspect ratio | 5.8 inch wide/16:9 (effective display area: 128.4 mm × 70.9 mm) |
| (AVH-2400BT/AVH-1400DVD) | |
| Pixels | 345 600 (1 440 × 240) |
| Display method | TFT active matrix, driving type |
| Color system | NTSC/PAL/PAL-M/PAL-N/ SECAM compatible |
| Durable temperature range (power off) | -20 °C to +80 °C |

Audio

| | |
|----------------------------|--|
| Maximum power output | 50 W × 4 70 W × 1/2 Ω (for subwoofer) |
|----------------------------|--|

| | |
|---------------------------------------|---|
| Continuous power output | 22 W × 4 (50 Hz to 15 000 Hz, 5% THD, 4 Ω load, both channels driven) |
| Load impedance | 4 Ω (4 Ω to 8 Ω (2 Ω for 1 ch) allowable) |
| Preout maximum output level | 4.0 V (AVH-P3400DVD) |
| Preout maximum output level | 2.0 V (AVH-2400BT/AVH-1400DVD) |
| Equalizer (8-Band Graphic Equalizer): | |
| Frequency | 40 Hz/80 Hz/200 Hz/400 Hz/ 1 kHz/2.5 kHz/8 kHz/10 kHz |
| Gain | ±12 dB |
| HPF: | |
| Frequency | 50 Hz/63 Hz/80 Hz/100 Hz/ 125 Hz |
| Slope | -12 dB/oct |
| Subwoofer (mono): | |
| Frequency | 50 Hz/63 Hz/80 Hz/100 Hz/ 125 Hz |
| Slope | -18 dB/oct |
| Gain | +6 dB to -24 dB |
| Phase | Normal/Reverse |
| Bass boost: | |
| Gain | +12 dB to 0 dB |

DVD Player

| | |
|-----------------------------|--|
| System | DVD video, Video CD, CD, WMA, MP3, AAC, DivX, JPEG, MPEG system |
| Usable discs | DVD video, Video CD, CD, CD-R/RW, DVD-R/RW/R DL |
| Region number | 5 |
| Frequency response | 5 Hz to 44 000 Hz (with DVD, at sampling frequency 96 kHz) |
| Signal-to-noise ratio | 96 dB (1 kHz) (IEC-A net- work) (RCA level) |
| Output level: | |
| Video | 1.0 Vp-p/75 Ω (±0.2 V) |
| Number of channels | 2 (stereo) |
| MP3 decoding format | MPEG-1 & 2 Audio Layer 3 |
| WMA decoding format | Ver. 7, 7.1, 8, 9, 10, 11, 12 (2 ch audio) (Windows Media Player) |
| AAC decoding format | MPEG-4 AAC (iTunes en- coded only) (.m4a) (Ver. 9.0.3 and earlier) |
| DivX decoding format | Home Theater Ver. 3, 4, 5.2, 6 (.avi, .divx) |

Additional information

MPEG video decoding format
 MPEG1, MPEG2, MPEG4

USB

USB standard specification
 USB 1.1, USB 2.0 full speed

Maximum current supply 1.0 A

USB Class MSC (Mass Storage Class)

File system FAT16, FAT32

MP3 decoding format MPEG-1 & 2 Audio Layer 3

WMA decoding format Ver. 7, 7.1, 8, 9, 10, 11, 12
 (2 ch audio)
 (Windows Media Player)

AAC decoding format MPEG-4 AAC (iTunes en-
 coded only)
 (Ver. 9.0.3 and earlier)

DivX decoding format Home Theater Ver. 3, 4, 5.2,
 6 (.avi, .divx)

MPEG video decoding format
 MPEG1, MPEG2, MPEG4

FM tuner

Frequency range 87.5 MHz to 108.0 MHz

Usable sensitivity 9 dBf ($0.8\mu\text{V}/75\Omega$ mono,
 S/N: 30 dB)

Signal-to-noise ratio 72 dB (IEC-A network)

MW tuner

Frequency range 531 kHz to 1 602 kHz (9 kHz)

Usable sensitivity $25\mu\text{V}$ (S/N: 20 dB)

Signal-to-noise ratio 62 dB (IEC-A network)

LW tuner

Frequency range 153 kHz to 281 kHz

Usable sensitivity $28\mu\text{V}$ (S/N: 20 dB)

Signal-to-noise ratio 62 dB (IEC-A network)

Bluetooth

(AVH-2400BT)

 
Version Bluetooth 3.0 certified

 
Output power +4 dBm Maximum
 (Power class 2)

 


Note

Specifications and the design are subject to mod-
 ifications without notice.

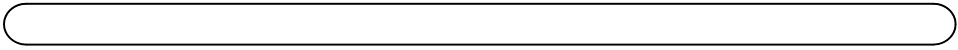

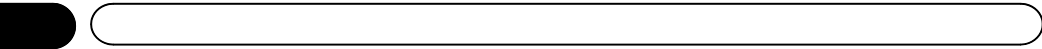

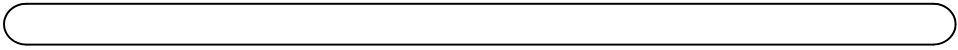

<http://www.pioneer.eu>

Visit **www.pioneer.eu** to register your product.

Посетите **www.pioneer-rus.ru** для регистрации приобретенного Вами изделия.

PIONEER CORPORATION

1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,
Kanagawa 212-0031, JAPAN

PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.
TEL: (800) 421-1404

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium/Belgique
TEL: (0) 3/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

253 Alexandra Road, #04-01, Singapore 159936
TEL: 65-6472-7555

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

5 Arco Lane, Heatherton, Victoria, 3202 Australia
TEL: (03) 9586-6300

PIONEER ELECTRONICS OF CANADA, INC.

340 Ferrier Street, Unit 2, Markham, Ontario L3R 2Z5, Canada
TEL: 1-877-283-5901
TEL: 905-479-4411

PIONEER ELECTRONICS DE MEXICO, S.A. de C.V.

Blvd.Manuel Avila Camacho 138 10 piso
Col.Lomas de Chapultepec, Mexico, D.F. 11000
TEL: 55-9178-4270

先鋒股份有限公司

台北市內湖區瑞光路407號8樓
電話：(02) 2657-3588

先鋒電子（香港）有限公司

香港九龍長沙灣道909號5樓
電話：(0852) 2848-6488

© 2011-2012 PIONEER CORPORATION.
All rights reserved.

Printed in Thailand

<CRB3731-C/N> UW5

<KKMZ> <12D00000>