

Firmware Update Instructions for VREC-130RS

REMARKS:

- ✓ If you have any difficulty carrying out these instructions, please contact Pioneer Customer Support.
- ✓ Once upgraded to this version, it is not possible to downgrade to a lower version.
- ✓ Never turn your unit off or take out the SD Card while the firmware is being updated.
- ✓ In order to perform this update, the following items are needed:
 - Pioneer VREC-130RS Dash Camera.
 - Empty Micro SD Card – formatted in FAT32

A. Displaying the firmware version

1. Press the Main Menu button
2. Scroll down the list and select "Version"
3. Check the version number; if the version number is lower than **1.6**, it is necessary to update.

B. Downloading the Firmware Update Files

1. Download the correct firmware file to a folder on your computer.
→ **VREC-130RS_FW_Ver_16.zip**
2. Double click the ZIP file to open it.
3. Extract and save the file "**M634_CarDv.bin**" to a folder on your computer.

C. Updating the firmware on your Unit

1. Connect a blank (**FAT32 formatted**) SD Card with a minimum capacity of 2GB to your computer, **locate the update file (M634_CarDv.bin) and copy it onto the root folder of the SD Card.**
2. Disconnect the power cable of the VREC-130RS
3. Carefully insert the SD Card into the Dash Camera
4. Connect the power to the Dash Camera, the firmware will start automatically. Make sure not to power off or disconnect the power cable during the update. When the update is completed (approx. 1 minute) the unit will automatically power off.
5. Take out the SD Card and power on the unit.
6. Press the Main Menu button, scroll down the list and select "Restore Factory Mode"
7. Confirm to reset the unit

Check the firmware version as described in "Displaying the firmware version" to confirm that the update was successful.

Contact Information

Pioneer Customer Support Center

<http://www.pioneer.eu>