

Pioneer sound.vision.soul


DVD MULTIMEDIA AV NAVIGATION HEAD UNIT

AVIC-X3

Quick Start Guide

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the Operation Manual provided with the product.

Hardware buttons

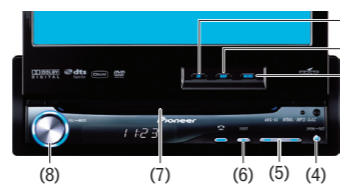


- (1) **AV button**
Display AV operation screen.
- (2) **MAP button**
View the map or change view mode.
- (3) **MENU button**
Display the navigation menu or audio menu.

- (4) **OPEN/CLOSE button**
Open or close the LCD panel.
- (5) **Navigation buttons**
Pressing this button when the AV source is selected skips a track, file or chapter. Press and hold to fast forward/fast reverse a track, file or chapter.

- (6) **EJECT button**
- (7) **Disc loading slot**
- (8) **VOLUME knob**
Turn to adjust the AV (Audio and Video) volume or press to change the AV source. Press and hold the VOLUME knob to switch the source to mute.


Switching the screen

Press the following buttons and touch keys to display the respective screens.

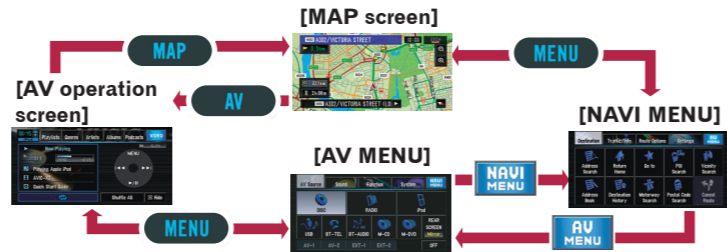

Search function overview

This navigation system has multiple methods for entering your destination.

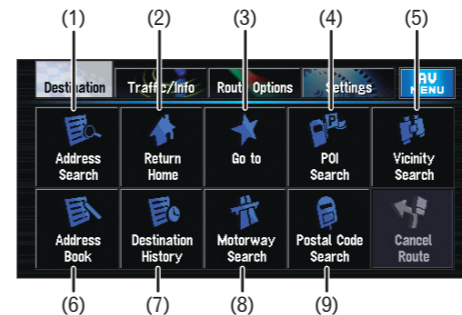

- (1) Search by address
- (2) Shortcut key for home address
- (3) Shortcut key for favourite destination
- (4) Search for stores, restaurants, and other businesses in the points of interest database
- (5) Search for stores, restaurants, and other businesses in your vicinity


Search result list for vicinity search



- (6) Select a destination from your address book
- (7) Select a previously routed destination
- (8) Select a route to a motorway entrance or exit
- (9) Search for a destination by postal code number

Searching for your destination by address

- 1 Display the [NAVI MENU].
- 2 Touch the **Destination** tab and then touch **Address Search**.
- 3 Input the street name.
- 5 Input the house number and then touch **OK**.

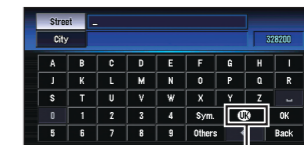

Touching the country key displays the country selector screen.


- 4 Select the street name from the list.
After narrowing down your destination, the house number input screen will appear.

When route calculation is completed, navigation guidance begins.



This navigation systems gives you route guidance both visually and by voice.


Setting the voice guidance volume

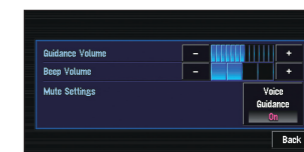

Touch the **Settings** tab in [NAVI MENU] and then touch **Volume**.


Basic operation on the map screen

Switching the view mode

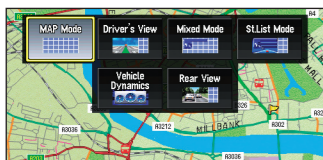

Press the **MAP** button while displaying the map screen. This navigation system allows you to select different view modes depending on your preference.

Scrolling the map

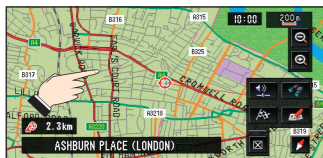

Touch and hold where you would like to scroll to on the map screen. After a few seconds, the scrolling will begin.

Traffic information on the map

Traffic conditions can be overlaid on the map when there is traffic information transmitted by FM radio service through the Radio Data System (RDS-TMC).



- (1) **Traffic event**
- Stationary traffic
 - Slow and queuing traffic
 - Closed/blocked roads
 - Other event (e.g. accident)

Selecting the AV source

Touch the **AV source** icon to select the desired **AV source**.



(1) AV source icon

Sources that can be used from the beginning:

- **DISC** [CD, ROM, DVD-V, DivX]
- **RADIO** [Tuner]

Sources that need connection to an optional pioneer equipment (sold separately) or external equipment:

- **iPod** [iPod]
- **USB** [USB-Audio]
- **BT-TEL** [Bluetooth-Telephone]
- **BT-AUDIO** [Bluetooth-Audio]
- **M-CD** [Multi-CD player]
- **M-DVD** [Multi-DVD player]



(2) **OFF** [Switch to source off]


Selecting the video for rear display

Touch **REAR SCREEN** to switch the video source for the rear display in the following order.

Mirror (Same as front) – **DVD** (DISC) – **AV1** (AV-1) – **AV2** (AV-2)

Operation of AV operation screens

DISC source screen (e.g. DVD-V)

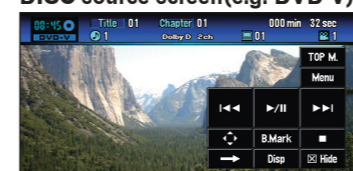

Touch the screen to display touch panel keys, when you play the DVD-Video.

Touch Panel keys

Playback and Pause

Skip the track/chapter forward or backward

Stop playback

Display touch panel keys to operate the DVD menu

▲Up/▼Down

Switch the radio station


◀Seek/Seek▶

Seek tuning (keep touching for about one second and release).

Band

Switch between bands:
FM1 – FM2 – FM3 – MW/LW

RADIO source screen

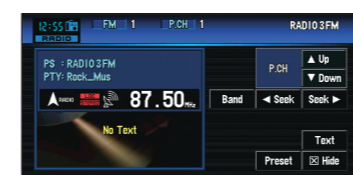


Playing your Apple iPod®

You can control an iPod by connecting the iPod cable (CD-I200) (sold separately) to the navigation system.

1 Display the **[AV MENU]**.

2 Touch the **iPod** icon to display the iPod source screen.

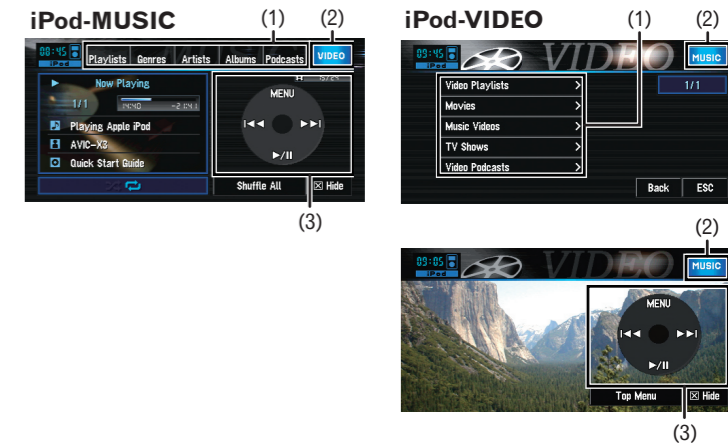

(1) Touch one of the categories in which you want to search for a song or video.

(2) Touch to switch between the video screen and the music screen.

(3) Touch keys to operate the music/video source.