

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to Operation Manual.

## Basic Hardware buttons



### ① **Voice button**

Press briefly to start the voice operation. Press and hold to mute the AV source.

### ④ **MODE button**

Press to switch between the map screen and the AV operation screen.

### ⑤ **TRK (◀/▶) button**

### ⑥ **▲ button**

Press to display the control panel of the LCD panel.


### ② **VOL (+/-) button**

Press to adjust the AV (Audio and Video) source volume.

### ③ **HOME button**

Press to display the "Top Menu" screen.

## Display the menu screen

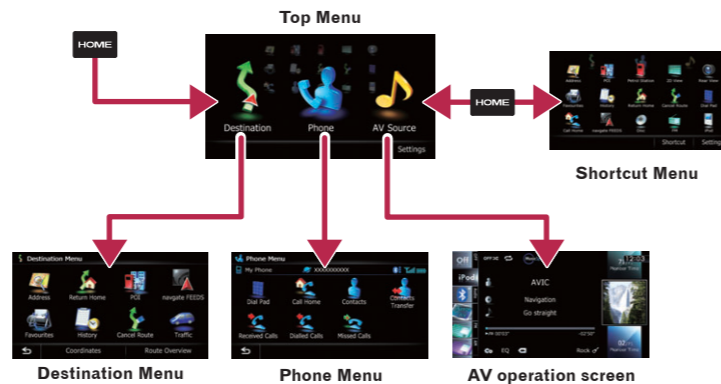

## Basic items on the map




- ① Name of the street to be used (or next guidance point)
- ② Current time
- ③ Estimated time of arrival
- ④ Current route
- ⑤ Current position

- ⑥ Street name that your vehicle is travelling along
- ⑦ Eco-Meter
- ⑧ Zoom in/Zoom out
- ⑨ Next direction of travel

## Destination Menu

Touch **Destination** on the "Top Menu" screen.

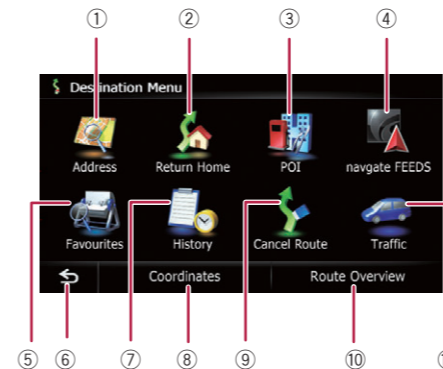


- ① Searches for location by address
- ② Calculates the route home
- ③ Searches for a place from stores, restaurants, and other businesses in the points of interest database
- ④ Searches for POIs by using the data on external storage devices (SD card)
- ⑤ Selects your stored location


- ⑥ Returns to the previous screen
- ⑦ Selects a previously routed destination
- ⑧ Searches for a location by coordinates
- ⑨ Cancels your current route
- ⑩ Displays the current route information
- ⑪ Displays traffic information

## Searching for your destination by address


- 1 Display the "Destination Menu" screen and touch **Address**.

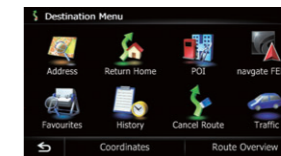

- 2 Input the information that you want to set as the destination.

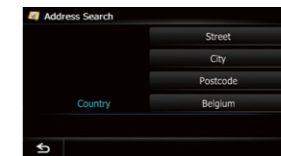


- 3 **Touch OK.**

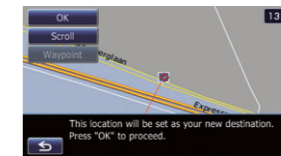

After searching for the destination, the Route confirmation screen appears.


- 4 **Touch OK.**

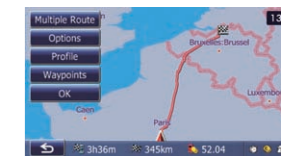

The navigation system gives you route guidance both visually and by voice.

## Setting the volume of the route guidance

- 1 Touch the keys in the following order in the “**Top Menu**” screen. **Settings** → **System Settings** → **Volume**
- 2 Touch **+** or **-** to change the volume of the route guidance.

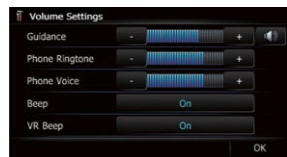


## Inserting and ejecting an SD card

For details about playable files, refer to Operation Manual.

### Inserting an SD card

 
- 1 Press **▲** button. The “**Monitor Setup**” screen appears.
- 2 Touch **SD Insert** on the screen.
- 3 Insert an SD memory card into the SD card slot.



- 4 Press **▲** button.

### Ejecting an SD card

 
- 1 Press **▲** button. The “**Monitor Setup**” screen appears.
- 2 Touch **Eject SD** on the screen.
- 3 Press the middle of the SD memory card gently until it clicks.
- 4 Pull the SD memory card out straight.



- 5 Press **▲** button.

## Using the radio (FM)

Scroll the screen by dragging an AV source icon up or down, and tap **FM** on the AV operation screen.

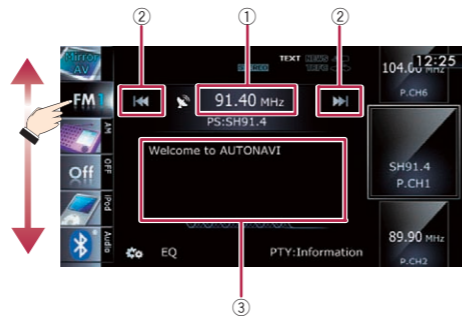


- 1 Displays the current preset frequency list
- 2 Scans until a broadcast strong enough for good reception is found
- 3 Displays the detailed radio text currently received

## Playing your Apple iPod



You can control an iPod by connecting the USB interface cable for iPod (CD-IU50V) (sold separately) to the navigation system.

- 1 Connect your iPod.

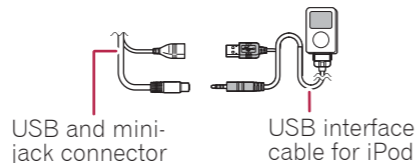

The source changes and then playback will start.


- 2 Tap or drag the key that you want to operate.

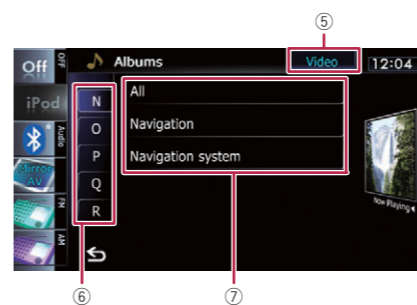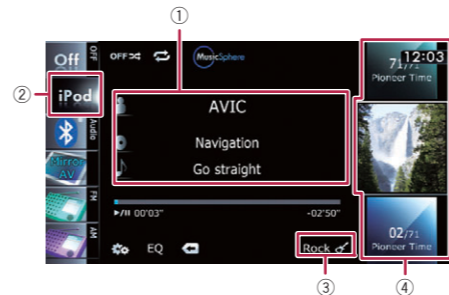

- 1 Displays the artist name list, album title list or song title list
- 2 Displays the category list
- 3 Displays the genre list
- 4 Selects the song to play by scrolling and dragging the key up or down. To play the song, tap it
- 5 Switches the list screen between music and video
- 6 Selects a song by scrolling and dragging the character tab up or down. Tap the tab of the character for the song title that you want to display
- 7 Starts playback by tapping an item to select

## Pairing your phone

- 1 Activate the Bluetooth function on your phone.
- 2 Touch the keys in the following order in the “**Top Menu**” screen. **Settings** → **Bluetooth Settings**
- 3 Touch **Bluetooth On/Off** to select **On**.

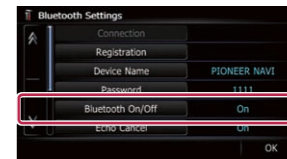

- 4 Touch **Registration** on the “**Bluetooth Settings**” screen.

The system tries to find and lists nearby devices.

- 5 Touch your phone on the list.




- 6 Enter the PIN code from your phone. (The default code is 1111.)

When the pairing is successful, the message will appear.


## Transferring the phone book

- 1 Connect the mobile phone.
- 2 Touch **Contacts Transfer** on the “**Phone Menu**” screen.
- 3 Check that the following screen is displayed, and operate your mobile phone to transfer the phone book entries.

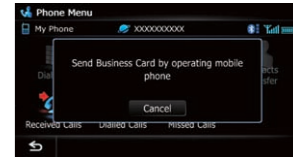

After transferring the data is finished, a message asking whether you want to transfer more data appears.

- 4 Touch **No**.

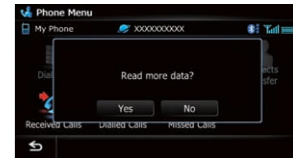

The transferred data is imported to the navigation system.