

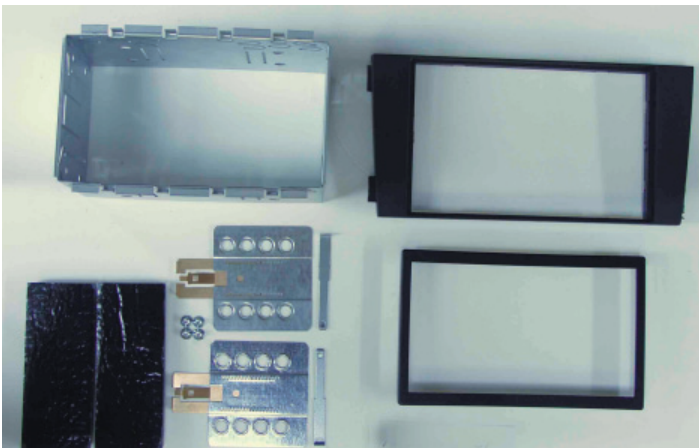


Installation manual for:
Audi A6 2004 --> 2006

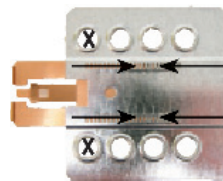

Installation kit includes the following items:



- * 1X 2-ISO 110 mm. metal bracket
- * 1X Radio trim
- * 1X Replacement panel
- * 2X Mounting plates
- * 2X Mounting spacers
- * 2X Radio removal keys
- * 4X Screws
- * 2X Cushion

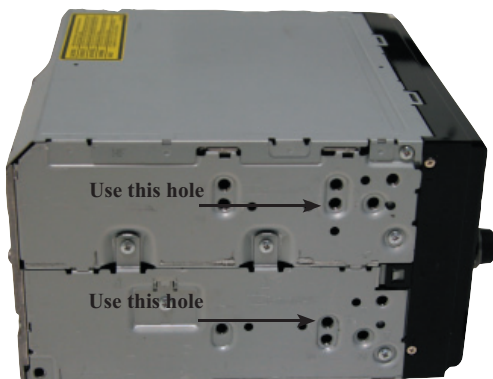

Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

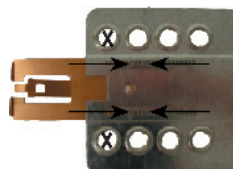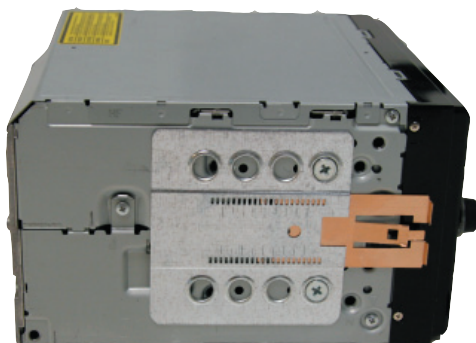


Pioneer Avic D3

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 8 & 10 marked with an arrow.
Measured from left to right.

* Mount the plates.

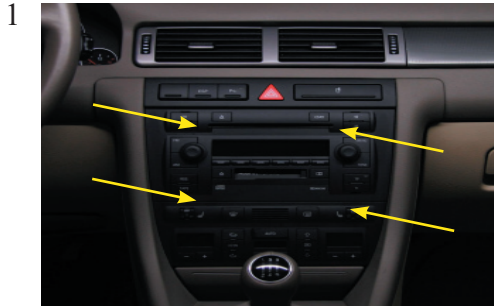

Remove the original radio using the radio removal keys.



Place the replacement panel.



Place the 2-Din metal bracket and tighten the bracket by four screws.



Place the headunit and replace all the panels.

Connect all of the needed wiring harnesses and check the connections carefully.