


Installation Manual Double DIN Kit BMW 1 (E87)



9. Pull out OEM head unit

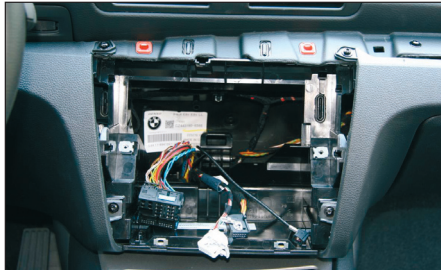

10.



Installation Manual Double DIN Kit

Standard:

Rubber-Touch:

• **BMW 1 (E87) 2004->** *without iDrive*

Compatible with these Pioneer double DIN devices

Pioneer Navigation



Double DIN Kit contents


- (1) Metal Frame
- (2) Facia Plate

- Installation Kit (3)
- Trim Frame (4)

Installation Manual Double DIN Kit




1. BMW 1 (E87) with OEM-Head unit

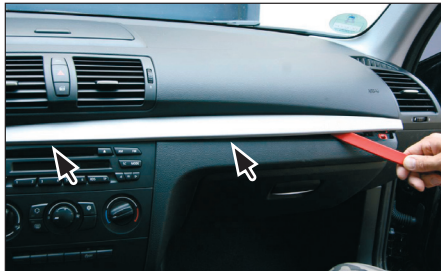

2. Unclip middle panel and remove it carefully




3. Unclip air condition control unit

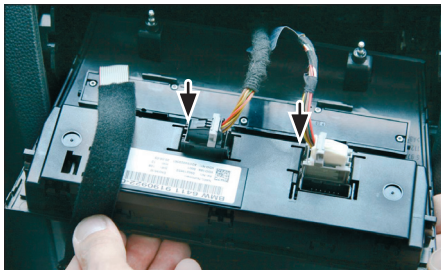


4. Pull out air condition control unit carefully.

Remove pulgs (see arrows)

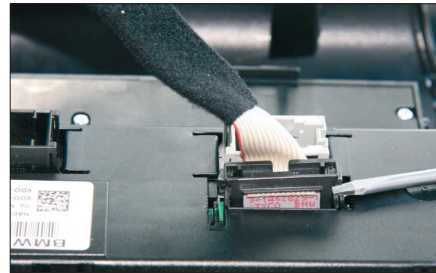



5. Remove plug attached to ribbon cable

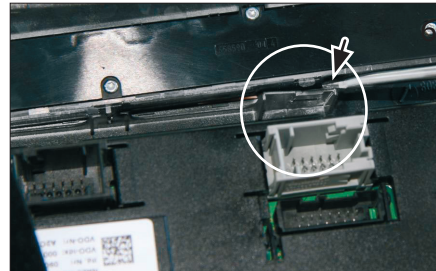

- Unclip air condition control unit



7. Unclip panel from air condition control unit

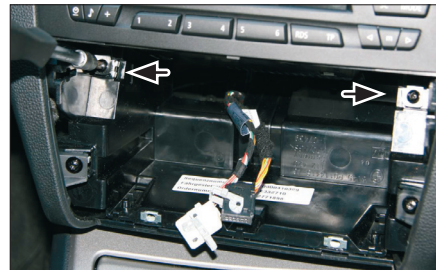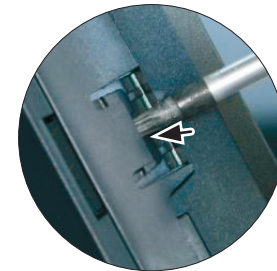

8. Remove screws below OEM head unit (see arrows)