

# CA-IW-SUB.003V SUBARU OUTBACK 2015->



Use the screw saved before to fix the PCB to the tan cover.

2-USB and Jack 3,5mm replacement PCB



Connect the cables on the radio side: the USB-1 marked on the label of the harness matches with the upper USB on the front panel; the USB-2 is the lower usb.




# Installation Manual



Take out the original AUX/USB, circled in the image, under the clima controls.




Slide out the original circuit.

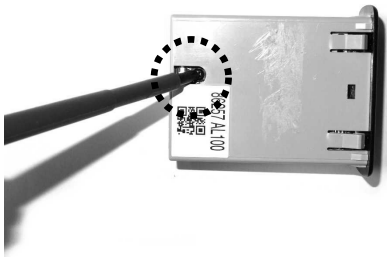

Unscrew and save the black screw shown in the picture.



Before insert the circuit, put the harness through the holes of the plastic tan cover as show in the picture; plug the connectors to the PCB.

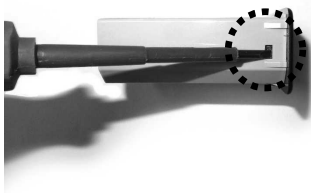

Carefully remove and save the black cover with a screwdriver.



Slide the PCB into the tan plastic cover and remount the black plastic cover.

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidental or indirect damages.