


Installation Guide

Steering wheel control Interface




CA-R-MIT.004
Mitsubishi L200 2012>


1. Remove OEM head unit, Remove Trip computer to make room for Head Unit.

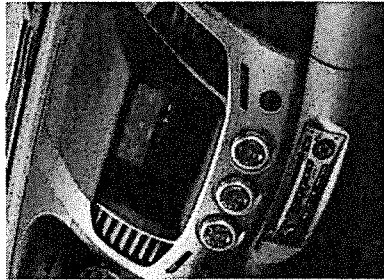


2. Plug Jack lead into the correct hole on the aftermarket head unit. Then Plug Molex connector into interface.

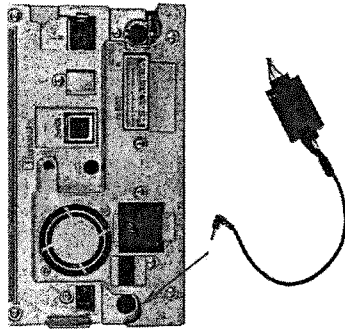

3. Plug other side of interface into Molex on the interface lead. Then put power lead into Aftermarket head unit.

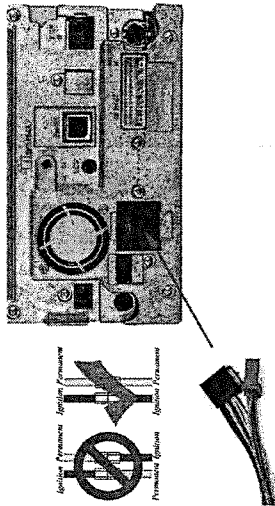

4. Connect the vehicle specific connectors to the steering wheel interface. Attach the Earth tab to a good chassis ground point.

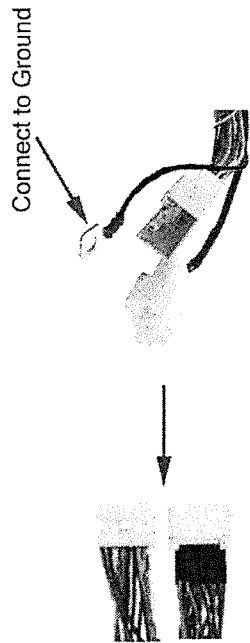

Car Connector

Steering Wheel Control Connector

5. Fit Aftermarket head unit and hood, be careful not to trap any wires.

