

# Installation Manual


# CA-R-RF.004

## Mitsubishi Outlander SWC with Rockford Fosgate Amplifier


1 Remove the original head unit.




2 Take the supplied harness and connect to the car's connectors. If the car is not equipped with rear view camera, the yellow connector will remain open.

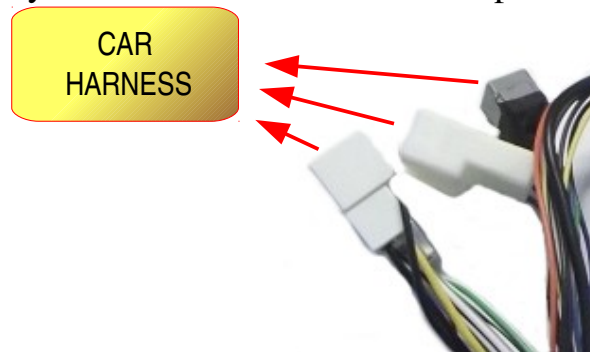

3 Connect the ISO to the radio harness and bushings for services.

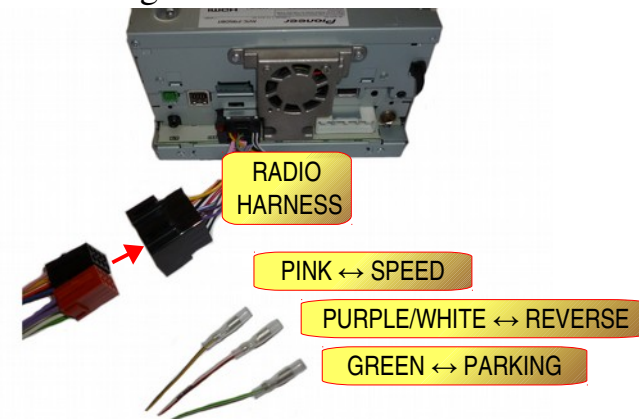


4 Connect the SWC jack and all other needed connectors.

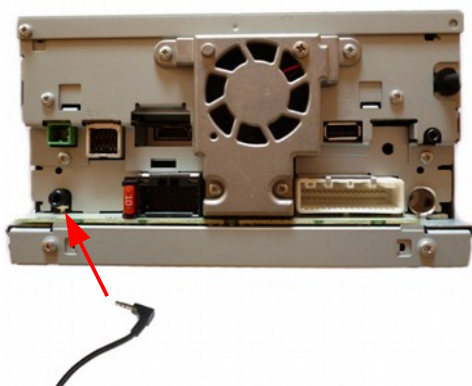

5 If the OEM head unit is DAB ready, unplug the DAB connector behind the glovebox.



6 Disconnect the Bluetooth interface located under the OEM unit.

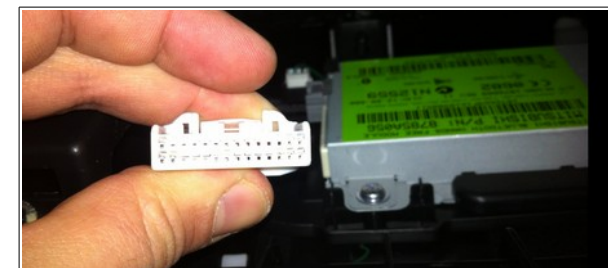

Test the full functionality and fix the radio frame. Note that after installation the fader is no longer available.

Installation must be performed by a qualified professional installer only. The manufacturer is not liable for any kind of incidental or indirect damages.