

Installation Manual

Ssangyong Tivoli SWC




BEFORE INSTALLING THE KIT, PLEASE CAREFULLY CHECK WHICH WIRING HARNESS IS REQUIRED BY YOUR CAR AMONG THOSE SUPPLIED.

CA-R-SST.00C


1 Remove the original head unit. Connect the ISO to the radio harness, the SWC Jack, and all other needed connectors.



2 Connect the grey-red (CAN-H) and the grey-blue (CAN-L) cables to the vehicle's OBD connector (which is located under the steering wheel, follow the numbers on the connector for connecting wires).

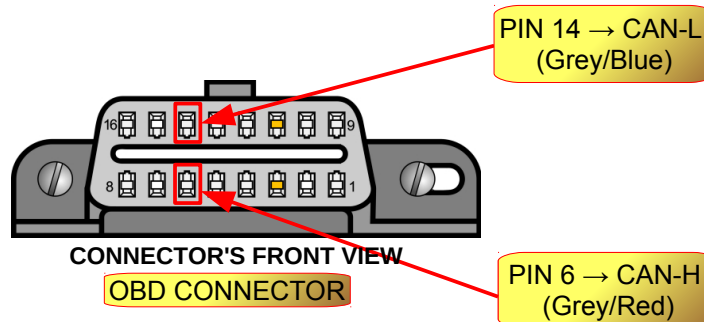

3 Plug-in all connections. Verify the proper functioning of the system.

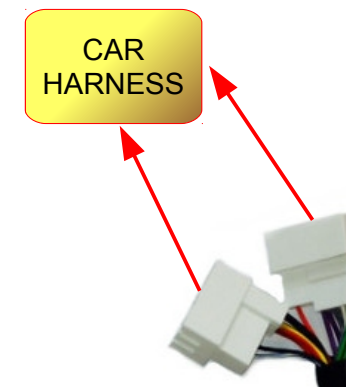

DOCUMENTS TO BE ATTACHED TO THE CUSTOMER'S VEHICLE -- STEERING WHEEL INSTRUCTION

1) If you **long press** the MUTE BUTTON, the function will be: HOOK ON*.


If you **short press** the MUTE BUTTON, the function will be: MUTE*.

2) If you **long press** the TEL BUTTON, the function will be: SPEECH*.

If you **short press** the TEL BUTTON, the function will be: HOOK OFF*.



*IF SUPPORTED BY THE RADIO

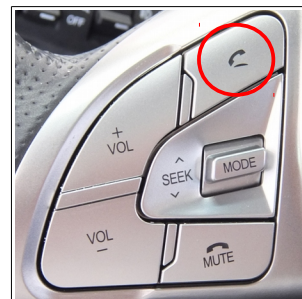


Installation must be performed by a qualified professional installer only, with appropriate equipment. The manufacturer is not liable for any kind of incidental or indirect damages.

07/2015 All rights reserved. No liability for misprints



4 Connect the green/violet/pink cables and the other services to the radio harness.

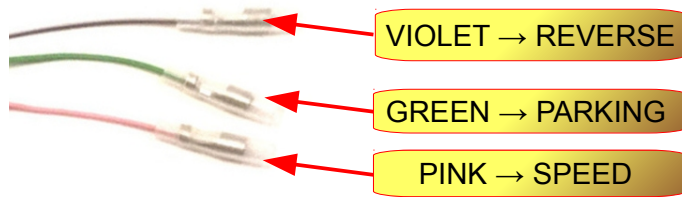

**BEFORE INSTALLING THE KIT,
PLEASE CAREFULLY CHECK
WHICH WIRING HARNESS
IS REQUIRED BY
YOUR CAR AMONG
THOSE SUPPLIED.**

Pioneer