


Below is an example of accessing the interface settings menu:

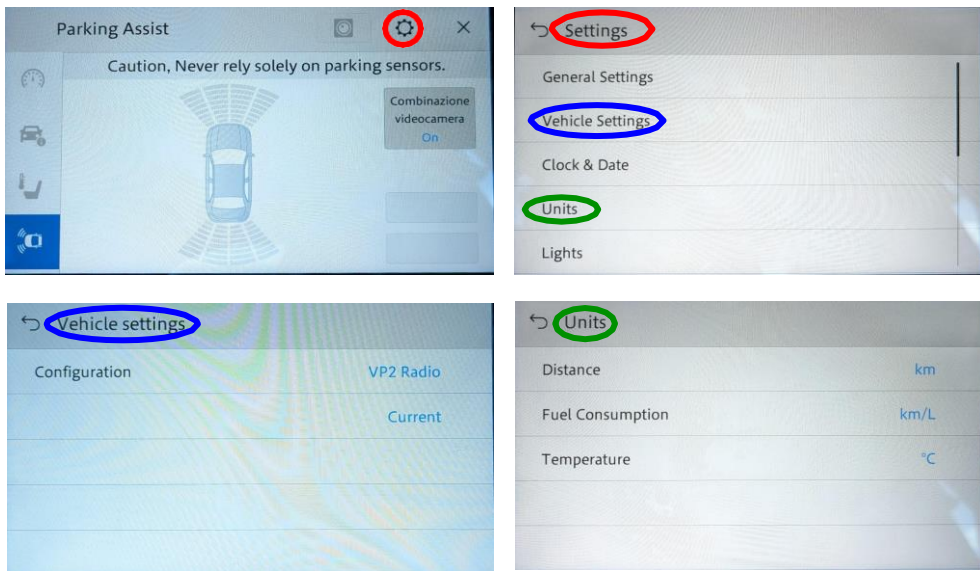

N.B. To configure the radio, select the configuration for your vehicle in the 'Vehicle Settings' submenu.

Once the configuration has been selected, press "Save".

The radio is now ready to operate with the selected configuration.

VP1 Radio	Fiat	Doblo VP1
VP1 Radio	Fiat	Ducato 2015 VP1
VP2 Radio	Fiat	Ducato 2015 VP2
VP2 Radio	Fiat	500 VP2
VP2 Radio	Fiat	500 VP2
Alfa VP2	Alfa	Mito 2015 VP2
Alfa VP2	Alfa	Giulietta 2015 VP2

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
11/2022 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.


Steering wheel control interface installation kit for:

FIAT & ALFA ROMEO

Model: Pioneer SPH-EVO 64/93/950- Group FCA50-Fiat

Kit content: SWC CANBUS interface
Wiring harness
Antenna adapter
Radio adapter Pioneer


Customer code: CD-FCA-UAR.001AE

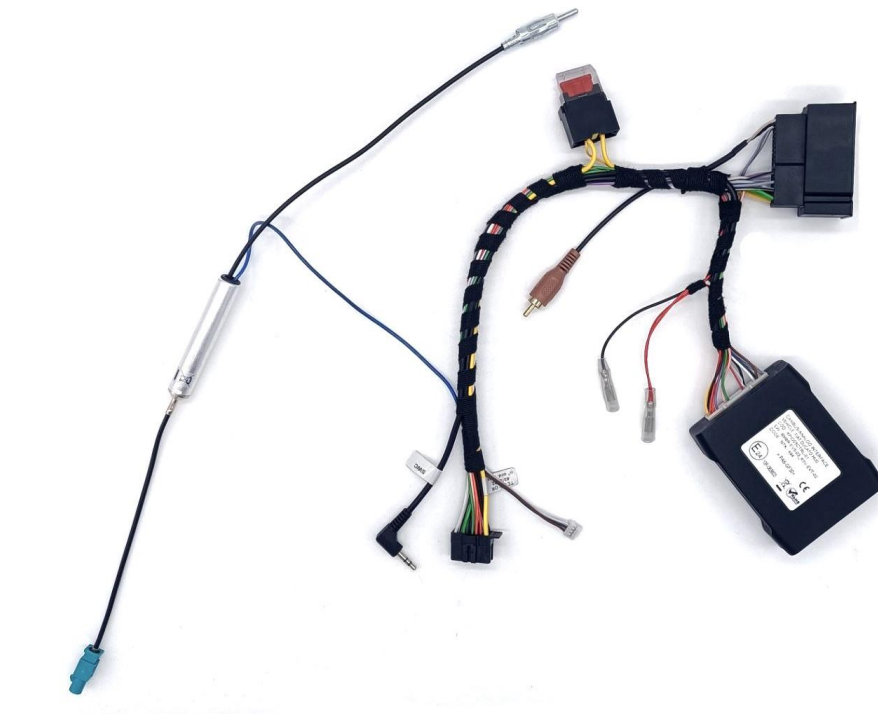

INSTALLATION MANUAL

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
11/2022 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

Wiring:

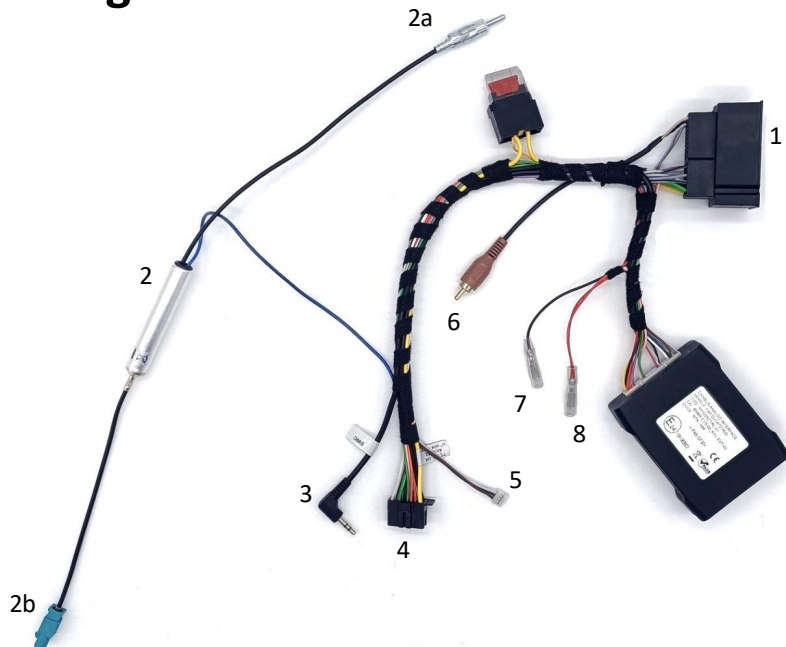

ATTENTION!

In order to prevent ESD damage, the WHEEL REMOTE JACK must be connected before plugging in the connectors on car side.

- 1- To CAR CONNECTOR
- 2- PHANTOM POWER:
 - 2a- JACK DIN - To RADIO ANTENNA-CONNECTOR
 - 2b- MALE FAKRA - To CAR ANTENNA-CONNECTOR
- 3- SWC - To WIRED REMOTE SOCKET (NOTE: do not connect to microphone socket)
- 4- RADIO CONNECTOR
- 5- UART CONNECTOR
- 6- MALE RCA PLUG - To RADIO CAMERA INPUT
- 7- Black wire GND
- 8- Red wire UNDERKEY

N.B.

V battery	
Min.	Max.
9 Vdc	16 Vdc

Voltage value
V battery - 0.2 V to 0.5 A
V battery - 1 V to 2 A

Configuration:

-Steering wheel button configuration

An example of a possible steering wheel button configuration:



The steering wheel buttons perform the following functions (if supported by the radio):

- | | | | |
|------------|--------------|------------------|----------------|
| 1- Mute | 2- Voice | 3- Volume + | 4- Volume - |
| 5- Seek up | 6- Seek down | 7- Incoming call | 8- Reiect call |

-Radio configuration

The available settings are (if the related option is equipped on the car):

***To check the latest, updated compatible features, please scan the QR code below.**

- Alert Lane Assist Buzzer - **Only available in the Alfa VP2 configuration, with C6502KPO6- BUZZER kit (min. FW version: B01H-KP6-03)**
- Change Doors & Locks Autoclose
- Change Language
- Change Pressure Units Tyres
- Change Select Configuration
- Change Time & Date
- Change Trip B
- Change Unit of measurement
- Settings Lights Options
- Show Dna Configuration
- Show Sensor Parking
- Steering Wheel Controls

